


Outdoor playset

Wood Swing Set with Wave Slide,Rock Wall Ladder 14x14FT

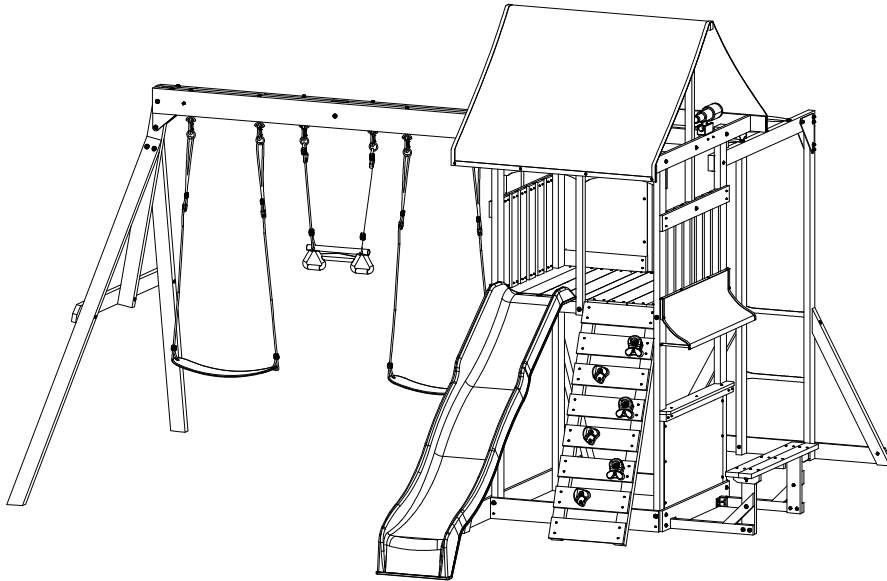

CUSTOMER SUPPORT

Dear customer

Thank you for your purchase.

This product is a non-permanent outdoor structure designed and manufactured for personal use rather than commercial use.

Please confirm whether the installation is permitted in your states firstly.

1. When you receive the product, please make sure that all the boxes have arrived, and all the parts are intact.
2. Please browse the entire installation manual before assembling, retain this instruction manual for future reference.
3. If any problem occurs unsatisfactorily as follows:
 - Lack of boxes, or some boxes are not arrived.
 - The outer box is damaged.
 - The product is damaged / bent / cracked while you open the box.
 - The parts / accessories / assembly tools are missing.
 - The product is hard to assemble.
 - The instructions are not clear, or hoping for assistance with installation.
 - The product has functional problems.
 - The product did not meet your expectations.
 - Other aspects that you are not satisfied with.

Please feel free to contact us for help firstly. If there is any damage, please send us clear photos. We will check and do our best to provide the best solution for you. The missing or damaged parts will be delivered to you within 5 days.

**DO NOT RETURN YOUR UNIT TO THE STORE
CONTACT US FIRST**



✉ (24/7):service@kmcglobe-us.com

☎ (USA) +1 213-816-4788

✉ service@kmcglobe-us.com

☎ (USA) +1 213-816-4788

Warnings and Safe Play Instructions



CONTINUOUS ADULT SUPERVISION REQUIRED. Most serious injuries and deaths on playground equipment have occurred while children were unsupervised! Our products are designed to meet mandatory and voluntary safety standards. Complying with all warnings and recommendations in these instructions will reduce the risk of serious or fatal injury to children using this play system. Go over the warnings and safe play instructions regularly with your children and make certain that they understand and follow them. Remember on-site adult supervision is required for children of all ages.



WARNING

SERIOUS HEAD INJURY HAZARD

Installation over concrete, asphalt, dirt, grass, carpet and other hard surface creates a risk of serious injury or death from falls to the ground. Install and maintain shock absorbing material under and around play-set as recommended on page 2 of these instructions.

COLLISION HAZARD

Place play-set on level ground at least 2m from any obstruction such as a garage or house, fences, poles, trees, sidewalks, walls, landscape timbers, rocks, pavement, planters, garden borders, overhanging branches, laundry lines, and electrical wires. (See OBSTACLE FREE SAFETY ZONE on cover)

CHOKING HAZARD/SHARP EDGES & POINTS

Adult assembly required. This product contains small parts and parts with sharp edges and points. Keep parts away from children until fully assembled.

WARNING LABEL

Owners shall be responsible for maintaining the legibility of the warning labels.

STRANGULATION HAZARD

- NEVER allow children to play with ropes, clotheslines, pet leashes, cables, chains or cord-like items when using this play-set or to attach these items to play-set.
- NEVER allow children to wear loose fitting clothing, ponchos, hoods, scarves, capes, necklaces, items with draw-strings, cords or ties when using this play-set.
- NEVER allow children to wear bike or sport helmets when using this play-set.

Failure to prohibit these items, even helmets with chin straps, increases the risk of serious injury and death to children from entanglement and strangulation.

TIP OVER HAZARD

Choose a level location for the equipment. This can reduce the likelihood of the play set tipping over and loose-fill surfacing materials washing away during heavy rains.

DO NOT allow children to play on the play-set until the assembly is complete and the unit is properly anchored.

Never add extra length to chain or rope. The chains or ropes provided are the maximum length designed for the swinging element(s).



WARNING – Safe Play Instructions

- ✓ Observe capacity limitations of your play-set. See front cover.
- ✓ Dress children with well fitting and full foot enclosing footwear.
- ✓ Teach children to sit with their full weight in the center of the swing seat to prevent erratic swing motion or falling off.
- ✓ Check for splintered, broken or cracked wood; missing, loose, or sharp edged hardware. Replace, tighten and or sand smooth as required prior to playing.
- ✓ Verify that suspended climbing ropes, rope ladders, chain or cable are secured at both ends and cannot be looped back on itself as to create an entanglement hazard.
- ✓ On sunny and or hot days, check the slide and other plastic rides to assure that they are not very hot as to cause burns. Cool hot slide and rides with water and wipe dry prior to using.
- ✓ Orientate slide such that it gets the least amount of exposure to the sun.
- ✗ Do not allow children to wear open toe or heel footwear like sandals, flip-flops or clogs.
- ✗ Do not allow children to walk, in front, between, behind or close to moving rides.
- ✗ Do not let children twist swing chains or ropes or loop them over the top support bar. This may reduce the strength of the chain or rope and cause premature failure.
- ✗ Do not let children get off rides while they are in motion.
- ✗ Do not permit climbing on equipment when it is wet.
- ✗ Do not permit rough play or use of equipment in a manner for which it was not intended. Standing on or jumping from the roof, elevated platforms, swings, climbers, ladders or slide can be dangerous.
- ✗ Do not allow children to swing empty rides or seats.
- ✗ Do not allow children to go down slide head first or run up slide.



Protective Surfacing - Reducing Risk of Serious Head Injury From Falls

One of the most important things you can do to reduce the likelihood of serious head injuries is to install shock-absorbing protective surfacing under and around your play equipment. The protective surfacing should be applied to a depth that is suitable for the equipment height in accordance with ASTM F1292. There are different types of surfacing to choose from; whichever product you select, follow these guidelines:

Loose-Fill Materials

- Maintain a minimum depth of 9 inches (23 cm) of loose-fill materials such as wood mulch/chips, engineered wood fiber (EWF), or shredded/recycled rubber mulch for equipment up to 8 feet (2.45 m) high; and 9 inches (23 cm) of sand or pea gravel for equipment up to 5 feet (1.5 m) high. NOTE: An initial fill level of 12 inches (31 cm) will compress to about a 9-inch (23 cm) depth of surfacing over time. The surfacing will also compact, displace, and settle, and should be periodically raked and refilled to maintain at least a 9-inch (23 cm) depth.
- Use a minimum of 6 inches (16 cm) of protective surfacing for play equipment less than 4 feet (1.22 m) in height. If maintained properly, this should be adequate. (At depths less than 6 inches (16 cm), the protective material is too easily displaced or compacted.)

NOTE: Do not install home playground equipment over concrete, asphalt, or any other hard surface. A fall onto a hard surface can result in serious injury to the equipment user. Grass and dirt are not considered protective surfacing because wear and environmental factors can reduce their shock absorbing effectiveness. Carpeting and thin mats are not adequate protective surfacing. Ground level equipment -- such as a sandbox, activity wall, playhouse or other equipment that has no elevated play surface -- does not need any protective surfacing.

- Use containment, such as digging out around the perimeter and/or lining the perimeter with landscape edging. Don't forget to account for water drainage.
- Periodically rake, check and maintain the depth of the loose-fill surfacing material. Marking the correct depth on the play equipment support posts will help you to see when the material has settled and needs to be raked and or replenished. Be sure to rake and evenly redistribute the surfacing in heavily used areas.
- Do not install loose fill surfacing over hard surfaces such as concrete or asphalt.

Poured-In-Place Surfaces or Pre-Manufactured Rubber Tiles



You may be interested in using surfacing other than loose-fill materials - like rubber tiles or poured-in-place surfaces.

- Installations of these surfaces generally require a professional and are not "do-it yourself" projects.
- Review surface specifications before purchasing this type of surfacing. The specific height for which the surface is intended to protect against serious head injury. This height should be equal to or greater than the fall height - vertical distance between a designated play surface (*elevated surface for standing, sitting, or climbing*) and the protective surfacing below - of your play equipment.
- Check the protective surfacing frequently for wear.

Placement

Proper placement and maintenance of protective surfacing is essential. Refer to diagram on front cover. Be sure to;


- Extend surfacing at least 6 feet (1.8 m) from the equipment in all directions.
- For to-fro swings, extend protective surfacing in front of and behind the swing to a distance equal to twice the height of the top bar from which the swing is suspended.
- For tire swings, extend surfacing in a circle whose radius is equal to the height of the suspending chain or rope, plus 6 feet (1.8 m) in all directions.

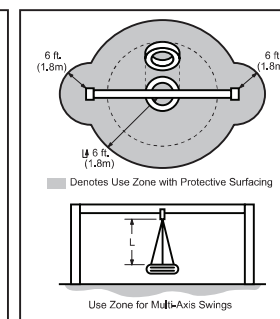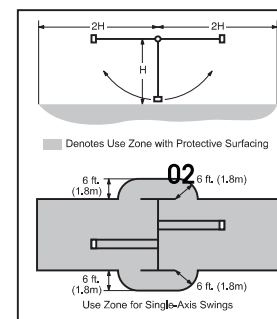

Instructions for Proper Maintenance

Your classic outdoor swing set is designed and constructed of quality materials with your child's safety in mind. As with all outdoor products used by children, it will weather and wear. To maximize the enjoyment, safety and life of your Play Set, it is important that you, the owner, properly maintain it.

Check the following at the beginning of the play season:

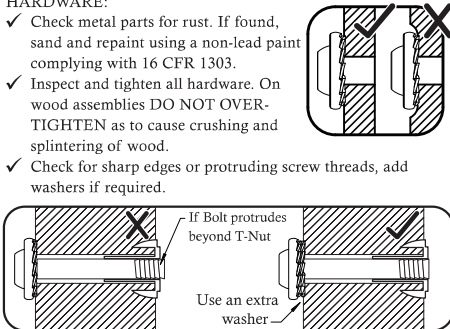HARDWARE: ✓ Check metal parts for rust. If found, sand and repaint using a non-lead paint complying with 16 CFR 1303. ✓ Inspect and tighten all hardware. On wood assemblies DO NOT OVER-TIGHTEN as to cause crushing and splintering of wood. ✓ Check for sharp edges or protruding screw threads, add washers if required.  If Bolt protrudes beyond T-Nut Use an extra washer SHOCK ABSORBING SURFACING: ✓ Check for foreign objects. Rake and check depth of loose fill protective surfacing materials to prevent compaction and maintain appropriate depth. Replace as necessary. (See Protective Surfacing, page)	GROUND STAKES (ANCHORS): ✓ Check for looseness, damage or deterioration. Should firmly anchor unit to ground during use. Re-secure and or replace, if necessary. SWING HANGERS: ✓ Check that bolts are secure and tight. Quick clips should be completely closed and threaded clips screwed tight. ✓ If squeaking occurs lubricate bushings with oil or WD-40®. SWINGS, ROPES AND RIDES: ✓ Reinstall if removed during cold season. Check all moving parts including swing seats, ropes, chains and attachments for wear, rust and other deterioration. Replace as needed. ✓ Check that ropes are tight, secure at both ends and cannot loop back as to create an entrapment. WOOD PARTS: ✓ Check all wood members for deterioration, structural damage and splintering. Sand down splinters and replace deteriorated wood members. As with all wood, some checking and small cracks in grain is normal. ✓ Applying a water repellent or stain (water-based) on a yearly basis is important maintenance to maintain maximum life and performance of the product.
---	---

Check twice a month during play season:

HARDWARE: ✓ Inspect for tightness. Must be firmly against, but not crushing the wood. DO NOT OVER-TIGHTEN. This will cause splintering of wood. ✓ Check for sharp edges or protruding screw threads. Add washers if required.	SHOCK ABSORBING SURFACING: ✓ Rake and check depth of loose fill protective surfacing materials to prevent compaction and maintain appropriate depth. Replace as necessary. (See Protective Surfacing, page)
---	--

Check once a month during play season:

SWING HANGERS: ✓ Check that they are secure and orientated correctly. Hook should rotate freely and perpendicular to support beam. ✓ If squeaking occurs lubricate bushings with oil or WD-40®.	SWINGS AND RIDES: ✓ Check swing seats, all ropes, chains and attachments for fraying, wear, excessive corrosion or damage. Replace if structurally damaged or deteriorated.
--	---

Check at the end of the play season:

SWINGS AND RIDES: ✓ To prolong their life, remove swings and store inside when outside temperature is below 32°F/0°C. Below freezing, plastic parts may become more brittle.	SHOCK ABSORBING SURFACING: ✓ Rake and check depth of loose fill protective surfacing materials to prevent compaction and maintain appropriate depth. Replace as necessary. (See Protective Surfacing, page)
--	--

If you dispose of your play set: Please disassemble and dispose of your unit so that it does not create any unreasonable hazards at the time it is discarded. Be sure to follow your local waste ordinances.

About Our Wood

Classic outdoor swing set uses only premium playset lumber, ensuring the safest product for your children's use. Although we take great care in selecting the best quality lumber available, wood is still a product of nature and susceptible to weathering which can change the appearance of your set.

What causes weathering? Does it affect the strength of my Play System?

One of the main reasons for weathering is the effects of water (moisture); the moisture content of the wood at the surface is different than the interior of the wood. As the climate changes, moisture moves in or out of the wood, causing tension which can result in checking and or warping. You can expect the following due to weathering. These changes **will** not affect the strength of the product:

1. **Checking** is surface cracks in the wood along the grain. A post 4" x 4" (101mm x 101mm) **will** experience more checking than a board 1" x 4" (25mm x 101mm) because the surface and interior moisture content **will** vary more widely than in thinner wood.
2. **Warping** results from any distortion (twisting, cupping) from the original plane of the board and often happens from rapid wetting and drying of the wood.
3. **Fading** happens as a natural change in the wood color as it is exposed to sun-light and **will** turn a grey over time.

How can I reduce the amount of weathering to my Play System?


At the factory we have coated the wood with a water repellent or stain. This coating decreases the amount of water absorption during rain or snow thus decreasing the tension in the wood. Sunlight **will** break down the coating, so we recommend applying a water repellent or stain on a yearly basis (see your local stain and paint supplier for a recommended product).

Most weathering is just the normal result of nature and **will** not affect safe play and enjoyment for your child.

Keys to Assembly Success

Part Identification Key

On each page, you will find the parts and quantities required to complete the assembly step illustrated on that page. Here is a sample.




Symbols and tools use


This identifies information that requires special attention. Improper assembly could lead to an unsafe or dangerous condition.		Check that set or assembly is properly level before proceeding. Use Level
Use Help Measure Distance	Use Help Check that assembly is square before tightening bolts. Square Assembly	Where this is shown, 2 or 3 people are required to safely complete the step. To avoid injury or damage to the assembly make sure to get help!
Pre-drill 1/8" (3mm) & 3/16" (5mm) Bit 3mm 5mm	Pre-drill a pilot hole before fastening screw or lag to prevent splitting of wood.	Tighten Bolts
This indicates time to tighten bolts, but not too tight! Do not crush the wood. This may create splinters and cause structural damage.		

CAUTION – Protrusion Hazard


Once the assembly is tightened, watch for exposed threads. If a thread protrudes from the T-Nut, remove the bolt and add washers to eliminate this condition.

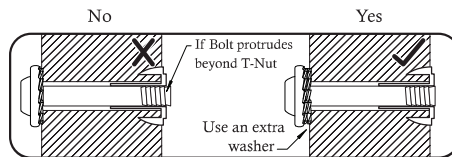


Proper Hardware Assembly
Screws require drilling pilot holes to avoid splitting wood. Only a washer is required. For ease of installation liquid soap can be used on all screws.

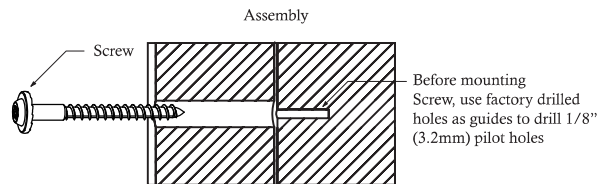


For bolts, tap T-Nut into hole with hammer. Insert the bolt through washer. Because the assemblies need to be squared do not completely tighten until instructed. Pay close attention to diameter of the bolts. 5/16" (8mm) is slightly larger than 1/4" (6.4mm).

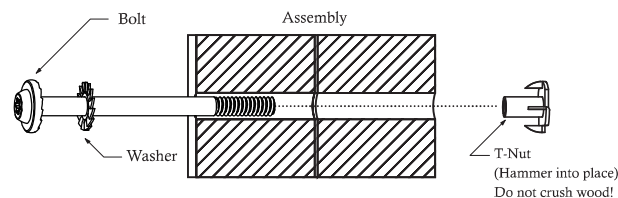


① ×2 ~2057. 4×85. 7×34. 9mm




② ~2057. 4×85. 7×34. 9mm



③ ~2057. 4×85. 7×34. 9mm

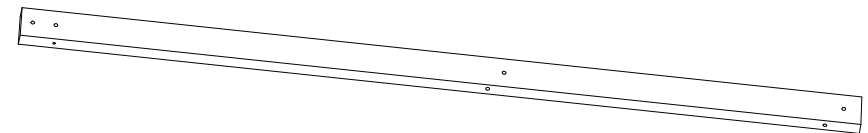

④ ~1828. 8×114. 3×15. 9mm




⑤ ×4 ~939. 8×63. 5×34. 9mm



⑥ ~895. 4×114. 3×15. 9mm




⑦ ~2150×85. 7×34. 9mm




8 911.2×114.3×15.9mm




9 -895.4×114.3×15.9mm



10×2 -1486×85.7×15.9mm




11 -977.9×63.5×34.9mm



12 -977.9×63.5×25.4mm




13 -977.9×88.9×25.4mm



14 -882.7×35×35mm



15 -106.4×63.5×34.9mm



16×2 -824×114×15.9mm




17×6 -824×114×15.9mm



18 -824×50.8×15.9mm




19 -978×114.3×15.9mm



20 -806.5×35×35mm



21×2 -977.9×114.3×15.9mm



22 -977.9×85.7×25.4mm




23 -625×34.9×25.4mm




24 -508×85.7×25.4mm




25 -889×63.5×34.9mm




26×2 -911.2×85.7×15.9mm



②⑦ -1511.3×85.7×34.9mm

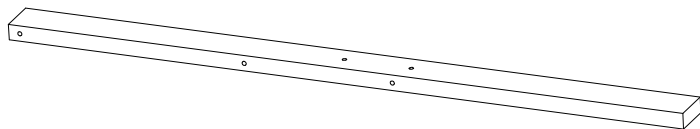

②⑧ -1451×35×35mm



②⑨ -120×50.8×25.4mm



③⑩ ×12 -510×82.6×15.9mm



③① ×2 -1187.5×85.7×15.9mm



③② -1187.5×35×35mm




③③ ×2 -1295.4×63.5×34.9mm



③④ ×2 -431.8×114×15.9mm



③⑥ ×3 -431.8×114×15.9mm



③⑧ -911.2×88.9×15.9mm




④⑩ ×2 -330×76.2×25.4mm



④② ×2 -480×50.8×25.4mm




④③ ×2 -1815×63.5×34.9mm




③⑤ ×3 -431.8×114×15.9mm




③⑦ -911.2×35×35mm




③⑨ -910×152.4×25.4mm

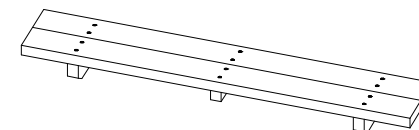


④① ×2 -250×50.8×25.4mm



44 -1333.6×85.7×15.9mm




45 -1371.6×85×35mm




46 -1270×85×35mm



47 -2130×136.5×38.1mm




48 -2130×136.5×38.1mm

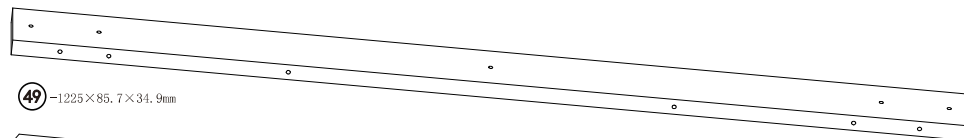


49 -1225×85.7×34.9mm



50 -2150×85.7×34.9mm




51 -1181×88.9×25.4mm




52 -130×85.7×34.9mm




53

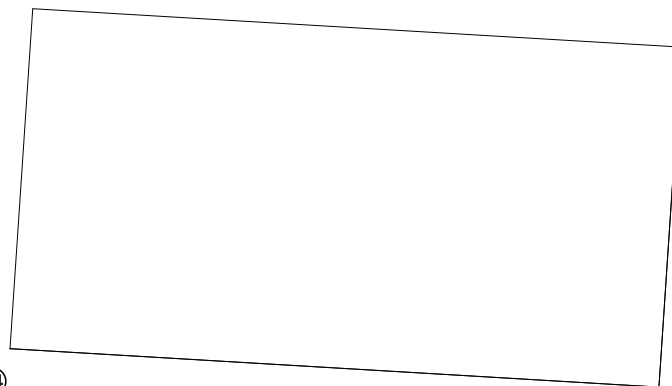


54

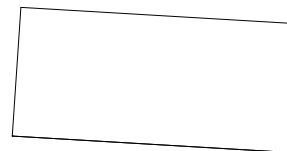

55

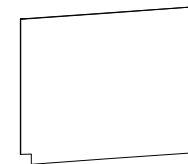

56




b

a

SJ0927



WJ0418

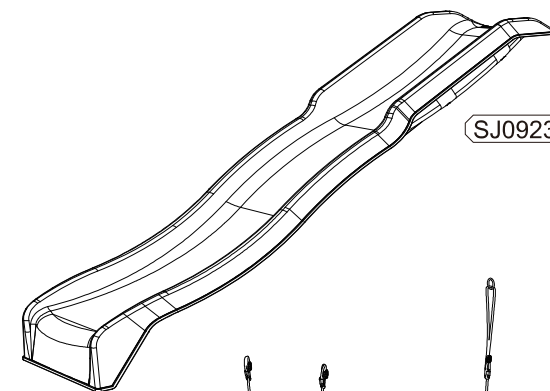























SJ0923



SJ0916



SJ0915 ×2



Cleaning and Care:

Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners.

Nettoyage et Entretien:


Nettoyer les surfaces avec un chiffon doux, sec ou humide. Ne pas utiliser de nettoyeurs abrasifs.

Limpieza y Cuidado:

Limpie las superficies con un paño suave seco o húmedo. No use limpiadores abrasivos.

Step
Étape
Paso

1

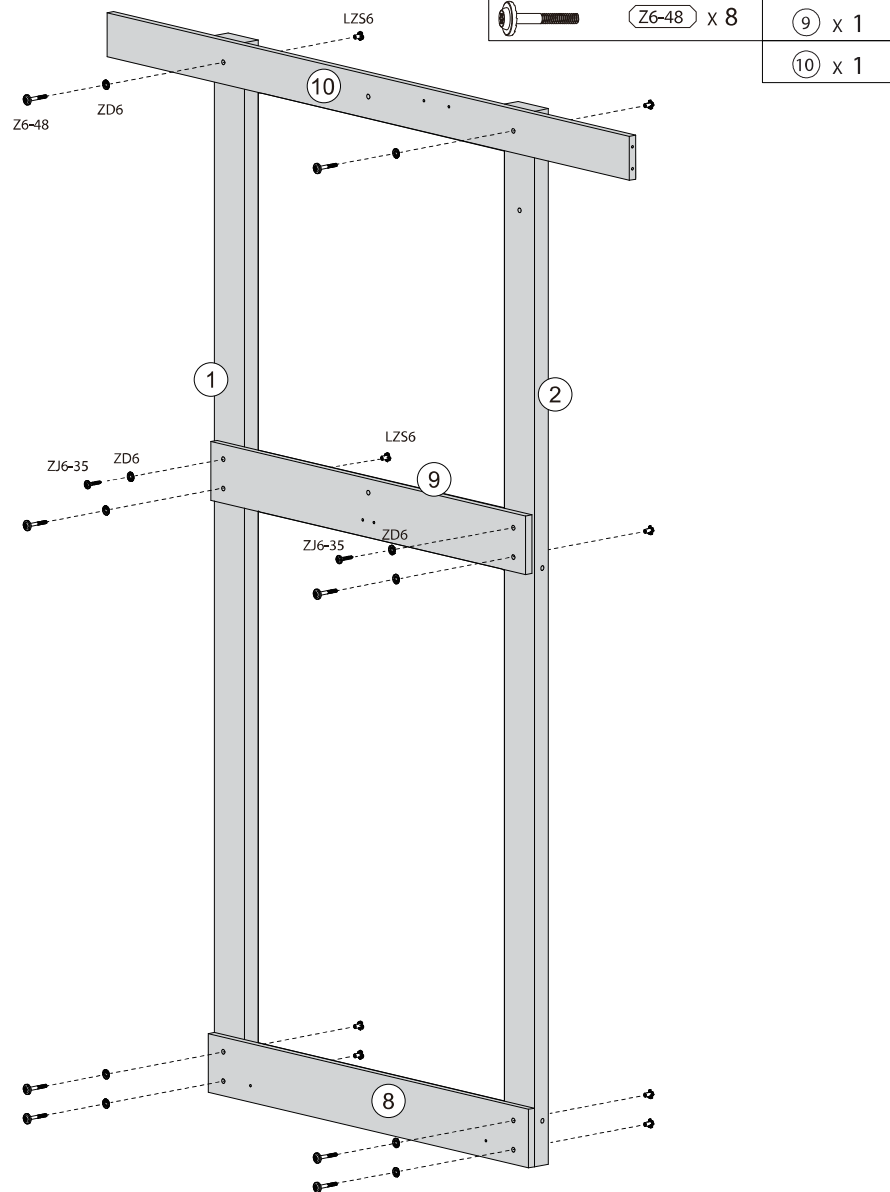


Place horizontally, then assemble

17

Step
Étape
Paso

2

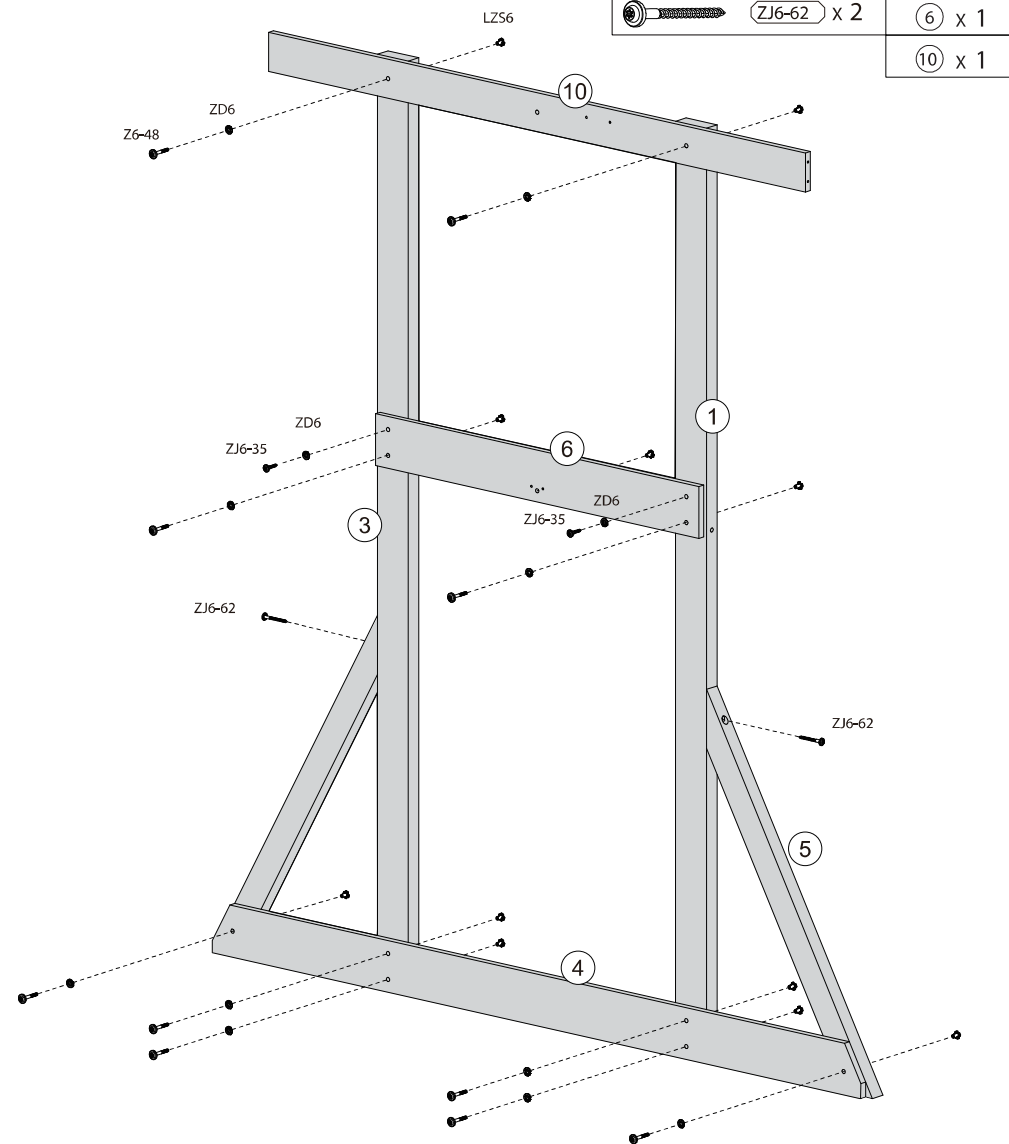

Place horizontally, then assemble

18

Step

Étape

Paso

3

ZD6

x 2

LZS6

x 2

Z6-118

x 2

11

x 1

Step

Étape

Paso

4

P35

x 4

19

x 1

Step

Étape

Paso

5

ZD6

x 2

P35

x 2

ZJ6-35

x 2

21


x 1

Step
Étape
Paso

6




	ZD6 x 2	20 x 1
	LZS6 x 2	
	Z6-48 x 1	
	Z6-66 x 1	

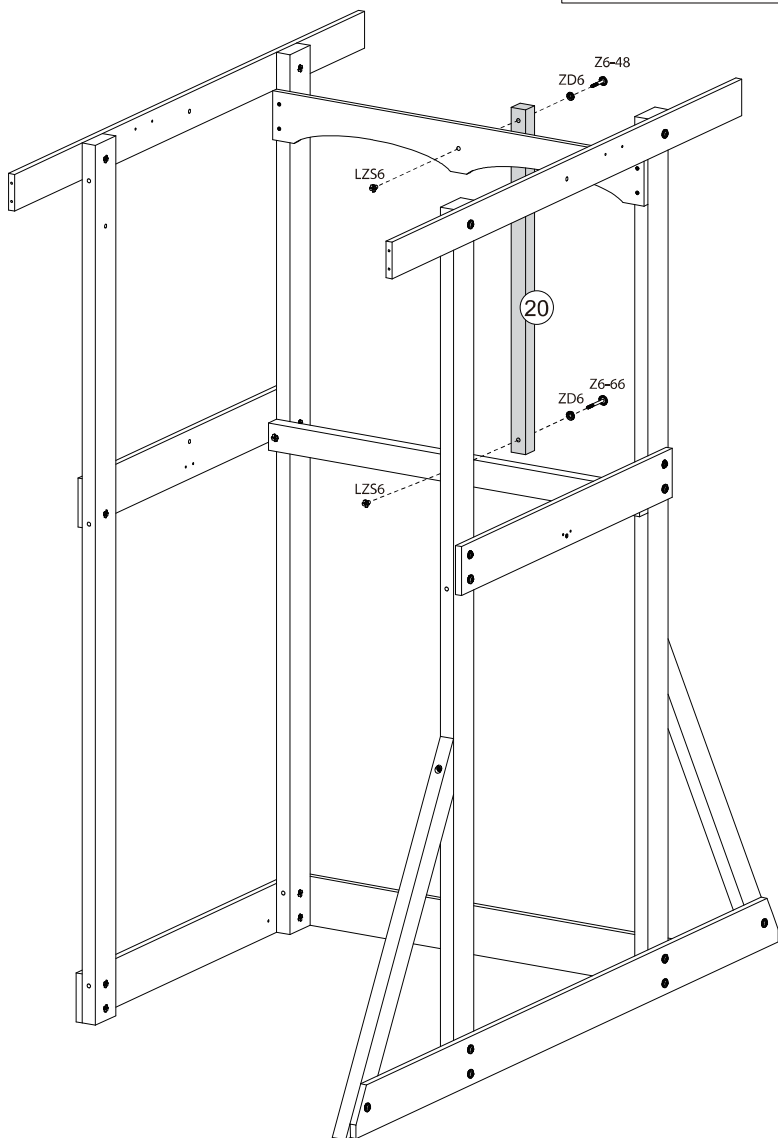

21

Step
Étape
Paso

7

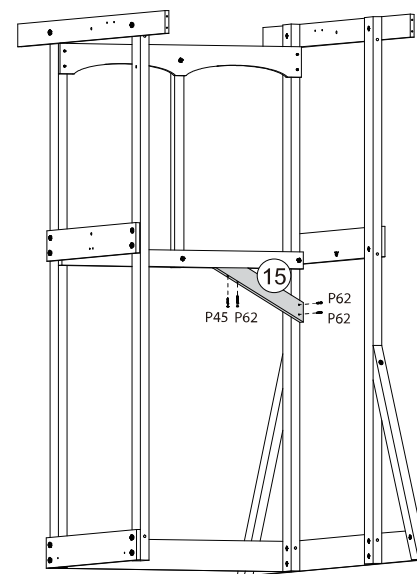


	P45 x 1	15 x 1
	P62 x 3	

Step
Étape
Paso

8



	ZD6 x 2	13 x 1
	LZS6 x 2	14 x 1
	P45 x 2	
	Z6-58 x 2	

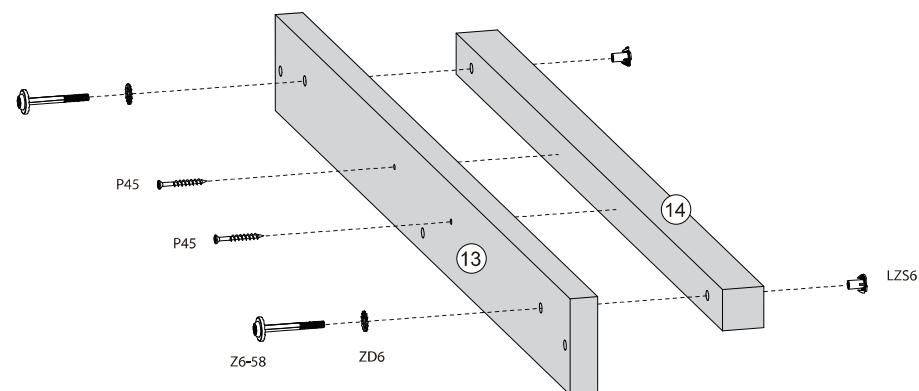


22

Step
Étape
Paso
9




	ZD6 x 2
	LZS6 x 2
	Z6-108 x 2

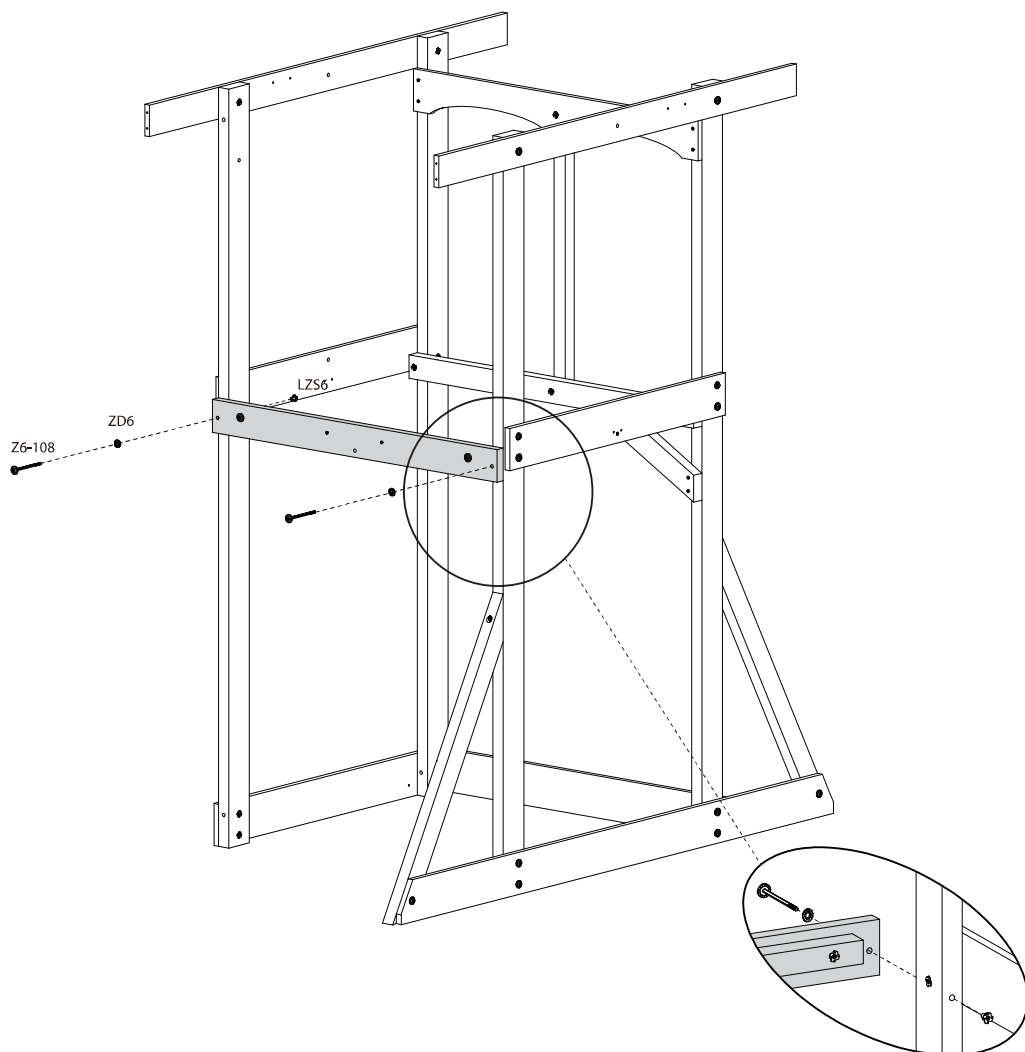

Step
Étape
Paso
10




	ZD6 x 2	(22) x 1
	LZS6 x 2	
	Z6-108 x 2	

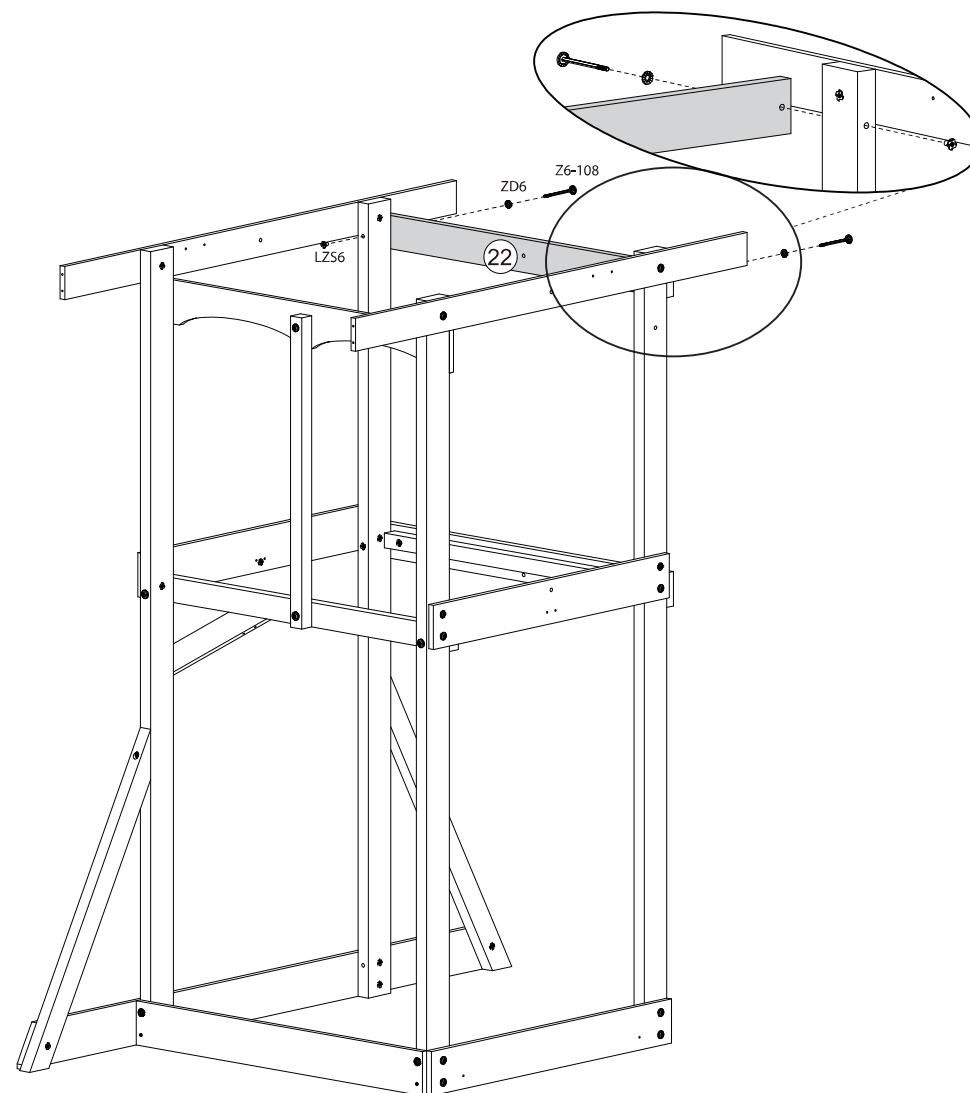

Step
Étape
Paso

11


	ZD6 x 2	(21) x 1
	P35 x 2	
	ZJ6-35 x 2	

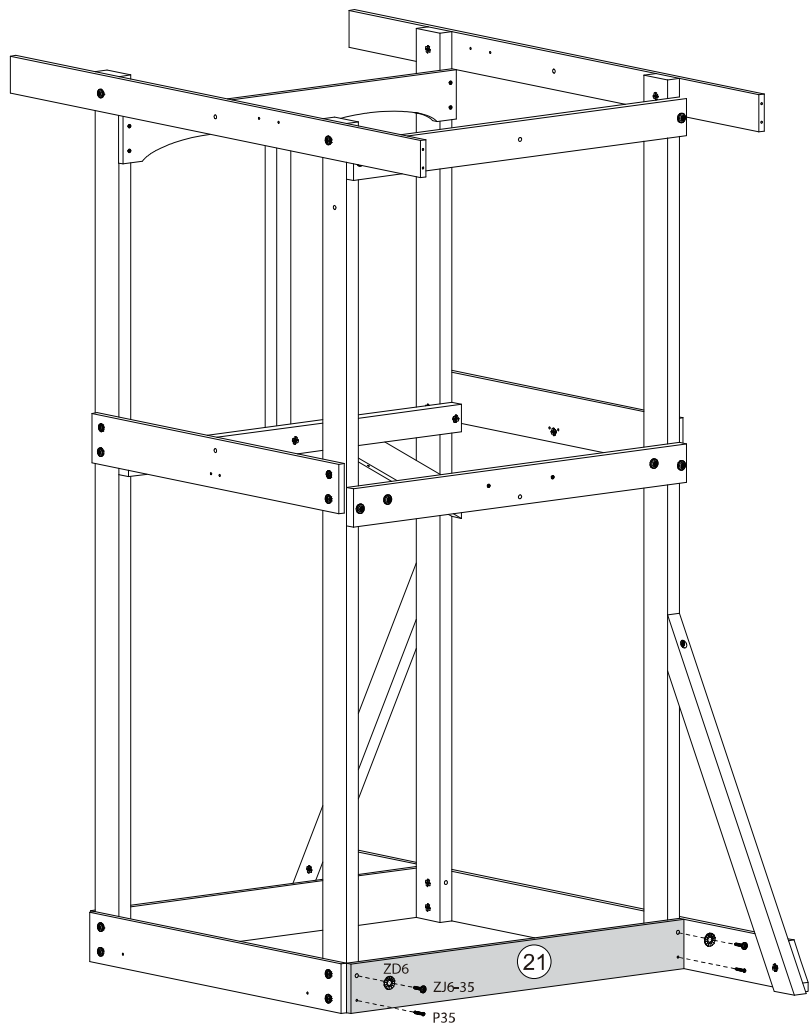

Step
Étape
Paso


12

	P62 x 4	(12) x 1
---	---------	----------

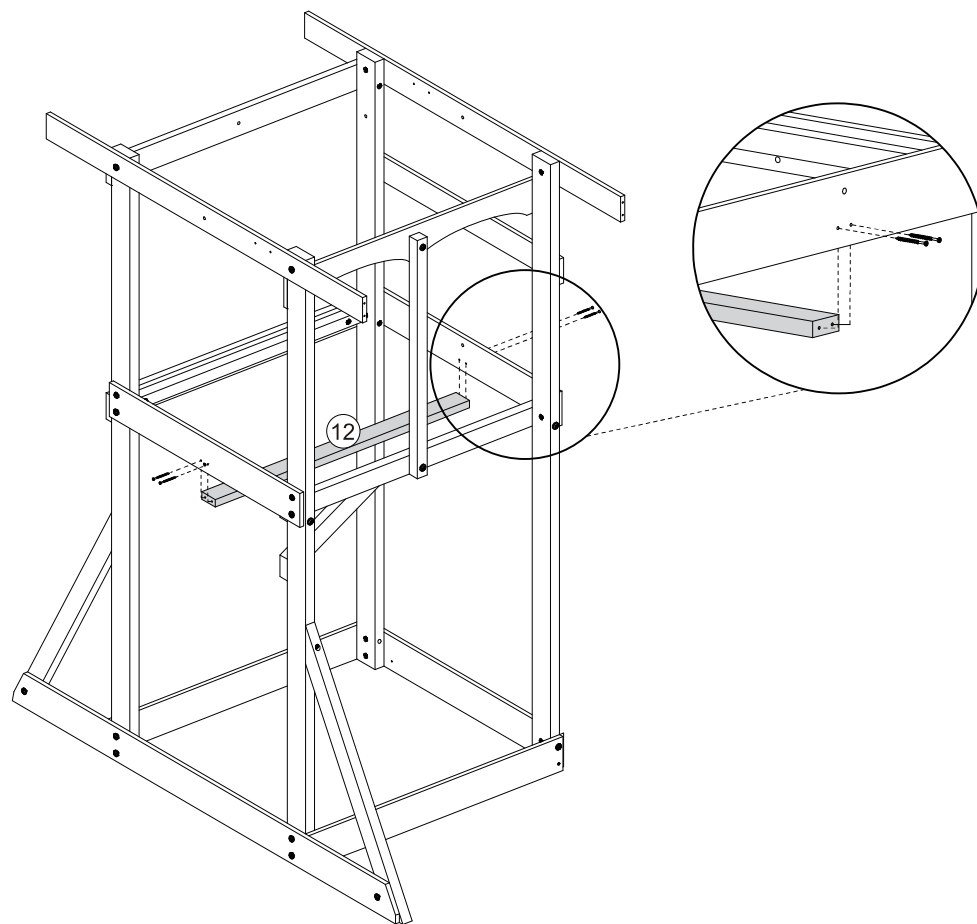

Step
Étape
Paso
13


	P35 x 32	16 x 2
		17 x 6
		18 x 1

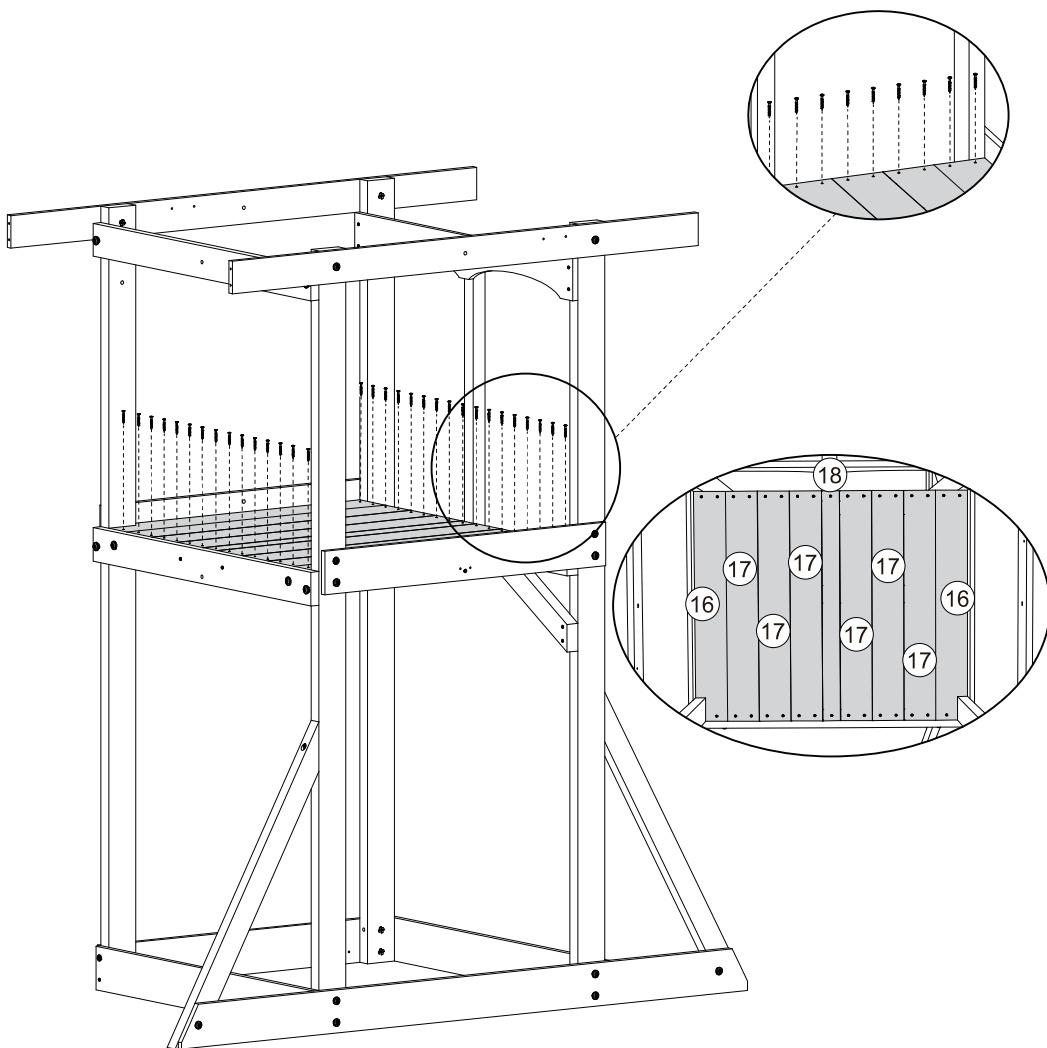

Step
Étape
Paso
14




	ZD6 x 2	28 x 1
	LZS6 x 2	
	Z6-48 x 2	

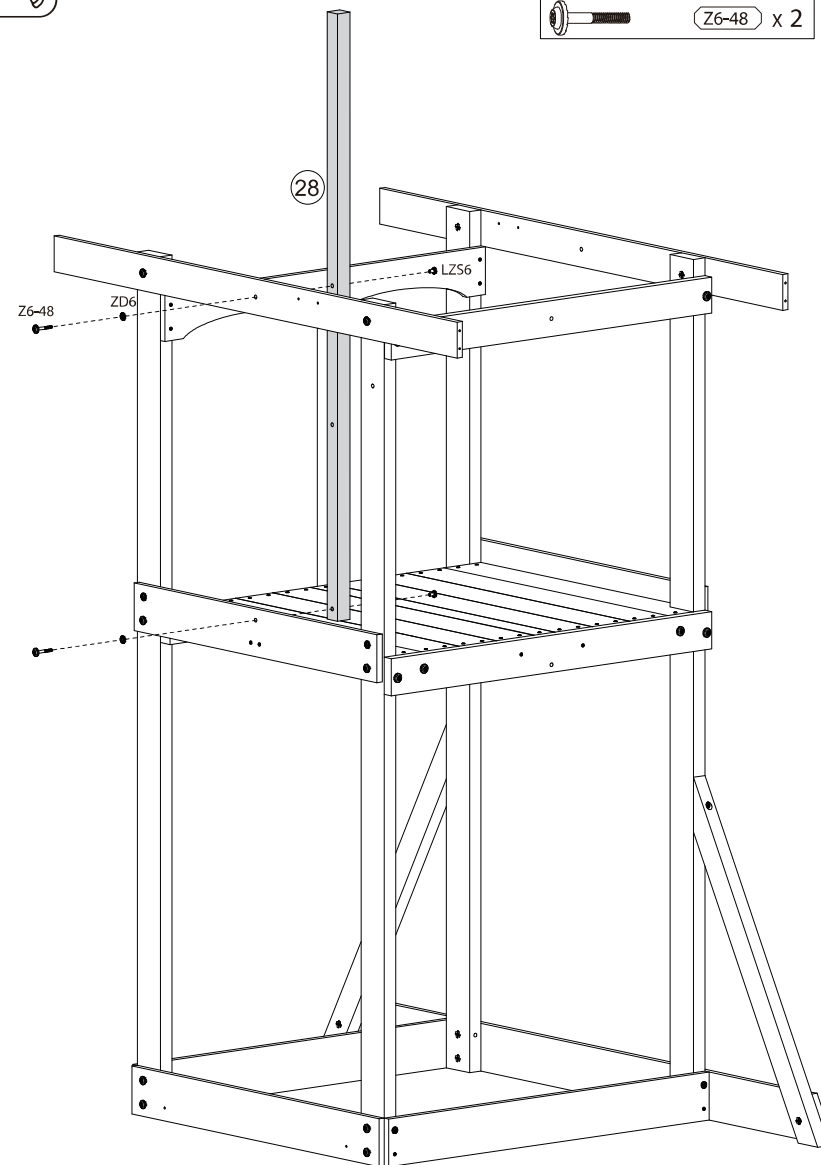

Step
Étape
Paso
15




	ZD6 x 1	26 x 1
	LZS6 x 1	
	P35 x 4	
	Z6-48 x 1	

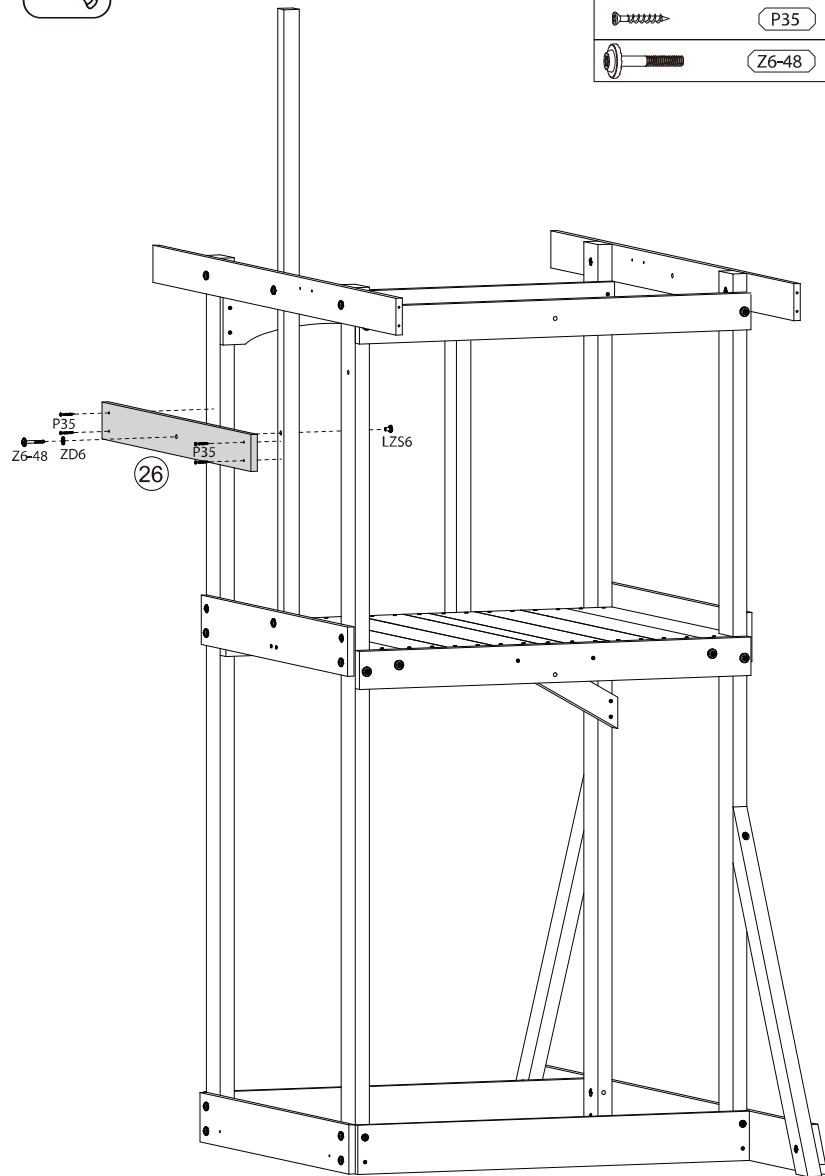

Step
Étape
Paso
16


	P35 x 4	26 x 1
--	---------	--------

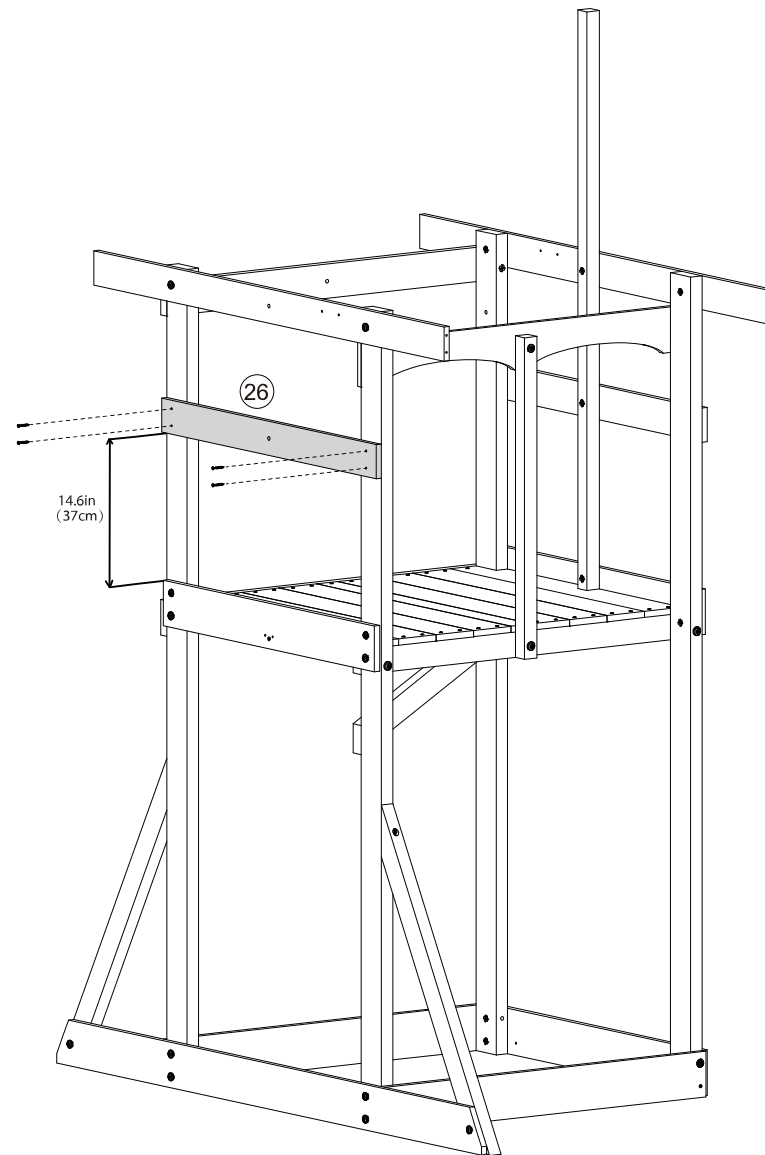

Step
Étape
Paso
17




	ZD6 x 3	(27) x 1
	LZS6 x 2	
	Z6-98 x 3	

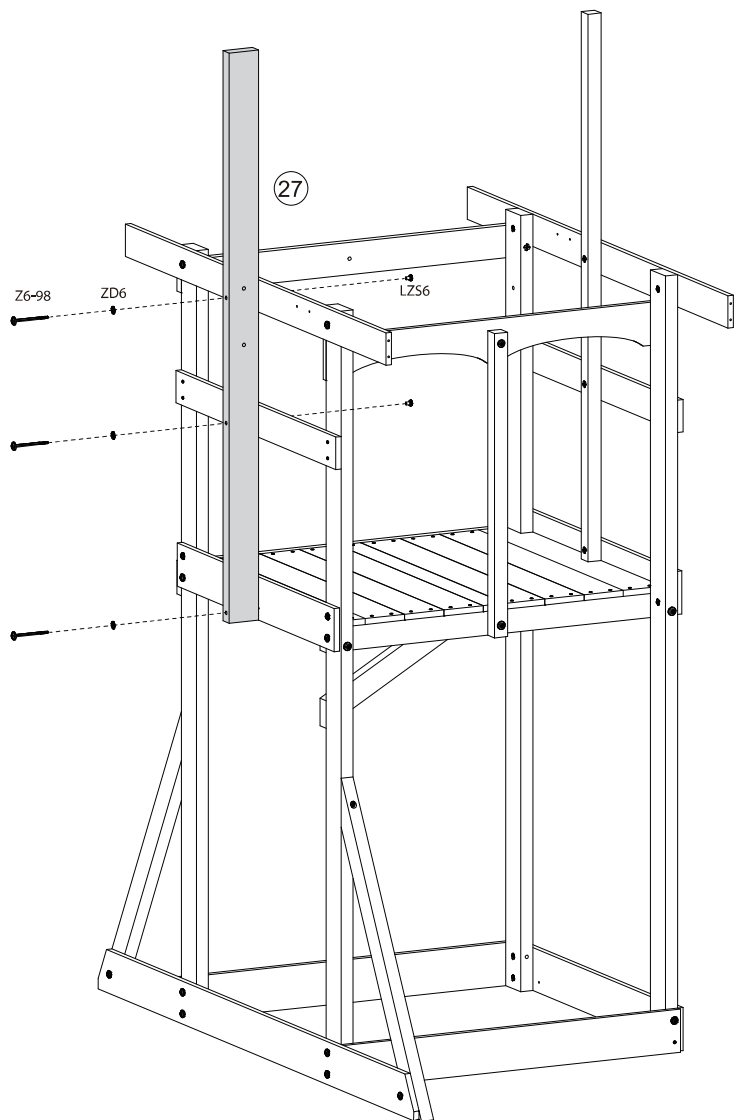

Step
Étape
Paso
18

	P45 x 2	(24) x 1
--	---------	----------

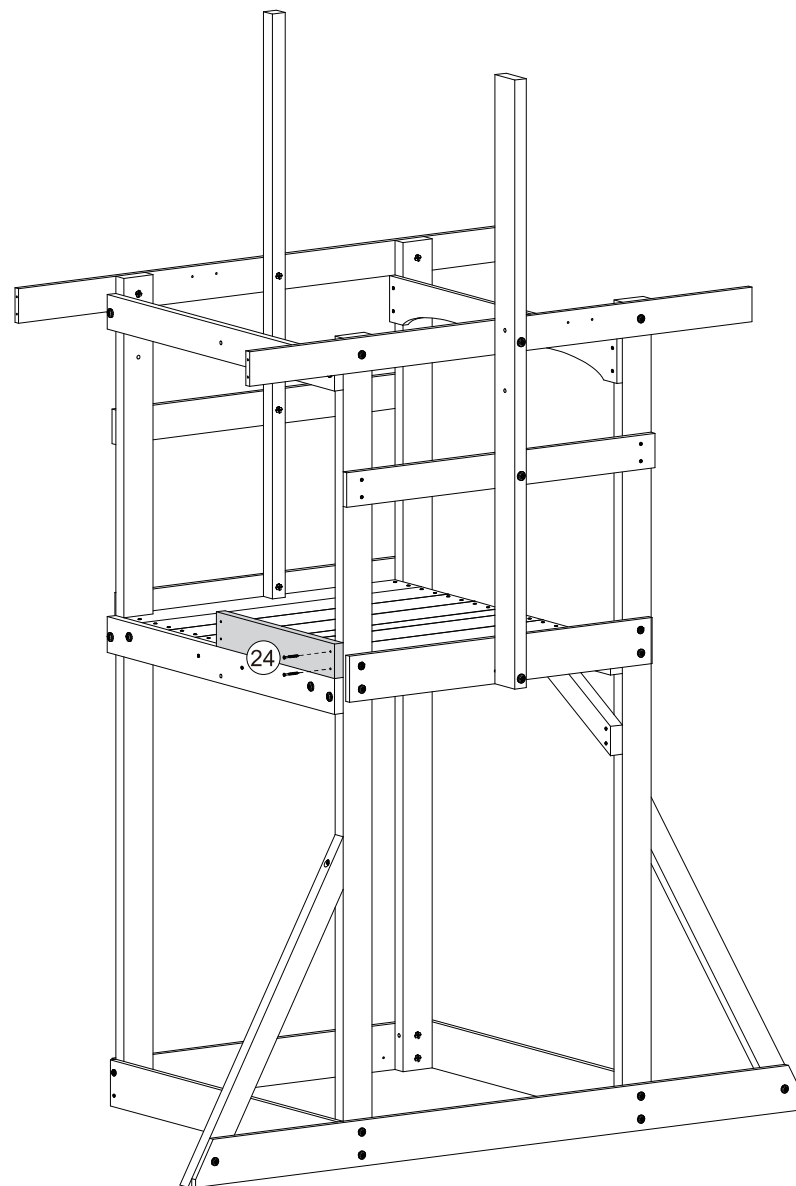


Step
Étape
Paso
19



P45 x 2

23 x 1

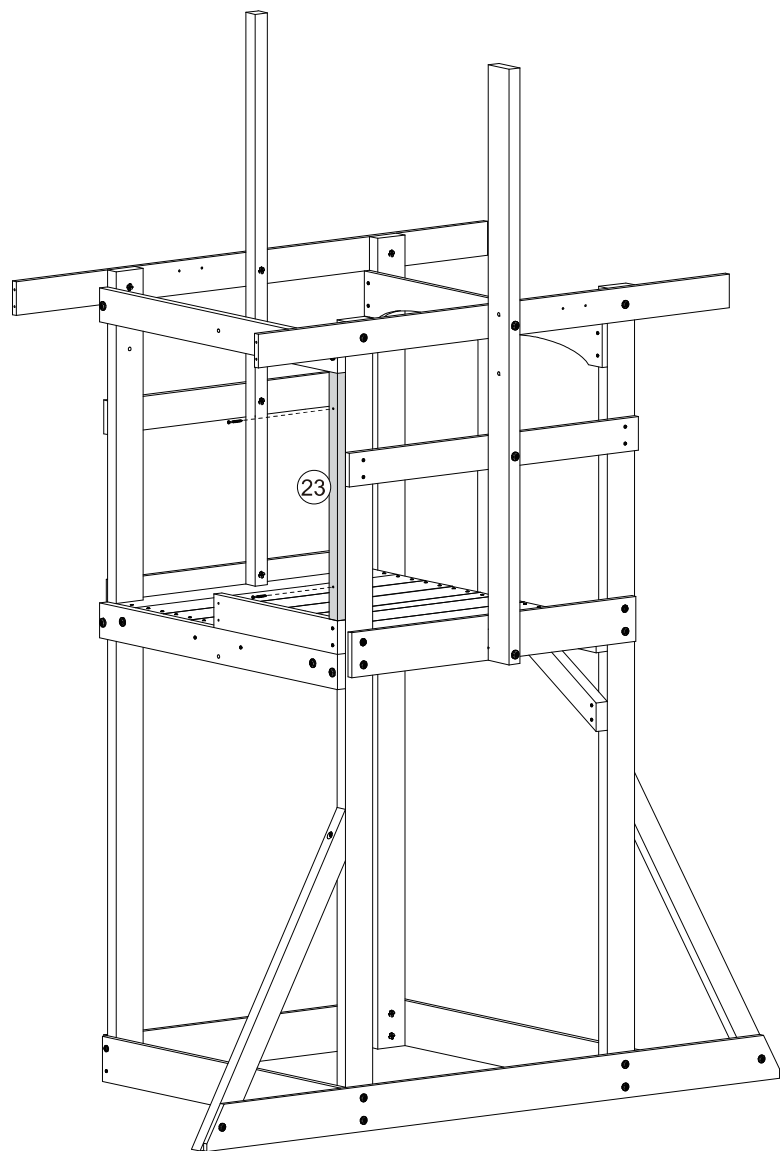


Step
Étape
Paso
20



TD13 x 6


56 x 1

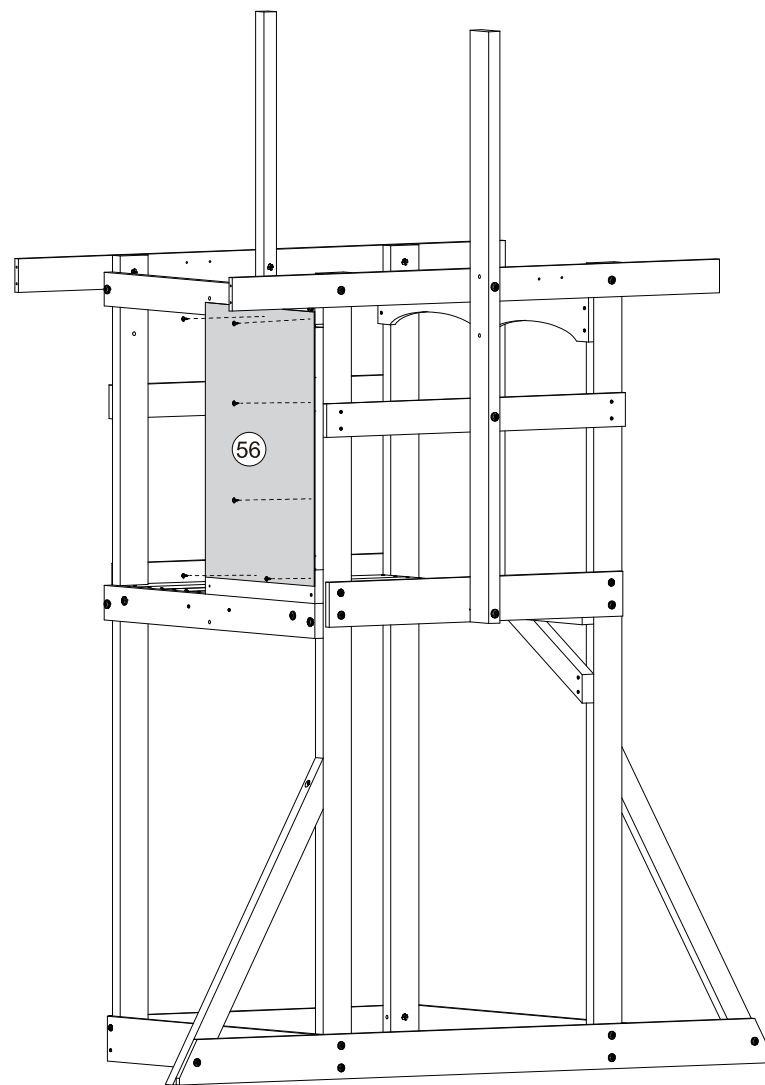

Step
Étape
Paso
21




	ZD6 x 2	(25) x 1
	LZS6 x 2	
	Z6-86 x 2	

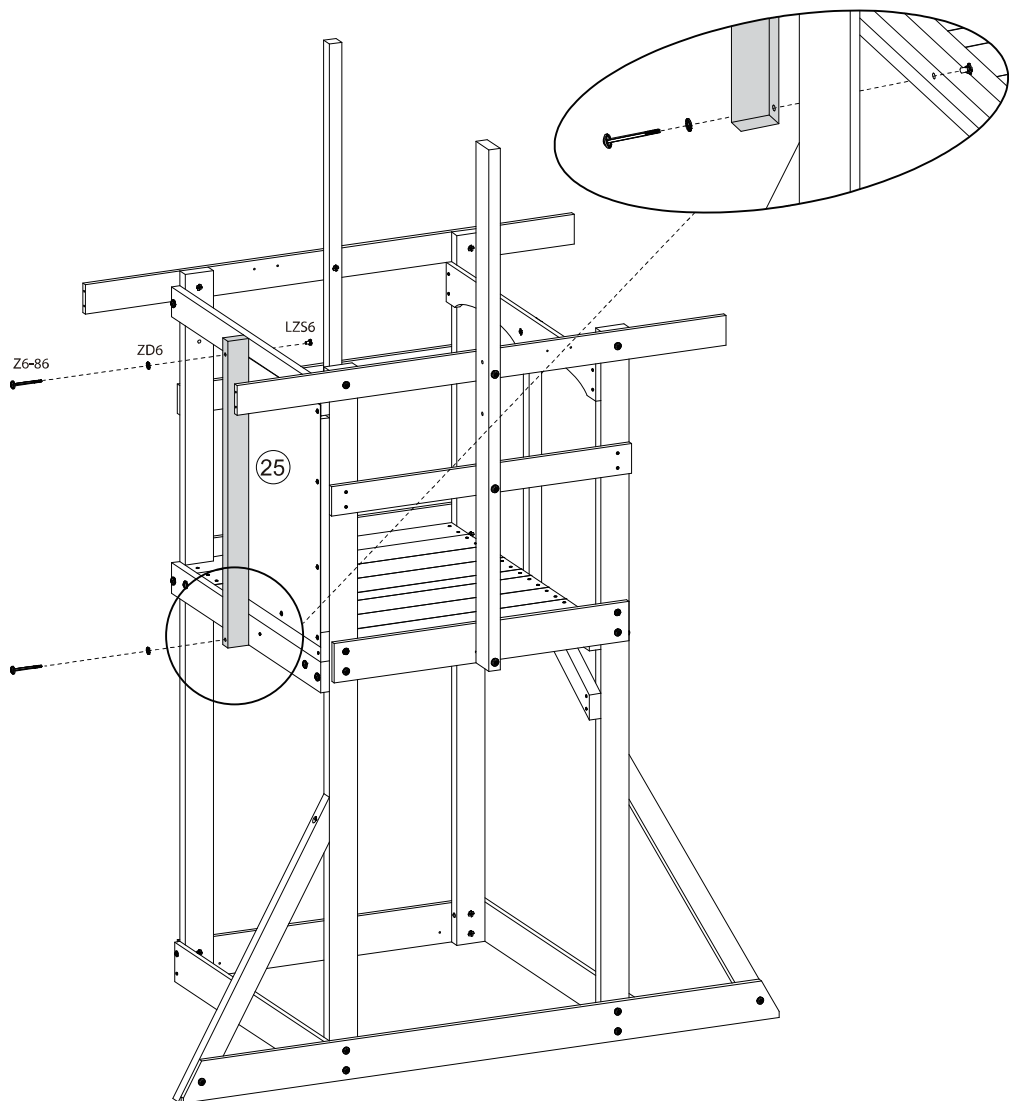

Step
Étape
Paso
22

	TD13 x 3
	P45 x 2

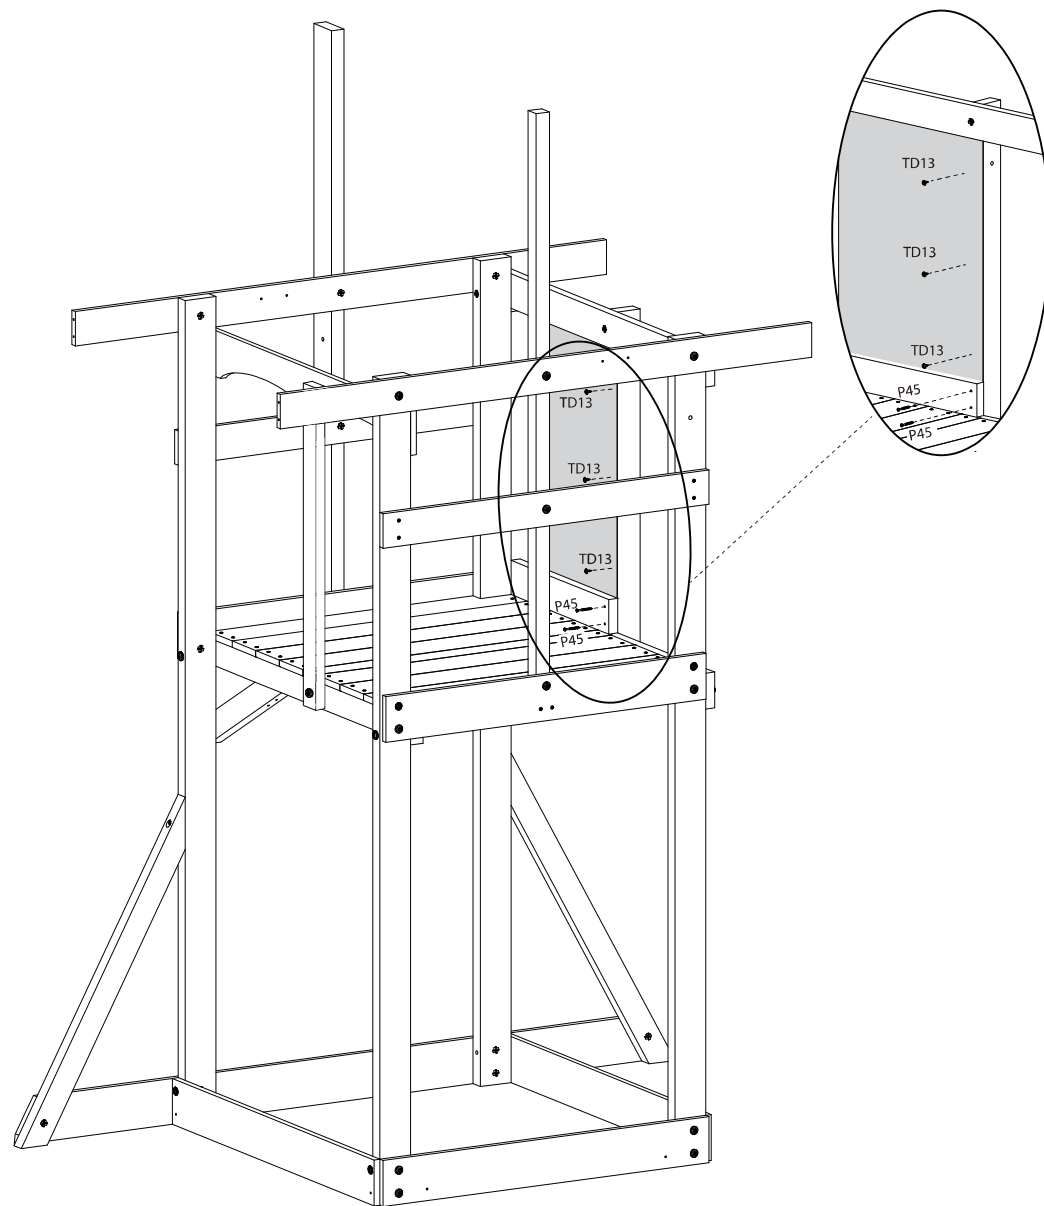

Step
Étape
Paso
23

P35 x 28

33 x 2

34 x 1

35 x 3

36 x 3

Step
Étape
Paso
24

LZS6 x 6

Step
Étape
Paso
25

TC25 x 6


SJ0909 x 3

ZX6-25 x 6

SJ0910 x 3


Step
Étape
Paso
26

 P45 x 4

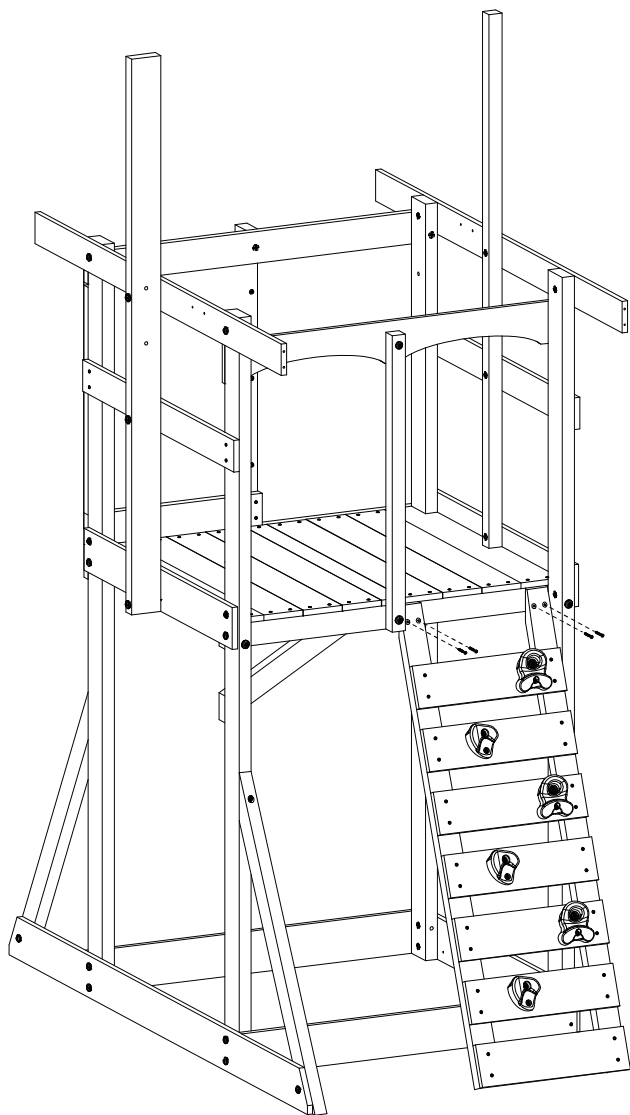

Step
Étape
Paso
27



 P35 x 4 34 x 1

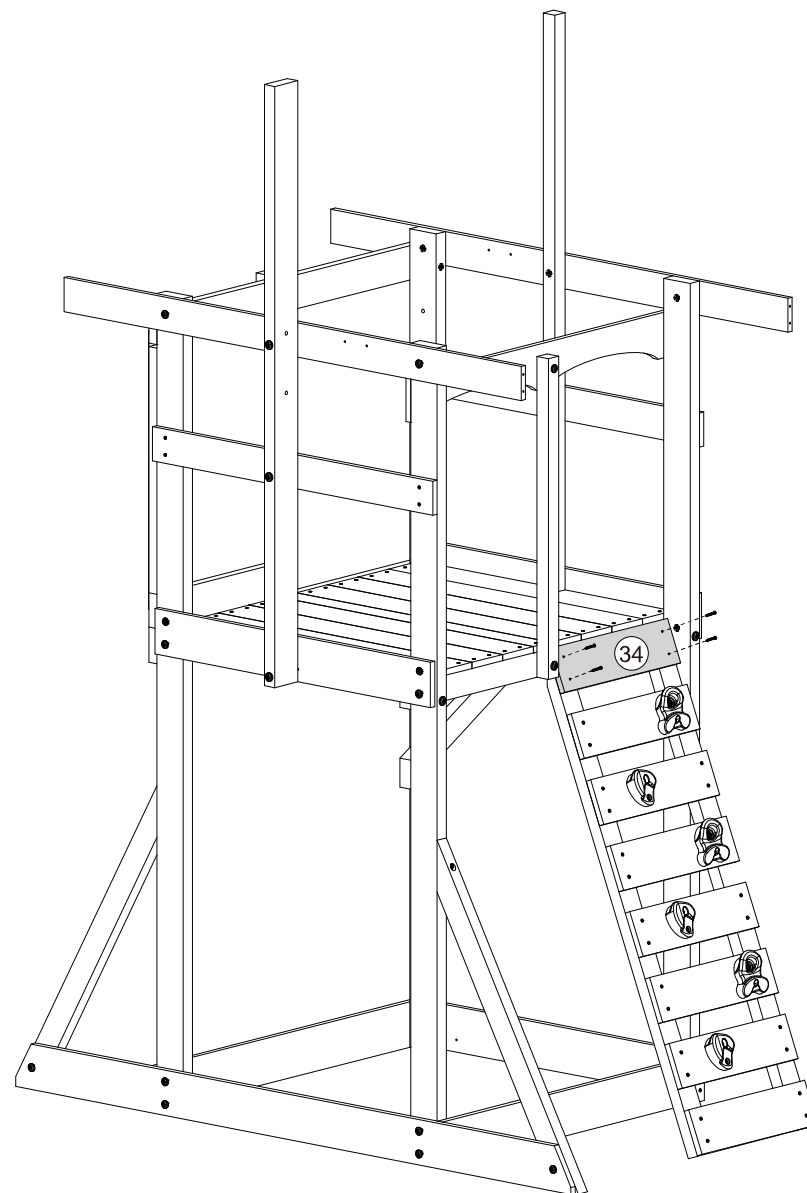





P28 x 24

30 x 6

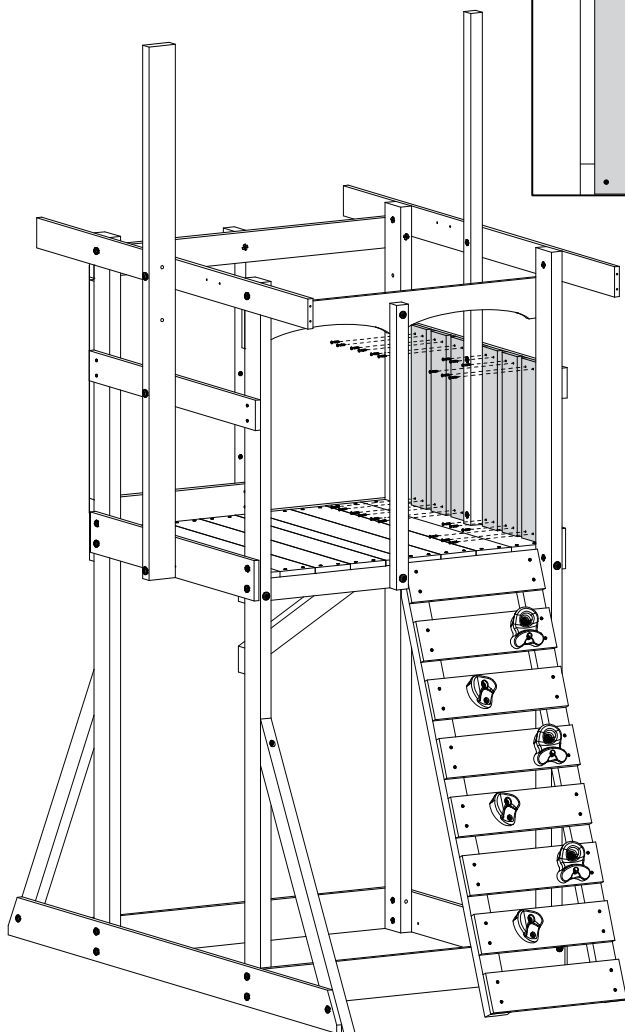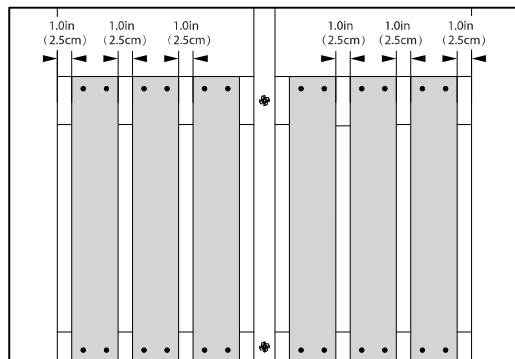

P28 x 24

30 x 6

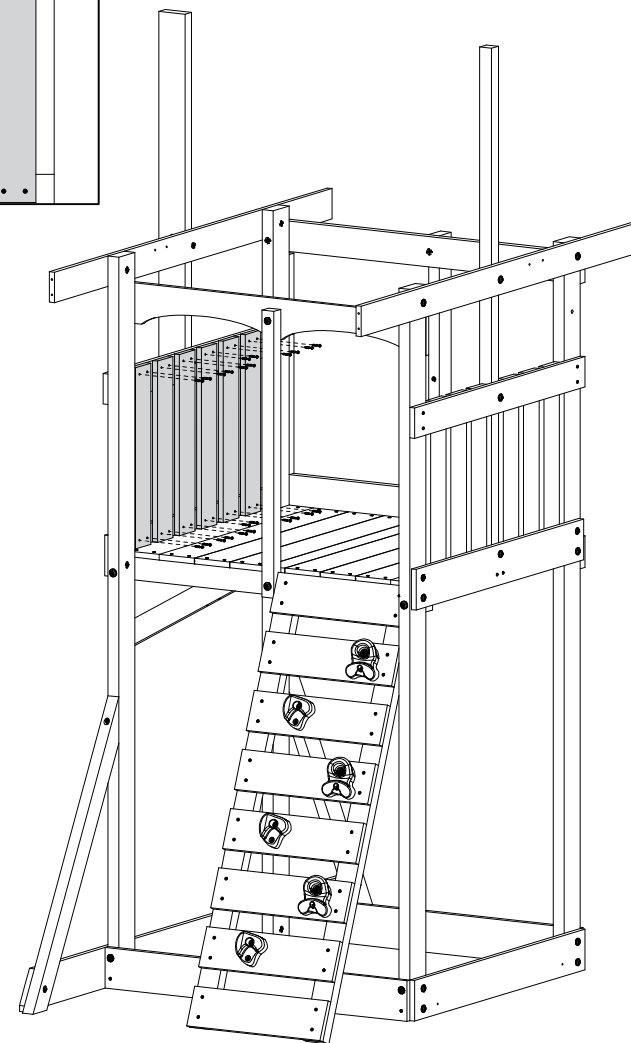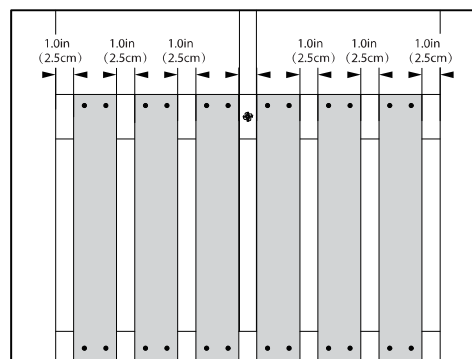


Step
Étape
Paso
30



P35 x 2

29 x 1

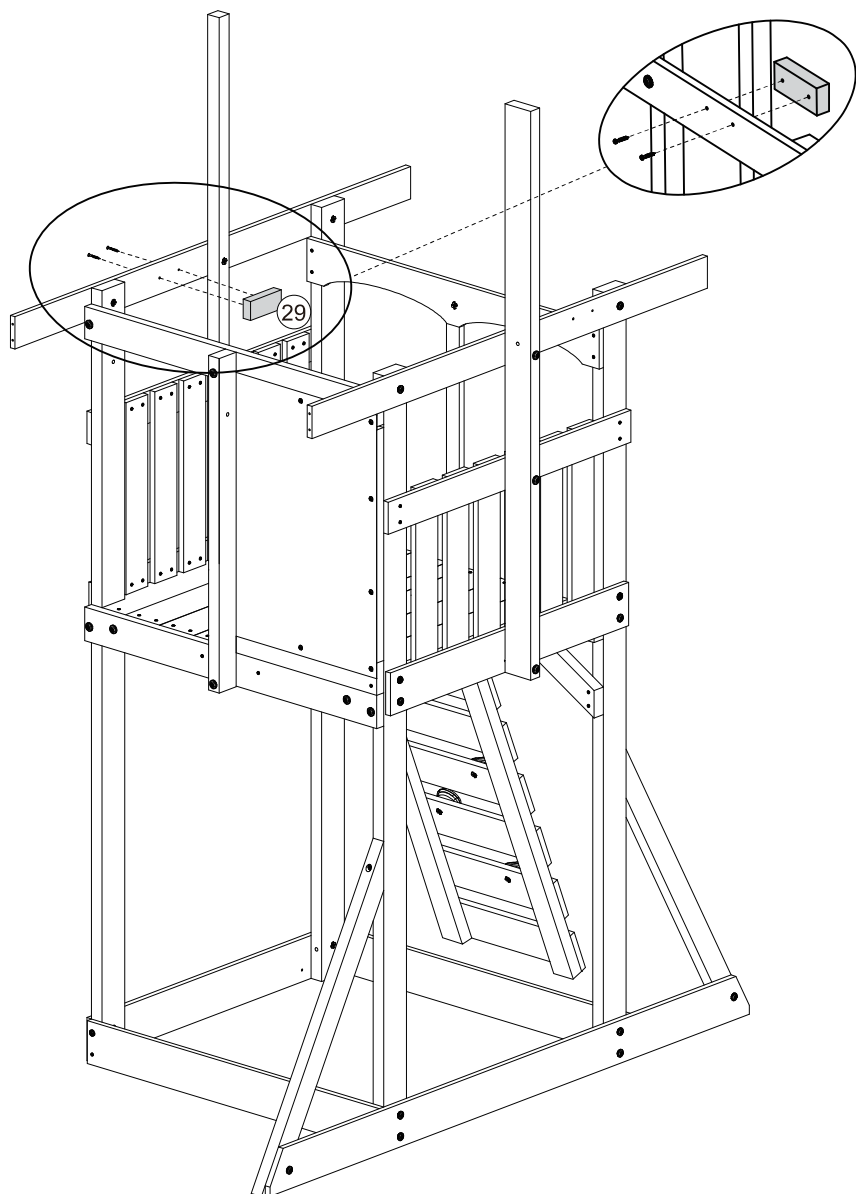


Step
Étape
Paso
31



P28 x 2

SJ0927-a x 1

SJ0927-b x 1

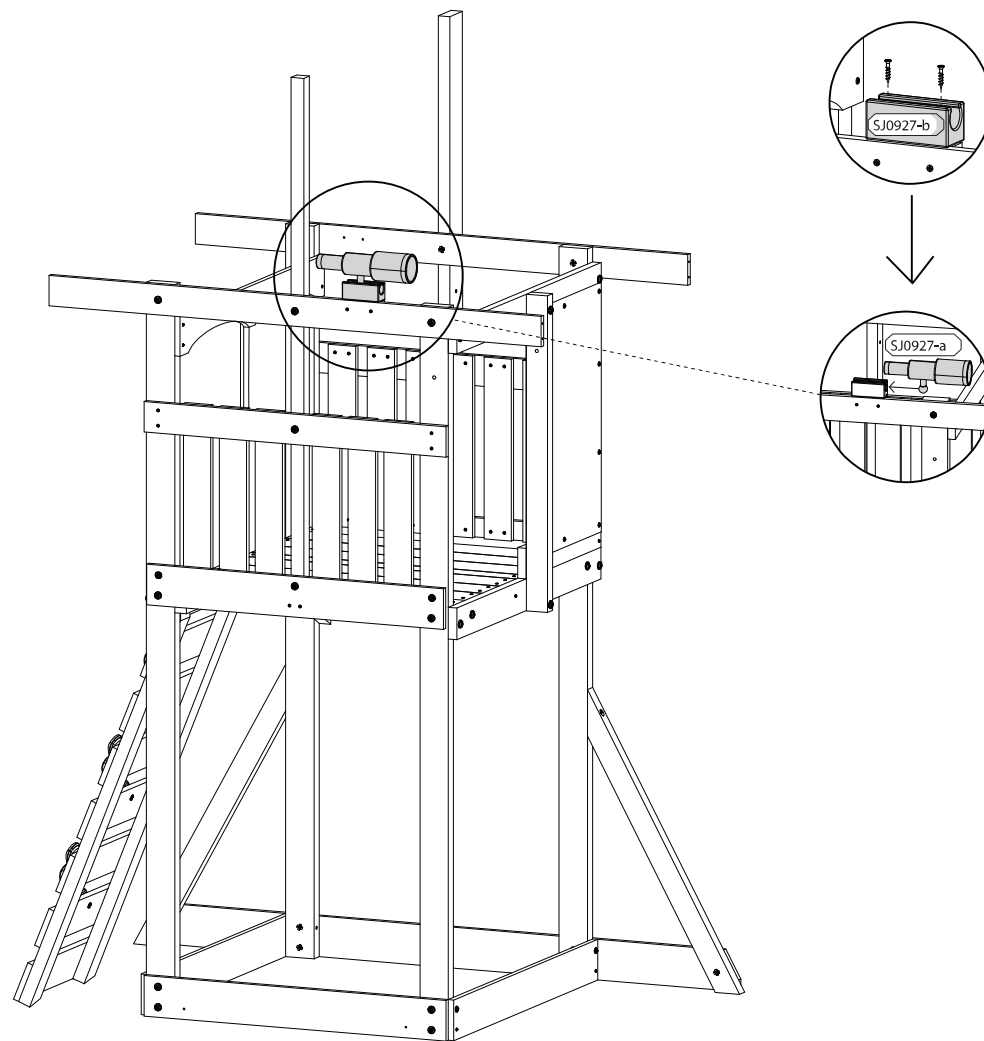


Step
Étape
Paso
32



P62 x 3

32 x 1

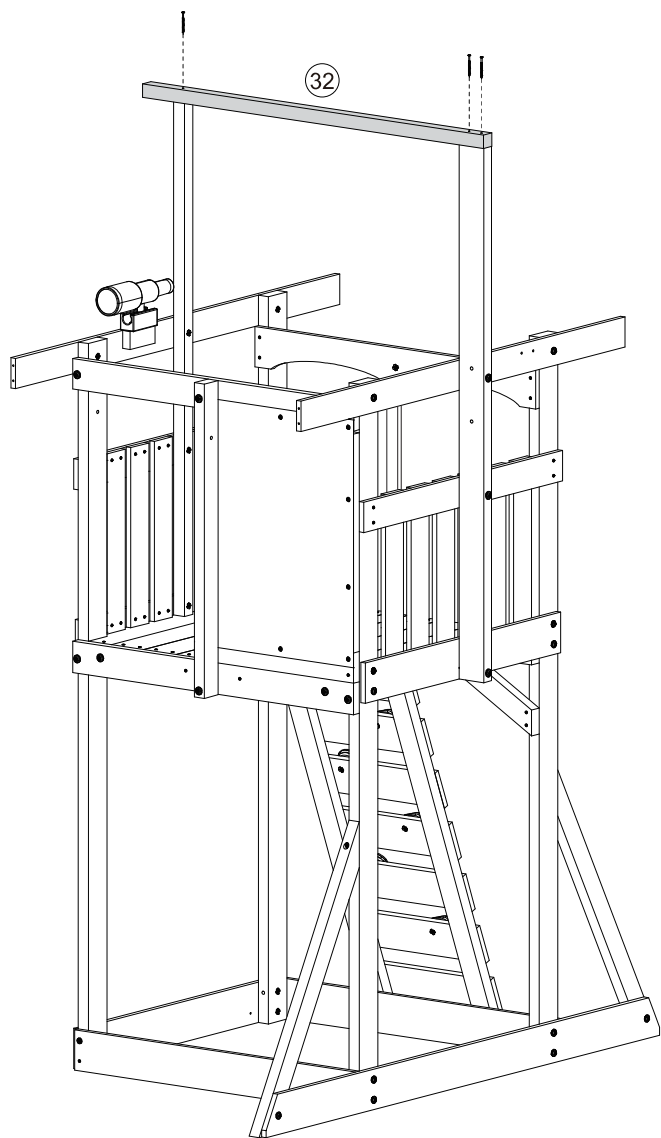


Step
Étape
Paso
33



P35 x 4

31 x 1

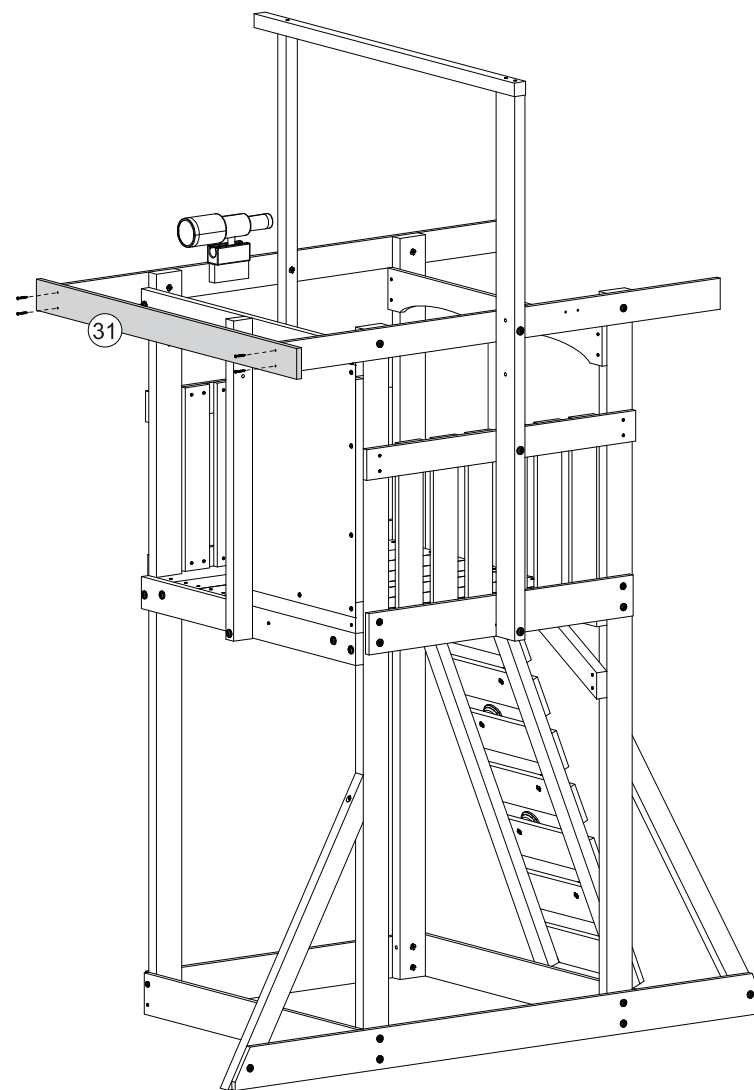


Step
Étape
Paso
34



P35 x 4

31 x 1

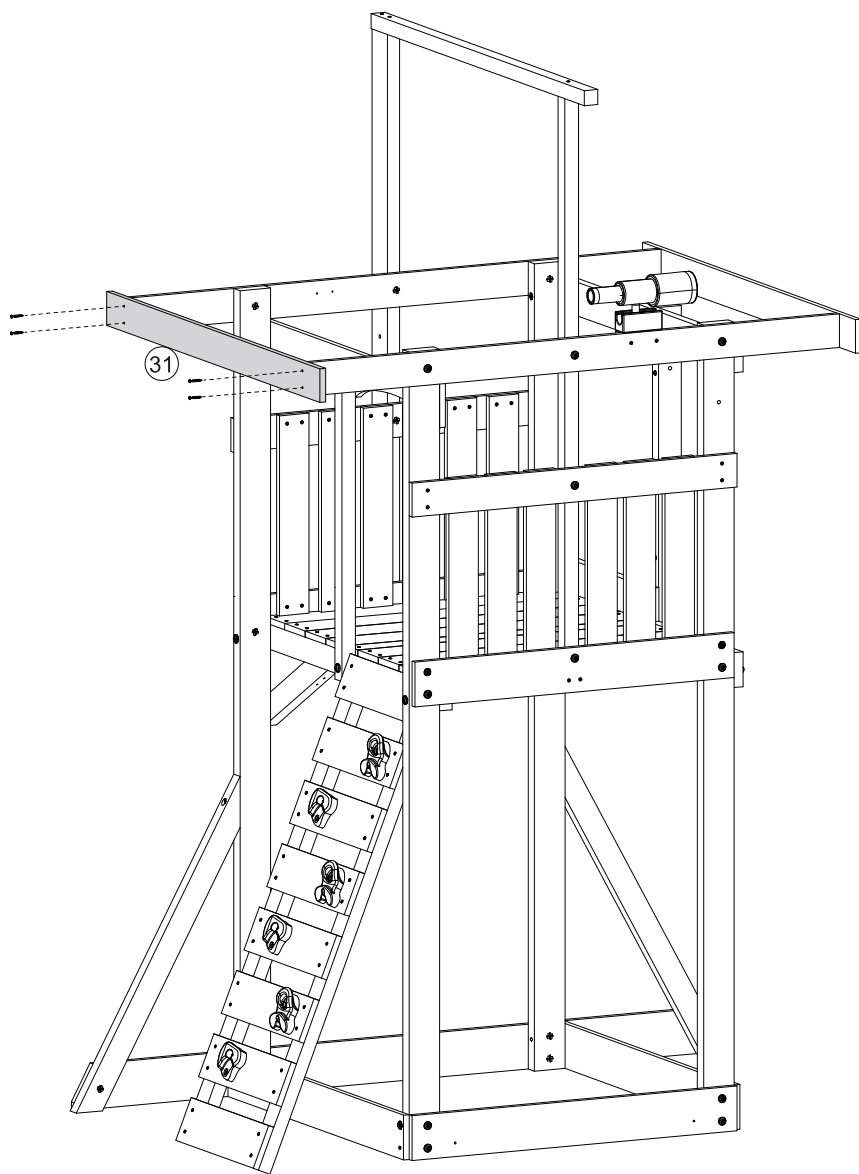


Step
Étape
Paso
35




TD13 x 4

53 x 1

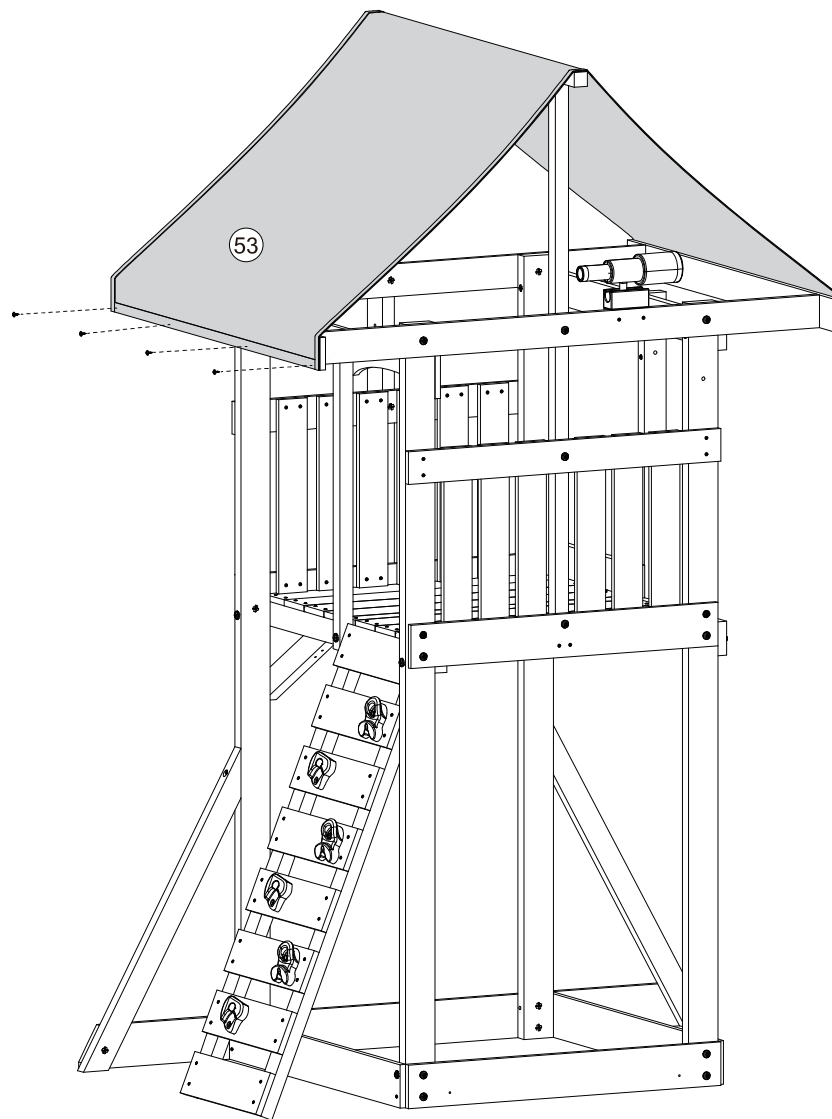


Step
Étape
Paso
36

TD13 x 4

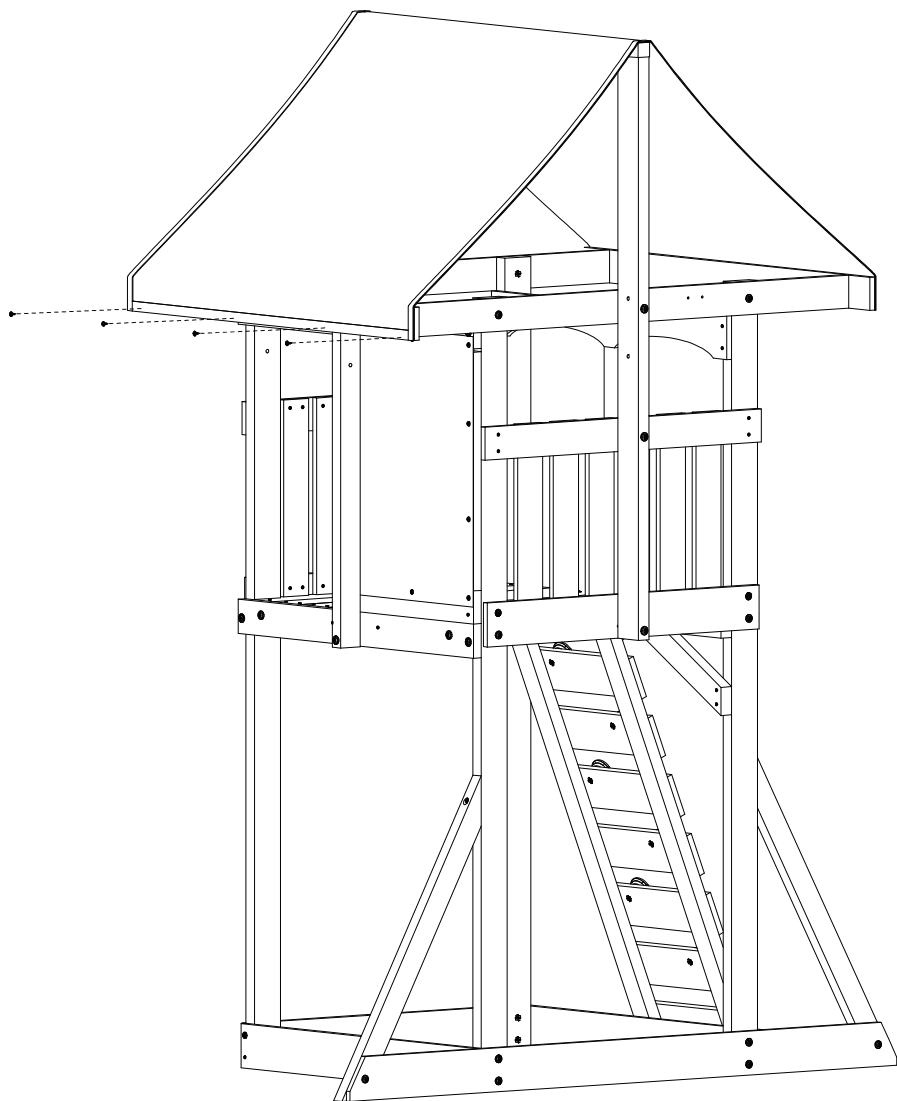

Step
Étape
Paso
37

TD13 x 6	54 x 1
TX22 x 2	WJ0418 x 1

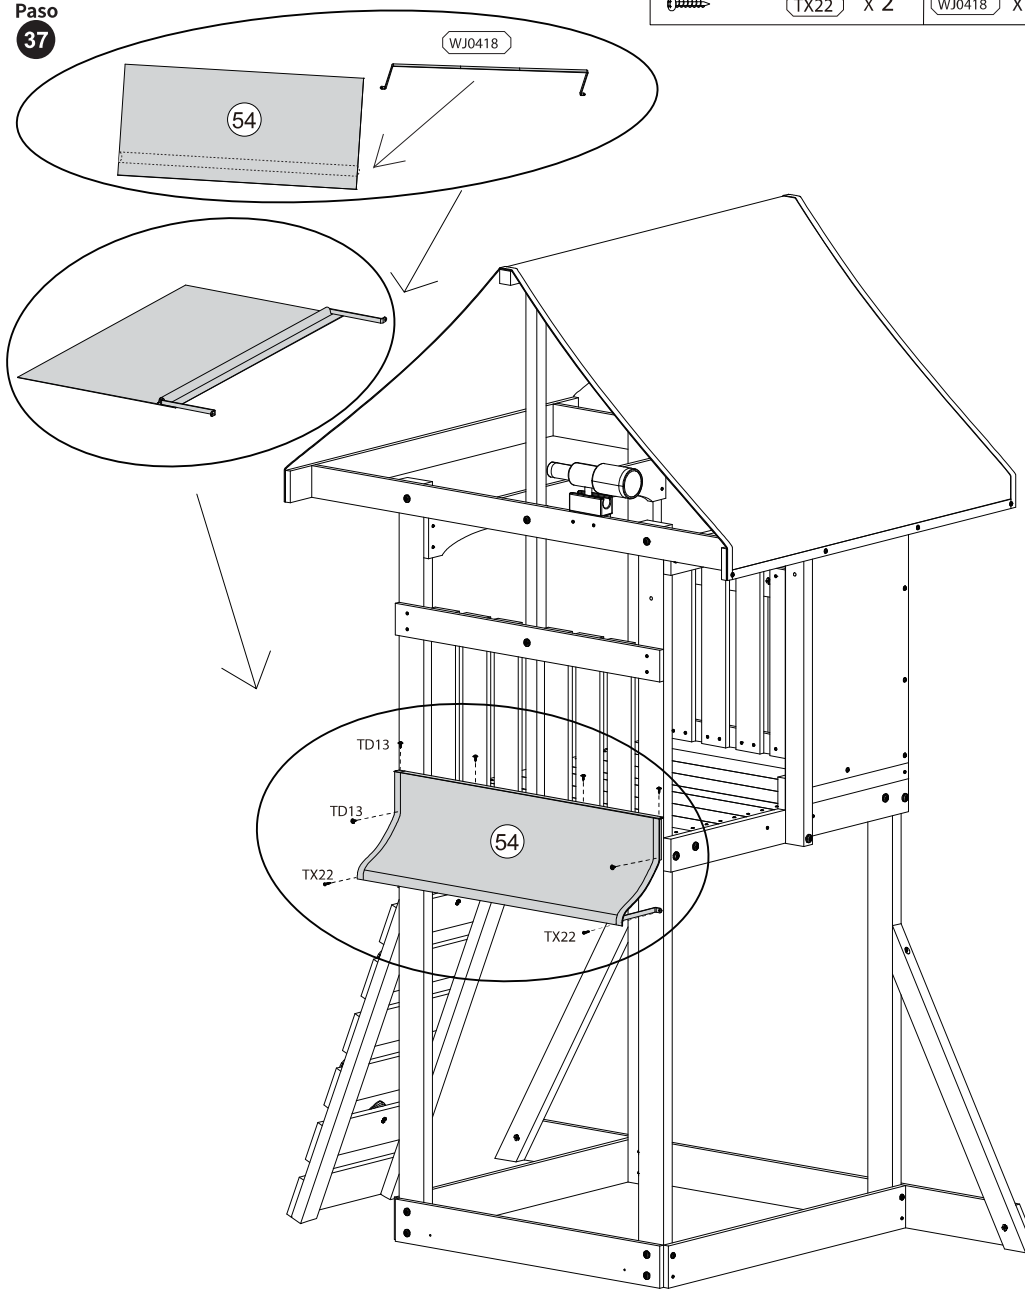


Step
Étape
Paso
38



TD13 x 6

55 x 1

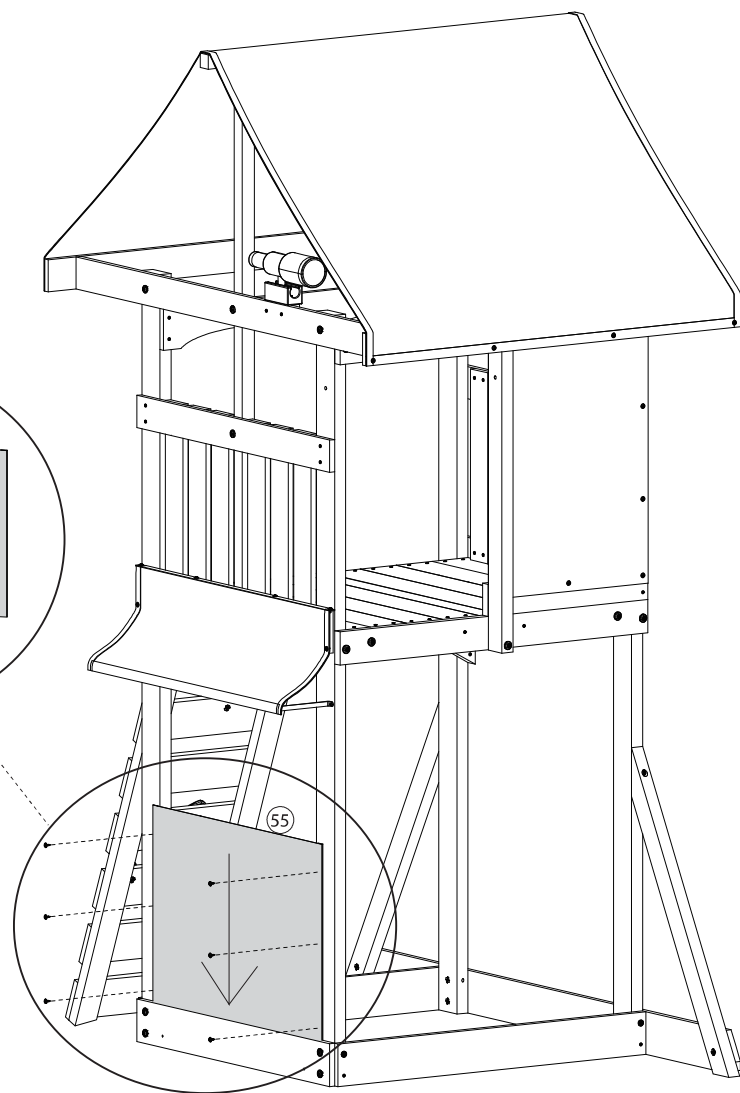


51

Step
Étape
Paso
39




TD13 x 3

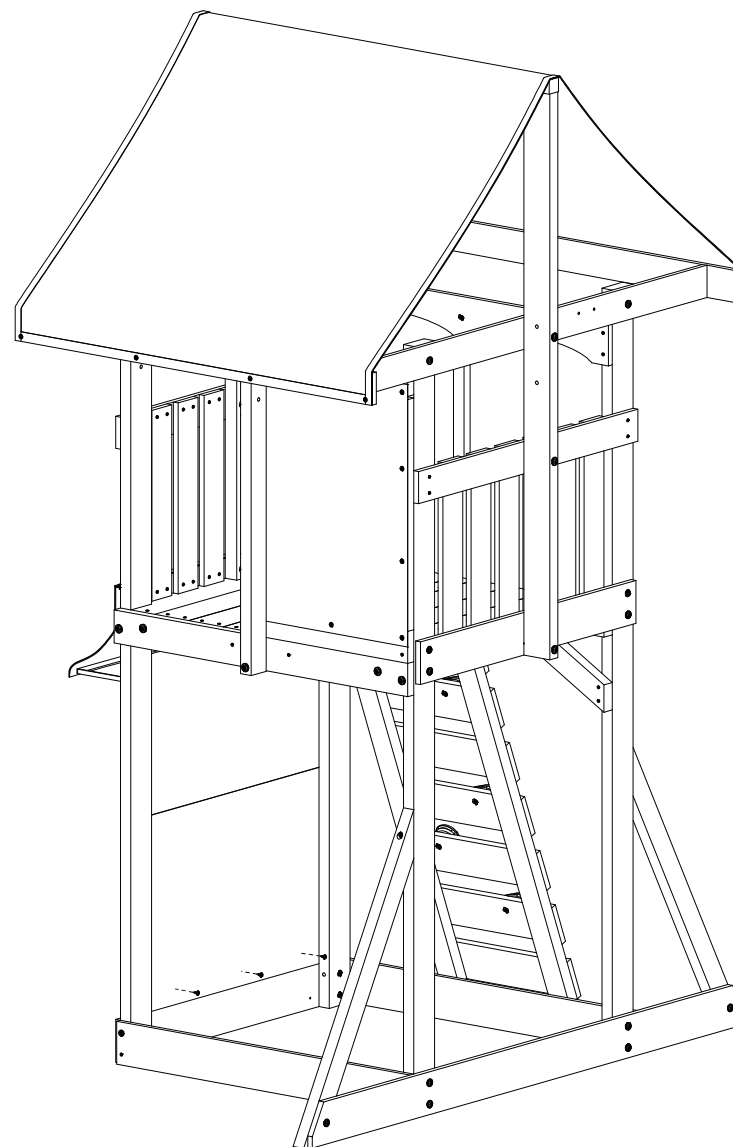

52


Step
Étape
Paso
40



 P62 x 4 (37) x 1

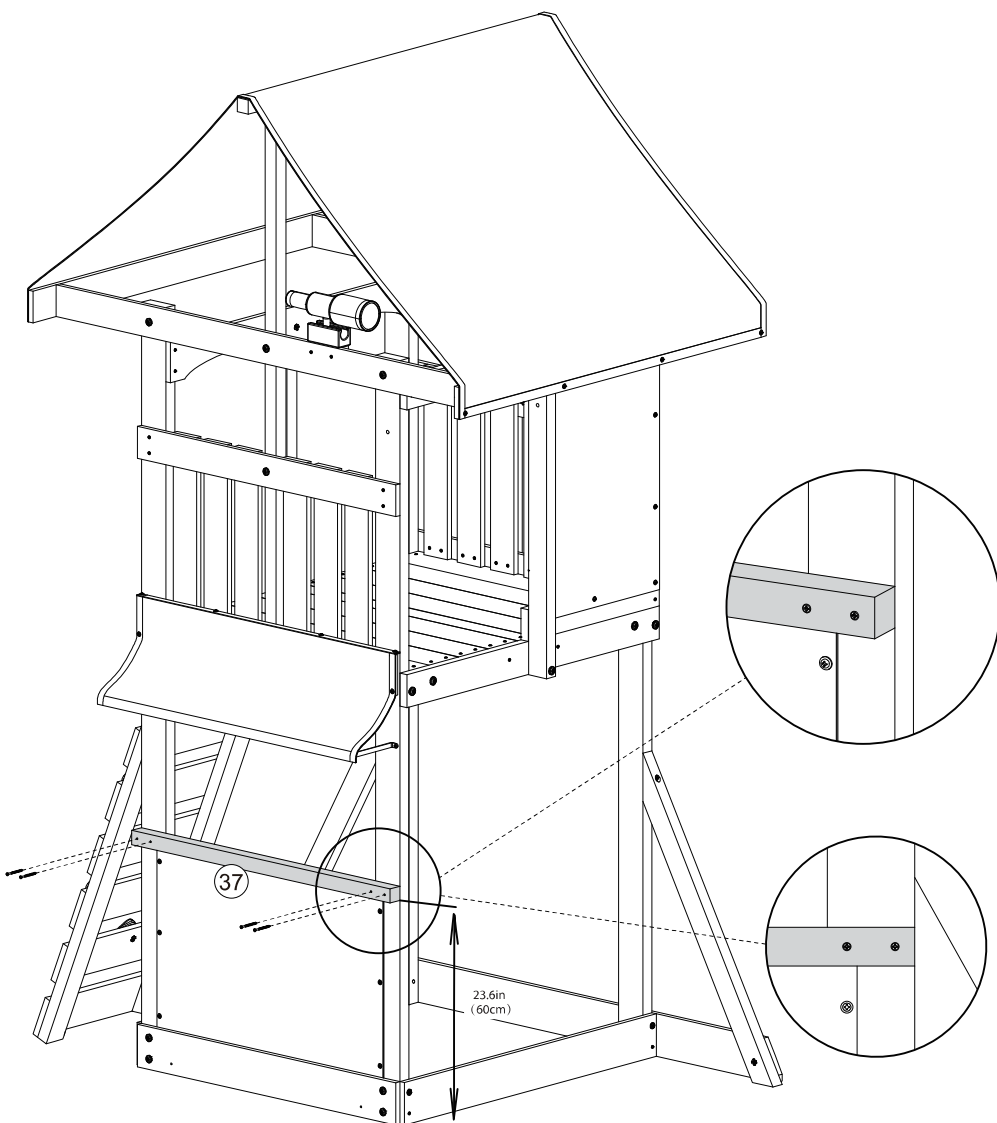

Step
Étape
Paso
41

 P35 x 3 (38) x 1

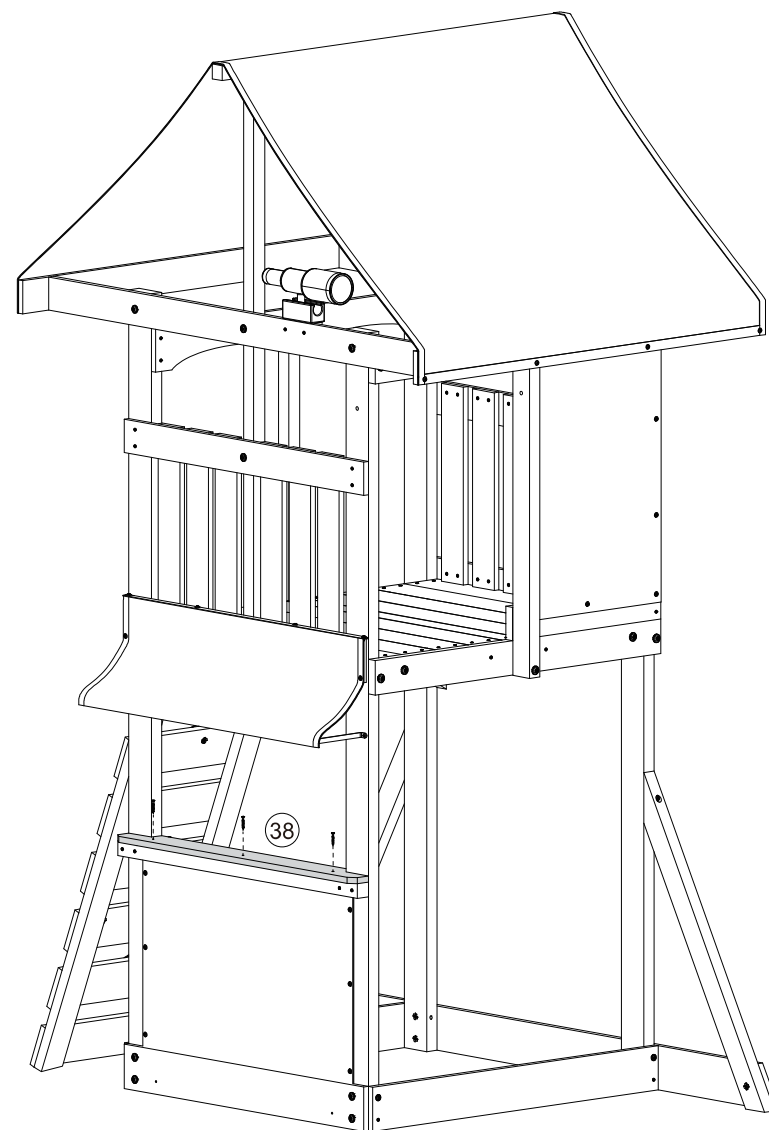


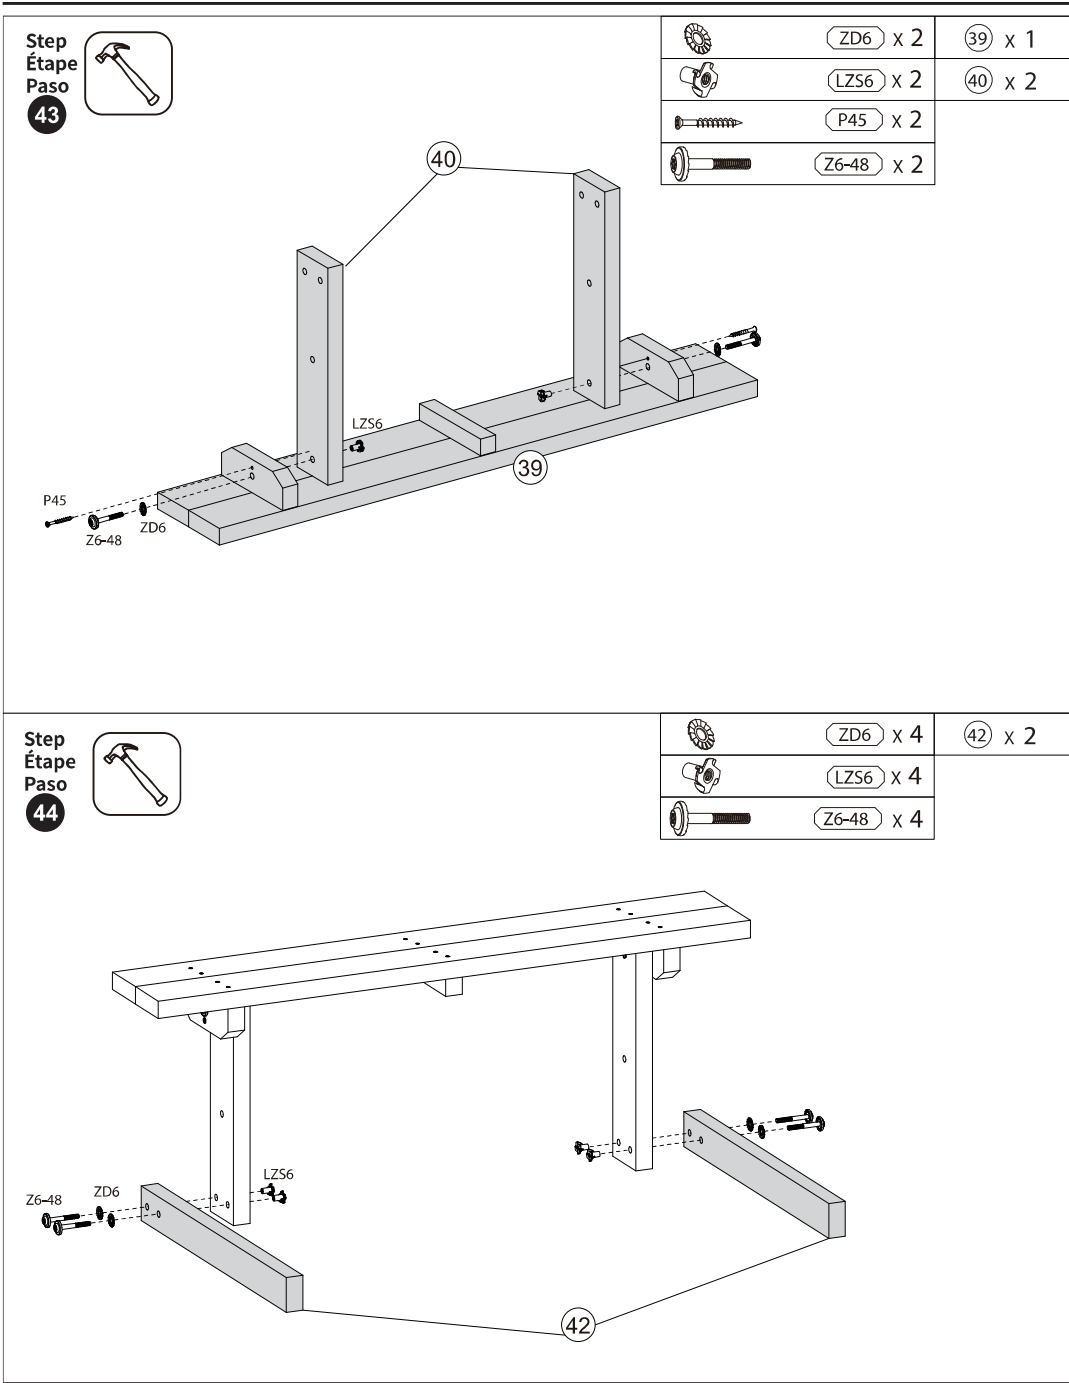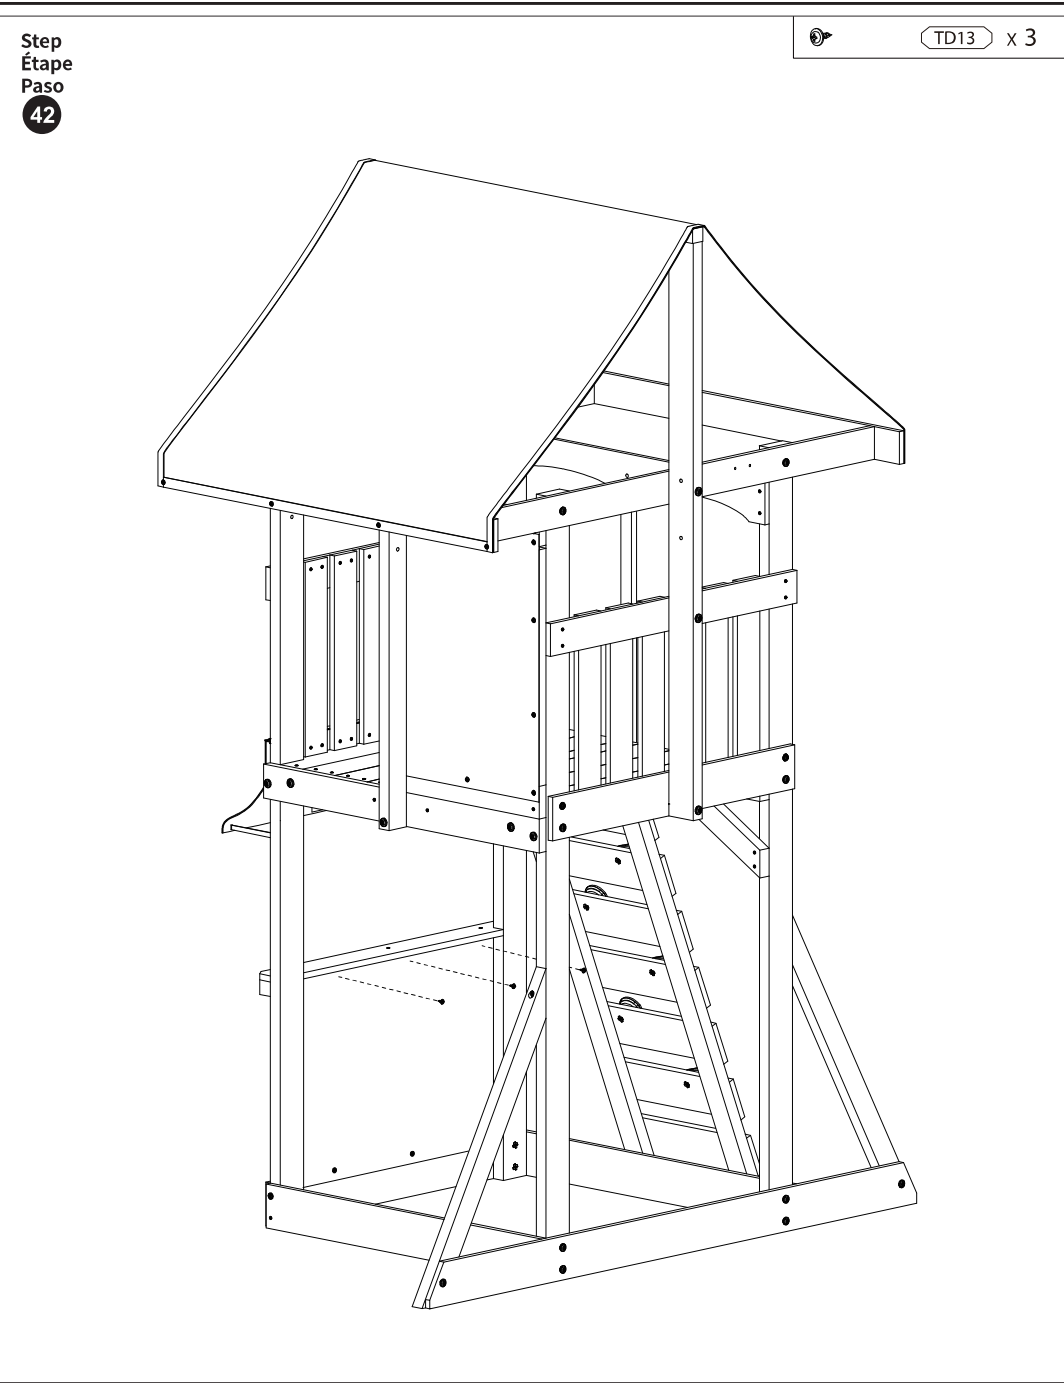

Step
Étape
Paso
45




	ZD6 x 2	(41) x 2
	LZ56 x 2	
	Z6-48 x 2	
	P62 x 2	

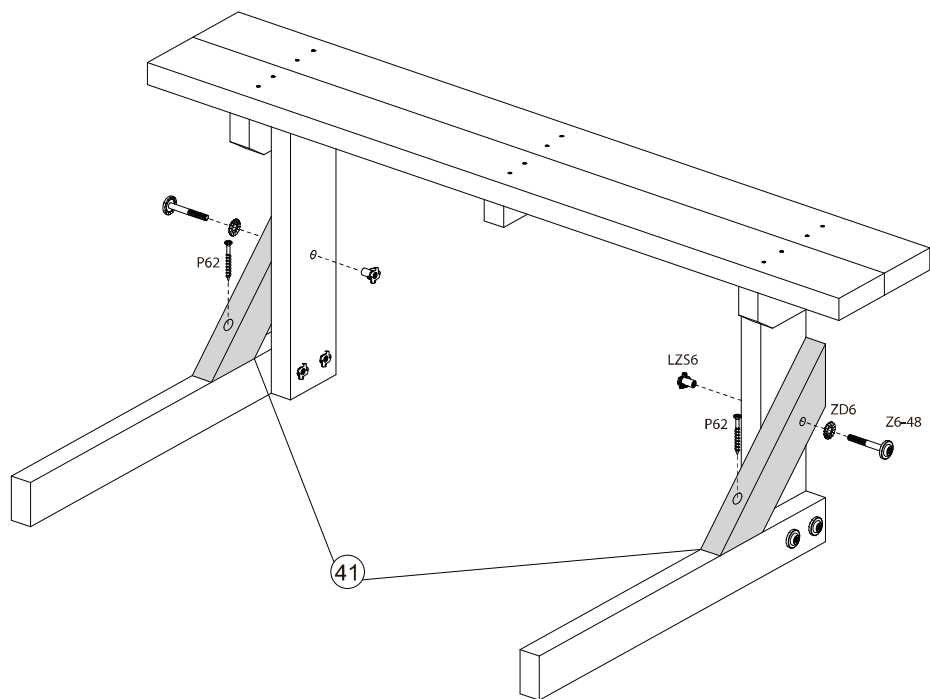

Step
Étape
Paso
46



P35 x 2

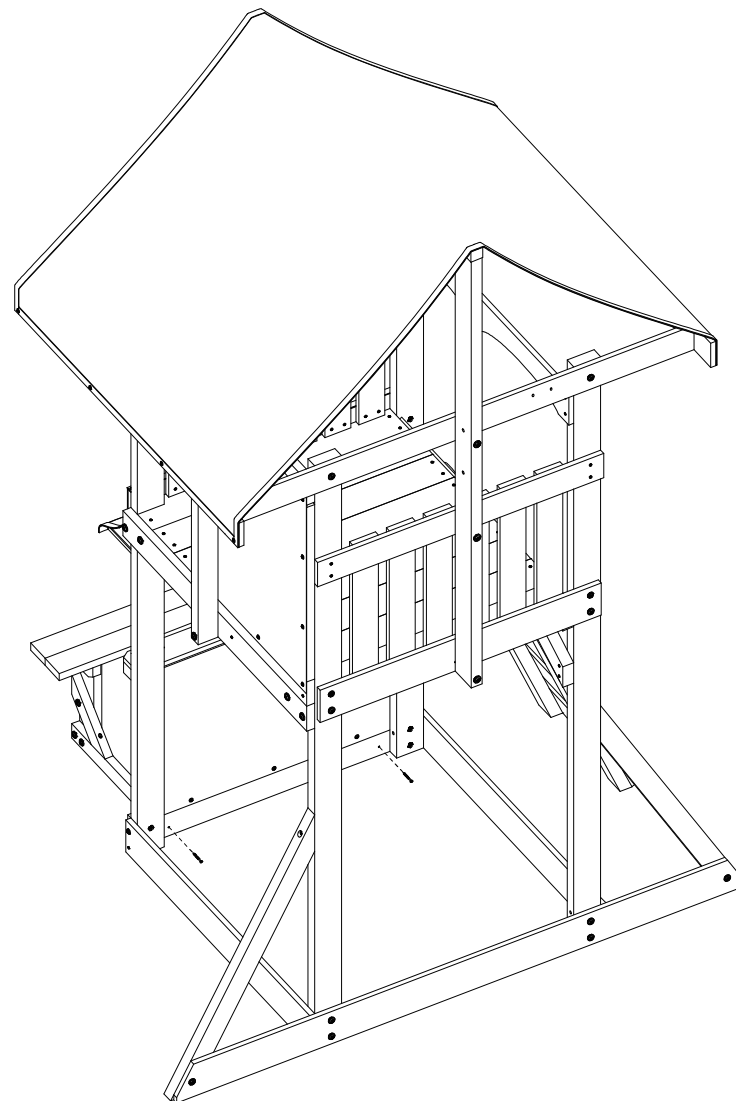


Step
Étape
Paso
47



TX16 x 12

WJ0208 x 2

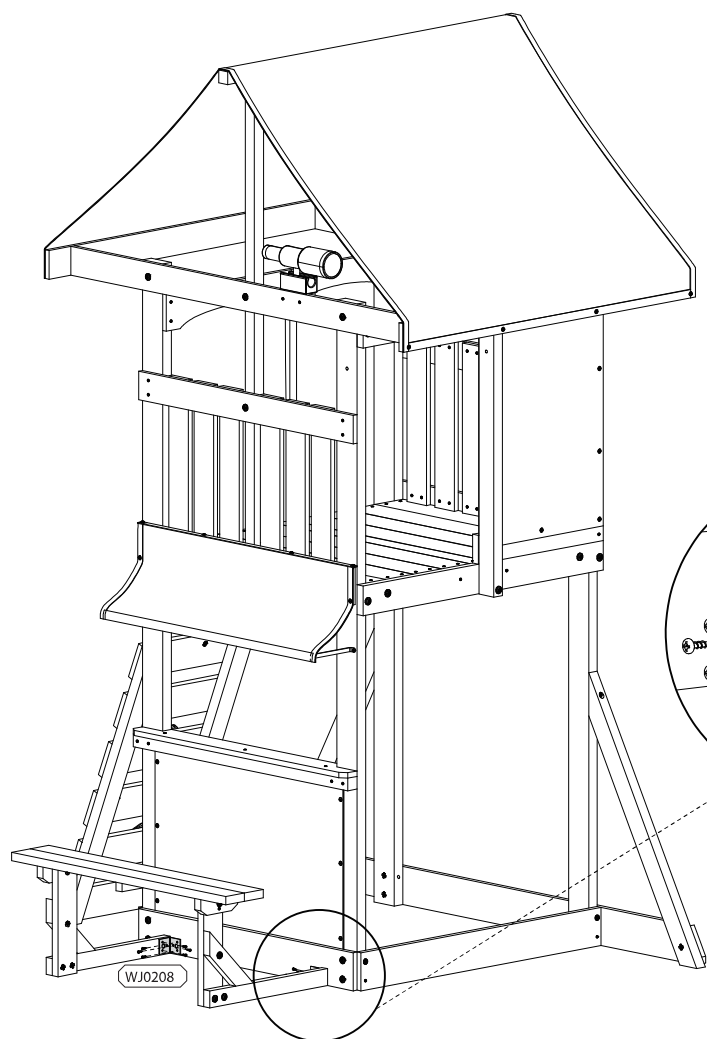


Step
Étape
Paso
48



WJ0102 x 2


47 x 1

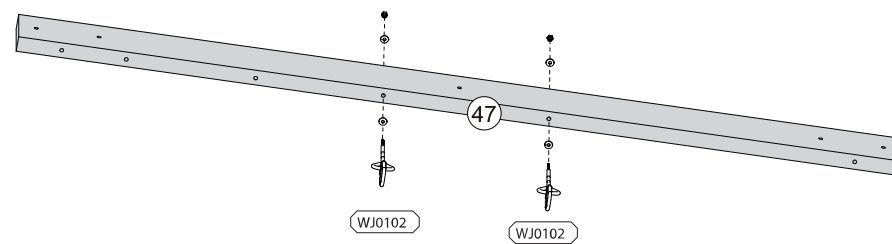

Step
Étape
Paso
49

48 x 1

WJ0102 x 4

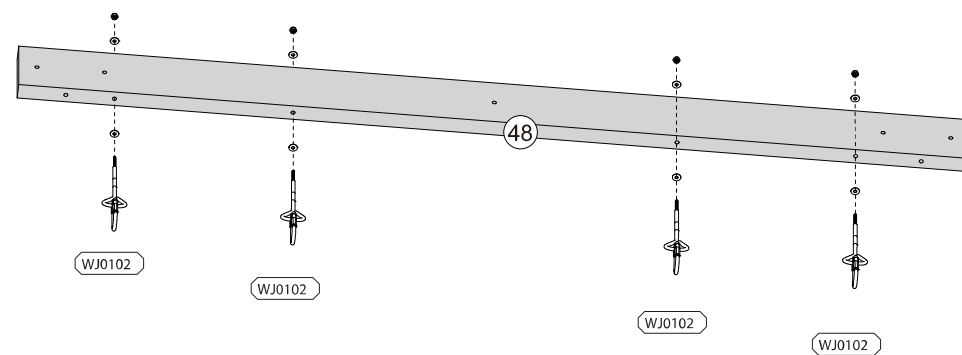

Step

Étape

Paso

50

	LZD6	x 2	WJ0110	x 2
	LZS6	x 2		
	Z6-38	x 2		

Step

Étape

Paso

51

	LZD6	x 2	WJ0110	x 2
	LZS6	x 2		
	Z6-38	x 2		

Step

Étape

Paso

52

	ZD6	x 4
	LZS6	x 4
	Z6-134	x 4

Step

Étape

Paso

53

	LZD6	x 2	7	x 1
	ZD6	x 2	49	x 1
	LZN6	x 2	50	x 1
	Z6-86	x 2		

Step

Étape

Paso

54

	ZD6	x 3	(51)	x 1
	LZS6	x 3		
	Z6-108	x 3		

Step

Étape

Paso

55

	ZD6	x 2	(52)	x 1
	LZS6	x 2		
	LZN6	x 1		
	LZD6	x 2		
	Z6-48	x 1		
	Z6-108	x 2		

Step

Étape


Paso

56

	LZD6	x 2
	ZD6	x 1
	LZS6	x 1
	LZN6	x 1
	Z6-48	x 1
	Z6-108	x 1

Step
Étape
Paso
57


	LZD6 x 4	43 x 2
	ZJ6-35 x 4	WJ0111 x 2

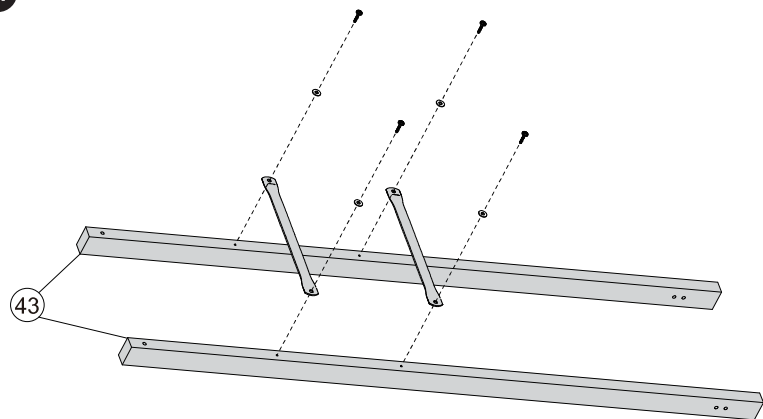

Step
Étape
Paso
58




	ZD6 x 4	5 x 2
	LZS6 x 4	44 x 1
	Z6-48 x 2	
	ZJ6-62 x 2	
	Z6-76 x 2	

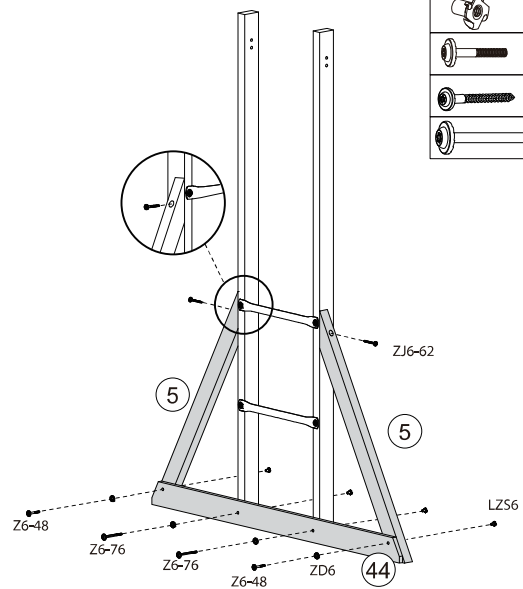

Step
Étape
Paso
59



	LZD6 x 6	45 x 1
	ZJ6-35 x 6	46 x 1
		WJ0111 x 3

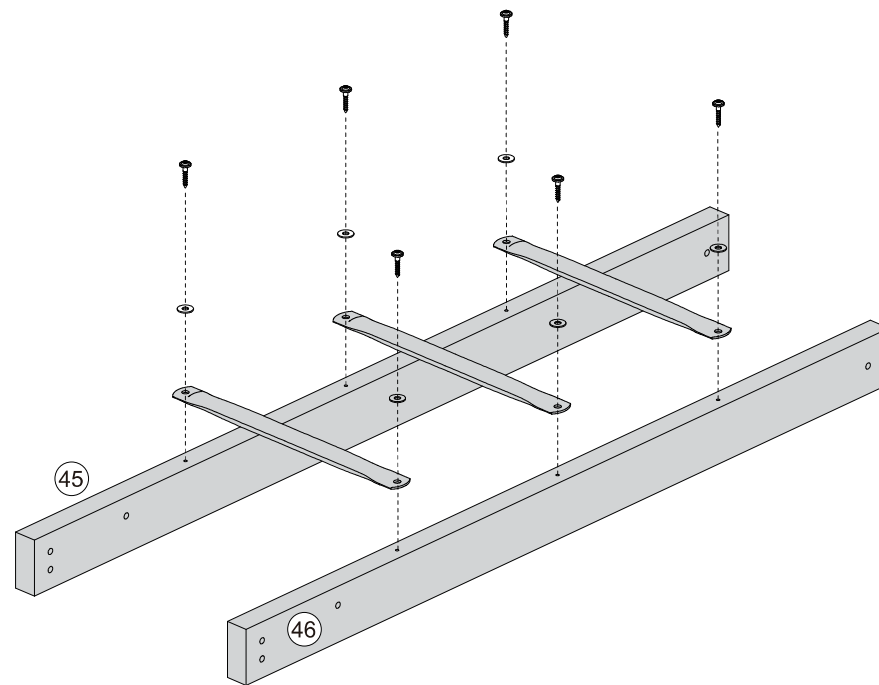

Step

Étape

Paso

60

	LZD6 x 10	WJ0110 x 2
	LZN6 x 5	
	Z6-48 x 5	

Step

Étape

Paso

61

	LZD6 x 10	WJ0110 x 2
	LZN6 x 5	
	Z6-48 x 5	

Step

Étape

Paso




62

	LZD6 x 1	WJ0419 x 1
	LZS6 x 1	
	TC25 x 4	
	Z6-66 x 1	

Step
Étape
Paso
63




	LZD6) x 1	WJ0419) x 1
	LZS6) x 1	
	TC25) x 4	
	Z6-66) x 1	

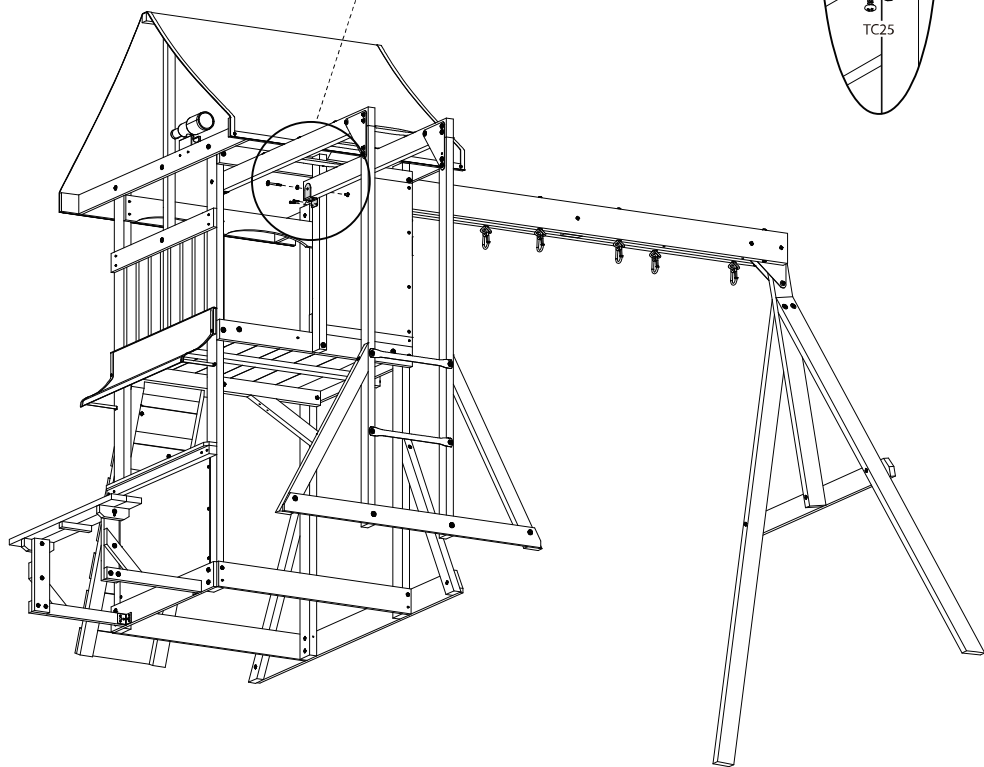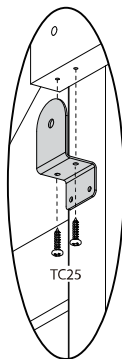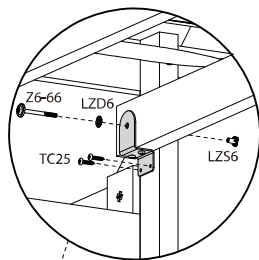

Step
Étape
Paso
64

SJ0915) x 2
SJ0916) x 1

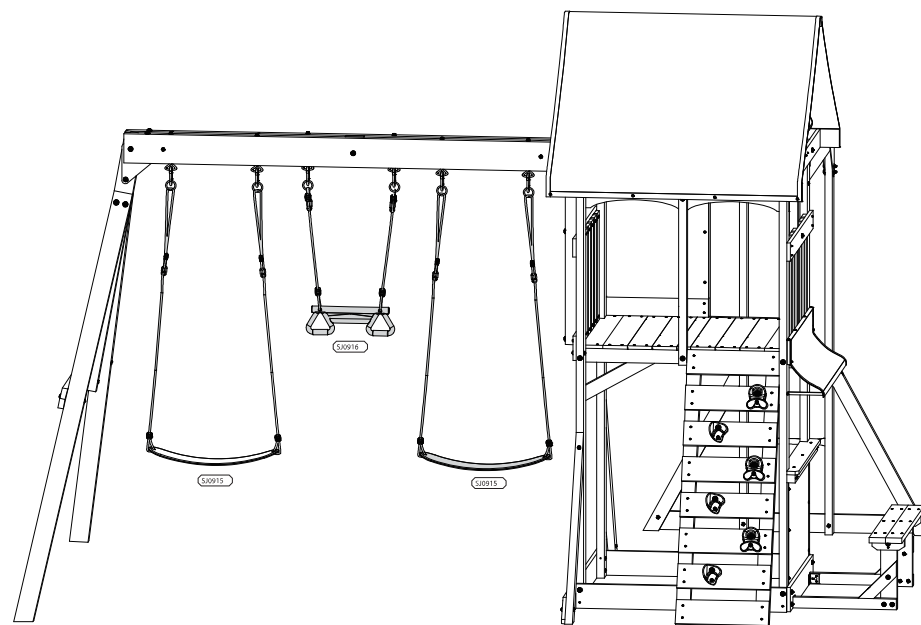


Step
Étape
Paso
65



TC25 x 3

SJ0923 x 1

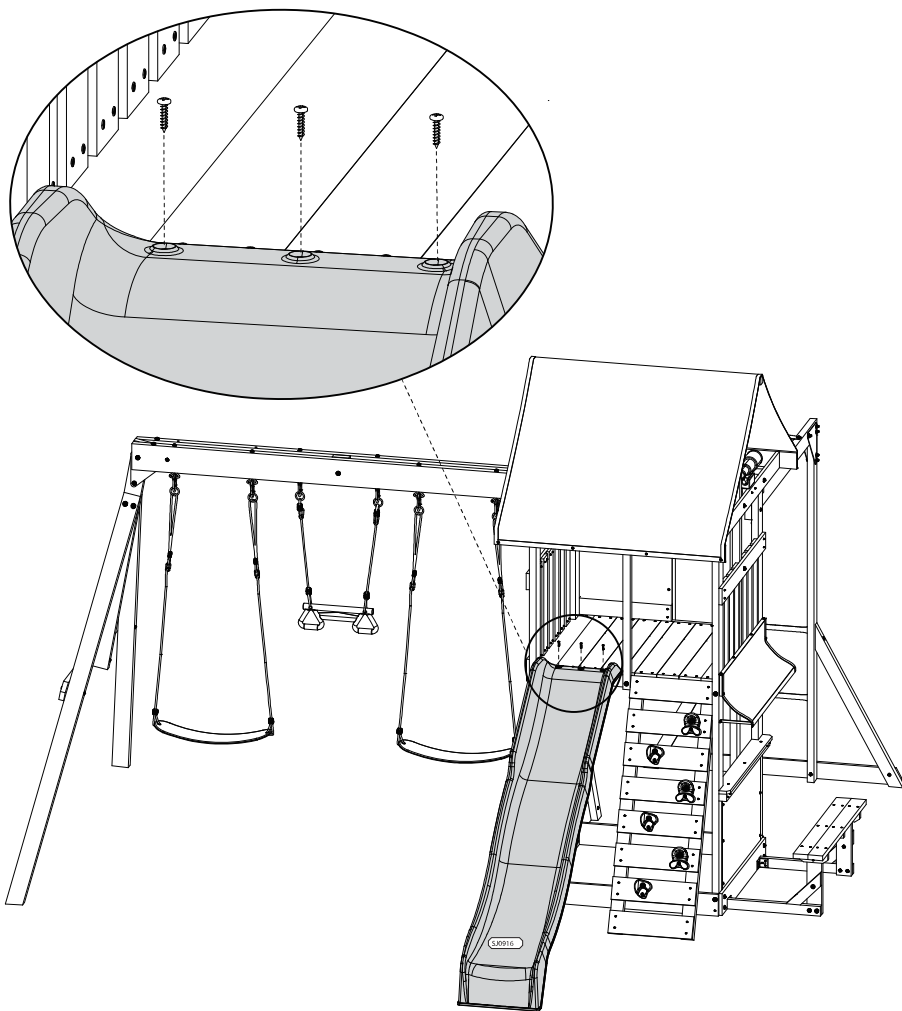


Step
Étape
Paso
66



TC25 x 6

WJ0112 x 6

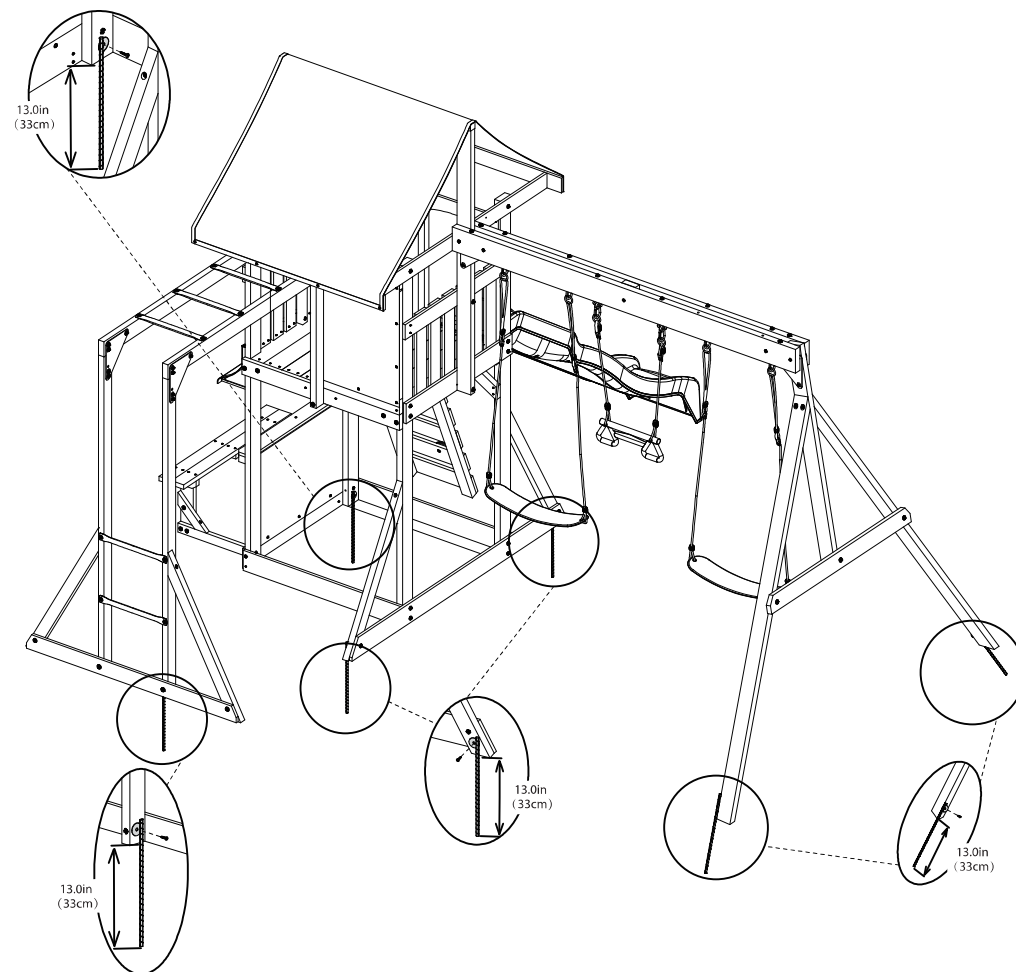

AFTER-SALE

AFTER-SALE SERVICE

If you have any suggestions or encounter quality issues with our products, please contact us first.

Our after-sales team will respond within 24 hours, and we will do our best to provide a solution until you are satisfied.

GUARANTEED CUSTOMER SERVICE

Your shopping experience is very important to us!

If you feel unsatisfied or have any questions,
just contact us!

If you want to share how wonderful our smart product makes your home, **just contact us** and share your pictures!

For further information,
just contact us!



✉ service@kmcglobe-us.com

☎ (USA) +1 213-816-4788