









Assembly Instructions

CAUTION:


DO NOT use any sharp objects to open plastic wrapped components as this may result damage to product or components .

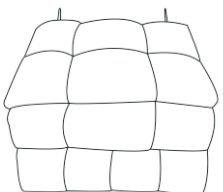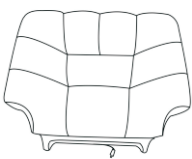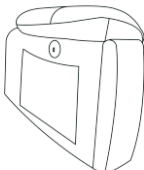Your recliner comes packaged in 3 boxes. Carefully remove all components from the packaging and set aside for assembly.

Package Contents

			
A 1* Chair Seat	B 1*Backrest	C 1*Left Armrest	D 1*Right Armrest
Box 1	Box 2	Box 3	
			
E 1* Power Source	F 1* Power Cord	G 1* Massage Remote	H 2*Supporting Feet
			I 2*Screws
			J 2*Gaskets
Box 1			


Step 1

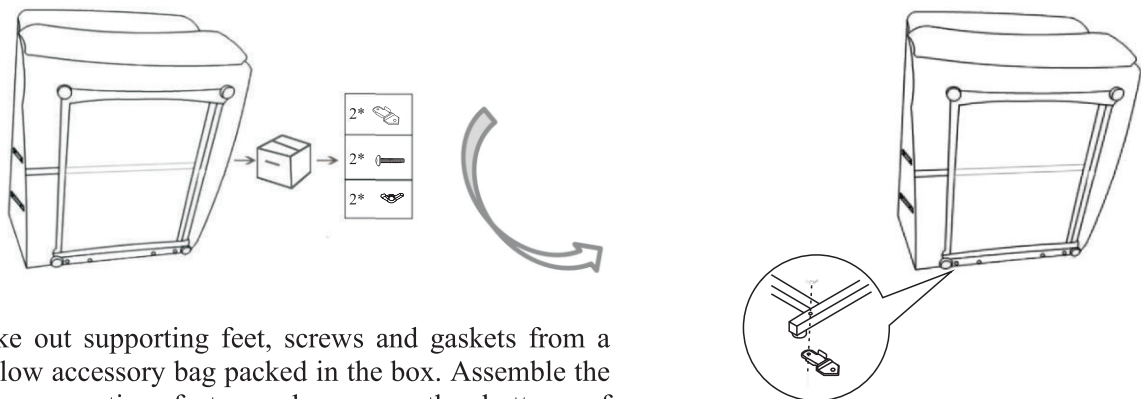

Take out supporting feet, screws and gaskets from a yellow accessory bag packed in the box. Assemble the two supporting feet as shown on the bottom of mechanism to avoid toppling and falling.


Step 2

Connect the Armrests (C&D) to the chair seat(A) by aligning the metal grooves and sliding down to the bottom.

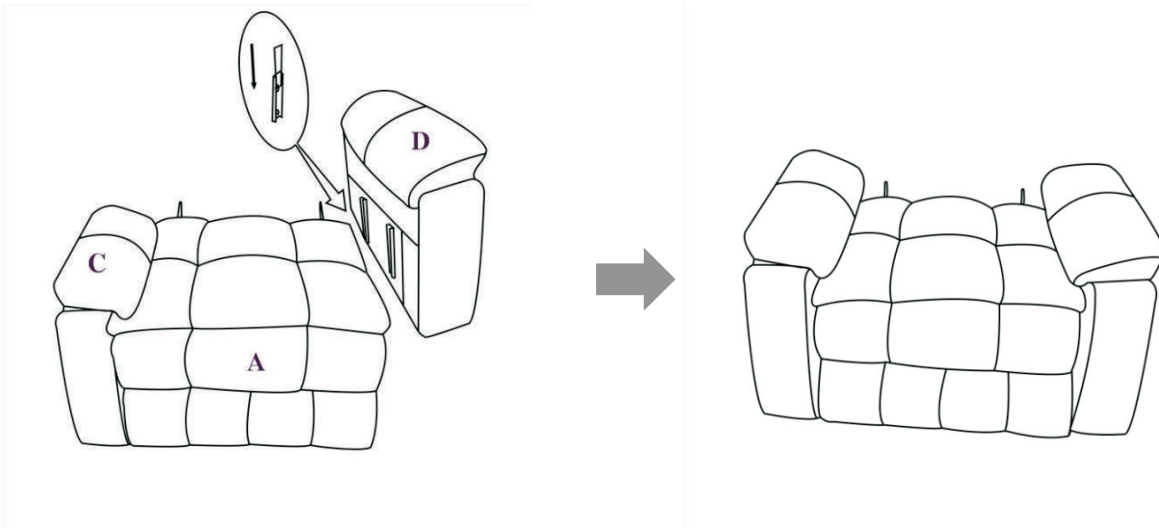


Step 3

Connect the chair back(B) to the chair seat(A) by aligning the metal grooves and sliding down to the bottom.

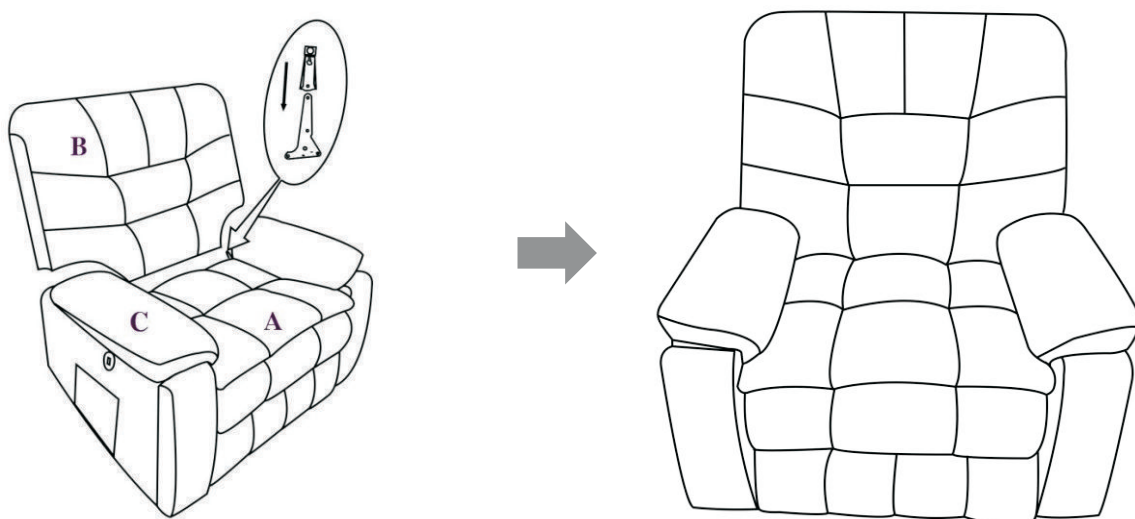

Instructions of Connecting Power Cords


- No.1 and No.2 wires connect the backrest to the chair seat.
- No.3 wire connects the backrest to the power cord(F).
- No.4 wire connects up the backrest and massage remote(G).
- No.5 wire connects the motor with the wire from right armrest, which has a control panel.
- No.6 wire connects the motor to the power source(E).

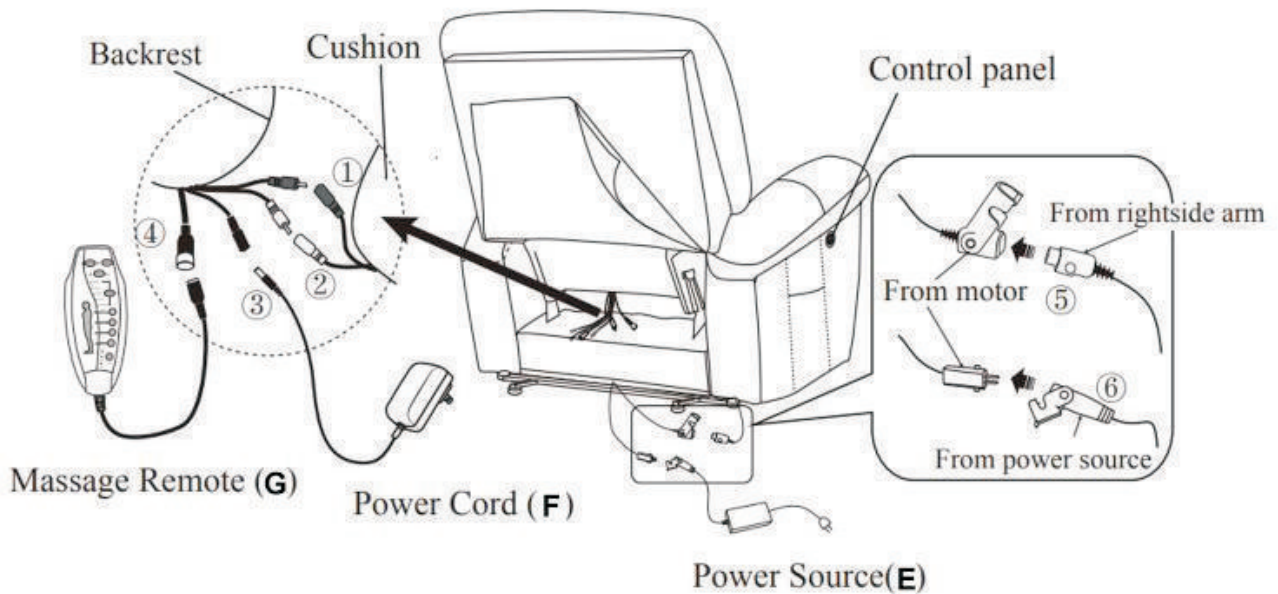

Note:

1. The connection plugs have different colors, black to black, white to white, red to red.
2. Plug both the **Power Cord(F)** and **Power Source(E)** into outlet to get the recliner working.

Operation Instruction

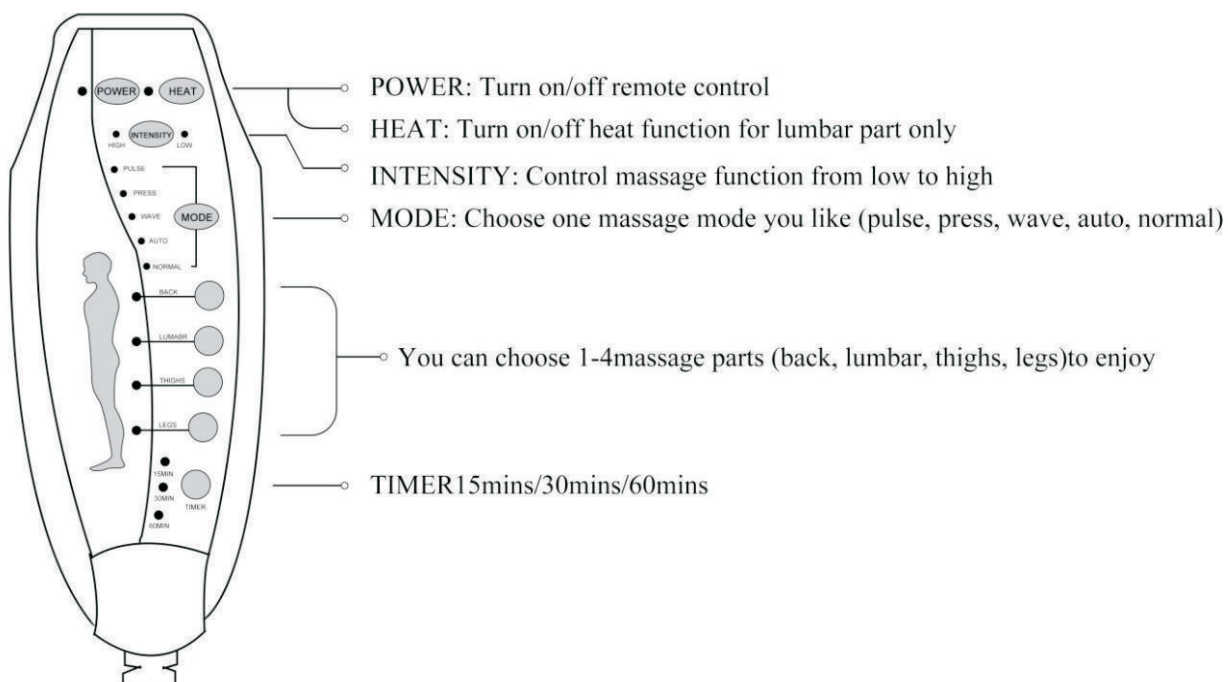

*Different positions by pressing **the buttons** of left armrest to switch, the lift recliner chair can meet your various needs.*

Warnings

1. Please check if the components of the chair are all included and can be used normally.
2. Assemble all components according to the instruction correctly before you connect the chair to the power.
3. Please DO NOT sit on the armrests or footrest to eliminate the risk of tipping over.
4. If the chair is damaged or doesn't match the website description, please send clear pictures of the product and label of the carton to our service team for further help.
5. If the recliner doesn't work, you may try the following measures for self-checking firstly:
 - a) Check if all the cables are connected;
 - b) Check if the light of transformer is on.If the chair still doesn't work, please feed the information back to our customer service in time and we'll help you solve the matter as soon as possible.
6. If you have any questions with the product, please contact us by:

