User's Manual

- The R/C controls the forward/backward and left/right movements, with remote control having priority.
- Music
- Volume adjustment
- Power display
- Forward and backward
- High and low speed
- Wireless connection



WARNING: Chocking Hazard! Contains small parts. Dispose of pla stic bags properly.

WARNING: Adult assembly required. Contains sharp points, sharp edges and small parts. Please keep out of reach of children.

WARNING: Not to be used in traffic.

Please read this manual before giving this toy to your child. This manual contains important information, please keep it for later reference.

Warnings

For children‘s safety, please read the followings carefully

1. This product is not a vehicle for transportation. Adult supervision is required.
2. Assembly and adjustment must be done by adults. Keep children away from small parts.
3. Make sure that children always wear safe belt and helmet when playing.
4. Adult must teach children how to operate the toy safely and never leave children to use unattended. Improper operation can cause damage or accident. Do not allow child to stand while operating or stepping on foot pedal.
5. Battery must be charged by adults only. Please charge it first before use.
6. Keep children away from plastic bags, or suffocation may occur. Only use spare parts provided by manufacturer.
7. Charger is not a toy. Do not allow children to use or operate the charger or play with the battery.
8. Maximum loading capacity is 30KG. Do not overload.
9. Suitable age: 37-95 months. Not for children under 3 years old.

Product Specifications:

Name	Specification
Battery	12V
Suitable age	37-95 months
Loading capacity	30kg
Product size	102×63×65cm
Speed	2.5-3.5 km/h
Charge/Use time	charge 8- 12h, use 1-2h
Charger	12V
Remote control	AAA1.5V

The above parameters are selected by the customer, andthe specific parameters shall be subject to the actual sample.



Name	Quantity	Name	Quantity
 car body	1	 front axle	1
 seat	1	 rear axle	1
 backrest	1	 front wheel	2
 door	2	 rear wheel	2
 steering wheel	1	 driving motor	2

Name	Quantity	Name	Quantity
 windshield	1	 rearview mirror	2
 rear bracket	1	 rearview mirror holder	2
 middle shock absorber module	1	 search light holder(L/R)	2
 two sides shock absorber module	2	 search light	1
 flat iron	1	 charger	1
 front spring	2	 R/C	1
 bracket	2	 MP3 line	1
 front fender	2	 screw	38
 rear fender	2	 washer	7
 wheel cover	4	 nut	5
 front bumper	1	 spanner	2

Installation Order Diagram

1. Bracket, front fender, rear fender and front bumper decoration assembly


Insert the bracket, front fender and rear fender into the reserved place on the car step by step, then use 8pcs screw to tighten the bracket. At last, insert the front bumper into the reserved place like picture.



2. Front axle and front spring assembly

First, put the flat iron on the front axle. Put 1pcs front spring to each side of square tube. Then insert the front axle into the hole of square tube, add 1pcs washer and use spanner to tighten the nut. The same way for the other side. Direction lever should be passed through the hole of front axle, then add 1pcs washer and use spanner to tighten the nut.



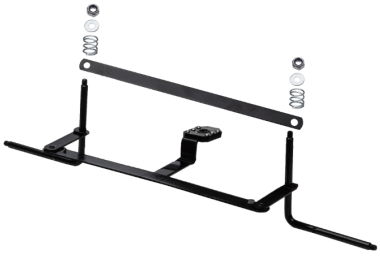






Installation Order Diagram

3. Front wheel assembly

Add 1pcs washer, 1pcs wheel, 1pcs washer step by step, use spanner to tighten the nut. Finally put the small wheel cover on. The same way for the other side.

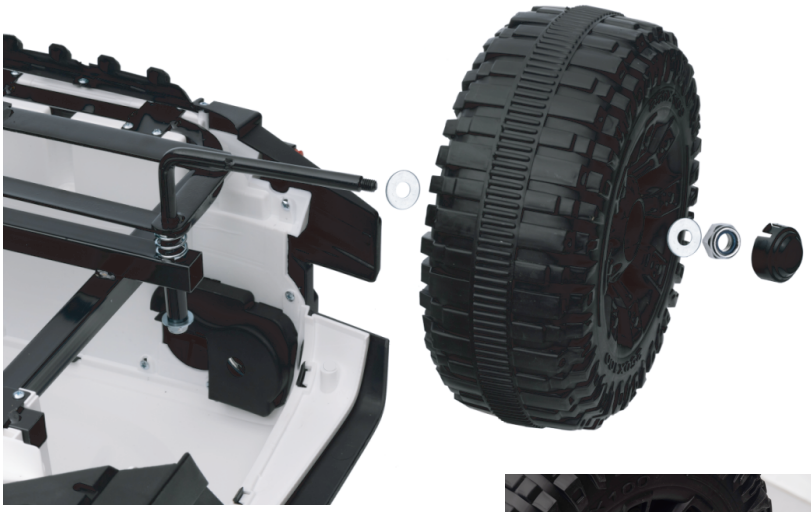





4. Middle shock absorber module, two sides shock absorber module and rear bracket assembly

Insert middle shock absorber module, two sides shock absorber module and rear bracket into the reserved place on the car step by step, then use 22pcs screw to tighten. At last, insert rear axle into the holes reserved place on the module.











Installation Order Diagram

5. Rear axle and motor assembly

Press the rear spring, then insert the rear axle through the holes. Add 1pcs motor, 1pcs wheel, 1pcs washer step by step, use spanner to tighten the nut. The same way for the other side.

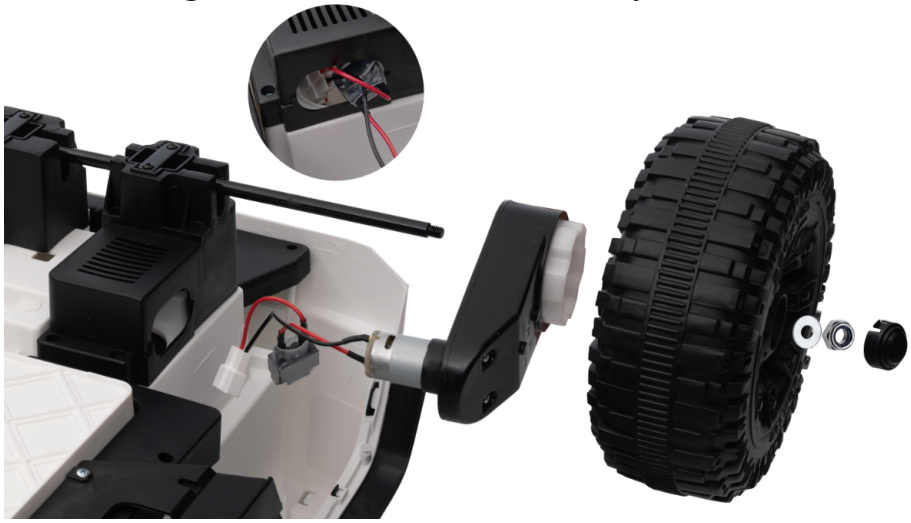

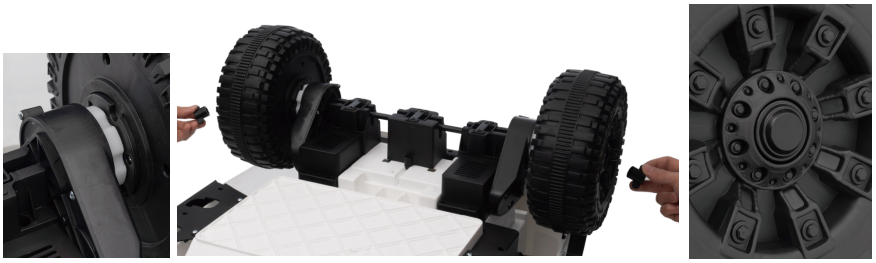

6. Door and rearview mirror holder assembly Steering wheel assembly

Insert the door into the reserved place on the car, then insert the rearview mirror holder into the reserved place on the car and door. Use 2pcs screw to tighten. The same way for the other side.

Unscrew the steering wheel, insert steering wheel into the direction lever, use screw and nut to tighten.








Installation Order Diagram

7. Battery line and motor line connection

Connect battery line and motor line like picture.

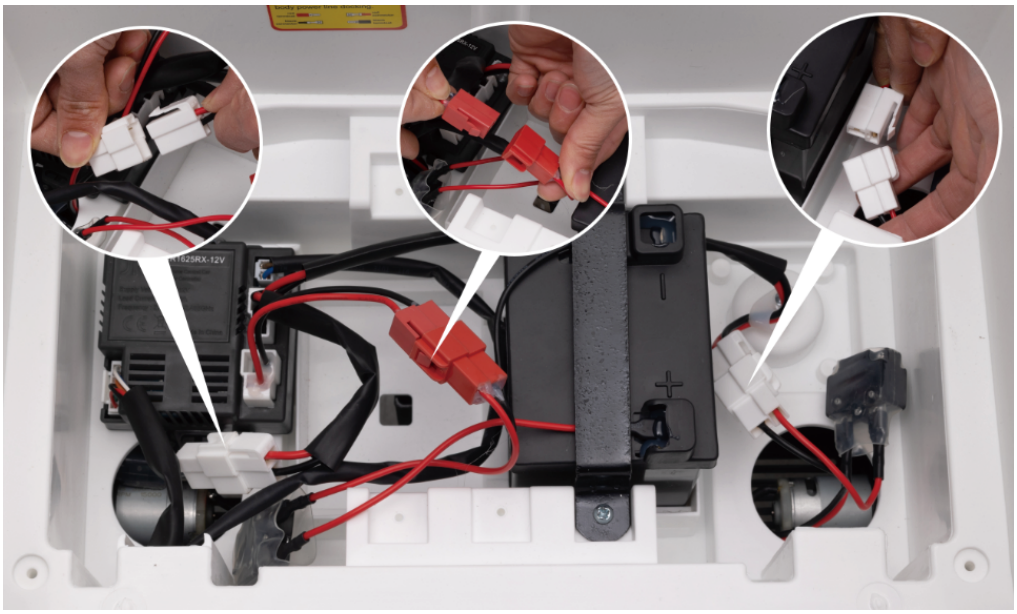

8. Seat and backrest assembly

Insert the backrest into the reserved place on the car first, use 2pcs screw to tighten, then insert the seat into the reserved place on the car, use 2pcs to tighten.





Installation Order Diagram

9. Windshield, rearview mirror, search light holder, search light assembly

Insert the windshield, rearview mirror, search light holder into the reserved place on the car. Then insert the search light into the search light holder.








Charging steps are as follows:

Step 1: The charging hole is on the multi-functional board.
Step2: Put the charger plug into the plug hole.
Step 3: Connect the charger to the power socket.



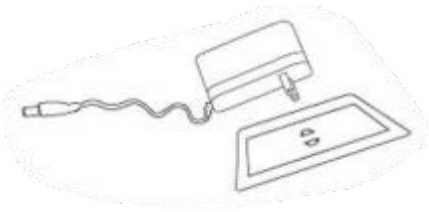

Warning: Car must be charged by adults only. Car is useless during charging

Function




Button function

① Power	⑥ Horn sound
② Volume+	⑦ Play/Pause/Music
③ Volume-	⑧ Mode
④ Forward/backward	⑨ Charging Socket
⑤ High/low speed	

Remote control function and explanation

- Do not swift forward/backward button ⑪ when car is driving, or will damage the motor.
- Remote control can be used normally when battery assembled.
- Remote control should be used under adults supervision.
- Remote control is prior to man control.

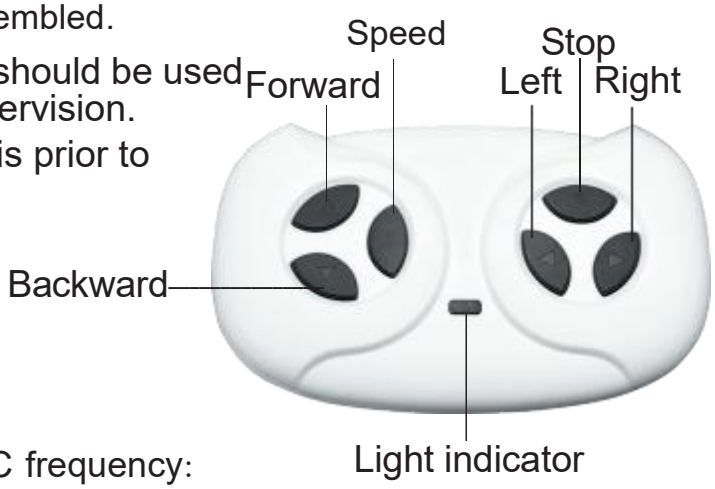

How to adjust R/C frequency:

Long press forward and backward button for 3 seconds, and the speed indicator flashes. Then turn on the power, the speed indicator goes to long bright, means the connection successfully. If the speed indicator no response, means the connection failed. Replace the batteries and retry.

Safety use

Never use on roadways, near motor vehicles, on or near steep inclines or steps, swimming pools or other bodies of water.

Use the toy only on flat surfaces. Do not play in streets, roads, slopes or ditches.

Never use in muddy or sandy areas. The toy is made to operate on dry leveled ground.

Never use in the dark or in dimly lit areas.

Play the car in the dry area, not wet. Keep away from fire, or may damage the line.

Do not change the line or add electric device to the car.

Clean the toy with a damp cloth and never submerge the toy in water or spray with water directly from a hose.

One rider one time only. Do not overload. Maximum capacity is 30KG.

Turn power off if not in use. If it has not been used for a month, unplug battery line. Check battery, charger and other parts regularly.

If any problem, please fix it before playing.

Charging notification

For the first use, please charge 8-12 hours, or will damage the battery.

Plug charger DC line into charge hole first, then plug charger into socket. Do not use the car when it is charging.

Do not charge the battery more than 20 hours each time.

It is normal that charger and battery warm (under 140°F) during charging. Do not charge if plug is wet, or will occur short-circuited.

Only use charger provided by manufacturer, or will damage charger and battery or occur short-circuited.

Please charge the car at least once a month.

Maintenance and Service

- Check battery, charger and other parts regularly. If there is any problem, or excessive wear or damage is detected, do not use the toy, the charger or the battery until you have fixed the damaged or worn part.
- Use lubricating oil to care iron parts. Keep car away from fire and avoid long-time direct sunlight. Park it on the even place, do not reversal or gradient.
- Park it indoor and cover it with waterproof cloth.
- Keep car away from fire, stove or heater and direct sunlight, or plastic may melt.
- Keep away from flammable things, or may occur fire accident.
- Charge it after use and must be done by adults only. Please charge it at least once a month in order to maintain battery.
- Clean the vehicle with a dry cloth only. Do not use chemical solvent to wipe plastic parts. Do not wash it with water or use it when raining or snowing. Water will damage motor, electric system or battery.
- Please turn power off after each use.
- Only use charger provided by manufacturer.
- Please do not alter the structure of the cars or electrical lines. Prior to undertaking any job, ensure that you possess the required skills or seek guidance from a specialist.

Remote control battery operation

- Take off the battery cover. Put two AAA1.5V remote control battery in with right polarity（Battery not included）.
- New and used batteries can not be used mixed.
- Do not insert batteries into wrong polarity, or will be short-circuited.
- Non-rechargeable batteries can not be recharged. Exhausted batteries should be replaced by adults.
- The exhausted battery must be handled and operated properly by adults only. Do not allow children to play with the battery.

made in China