


Owner Manual

PACKAGE CONTENTS



ST4x35mm Screws and
concrete for install the
hanging plate to the ceiling

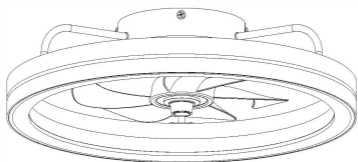

ST3x25mm Screws and
concrete for remote holder



Nuts Cap



M3x10mm Screws for
secure the mounting plate



M4x25mm Screws
and caps for install
the mounting plate to
J-Box(Not included)



Remote and holder

NOTE:

The products don't recommend that you use dimmers
because flicker may occur during use.

IMPORTANT SAFETY INSTRUCTIONS

Category	Specific Instructions
Pre-Installation Preparation	Ensure the mobile device is running iOS 17 or later (iOS) or Android 12 or later (Android). Connect to a 2.4GHz Wi-Fi network; 5GHz networks are not supported.
Electrical Safety	Always turn off power before installing or servicing the fan. The fan must be installed in a circuit with a wall-mounted isolation switch. Use only replacement parts recommended by the manufacturer. Read all instructions and safety information before installation. Disconnect power, remove fuses, or turn off circuit breakers before installation.
Physical Safety	<ol style="list-style-type: none">1. Mount the fan directly to structural framing or a junction box labeled acceptable for fan support (minimum 35 lbs /15.9 kg).2. Do not bend blade arms during installation. Keep objects away from rotating blades.3. Chemical Burn Hazard: Keep batteries secure and out of children's reach.
Usage & Maintenance	<ol style="list-style-type: none">1. Supervise children when using the appliance. Children aged 8+ and individuals with reduced capabilities require guidance.2. Supervise children during cleaning/maintenance.3. Do not use solid-state fan speed controls or rheostats.
Compliance	Ensure electrical connections comply with local laws and the National Electrical Code (NEC). Hire a qualified electrician if unfamiliar with wiring (or consult DIY manuals). Install in a location with unobstructed blade rotation and at least 7 feet above the floor. Use a metal junction box secured directly to the building structure to support the fan's weight (minimum 35 lbs).
Professional Recommendations	Hire a qualified electrician for installation if unfamiliar with wiring. Secure all connections to prevent fan detachment.

This table organizes critical safety information into clear, concise categories (e.g., compliance with U.S. electrical codes, child safety, and professional guidance) to help users prioritize and follow instructions effectively.

TROUBLESHOOTING

Problem	Solution
Fan Doesn't Work	<p>Make sure the power switch is on. Check the circuit breaker to ensure the power is turned on. Make sure the blades spin freely. Turn off power from the circuit breaker, then loosen the canopy and check all the connections according to the wiring diagram.</p>
Excessive	<p>Make sure the blades are properly installed on the blade iron posts. Turn the power off, support the fan carefully, and check that the hanger ball is properly seated.</p>
Remote Control	<p>Re-pair the remote control, Power cycle the fan by toggling the wall switch (or circuit breaker if needed). Within 10s, Press the switch button twice and the light will breath or blink.</p>
Remote Only Works Close to Fan	<p>Change battery</p>
Noisy Operation	<p>Make sure the blades are properly installed. Check to see if any of the blades are cracked, If so, replace of the blades.</p>
Can't connect to the Wi-Fi network	<ol style="list-style-type: none">1. Make sure you enter the correct Wi-Fi password.2. Check if the Wi-Fi signal is too weak. If it is, reset your Wi-Fi router and try again.3. Check your router settings to see if there are any MAC or DHCP restrictions. Lumary products don't support 5GHz networks.4. If none of the above steps work, take out two phones. Set up a hotspot on one phone and connect the other phone to the hotspot. Then try adding the device through the app. If the device connects successfully, it means the device is working fine.
What should I do if the device appears offline or unreachable?	<p>First, ensure that your Wi-Fi router is online, functioning properly, and within range of the device, and check that you have the latest Lumary functionality by clicking "Check for firmware update" in your device settings.</p> <p>If the issue persists, try the following steps:</p> <ol style="list-style-type: none">1. Turn off the device.2. Clear the app cache.3. Reboot your Wi-Fi router.4. Wait one minute, then turn the device back on.5. After five minutes, check the device status in the app.

If your problem is not listed or still persists, please contact our Customer Support.

BEFORE INSTALLATION

TOOLS NEEDED (NOT INCLUDED)

Essential Tools for a Successful Installation:



Ladder




Phillips Screwdriver



Wire Stripper

Optional Tools:



Drill



9/64" Drill Bit




It is recommended to have a partner when installing the ceiling fan.

1. We recommend having two people work together for a smoother and safer installation.
2. To enhance safety, use a hook to temporarily hang the fixture by its edge or secure the fan with a safety rope during installation. This precaution helps prevent accidental drops that could cause damage to the fan or surrounding objects.


If you need assistance during installation, feel free to reach out to our customer support team — we're here to help.

INSTALLATION INSTRUCTIONS


Install a J-BOX Compatible with the Chassis:2 3/4"-4"

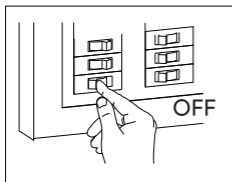


Please make sure turn off the power

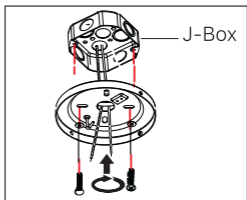

Screw the hanging plate to the J-box.

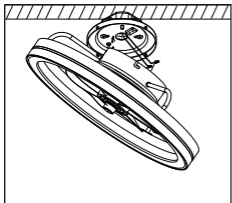

Connect the wires with Terminal Cap.

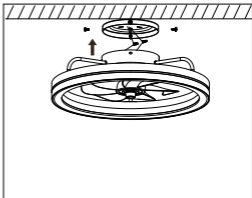

Tighten the screws of the mounting plate to ensure the lamp is installed firmly.

What You Need:

A Wi-Fi router supporting the 2.4GHz and 802.11b/g/n bands. 5GHz is not supported.
A smartphone running iOS or Android.

1. Download the App from the App Store or Google Play.
2. Register a account.

Note: Please select your region and country.

3. Connect

NOTE:The products can't connect to 5GHz networks.

Steps:


1. Turn on your smartphone's Bluetooth;
2. Open the App, In the top corner of the Devices screen, click "+" and select "Add Device" to confirm that the device is paired.
3. Each time the device without distribution network is powered on, confirm the light is breathing or blinking pairing mode;
4. Find the device, choose Wi-Fi and enter password, press "Next". Click "Add", and wait patiently. After that, click "Done", and the device is successfully added to the App.

If you have any questions. You can contact us via our after-sales email or leave a message on our official social media account.

How to reset the fan light using the remote control?

Long press the button  for 5S, the fan light will go into breathing state.

Remote Control

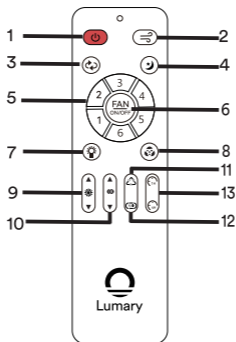

Note: The remote control that shipped with your fan is already paired.

1: Turn on/off

3: Fan rotates: forward/ in reverse

5: Fan speed: 1 is the weakest, 6 is the strongest

7: Turn on white color

9: Change brightness

11: Change RGB color

13: Countdown Timing 1 Hour/4

2: Wind mode: nature/soft

4: Night light


6: Fan on/off, Long press 5 seconds to trigger the pairing mode

8: Turn on RGB color

10: Change color temperature


12: Change RGB mode

How to reset remote control?


Power on the fan light, then long press the button  for 10s, the fan light will go into breathing state that the reset is done.

The remote control has been cleared and will no longer operate the device until re-paired.


Pairing a new remote control to an existing fan

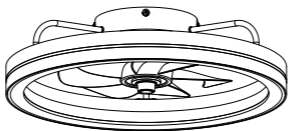


If you lose your remote control or purchase a new one, please follow the steps below to pair the control to your ceiling fan.

Power cycle the fan by toggling the wall switch (or circuit breaker if needed). Within 10s, Press the Button  twice and the light will breath or blink.


Installing one fan operating on multiple remote controls

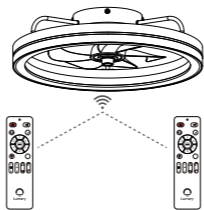


To have multiple remote controls operate one fan, you must pair each additional control to the receiver in the fan, the remote control that shipped with your fan is already paired.

Power cycle the fan by toggling the wall switch (or circuit breaker if needed). Within 10s, Press the Button  twice and the light will breath or blink.



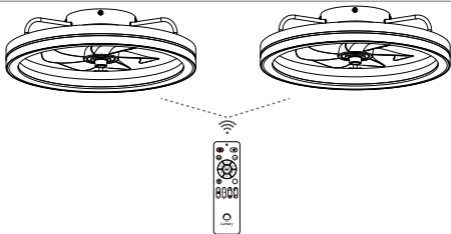


Installing multiple fans operating on a single remote control



To have multiple fans operated by a single remote control, you must pair the remote control to each additional receiver. The receiver that shipped with your fan is already paired to the remote control.

Power cycle the fan by toggling the wall switch (or circuit breaker if needed). Within 10s, Press the Button  twice and the light will breath or blink.

ADDITIONAL FEATURES

	<p>Adjustable Brightness & Color Temp 2700K-6500K, 0-100% Dimming</p> <p>Wake up to energizing cool light (6500K) for morning productivity. Wind down with warm amber (2700K) for cozy movie nights—no extra lamps needed.</p>
	<p>RGBAI & RGB Mode</p> <p>Transform your space instantly: vibrant rainbow for parties, soothing purple for yoga, or cinematic blue for Netflix marathons. Ditch boring single-color bulbs.</p>
	<p>Smart Timer</p> <p>Auto-off lights at bedtime to save energy. Simulate sunrise to wake up gently—no more jarring alarms or wasted electricity.</p>
	<p>Music Rhythm Sync</p> <p>Lights dance to your playlist! Throw a TikTok-worthy dance party or sync with white noise for meditation—your room becomes an extension of the vibe.</p>
	<p>Voice Control (Alexa/Google)</p> <p>"Alexa, dim the lights!" Control hands-free while cooking, working, or carrying groceries. Check lights remotely on vacation—peace of mind unlocked.</p>

PARAMENTER INFORMATION

Name	Smart Ceiling Fan Light
Model	A
Input Voltage	120VAC,60Hz
Wattage	Fan:25W Light:45W
Color Temperature	RGBAI +Tunable White(2700K-6500K)
CRI	90+
Lumens	5000lm
Beam Angle	120°
Fan	1-6 Speeds
Rated Life	25000h



RoHS



Contains FCC ID:2ANDL-CB3S

Made in China

FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



1. Log in to App, tap the smart device and enter into, click "✍" in the top right corner.
2. Tap "Google Assistant" in Third-party Control.
3. Tap "Link with Google Assistant".
4. Click "Agree and link".
5. Linked successfully, when add new device, there is no need to link again, just discover new device in Google Home.

Things you can say*:

"Hey Google", and ask.

Things you can say*:

"Hey Google, turn on the light/fan."

"Hey Google, turn off the light/fan."

"Hey Google, set the fan light to orange."

"Hey Google, set the fan light to 50%."

*Some commands require compatible devices.

CUSTOMER SERVICE

24 HOURS
Quick Response

Quick Response

If there is any problem please check the Troubleshooting page . When you could not fix this, please contact us after-sale email, we will respond within 24 hours. The fastest way to help us confirm the problem is to send us a video of the problematic light to our official email box.

30 DAYS
MONEY-BACK

MONEY-BACK

For **30 days** after the date of purchase, return your product and receive a full refund **for ANY reason.**

2-YEAR WARRANTY



Free Replacement No Repair

After the buyer purchases the product, if the product has a quality problem within the scope of the seller's warranty service within the service validity period, the seller will replace the buyer with a **product for free.**



Friendly Reminder

We do not recommend you to leave a product review first, as we cannot get in touch with you through reviews/feedback to solve any product usage problems. Please contact us through the after-sales email. We sincerely hope to solve your problem every time and provide the best after-sales service.

Please rest assured that our service aim is to make customers 100% satisfied. If there is any problem, please contact us as soon as possible, we will not let you down.