



Get Started!



**Let's invite another
pup to play time.**

Guardian® GPS


Add-A-Dog® Collar

With your new Guardian® GPS Add-A-Dog® Collar, you can provide the freedom and security of your Guardian® GPS Dog Fence to another dog. Up to 8 furry friends can use the fence system — just get a separate collar for each, add the collar and pet profile to the My PetSafe® app, and complete the full training program with each dog.

The collar has a tone and vibration-only setting plus 10 levels of static correction you can easily set or adjust in the app to match your pet's temperament.

Important: Remove the collar from your dog when he comes inside. Do not leave the collar on your dog for more than 12 hours a day, and never attach a leash or ID tag to it — use a separate collar or harness for that. We do not recommend the collar for pets with a history of aggressive behavior, younger than 6 months of age, or under 20 pounds. Please read the customer care guide for more important safety information about how to fit and use the collar.

What you have:

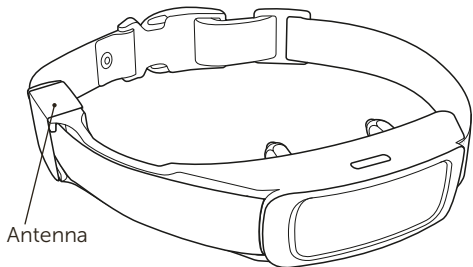


Antenna


Collar with long contact points



Test light tool




Short contact points

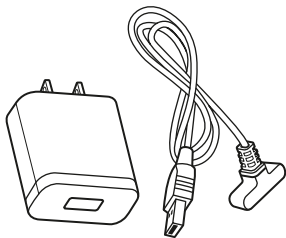

USB charging cable and power adaptor

1

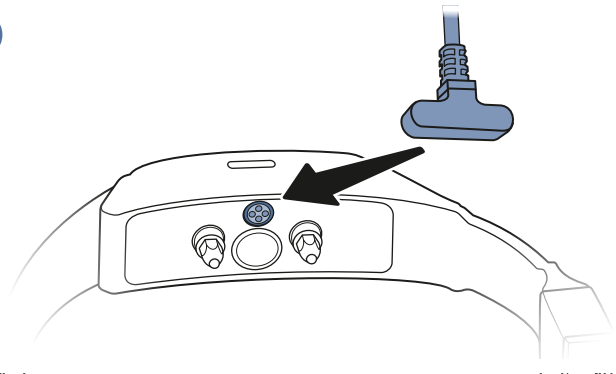


To charge the collar battery, connect the USB charging cable to the magnetic charging port on the back of the collar and then plug it in using the provided USB power adaptor. The collar will beep when it is connected to power and charging. Leave the collar plugged in until it is fully charged; this will take about 2 hours.

Important: Using a USB power adaptor other than the one provided may cause the collar to charge more slowly.

The collar LED will blink blue when the collar is charging and will glow solid blue when the collar is fully charged. Each charge can last up to 24 hours depending on frequency of use.

2

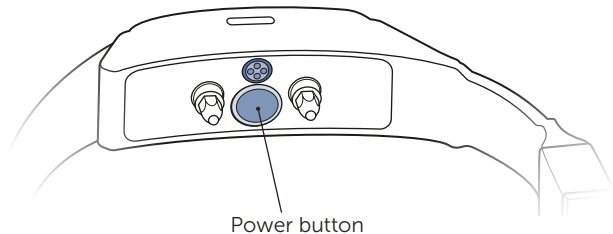


Power button

To turn the collar on, press and hold the power button for 1 second. The collar will beep low to high, and the collar LED will flash blue one time to indicate the collar is turned on.

During use, the collar LED will flash every 4 seconds (blue, yellow or red) to indicate current battery charge:

LED color	Meaning
Blue	The battery has sufficient charge.
Yellow	The battery is low (less than 25% charged).
Red	The battery is critically low (less than 10% charged); charge immediately.


3

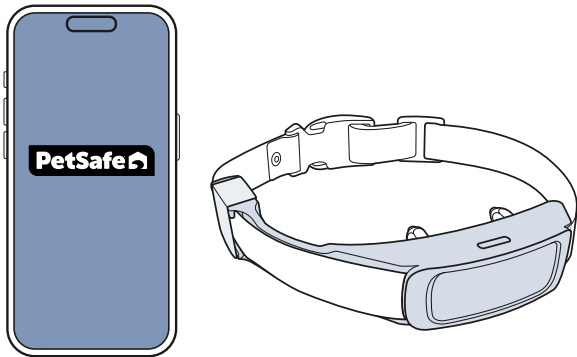

Place the collar near the Guardian® GPS Dog Fence base unit and then open the My PetSafe® app.

Select your fence and then tap the settings icon at the bottom right corner of the screen. Tap **Pets** and then **Add Pet**.

Follow the on-screen prompts to connect the collar to your fence system and assign it to your pet.

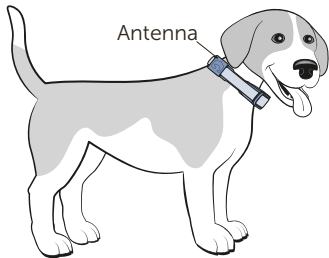


With your dog standing comfortably, place the collar high on his neck, just behind his ears. The LED should point up, and the collar's antenna should be centered at the back of your pet's neck.

Make sure the contact points are touching your dog's skin. If your dog has long or thick hair, you may need to trim (not shave) the hair around the contact points.

If your dog is very short-haired or hairless, you may want to replace the long contact points that came on the collar with the short contact points provided (you can use the provided test light tool as a contact point wrench).

Important: Check the tightness of the collar by inserting one finger between the end of a contact point and your dog's skin. The fit should be snug but not constricting. The antenna may pull away from your dog's neck a little bit even when the collar is fit correctly.

Once you are satisfied with the fit of the collar, remove it from your dog and trim the excess strap, making sure to allow room for growth or a thicker winter coat.

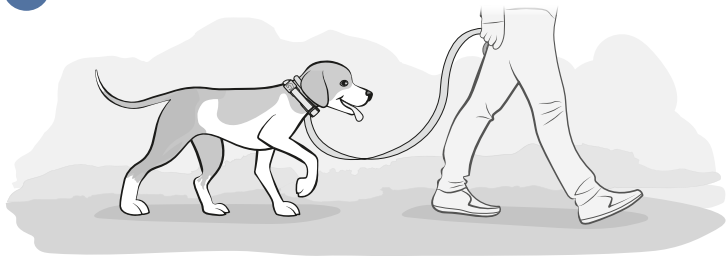

Remove the collar from your dog. With the collar powered on and close to the base unit, open your dog's pet profile in the app and choose the desired correction level: tone and vibration only or static correction levels 1 through 10. Take care to choose the best correction level for your dog's temperament.

Follow the steps in the training guide provided with your Guardian® GPS Dog Fence to teach your dog to understand and respect the boundary. Your dog should be old enough to recognize basic obedience commands such as "sit" and "stay" (approximately 6 months or older).

Every pet is unique, so training time will vary. Carefully watch over your pet in the boundary area until you have completed the training program and are confident your dog consistently respects the boundary regardless of distractions or temptations.

Understanding the collar LED

The collar LED provides information about the collar's current battery charge and connection status, as well as any warnings or corrections being issued to your dog:

LED color	Meaning
Blue, slow blinking (1 flash every 4 seconds)	The battery has sufficient charge.
Yellow, fast blinking (3 flashes per second, with tone)	Your dog is receiving a warning tone.
Yellow, slow blinking (1 flash every 4 seconds)	The battery is low (less than 25% charged).
Yellow, slow blinking (1 flash per second)	The collar is powered on and ready to pair with the base unit.
Red, fast blinking (3 flashes per second)	Your dog is receiving a static correction (up to 15-second duration).
Red, slow blinking (1 flash every 4 seconds)	The battery is critically low (less than 10% charged); charge immediately.
Red, solid (no tone)	Over-correction protection has been activated and the collar is locked for 10 seconds.
Red, solid (with continuous tone)	An error has been detected and the boundary is off. To mute the tone, press the power button. The LED will continue glowing red until the error is resolved.
White, slow blinking (1 flash per second)	The collar is not receiving GPS data.
White, slow pulsing (LED fades on and then off once every 2 seconds)	The collar is receiving a firmware update.

Resetting the collar

To return the collar to factory settings: With the collar off, press and hold the power button continuously for 10 seconds. The collar will beep high to low and the collar LED will turn red, then flash blue when the reset is complete.

Using the test light tool

You can use the test light tool to check your collar for correction without touching the contact points yourself.

1. Make sure the collar is fully charged.
2. Set the correction level to 2 or above.
3. Verify the collar is receiving GPS data; if the collar is not receiving GPS data, the collar LED will slowly blink white (1 flash per second).
4. Hold the collar contact points against the wires on the test light tool.
5. Holding the collar with the antenna facing the sky, walk toward the boundary zone.

The collar will vibrate and sound a warning tone and then deliver a static correction through the contact points. The test light tool will flash when the static correction is issued.

After testing the collar, save the test light tool for future use.

Guardian[®] GPS

Add-A-Dog[®] Collar



We're here to help!

For questions or additional tips:
support.petsafe.com

1-Year Limited Warranty | ©2024 Radio Systems Corporation | Model: PIF00-17934 | YU400-2602
For important safety instructions, please see the customer care guide.