

Safety Pool Cover Installation Manual

BEFORE INSTALLATION

Thank you for purchasing the safety pool cover. Before installation, please read these installations in the entity to ensure smooth and correct installation. Keep the manual for future reference.

POOL SIZE

1. Check the deck area around the swimming pool. There must be at least 3 '(feet) of deck space on each side around the pool for proper installation. (the cover itself will overlap the pool, approximately 9 "-18" from the water edge to the deck surface. Springs and straps will extend an additional 17 "from the cover edge)
2. Check the deck surface. Make sure that the deck surface is free of obstacles, which will prevent the cover plate from being laid flat. Identify any rough covers, ladder sockets, waterspouts, or other items not flush with the deck. These surfaces should be carpeted, foam or vinyl to help protect the cover from excessive wear.

TOOLS: (Not in cluded)

Rotary hammer drill
3/4" concrete drill bit w/long shaft (diamond tip)
Lubricant(silicone spray)
Hammer
Tape measure
Chalk and chalk line

HARDWARE:


Brass anchors
Stainless steel springs
Steel installation rod
Allen wrench
Springs covers
Tamping tool

INSTALLING YOUR SAFETY POOL COVER

1. Before starting, keep the water level in the pool at normal height. This will allow the cover to float during installation and make the installation easier. Remove the safety cover from the box and carefully unfold it. Make sure the right side of the cover is facing up and the protective strip is at the bottom (pool side). Place the cover over the pool and stretch the cover evenly over the pool as close as possible. Adjust the cover so that all sides overlap equally. Secure the cover in place with a water bag or 5 gallon bucket placed on the tape. Pass the tape through the D-ring spring, leaving approximately 6 "-7" of tape between the edge of the cover and the spring. This is for adjustment.




2. Find the center band along the length of each side of the cover. Using a piece of chalk, mark a 3-inch point on the outside of the uncompressed spring (or approximately 18 inches from the edge of the cover). These will be the locations of the initial anchor holes. Repeat the above steps for the center strip along the width of the cover. Use the marked points as references for both sides and snap a chalk line along the entire length of the pool. This will ensure that the anchor is installed parallel to the pool.

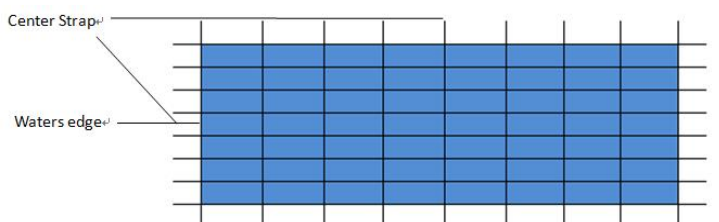

3. You will now install the first four anchors – the center anchor – on each of the four sides of the pool. Using a hammer drill and a 3/4 "drill, ensure that the drill is perpendicular to the deck surface. Drill down 17/8 inches into the deck at the center mark on the side of the swimming pool. Remove drilling dust from the anchor hole. Remove the

anchor screw from the casing and spray the casing and tamping tool with silicone rubber. Insert the tamping tool into the casing and tamp the anchor in place.

4. Attach the spring to the anchor using the mounting rod provided. Pass the notched end of the rod through the circular part of the spring. Place the notch on the anchor and use the lever to pull the mounting rod out of the pool so that the spring slides down the rod and the circular part of the spring slides on the anchor.

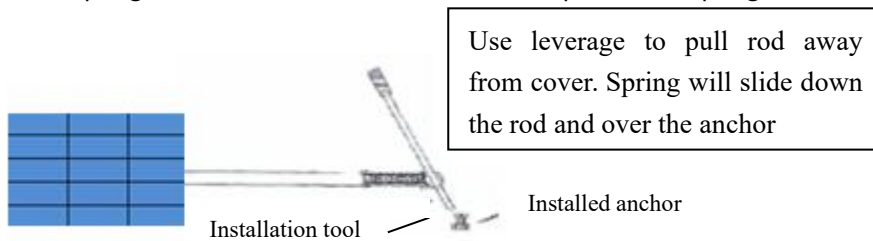

5. Go to the other side of the pool. Drill holes at the other end of the same webbing and install anchors. Connect the spring to the Anchor as described above. Repeat the above steps for the anchors on the other sides of the pool..

6. After fixing the center belt along the length and width of the swimming pool, install the belt closest to the center along the length direction, and then install the belt closest to the center along the width direction. Grab a belt, straighten it, and tighten it to an 18 inch chalk line. Mark the location of anchors and boreholes. Continue until all straps are secured.

CARE & MAINTENANCE

1. The water level of the swimming pool shall not be lower than 18 "of the main deck level. During snow cover, low water level may cause damage to the cover plate and or spring. This damage is not covered by the warranty.
2. Do not walk on the cover except in an emergency. Walking or jumping on the cover may damage the cover beyond the warranty.
3. Wear strips are sewn on the cover to prevent normal top cover wear. The cover should be kept very tight to avoid excessive wear and tear beyond the warranty.
4. It is the responsibility of the installer to add protective pads to the acute corners or very rough areas of the pool. Vinyl padding or carpet residues may be used for such protection.

5. When not in use, the cover shall be folded and stored in the storage bag provided. Leaves and debris shall be removed.
6. Ideally, the lid should be hosed clean before storage. The cover shall be stored in a place free of rodents..
7. Check whether the pool cover is fastened. Adjust the belt to the proper tension.
9. Do not drag the cover on the swimming pool. Adjust the belt to the proper tension.
10. Do not drag the cover onto the deck or top cover. Tears caused by improper operation are not covered by the warranty.
11. Do not roast meat near the hood, because sparks or hot ash may deposit on the hood and cause small burn holes, which is not covered by the warranty.