
SAVE THESE INSTRUCTIONS

NFL-A302 MASSAGE CHAIR

Operation Instructions

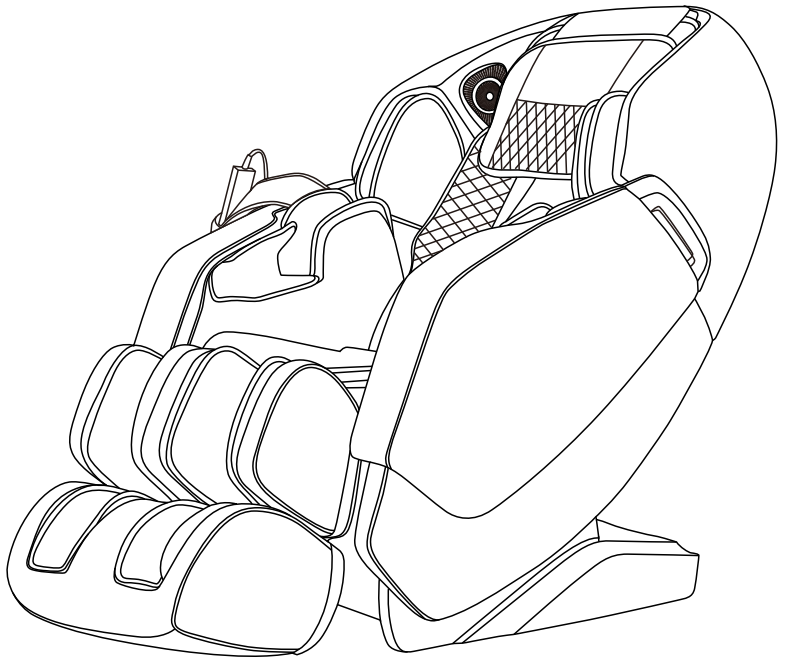

Thanks for purchasing this product. Please read this manual instruction carefully in order to know how to use this product correctly before operation. Please pay more attention to some important safety warning and keep this manual book properly for future use.

Note: Our Company reserves the right to revise the design and description of this product without any further notice. Please refer to the actual color of this product.

CONTENTS

Safety and maintenance	02
Safety warning	04
Name and function of components	06
Function	07
Method of usage	08
Product specification	17

Safety and maintenance

1.Important Safety Warning. 

- Please do not allow children to touch moveable part of this product.
- Please use well-grounding power supply suited to this product.
- Please pull out the plug after use or before cleaning to avoid injury or damage to the product.
- Please operate this product according to this manual instruction.
- Please do not use accessories which are not recommended.
- Please do not use this product outdoors.
- Please read this manual instruction carefully before operation.
- Any other usage that is not listed in this manual instruction is forbidden.
- 20 minutes of usage each time is recommended.
- Please do not use it if the leather is broken or damaged.
- Please do not use it if the cover or leather is damaged.
- Please do not use it if the radiator hole is covered or blocked.
- Please do not drop anything into this product.
- Please do not fall asleep while using this product.
- Please do not use it if drunk or feel unwell.
- Please do not use it within one hour after having meal.
- Please do not make the massage function too strong for avoiding Injury.
- Please do not carry fragile, explosive and combustible materials in your pocket such as mobile phones, lighters and so on, when using massage chair.

2. Environment for usage.

- Please do not use it under high temperature and moist environment such as bathroom.
- Please do not use it immediately while the environmental temperature changes sharply.
- Please do not use it under heavy-dusty or caustic environment.
- Please do not use it where there is not enough space or not good ventilation.
- Normal room temperature 0 °C to 35 °C.
- Please do not use this product in an excessively humid room (such as a bathroom) at a relative humidity of 20% to 80%).
- Please do not use this product outdoors.
- Avoid direct sunlight.
- Keep this product away from heat source (such as the fireside, the air outlet of the air conditioner).
- Please do not use this product in lightning weather.
- Please do not use this product in dusty places.

3. People who are not suitable to use this product.

- People who are suffering from osteoporosis are not suitable to use this product.
- People who are suffering from heart disease or carrying electronic medical equipment such as heart pacemaker are not suitable to use this product.
- People who are suffering from fever are not suitable to use this product.
- Pregnant women or women that are in menses period are not suitable to use this product.
- People who got injured or skin disease are not suitable to use this product.
- Children under 14-year old or people mentally unbalanced without being Supervised are not allowed to use this machine.
- People who are told by doctor to have rest or people who feel unwell are not suitable to use this product.
- People whose bodies are wet are forbidden to use this product.
- The appliance has a heated surface. persons insensitive to Heat must be careful when using the appliance.

Safety and maintenance

4. Safety.

- Check the voltage if it is suitable to the specification of this product.
- Please do not use wet hand to pull the plug.
- Please do not make water go inside this product to avoid electric shock or cause damage to this product.
- Please do not damage the wires or change the circuit of this product.
- Please do not use wet cloth to clean the electric parts such as switch and plug.
- Be away from this product under power cut state to avoid injury if the power comeback suddenly.
- Stop using this product while it works abnormal, and please consult local agent immediately.
- Stop using this product if you feel unwell, and please consult health care doctor.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- If the supply cord is damaged, it must be replaced by the manufacturer, its Service agent or similarly qualified persons in order to avoid a hazard.

5. Maintenance.

- This product should be maintained by certain appointed agents, users are prohibited to disassemble or maintain by themselves.
- Please do not forget to cut the power after usage.
- Please do not use this product if the socket looses.
- If this product will be left unused for long, please curl up the wires and reserve this product in dry and dustless environment.
- Please do not reserve this product under high temperature or near fire and avoid longtime direct sunshine.
- If the detachable cord / supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a Hazard.
- Please clean this product by dry cloth. do not use thinner, benzene or alcohol.
- The mechanical components of this product are specially designed and made, it is not necessary to be specially maintained.
- Please do not use edged res to thrust this product.
- Please do not roll or pull this product above uneven ground, it should be lifted before moving.
- Please use it intermittently; please do not make this product work continuously for long.

6. Solution of ordinary malfunctions.


- It is nature movement voice if the motor sounds while in usage.
- If the controller can’t work normally, please check the plug and socket if they are connected strongly and make sure the switch is turned on.
- If the rated working time is over, the product will automatically activate the power-off button; If this product works continuously for long, the temperature protector will make the product automatically power-off, it should be used again after half an hour's rest.

7. Storing conditions

- Storage room temperature -5 °C ~ 35 °C.
- Relative humidity 20% to 80%, no corrosive gas and well ventilated room.


Warning

When the footrest lifting, people should not apply pressure on the footrest to avoid the massage chair falling forward to damage the product or cause personal injuries.

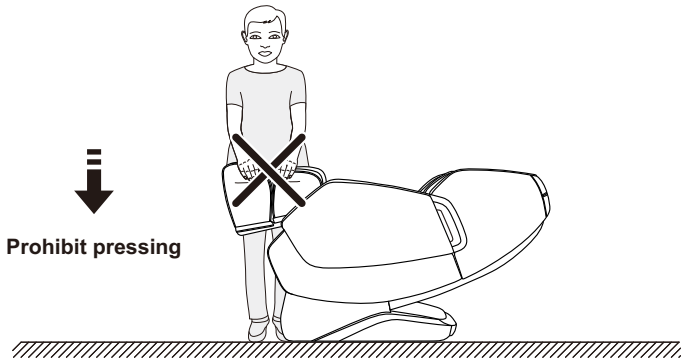


Warning

Before sitting on the massage chair, make sure that the massage hand stays in the seat cushion position to avoid discomfort to the buttocks during the body pressing down and damage to the massage hand.

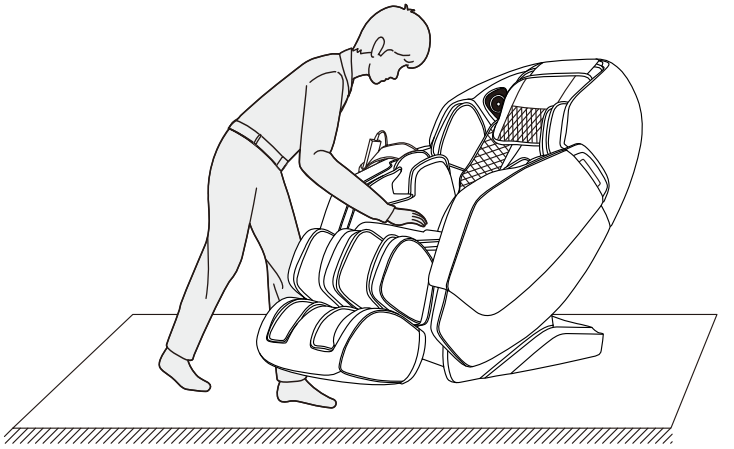


Warning

Do not strive to pull out the control cable or power cord during standby or power-on state to avoid product damaged or electrocution accidents. Advise you unplug the controller cable and power cord and put away after you use the chair.

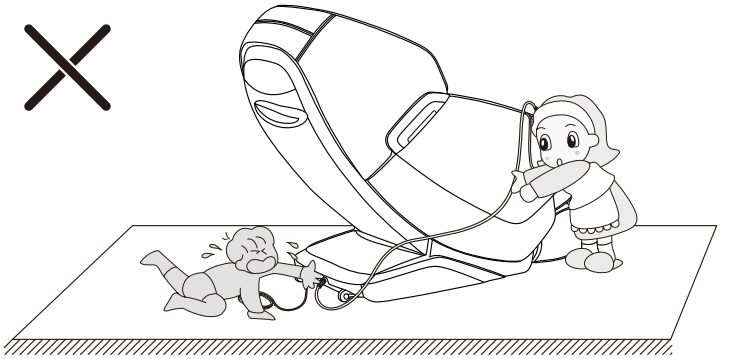



Warning

When start the zero gravity lying function, be sure to check whether there are children and pets under the bottom of the footrest and backrest, may cause the product damaged or personal injuries.

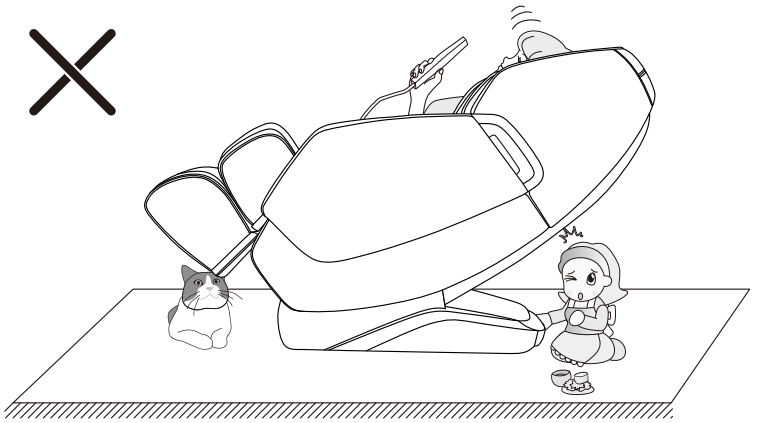

Name and function of components

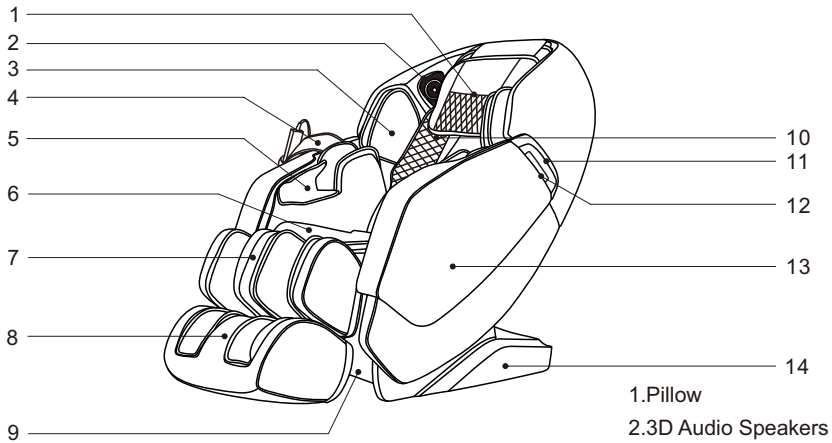

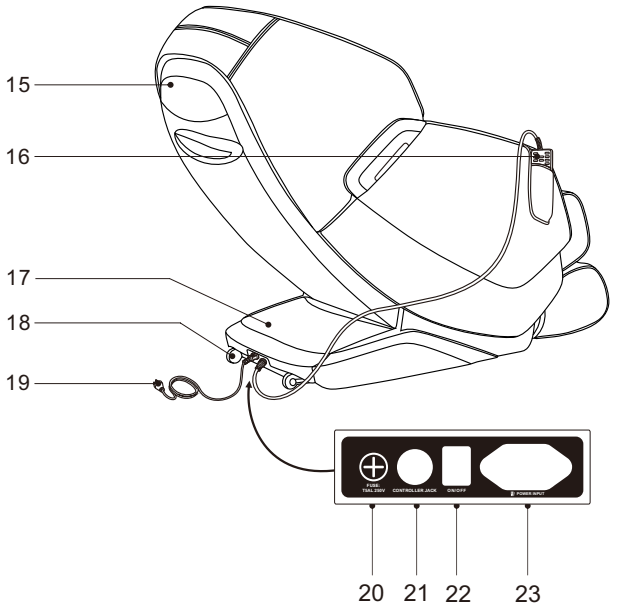


1.Pillow
2.3D Audio Speakers
3.Upper arm airbags component
4.Remote bag
5.Arm airbags component
6.Seat cushion
7.Calf frame
8.Foot frame
9.Calf sealing plate
10.Back cushion
11.Armrest decoration
12.LED Lights
13.Armrest
14.Side cover
15.Back cover
16.Remote
17.PCB box cover
18.Caster
19.Power cord and plug
20.Fuse
21.Controller jack
22.No/off
23.Power input

Function

- Designed with a set of vertically movable, four wheel driven muted intelligent massage hands.
- There are five kinds of simulated massage techniques: shiatsu, kneading, tapping, knocking, kneading & tapping.
- Set with six kinds of characterized auto massage function: comfort, relax, energy, waist & buttock, neck& shoulder, fullbody.
- It has the upper body manual massage function (area, fixed point, full back, upper body, lower body, five massage partsselection, each massage technique speed can be adjusted in three steps. In the fixed point and partial module state, themassage ball can move up and down to adjust the massage point accurately. In the state of tapping, shiatsu and knockingmassage, the width between the two kneading balls is adjustable with three levels: wide, medium and narrow.
- Air pressure massage function with three modes: Full body air pressure, arms air pressure, leg air pressure, with 3intensity adjustable.
- Combined with human back curve technology, makes you enjoy personal massage from the head to the leg.
- The audio speakers are located on the upper arm area of the product, music canbe played by connecting the blue tooth to a smart phone or tablet device.
- With sole roller massage function
- The back heating function use carbon fiber as an infrared heating source
- The footrest can be extended to suit different leg lengths.
- The motor drives the footrest and the backrest synchronically and lay down automatically two regulatory functions.
- The backrest of the massage chair should be kept at least 275 mm away from the wall.
- Natural magnet is placed at the heel of the heel.
- LCD colorful screen remote controller
- Design with LED light on each side of the armrest.
- The chair will be reset when switch off. The massage hands will be restore as well.

Method of usage

Note: The specific displays refer to the actual object of this product!

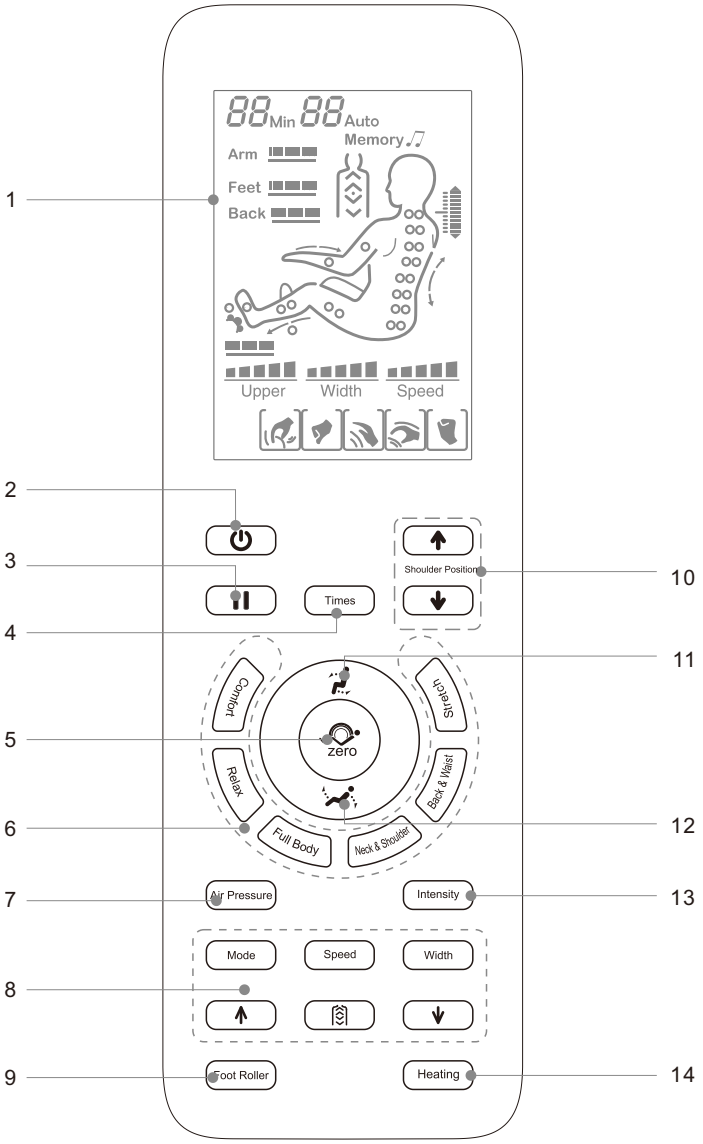

Method of usage

1.LCD display:
・Display all massage functions

2.Power switch:
・Turn on or Turn off all massage functions.

3.Pause button:
・Stop or start all massage functions..

4.Timing button
・Time setting

5.Auto lying Button
・There are three automatic lying position, choose your favorite one.

6.Auto massage Button
・Please refer to page 10 of this manual for details.

7.Air pressure mode Button
・Turn on/off the air pressure massage function (refer to page 11 of this manual for details).

8.Manual massage button
・Please refer to page 10 of this manual for details.

9.Sole roller button
・Turn on/off sole roller massage function

10.Shoulder adjust button
・Make the adjustment on shoulder acupressure points.

11.Lifting button
・Rise up the backrest and lower down the footrest.

12.Lying button
・Lower down the backrest and rise up the footrest.

13.Air pressure intensity button
・Make the adjustment on air pressure intensity.

14.Heating
・Turn on/off heating massage function

Method of usage

1.Switch power supply on



Diagram of plug in

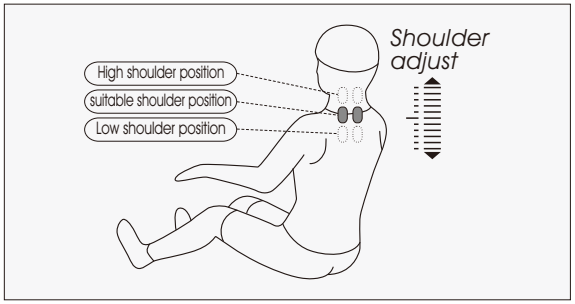


Diagram of the switch position of power supply

2.Start to massage

①. Press the power button to start massage.
②. The chair conduct a body scan and testing your shoulder position and massage point, waiting for detection to be completed
③. If the body scan deviates from the actual shoulder position, adjust the up and down buttons to the appropriate position. There are 10 levels to adjust, and you have10 seconds to make the adjustment. After 10 seconds, enter in to massage automatically.

Button	Description	Display
↑	Move the massage balls upward to a suitable position	
↓	Move the massage balls downward to a suitable position	



During the body scan process (the shoulder position adjustment icon will be displayed on the screen of the controller and sounds “DiDi”, and then press the shoulder position up and down keys to adjust the shoulder position). You can also press any of the six automatic massage function keys (comfort, ease, full body, neck shoulder, back waist, stretch) and start massage (you can skip step 4 directly).

④、Choose massage function and start massage

Method of usage

· Features automatics massage

Function	Button	Description	Display
Features automatics massage	Comfort	Loosen the muscles.	F1 Auto
	Relax	Deep-tissue massage throughout key acupressure points to relax the sore area.	F2 Auto
	Full body	Full body massage, relaxing the sore area.	F3 Auto
	Neck & shoulder	Focus on the neck and shoulder area	F4 Auto
	Back&waist	Focus on the back waist area.	F5 Auto
	Stretch	The footrest and backrest lifting together, combined with air pressure massage to stretch the legs, remove fatigue, and recover your body.	F6 Auto

· Upper body manual massage

Function	Button	Massage ball adjustment	Display
Massage	mode	Shiatsu Speed, width	
		Kneading: Speed	
		Tapping: Speed, width	
		Kneading and tapping: speed	
		Knocking: Speed, width	
Speed	speed	3 adjustable level	Speed
Width	width	3 adjustable level	Width
Back stretch		The massage hand stay in fixed positon	H0
		The massage hand will move up and down in a partial position	H1
		The massage hand will move up and down on full back	H2
		The massage hand will move up and down on back and shoulder area	H3
		The massage hand will move up and down on back and waist area	H4
	↑	Massage position adjustment (in fixed point, partial mode, the massage position can be adjusted).	Massage hand move up
	↓		Massage hand go down

Method of usage

· Air pressure massage

Function	Button	Description	Display
Air pressure mode	air pressure	Full air pressure: air pressure massage on arm, leg and foot.	Arm Feet
		Arm: Air pressure massage focus on arm.	Arm
		Legs: Air pressure massage focus on leg and foot.	Feet
Intensity	Intensity	3 levels adjustable	Arm Feet

· Foot roller manual massage function

Function	Button	Description	Display
Foot roller	foot roller	The foot roller massage function turn on or off.	

· Heating

Function	Button	Description	Display
Heating	Heating	Press this button to turn on/off the back infrared heating, and it will be warm after turning on 3 minutes.	

· Pause/start massage button

Function	Button	Description	Display
Pause/ Start	II	Press this button during the massage, all massage actions are stop immediately (the timer will continue to count down), and press this button again, all the massage will be resume.	

· Backrest and calf position adjust

Function	Button	Description
Lifting button		Press and hold this button, it will raise the backrest and lower the footrest simultaneously, a "Di.Di sound indicate that it has reach the maximum position and stop. Press this button again while lifting, then immediately stop.
Lying button		Press and hold this button, it will lower the backrest and raise the footrest simultaneously, a "Di.Di sound indicate that it has reach the maximum position and stop. Press this button again while lifting, then immediately stop.
Automatic lying mode	zero	Switch to an auto lying mode when you press key each time, total 3 modes, cycle switching change.

Method of usage

· Other manual functions

Function	Button	Description	Display
Timing	Timing	Timing adjustment, press one time, add 5 minutes, not more than 30 minutes. If it exceeds 30 minutes, it will return to 5 minutes.	*20 min*

3.Turn off the power and stop massage.

· When pressing the power button during the massage, it will stop all the massage functions immediately, the backrest and footrest will go back to the default posit on.And when the massage time up, the massage hand will go back to the default position, all the massage function will stop, the backrest and footrest will not go back to the default position.

· Cut off the power of the whole machine. Figure (switch power off)




Diagram of the power switch position




Unplug the power cord


4.The calf installation.

· After connecting the wires and the air hose between the chair seat and the leg rest , unfasten the fixed pipe belt and insert the connecting part into the seat frame(figure 1).

· Place the round tube from calf left and right sides to the legs brackets.(figure 2)

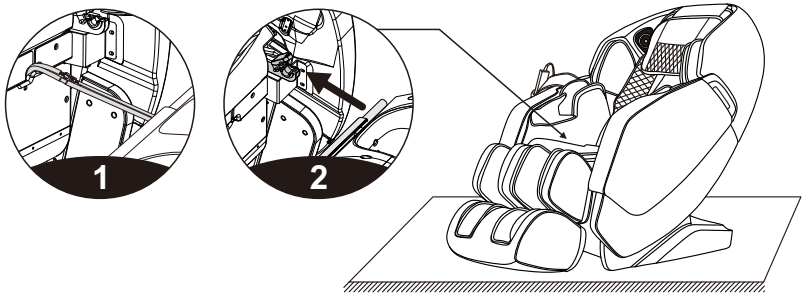


- Then turn the legs fixing cover over the round tube on both sides of the legs (figure 3)
- Then use 2pcs M4 screws fix the legs on the massage chair, turn up and down to check if there are any problems, the wires and air hose get stuck or not, finish the installation. (figure 4)

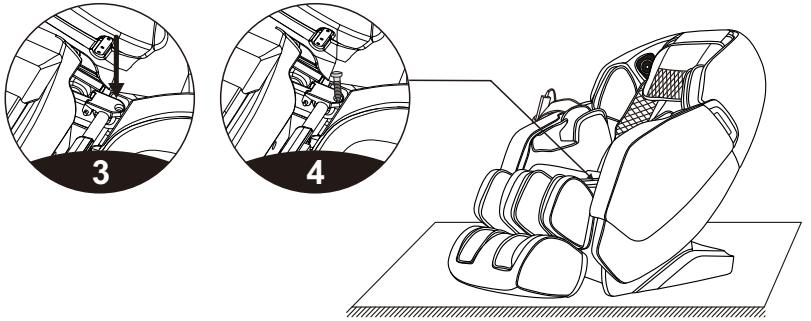


5.Head cushions and backrest pad's dismounting and use manual

- The head cushion allows you to contr ol the intensity of the neck and shoulder massage, You can decide whether to use the head cushion (Recommend to use). The backrest cushion and the backrest is connected by zipper (1), head cushion and the backrest cushion connected by the Velcro as show in the illustration (2).

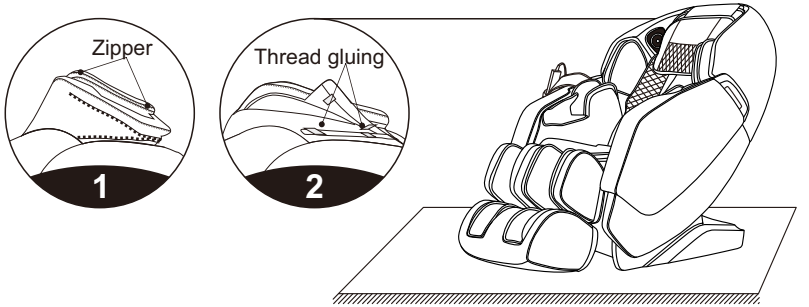

6.Floor Protection


- Put the heavy massage chairs on the wood floor for a may damage the floor, so please place a carpet or other object to avoid this damage.

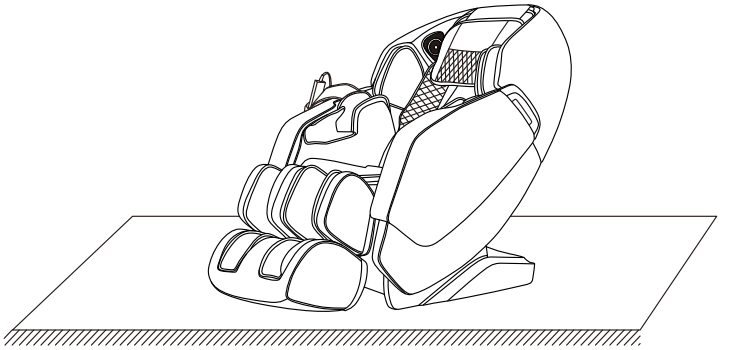

Caution: Do not move the chairs with its wheels on wood floor, rough ground or in a narrow space. Two people are required to lift the chair. During the lifting period, take the calf rest end sealing plate and backrest cover grooves as the force-bearing point(Please do not lift armrest directly.)

7.Method of movement

- Make sure that all wires are far above the ground, tilt the backrest backward to a certain degree (with the gravity center resting on the wheels), push the chair forward or backward with your hands and finally resume the chair to the normal position in a slow and gentle manner.(Note: During movement you must turn off the power first and then unplug the power cord and the controller cord.)

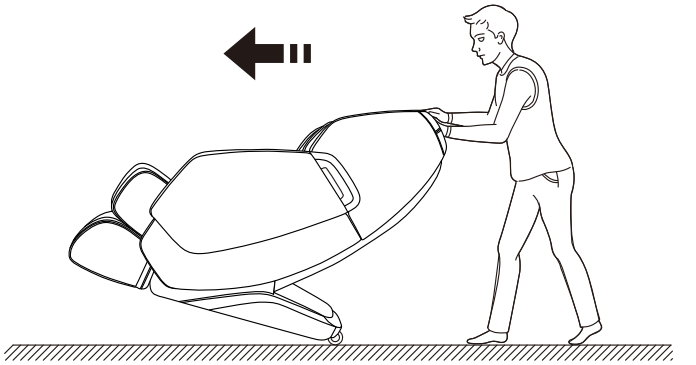


Warning : Massage chair rear wheels are only suitable for short distance movement for long distances, pls use other assistive tools to move the massage chair.

Method of usage

8.The distance from the wall

· When you place the massage chair, the backrest should always be kept at least 275mm away from the wall. If the backrest is too close to the wall, it will be collide the wall and cause damage to the product when it lifting down.

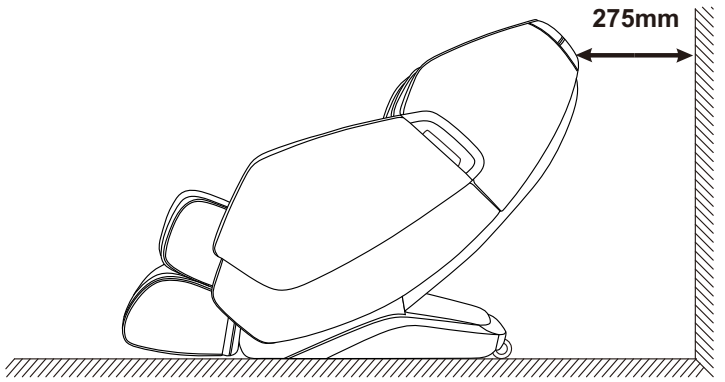

Product specification

Model: NFL-A302
Name: Massage Chair
Rated voltage: 110-120V~ 60Hz ☐
220-240V~ 50Hz/60Hz ☐
Rated power input:120W
Rated time: 20Min
Safety structure: Class Ⅰ

Material introduction: PVC, PA, steel parts and electric & electron parts

MATERIAL	PU	LEATHER	CLOTH	WOOD