


Ceiling Fan
OWNER'S MANUAL
READ AND SAVE THESE INSTRUCTIONS



MODEL NO:YJ-0005

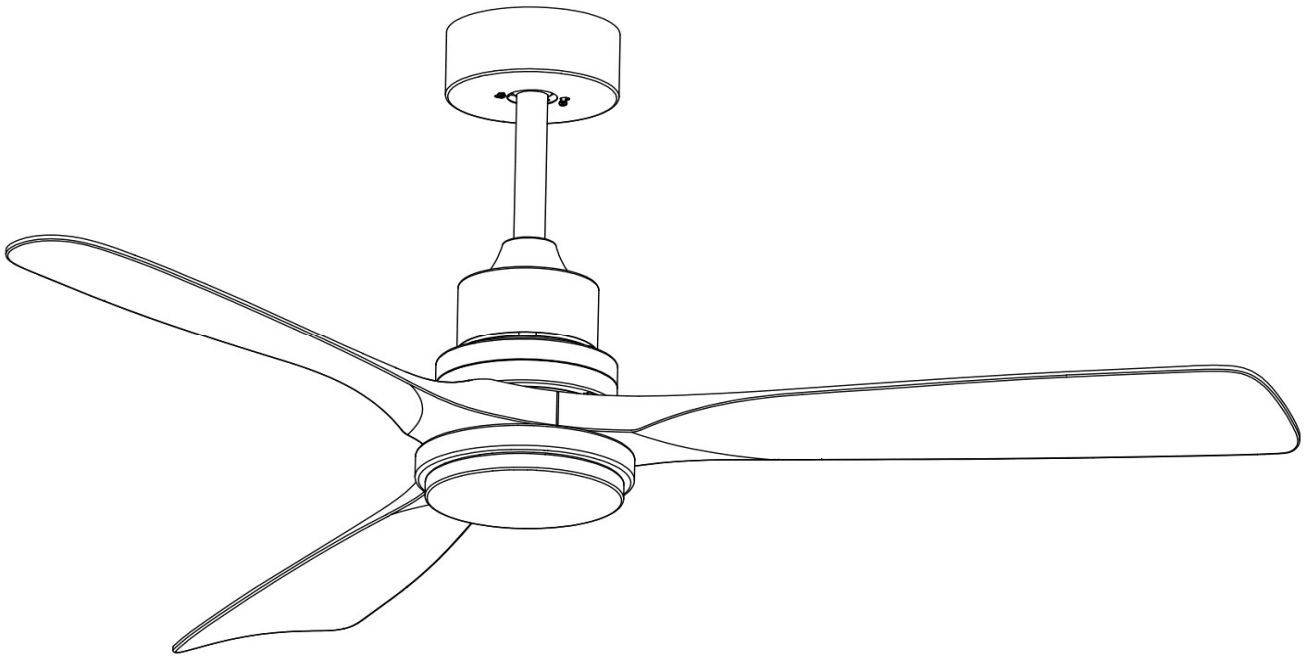

WARNING

WARNING: To avoid fire, shock and serious personal injury, please read the following instructions carefully.

Important Safety Instructions

1. Read all instructions and safety information before installing your new fan. Review the accompanying assembly diagrams.
2. Before installing the fan, disconnect the power by removing fuses or turning off circuit breakers.
3. Make sure all electrical connections comply with local codes, ordinances, or National Electrical Codes. Hire a qualified electrician or consult a do-it-yourself wiring handbook if you are unfamiliar with installing electrical wiring.
4. Make sure the installation site you choose allows the fan blades to rotate without any obstructions. Allow a minimum clearance of 7 feet (2.3m) from the floor to the trailing edge of the blades.
5. If you are mounting the fan on a ceiling outlet box, use a metal outlet box. Secure the box directly to the building structure. The outlet box and its support must be able to support the moving weight of the fan (at least 45kgs.). Do not use a plastic outlet box. Attach the mounting bracket by using the hardware supplied with the ceiling outlet box.
6. If you are mounting the fan to a joist, make sure it is strong enough to support the moving weight of the fan (at least 45kgs.)
7. After installing the fan, make sure all the connections are secured. This will prevent the fan from falling.
8. Do not insert anything into the fan blades while the fan is operating.
9. Turn the fan off and wait for it to stop before reversing fan direction.
10. To reduce risk of electrical shock and personal injury, do not install the fan on a sloped ceiling.
11. To reduce the risk of electrical shock and personal injury, do not use this fan with any solid-state.

Table of Contents

ASSEMBLY DRAWING & PARTS LIST.....	2
HOW TO INSTALL THE FAN.....	3-7
MAINTENANCE.....	8
BALANCING FAN/WOBBLING/TROUBLE SHOOTING.....	9

ASSEMBLY DRAWING & PARTS


Unpacking Your Fan

Unpack your fan and check the contents. Please check each item prior to installation. To reduce the chance of marks or possible damages, please remove the parts when required for installation.

Parts List


Ref.#	Description	Part#
1	Mounting bracket	1
2	Hanging ball	1
3	Down rod	1
4	Hairclip pin	1
5	Clevis pin	1
6	Canopy	1
7	Canopy screws	2
8	Connections cover	1
9	Motor	1
10	Blade	3
11	Washers	3
12	Blade screw	6
13	LED Reflector Tray	1
14	Lamp screws	3
15	LED lamp	1
16	Lampshade	1
17	Receiver	1
18	Remote control	1

Assembly Drawing

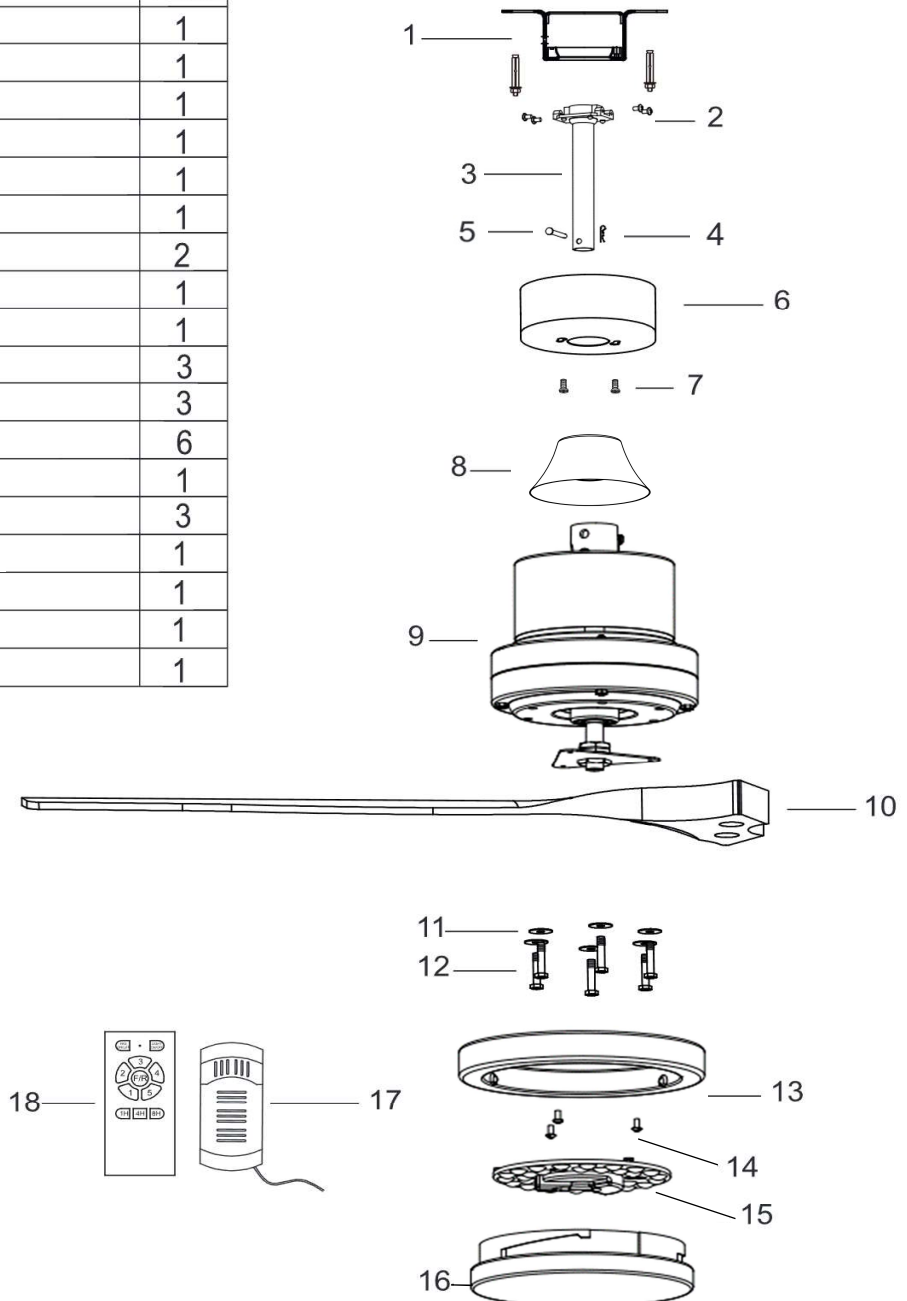


HOW TO INSTALL THE FAN

1. Wooden ceiling: Fix the hanger tightly on the wooden ceiling beam with a wood tooth screw drill : (as shown in Figure 1)
 Concrete ceiling: Please enlarge the hanger with a medium 8mm drill and then use M6 explosive screws to install the fixed hanger next to the hanger after the hanger is installed
 The 8mm drill shall expand the drilling hole at 10mm on the side of the hanger without hitting the terminal, and then install the explosive screw hook (note that the installed explosive screw hook shall be transferred to the hanger and shall not affect the installation of the lifting point and remote control receiver); (Figure 2)

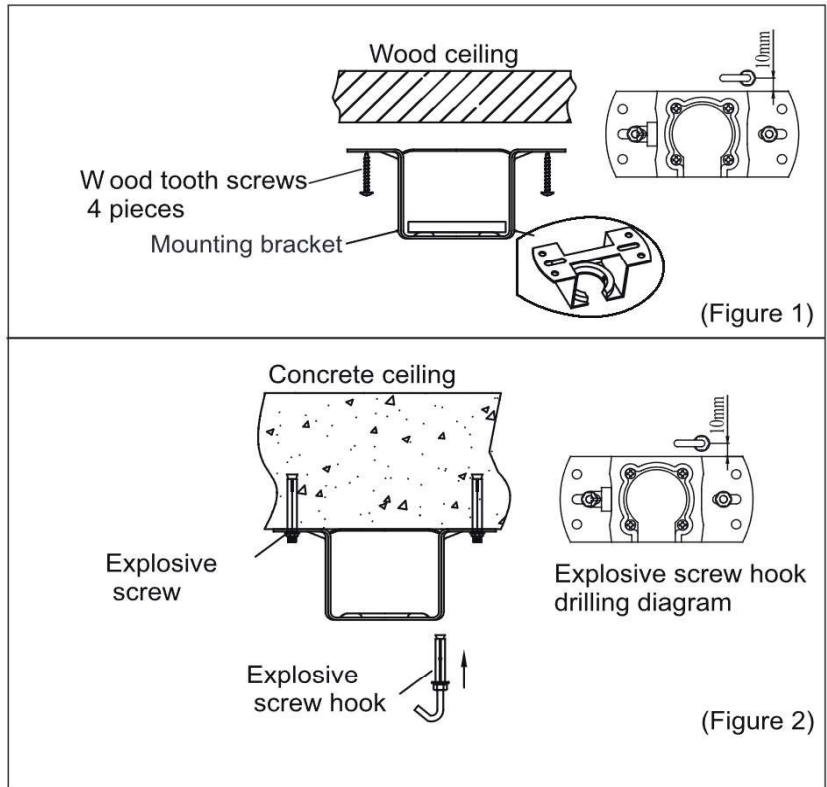

2. Safety cord installation:

loosen the screw on the wire lock side of the wire rope, put the wire rope ring on the explosive screw hook, tighten the wire rope, and then tighten the wire lock screw. (Figure 3)

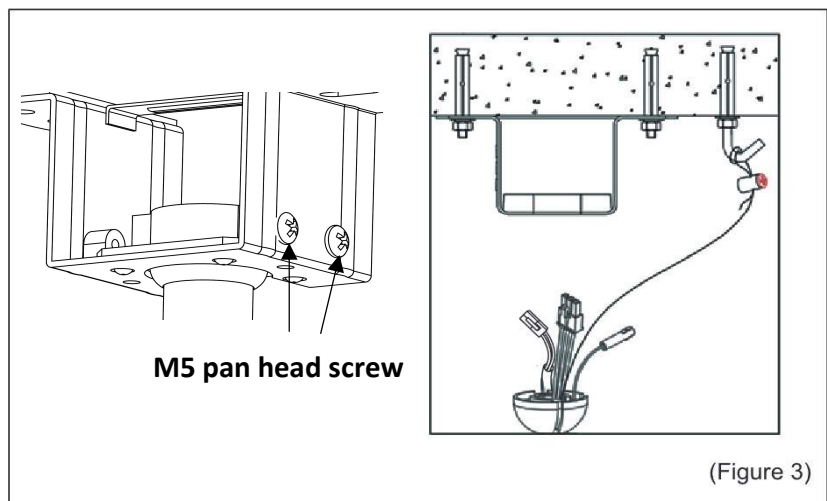

HOW TO INSTALL THE FAN

3. Install the fan blades and blade decorative plate by aligning the holes on the blade and plate with the holes on the fan motor assembly set by the provided set screws. (Figure 4)
Make sure the set screws securing the blade are tight and the blades are properly seated.

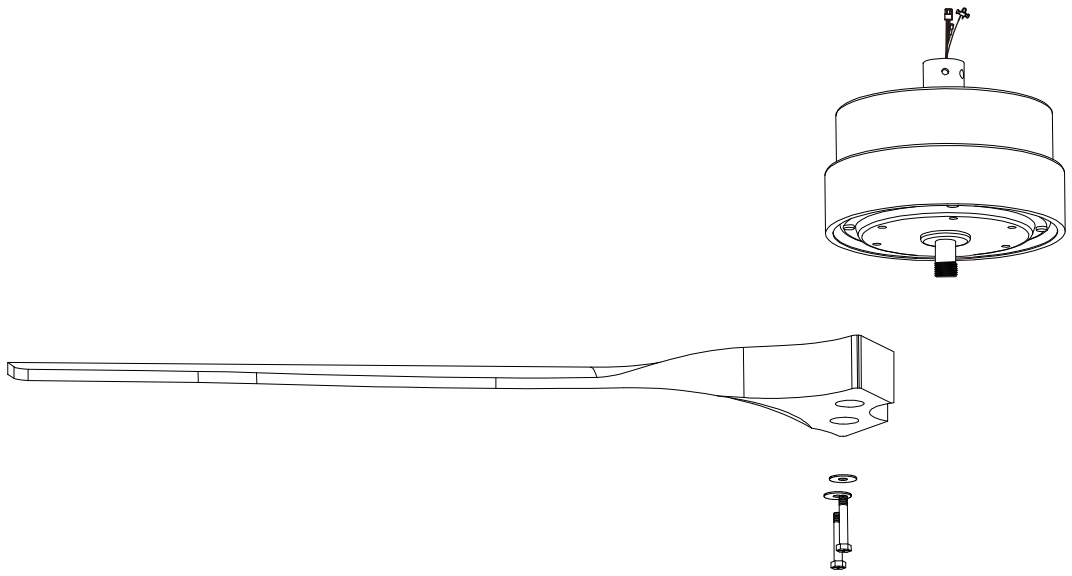


Figure 4

4. Loosen the set screws in the Hanger Ball assembly until the ball slides carefully down the downrod. Remove the Pin from the downrod (Figure 5)


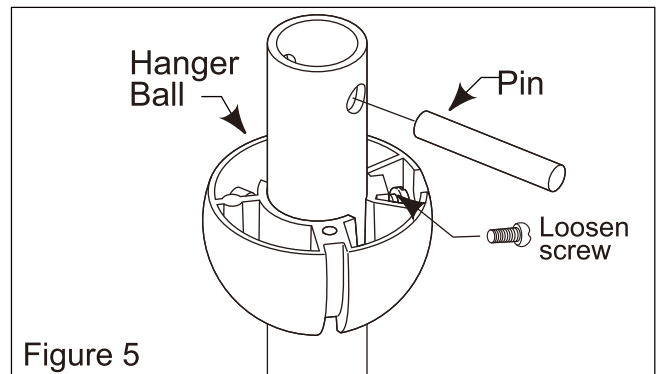


Figure 5

HOW TO INSTALL THE FAN

5. Remove and save the clevis pin and hairpin of the downrod. Put the downrod through the canopy and coupling cover. (Figure 6)

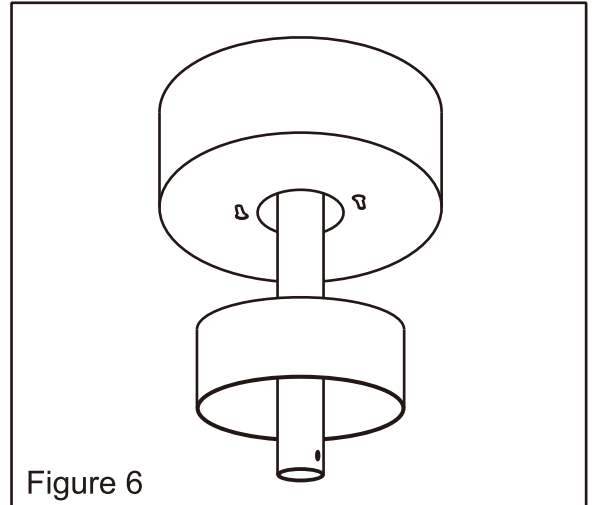


6. Loosen two set screws on the downrod support and then place the downrod into the downrod support. (Figure 7)

Thread the electrical wires and the earth wire through the downrod.

Align the Clevis Pin holes in the Downrod with the holes in the Downrod Support. Be sure to push the straight leg of the Hairpin Clip through the hole near the end of the Clevis Pin until the curved portion of the Hairpin snaps around the Clevis Pin.


Finally, re-tighten the two set screws.

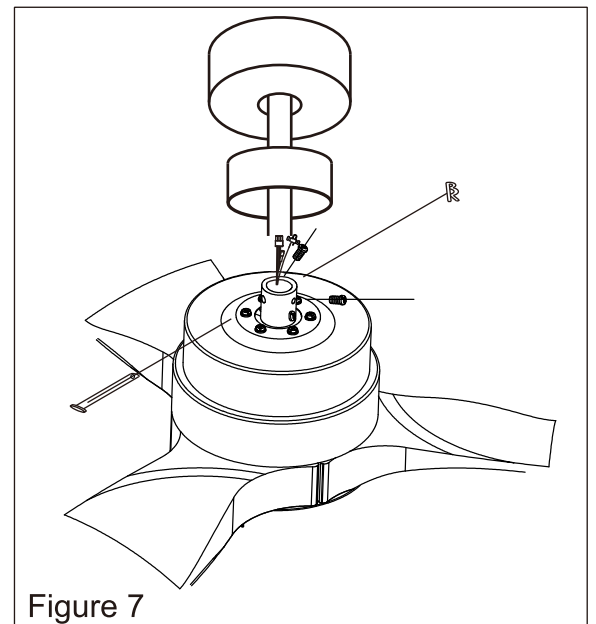

! WARNING

It is critical that the clevis screw in the downrod support is properly installed and the set screws are securely tightened. Failure to verify the clevis screw, hairpin clip and set screws are properly installed could result in the fan falling.

7. Carefully lift the fan, and set the downrod / hanger ball assembly on the hanger bracket attached to the ceiling joist. Be sure the groove in the ball is properly aligned with the tab on the hanger bracket. (Figure 8)

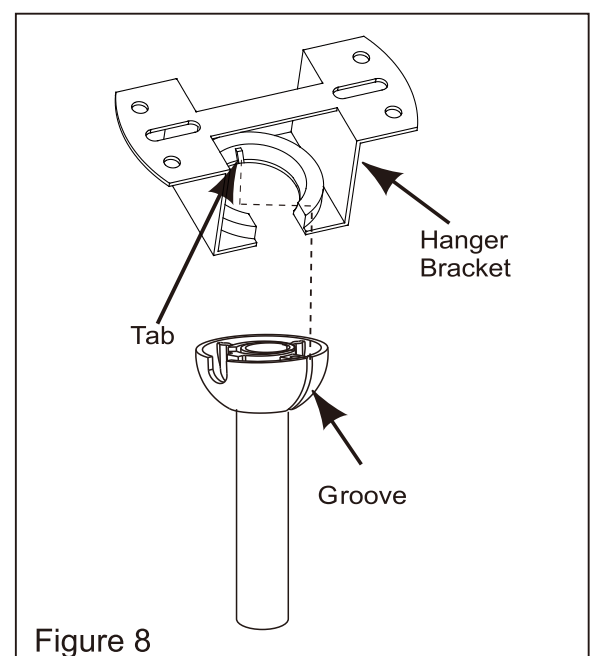

! WARNING

The fan must be hung with at least 230cm of clearance from floor to blades.

HOW TO INSTALL THE FAN

8. Install the lamp holder with two screws connected to the motor.
(Figure 9)

9. Connect the wires from the motor assembly and wires from the LED correctly. Attach the light kit plate to the fan motor assembly using the two light kit plate screws. (Figure 9)

To install the non-lighting version, just screw the decorative cover into place.

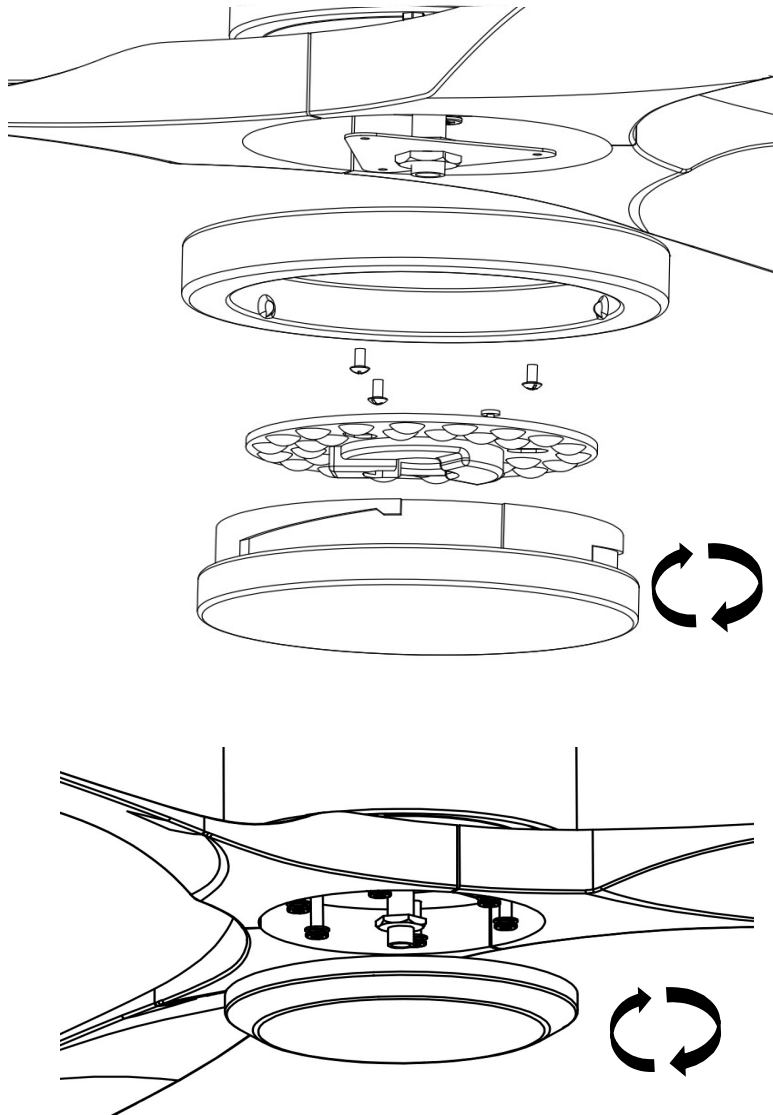


Figure 9

HOW TO INSTALL THE FAN


10.Connections:

 WARNING
To avoid possible electrical shock, be sure electricity is turned off at the main fuse box before wiring


Connect main power (dwelling) to the Terminal Block located on the hanger bracket. Plug the receiver in the hanger bracket with the flat side facing up.

- Insert the 3P connector of hanger bracket into the AC POWER INPUT socket of receiver
- Insert the 2P light connector of fan motor assembly into the 2P LIGHT socket of receiver
- Insert the 3P motor connector of fan motor assembly into the 3P MOTOR socket of receiver
- Connect the 1P yellow/green connectors of fan motor assembly and hanger bracket.

(Figure 10)

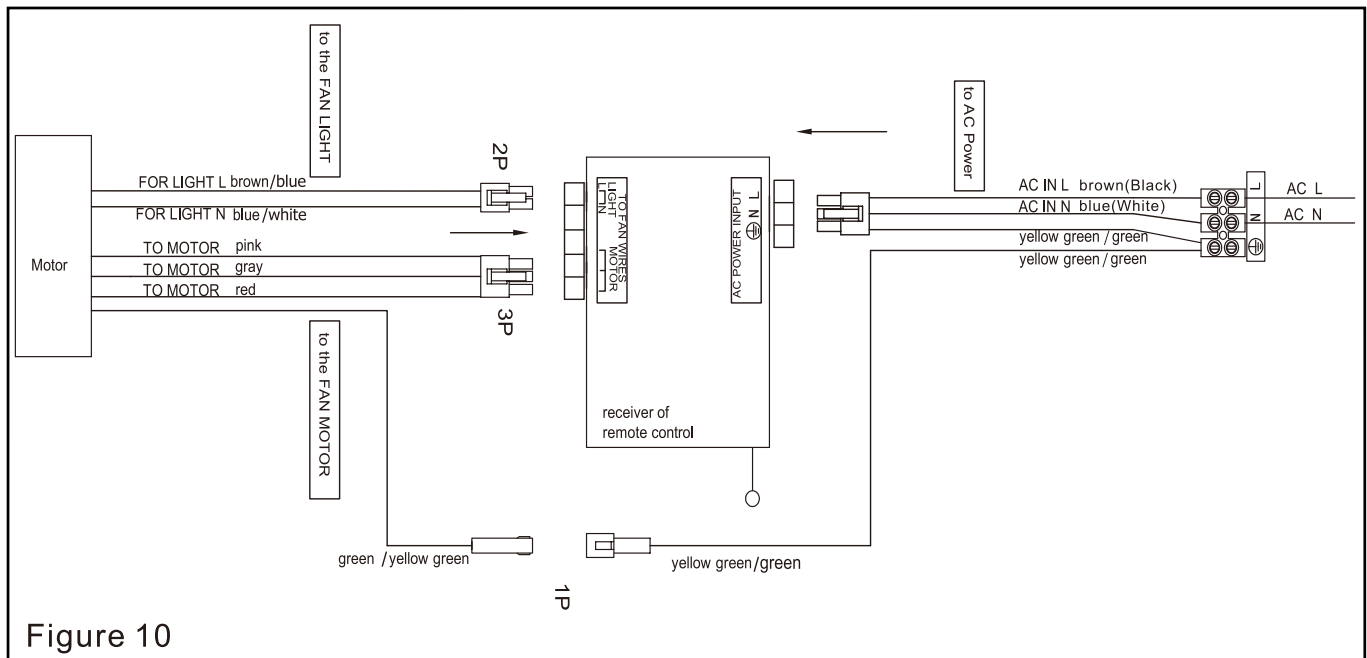

10. Mount the canopy as previously stated.
(Figure 11)

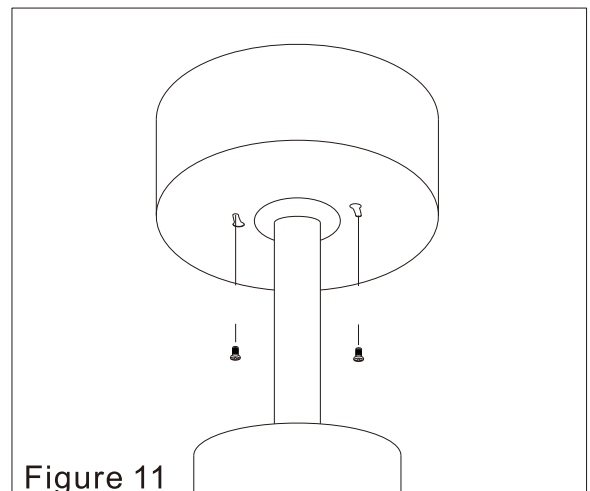

PROTECTIVE FUNCTIONS OF THE RECEIVER

Lock protection- The DC motor has a built-in safety feature against blade or motor obstruction during operation. If something obstructs the fan blades or motor, the motor will keep trying to run and then stop operation after about 30 seconds of interruption. Please remove obstacles and reset. To reset: Turn the fan off by remote transmitter and then turn the fan on.

Over load protection (current limit)- The device will limit the maximum current output from the receiver/drive if the fan load has increased abnormally.

Tips

1. If your fan is operating automatically after installation and power on, it is because your fan has memorized the previous factory setting. Use the Universal Mode or the learning function and your fan will be ready for use.
2. If the fan or light isn't working, reset power (turn the power off for at least 5 seconds and then turn the power back on) and redo the learn function setting.
3. It is not possible to remotely operate more than one fan in the same room (in the area where the remote signal can reach to) if they share the same power supply. Separate power supplies (such as using individual wall switches for each fan) is required if you want to separately control more than one fan in same room.
4. When the fan is turned on or operated using forward/reverse function, it shutters & goes back & forth until it turns.
This is a normal and it will take a few seconds to run this operation.

MAINTENANCE

1. Periodic cleaning of your new ceiling fan is the only maintenance that is needed.
2. When cleaning, use only a soft brush or lint free cloth to avoid scratching the finish.
3. Abrasive cleaning agents are not required and should be avoided to prevent damage to finish.



WARNING

Do not use solvents when cleaning your ceiling fan. It could damage the motor and create the possibility of electrical shock.

RECOMMENDED:

Periodically check that the blade sets to the fan motor setscrews are secure and tight.

BALANCING FAN / WOBBLING TROUBLE SHOOTING

Please note that all ceiling fans are not the same, even in the same model—some may move more or less than others.

Movement of a couple of centimeters is quite acceptable and does not suggest the fan will fall down.

Even though all blades are weighted and grouped by weight, it is impossible to eliminate wobble altogether. This should not be considered a fault. Ceiling fans tend to move during operation due to the fact that they are not generally rigidly mounted.

TRY THE FOLLOWING TO REDUCE A WOBBLING FAN;

1. Check that all of the blade mounting screws are tightened and secure.
2. Wobbling problems may result from inconsistent blade level. To check the blade level, measure the distance from each blade tip to the ceiling. Note: If measurements are inconsistent:
 - Be sure the blade mount screws are not too tight or too loose, which may cause wobbling due to an unlevel blade tip.
 - An out of shape blade can cause wobbling. Check by removing the blade and placing on a flat surface.
3. Blade tracking may be checked simply by use of a household ruler. Place the ruler vertically against the ceiling and even with the outside leading edge of a blade. Note the distance of the edge of a blade compared to the others. Turn the blade slowly by hand to check the remaining blades.
If a blade is not in alignment, the blade is either out of shape, warped or the blade screws are not evenly tighten or either loose.

BALANCING KIT

A Balancing Kit has been provided to assist with reducing a wobble. Please retain the kit as it may become useful should the fan develop a wobble in the future. Instructions on how to use the Balancing kit can be found within the Kit.