

# **BLUEMAN Portable Bluetooth Speaker & Real Flame Lamp BT-Flame1**



Please read this user manual carefully before using the fireplace and keep it for future reference. The appliance must be installed and used by these instructions. Improper use of safety and hazard instructions can lead to serious burns or fire hazards, This document is part of the appliance.

# We're Here to Help

---



## Call Us:

(+86)13662946958



## Email Us:

steve@chinablue.com



## Live Chat:

Monday-Friday: 9:00 a.m. - 5:30 p.m.

# Use and Care Guide

---

## Registration

Please visit the following website within 30 days of purchase to complete your registration. Registration within the first 30 days will activate your one-year warranty.

**<https://bluemandesign.com/pages/product-registration>**

Please keep your model number, order number, and purchase date for future support. You can reach us at [steve@chinablue.com](mailto:steve@chinablue.com).

Model Number \_\_\_\_\_


Order Number \_\_\_\_\_

Purchase Date \_\_\_\_\_


## TECHNICAL DATA

Model	BT-Flame1
Dimensions	16.5cm dia x 41cm H
Filling Volume	Max height 40mm
Stainless Steel Burner	
Heat Resistant Borosilicate Glass	
Fuel	Solid shape ethanol
Burning Time	About 30 minutes
Bluetooth Version	V5.0
Bluetooth frequency	90Hz-18KHz
S/N	≥75dB
Resolution	≥55dB
Bluetooth Distance	up to 10M
Power Supply	It can be charged by using mobile phone adaptor + Type-C power cord
Rechargeable Battery	2pcs 2,400mAh Li-ion battery, 17.28Wh
Aux In	3.5mm
LED Ambience Lighting	
Material	Plastic + Metal Mesh + Tempered Glass
Drive Units	Mid-Range: 3" 4Ω 20W/1PC, Tweeter: ∅ 52mm 4Ω 15W/1PCS
Speaker Power	RMS: 20W, Max Power: 35W (20W x 1 + 15W x 1)

# BILL OF Material

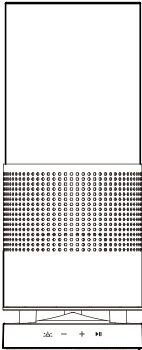

BT-Flame1

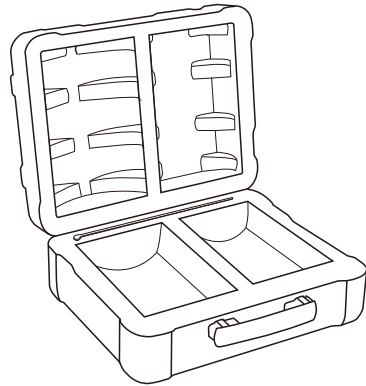

EPP Packaging Bag



Type-C  
Charging Cable



Alcohol Cans  
(included fireproof cotton)




Fire Cover Cap







Ignition Hook

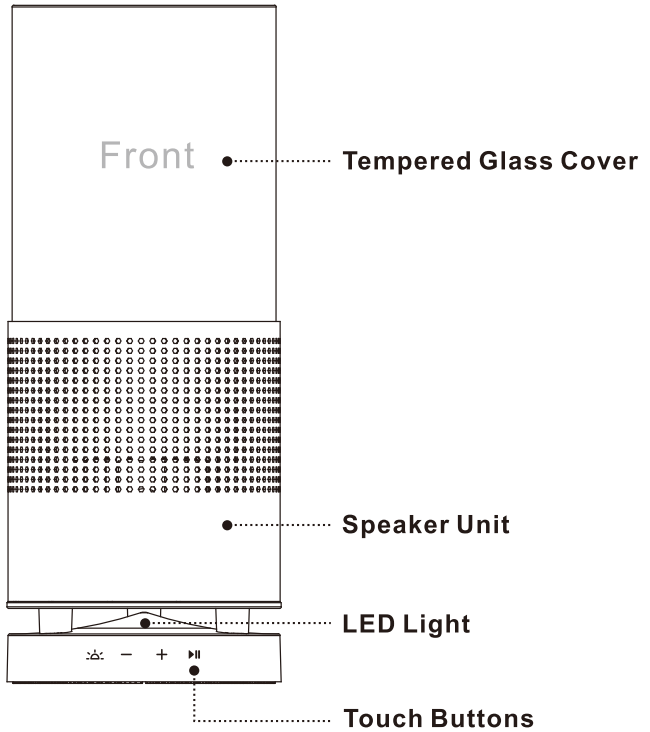
NOTE: Please do not touch fireproof cotton in the alcohol cans, in case causing itching or allergic reactions.

# Description of product



			
<b>LED key</b>	<b>Volume -</b>	<b>Volume +</b>	<b>Play/Pause</b>
	Previous song	Next song	bluetooth disconnected

# Description of product

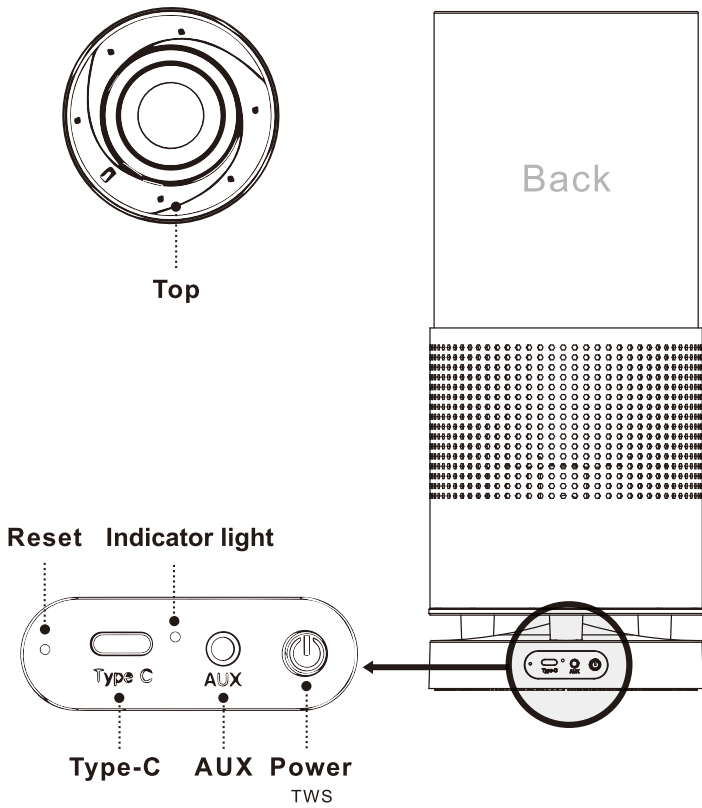

# Product explosion diagram



Unique Design



Bluetooth



Aux in



Built-in battery



True Wireless Stereo




LED Lighting



Flame Atmosphere




## Power On/Off

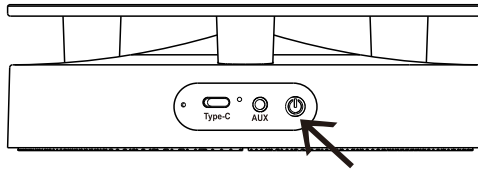


- A) Long press power the button, and you can hear the voice prompt “Bluetooth”. The speaker will enter Bluetooth mode as default. The smart devices can be paired with the speaker.
- B) Long press the POWER button when the speaker is powered on. The speaker will be turned off. You will hear an acoustic signal.

## AUX in connection

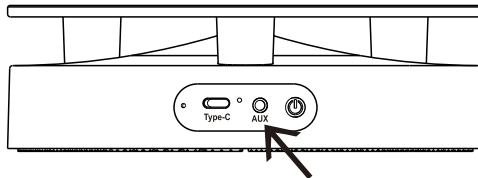


Insert the AUX cable into the AUX socket, the speaker will switch to aux mode automatically. The LED changes green when switched to aux mode. The blue LED is off when Bluetooth is switched off. Pull out the aux cable, the Bluetooth mode switches on automatically. You will hear an acoustic signal.

## Charging Port

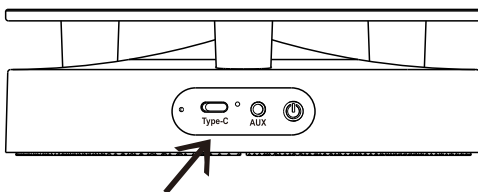


Insert the Type-C cable to charge for the speaker.

## Bluetooth Connection and Play

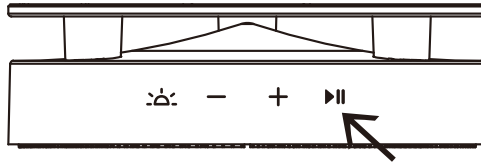


- A) Turn on the speaker, will enter Bluetooth Pairing Mode automatically. The LED will flash blue rapidly. Bluetooth pairing name is "BT-Flame1".
- B) After the pairing is complete, you will hear an acoustic signal and the blue LED will remain solid.
- C) When music playing after Bluetooth connecting, short press **【Play/Pause】** button to stop playing. Short press once to replay.
- D) When Bluetooth is connected, long press **【Play/Pause】** to disconnect with a voice prompt. The other Bluetooth devices can be paired.
- E) The Bluetooth distance between the smart device and the speaker is up to 10 meters.

## Volume Control

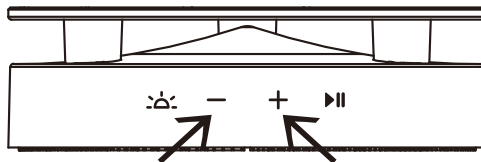

- A) Press button **【+】** to increase the volume. There is a voice prompt "Maximum volume" when it reaches the maximum volume.
- B) Press button **【-】** to decrease the volume.
- C) Long press the volume button **【-】 / 【+】** to change the previous or next song.

## LED Operation

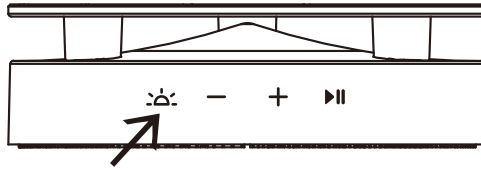


The warm white LED is on automatically when the speaker is powered on.

- A) Short press to turn off the LED light when speaker is powered on.
- B) Shot press once to turn on the LED light when the speaker is powered on.

## AUTO Power Off

After powering on the speaker without Bluetooth connection, or without LINE IN signal, or disconnecting the Bluetooth after 10 minutes, the speaker will power off automatically with the music prompt.


## TWS Connection

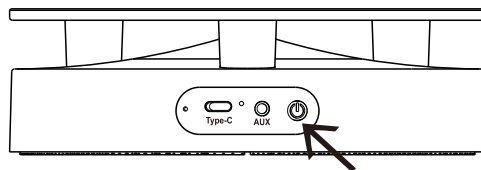

TWS feature allows you to link two speakers together. The first speaker will be the master connected to the Bluetooth device and operate all controls, including power on/off. The second speaker is a linked speaker to the master.


- A) Turn on both speakers.
- B) Double-tap the POWER button. The speakers will enter Pairing Mode. The LED will flash orange rapidly. After the pairing is complete, the LED of the master speaker will remain solid and the linked speaker will flash slowly.
- C) To disconnect the pairing, short-press the POWER button once to switch off the TWS pairing.
- D) When speakers are team paired, insert the AUX cable into the AUX socket on the back panel of the master speaker.
- E) Both speakers can be turned off via TWS Pairing Mode.

## The Indicator Light

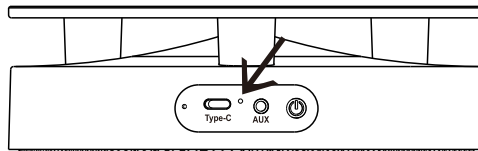

- BLUE light and flash rapidly: “POWER ON” and “Bluetooth, waiting for connection”.
- BLUE light and keeps on: “Bluetooth is connected”.
- ORANGE light and flash rapidly: TWS Team Pairing Mode.
- ORANGE light and keeps on: TWS Team Paired.

## Low Battery and Charging

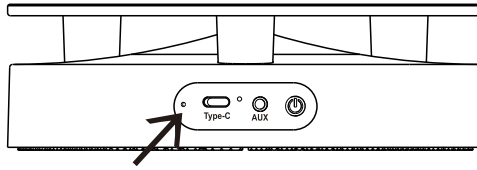


A) When the battery capacity is low, the voice prompts “Low Battery” to remind the user that the speaker needs to be charged. If the user does not charge, the speaker will be automatically powered off.

B) Insert the type C cable with your charger to charge for the speaker. The red LED light will be illuminated while charging. The green LED light will be illuminated while the speaker is fully charged. Charging cable: 5V / 2A.

**Warning: please use a 5V charger to charge. Otherwise, it can not be charged. There will be damage to the speaker or an accident caused by the wrong adapter charging.**


## Reset button

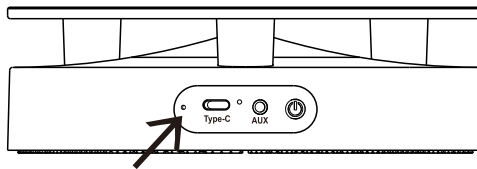

Use a toothpick or phone card pin to press once back to reset in case the system is halted.


## INSTALLATION & COMISSIONING

1

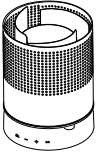

- Place the fireplace on a stable, flat non-flammable surface.
- Please be sure the wall/table/floor you are placing this appliance can bear its weight.

2

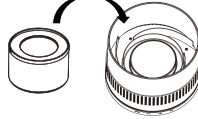


- Place the burner tank into the safety tank.
- Place the safety tank into the base.

3




- Fill the burner with bioethanol up to the "Max" indicator.
- It is recommended to use a funnel for this purpose.
- Never fill the appliance to a level above the "MAX" Indicator.

4

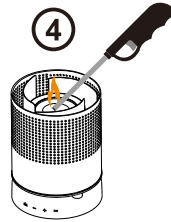



- Any overspill shall be removed before lighting the appliance;
- Ignite the burner with a rod lighter. Do not lean over the tabletop fireplace while igniting. Keep a sufficient safety distance.

5

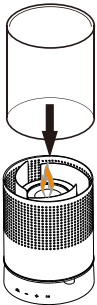

- Put the glass cylinder on top of the base.
- The fuel burns little at first. Please wait 5 minutes until the flame has reached the optimal height.

## EXTINGUISH / SHUTDOWN

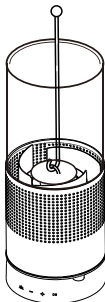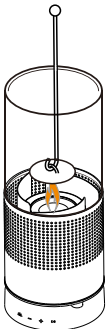

- Let the fireplace burn until the bioethanol in the burner is completely used and the flame goes out by itself.
- If you want to extinguish the flame beforehand, use the extinguisher tool by smothering the fire with the round surface of the extinguisher tool. Leave it there for about 10 seconds.
- Remove the extinguisher tool and check carefully and with sufficient safety distance that the fire has been extinguished properly.

## EMERGENCY EXTINGUISH

- In case of malfunction or accidental overturning of the device, extinguish the fire immediately with an extinguisher or try to cut off the air supply with a specially treated fire blanket.
- Do not try to blow out the fire.
- Never extinguish the fire with water.
- If you are unable to extinguish the fire, call the firefighters immediately.

## REFILL / RE-IGNITION



### NEVER ADD BIOETHANOL TO A HOT OR BURNING FIREPLACE.

- Make sure that the burner tank has cooled down completely.
- Never re-ignite remaining bioethanol.
- Lift the glass cylinder down from the base. Use the glove to avoid burning.
- Place the glass cylinder on a suitable heat-resistant surface.
- Use the narrow side of the extinguishing tool to lever out the burner tank. If there are still residues of bioethanol in the burner tank, dispose of it in a container, which can be closed.
- Check the safety tank for spilled fuel each time before refilling. If excess fuel is found in it, dispose of it in a container, which can be closed.
- Place the second burner into the safety tank of the base.
- Fill the burner tank with bioethanol up to the "Max" indicator. It is recommended to use a funnel for this purpose.
- Never fill the appliance to a level above the "MAX" Indicator.
- Any overspill shall be removed before lighting the appliance.
- Lignite the burner with a rod lighter, Do not leave it over the fireplace while igniting. Keep a sufficient safety distance.
- Put the glass cylinder on top of the base. Use gloves to avoid burning.
- The fuel does not burn much at first. Please wait 5 minutes until the flame has reached the optimum height.

## SAFETY INSTRUCTIONS

- not suitable for continuous operation;
- only use the intended fuel;
- only to be operated in rooms according to the manual;
- the operating instructions shall be read carefully before installation and use;
- beware of hot surfaces;
- do not put anything on top of the appliance.

## HAZARD WARNINGS



Don't touch it when there's flame



Don't add fuel when there is flame



Never put out a fire with water



Don't blow with your mouth



Do not smoke near fuel or flames



Keep away from children or pets



Don't cook food by fire



Do not use gas, oil, wine and other fuels

- Observe the local legislation and regulations for ethanol fireplaces.
- Make sure that suitable extinguishers are near the fireplace before using the product.
- Suitable extinguishers are foam extinguishers, CO<sub>2</sub> extinguishers, or specially treated fire blankets.
- Do not smoke while refilling or lighting the burner.
- Caution, risk of burns! The appliance and especially the outer surface like the glass will become hot during operation. Do not touch the surfaces of the fireplace.
- DO NOT ignite the appliance if it is in a hot state.
- The fireplace may only be operated on a stable surface made of non-flammable material.
- Do not use the fireplace if the burner tank is leaking.
- The appliance should never be moved while it's in use.
- Avoid skin contact with bioethanol.
- Keep pets and children at a safe distance.
- Do not put any flammable items on top of the appliance;
- Be careful with flammable clothing or hair.
- Use solid alcohol blocks.

- If the appliance is positioned too close to inflammable materials, they might catch fire. Keep flammable products and materials at a safe distance of at least 1.5 meters.
- Do not cover the fireplace while it is still hot.
- The use of the appliance in enclosed areas is prohibited.
- The burning process lowers the oxygen level in the room. Make sure to leave doors or windows open to ensure the necessary air exchange in the room.
- The operation of multiple devices is allowed only if additional ventilation of the room is provided.
- The product should only be used in a draft-free and wind-protected environment.
- Do not use the fireplace to cook food, heat water or grill.
- Persons who are under the influence of alcohol, drugs, or medicines or persons who are not in good physical or mental condition are not recommended to use the fireplace.
- In case of burn injuries, call your doctor immediately or drive to a hospital for treatment.
- Do not change the construction of the device.

## **MAINTENANCE**

- Disassemble the fireplace into its parts.
- The glass of the appliance might become dark during use.
- Clean the parts of the fireplace regularly with a soft, damp cloth under lukewarm water with a PH-neutral cleaning soap.
- Do not use chemical cleaning additives.
- Do not use materials that could scratch the surfaces.
- Do not clean the decorative table fireplace in the dishwasher.

## **STORAGE**

- Bioethanol must be stored in glass or special plastic packaging and reliably closed.
- When storing the remaining bioethanol, pay special attention to tightly closing the lid to avoid volatilization.
- It is strictly forbidden to store bioethanol in a container that can't be closed.
- Do not store bioethanol near the fireplace or other heat sources.
- Store bioethanol only in a fire-safe, cool, and dry area e.g. cellar.

- Check the local regulations for the storage quantity of bioethanol.
- Check local regulations on how to safely store bioethanol.
- Store the product in a clean and dry place.
- Store the fireplace protected from dirt, dust, and moisture.

## **DISPOSAL**

- Never dispose of bioethanol in the environment.
- Do not empty residues of bioethanol into the sewage system.
- Dispose of bioethanol by local regulations for hazardous substances.
- Dispose of the completely emptied product by the local regulations.



Conform with standard: EN 16647:2015-Fireplaces for liquid fuels  
- Decorative appliances producing a flame using alcohol-based or gelatinous fuel - Use in private households.

