

INSTALLATION INSTRUCTIONS

PLEASE READ CAREFULLY AND SAVE THESE INSTRUCTIONS, AS YOU MAY NEED THEM AT A LATER DATE.
CAUTION - Turn off the main power at the circuit breaker before installing the fixture, in order to prevent possible shock.

Remove the fixture and the mounting package from the box and make sure that no parts are missing by referencing the illustrations on the installation instructions.

WALL FIXTURE INSTALLATION INSTRUCTIONS

(Fig. 4 & 5)

1. Place the #8-32 HEX NUT(3) onto the #8-32 FIXTURE MOUNTING SCREW(4). And attach the FIXTURE MOUNTING SCREW(4) to the MOUNTING RACKET(2), or universal mounting plate (whichever is provided). Do not tighten the HEX NUTS(3) at this time.
2. Pull the power supply wires out from the OUTLET BOX (1) and mount the MOUNTING BRACKET (2) or the universal mounting plate to the OUTLET BOX(1), using MOUNTING SCREWS(10).
3. Attach the power supply wire to the fixture lead wire by connecting BLACK to BLACK(6), and WHITE to WHITE(5). Connect the FIXTURE GROUND WIRE (8) to the SUPPLY GROUND WIRE(7) using a WIRE NUT(9).
4. Place the CANOPY(11) on the fixture over the OUTLET BOX(1) and onto the fixture mounting screws (or NIPPLE) and adjust the #8-32 fixture mounting screws (or NIPPLE) until they protrude out from the CANOPY(11) 1/4". Remove the CANOPY(11) and secure the position of the fixture mounting screw (or NIPPLE) by tightening the HEX NUT(S)(3) against the MOUNTING BRACKET(2). Place the CANOPY(11) back onto the fixture mounting screws, (or NIPPLE), and secure into place using the DECORATIVE NUT(12) provided.
5. Slide the CAGE / GLASS DIFFUSER ASSEMBLY (not shown) over the SOCKET (not shown). Secure the CAGE / GLASS DIFFUSER ASSEMBLY (not shown) using the provided DECORATIVE SCREWS/SOCKET RING (not shown).
6. Screw in light bulbs that do not exceed the maximum wattage specified on the fixture's wattage rating label, into the socket(s) on the fixture.

INSTALLATION COMPLETED

WALL FIXTURE INSTALLATION INSTRUCTIONS

(Fig. 6)

1. Thread the 1/8" IPS HEX NUT (4) onto the NIPPLE (5), and screw the NIPPLE (5) into the MOUNTING BRACKET (2), without tightening the 1/8" IPS HEX NUT (4).
2. Pull the power supply wires out from the OUTLET BOX (1), and mount the MOUNTING BRACKET (2) to the OUTLET BOX (1), using #8-32 IPS MOUNTING SCREWS (3).
3. Attach the BLACK SUPPLY WIRE (10) to the BLACK FIXTURE WIRE (11) by using the WIRE NUT (9). In the same manner, attach the WHITE SUPPLY WIRE (12) to the WHITE FIXTURE WIRE (13). Connect the FIXTURE GROUND WIRE (7) to the SUPPLY GROUND WIRE (6) using a WIRE NUT (9) (not included). Place wiring and connections inside the OUTLET BOX (1).
4. Place the BACK PLATE (14) of the fixture over the OUTLET BOX (1) so that the NIPPLE (5), protrudes out through the mounting hole located in the center of the BACK PLATE (14) 1/4". Remove the BACK PLATE (14) and secure the position of the NIPPLE (5) by tightening the 1/8" IPS HEX NUT (4) against the MOUNTING BRACKET (2). Place the BACK PLATE (14) back onto the NIPPLE (5), and secure into place using the DECORATIVE NUT (15) provided.
5. Slide the CAGE / GLASS DIFFUSER ASSEMBLY (not shown) over the SOCKET (not shown). Secure the CAGE / GLASS DIFFUSER ASSEMBLY (not shown) using the provided SOCKET RING. (not shown).
6. Screw a light bulb into the SOCKET (not shown). Make sure it does not exceed the maximum wattage specified on the fixture label.

INSTALLATION IS NOW COMPLETED

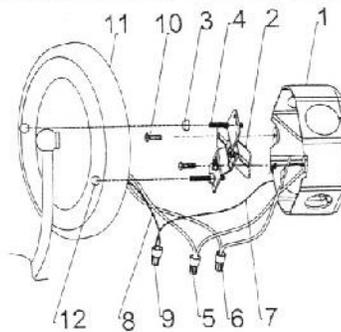


Fig.4

- | | |
|-----------------------------------|------------------------|
| 1. OUTLET BOX | 7. SUPPLY GROUND WIRE |
| 2. MOUNTING BRACKET | 8. FIXTURE GROUND WIRE |
| 3. #8/32 HEX NUT | 9. WIRE NUT |
| 4. FIXTURE MOUNTING SCREW | 10. MOUNTING SCREW |
| 5. WHITE TO WHITE WIRE CONNECTION | 11. CANOPY |
| 6. BLACK TO BLACK WIRE CONNECTION | 12. DECORATIVE NUT |

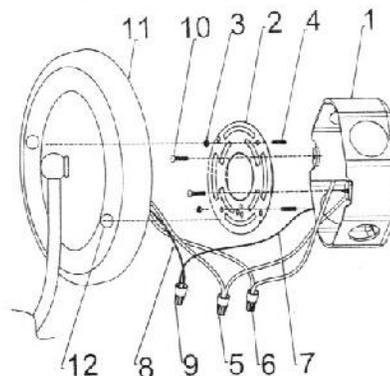


Fig.5

- | | |
|-----------------------------------|------------------------|
| 1. OUTLET BOX | 7. SUPPLY GROUND WIRE |
| 2. MOUNTING BRACKET | 8. FIXTURE GROUND WIRE |
| 3. #8/32 HEX NUT | 9. WIRE NUT |
| 4. FIXTURE MOUNTING SCREW | 10. MOUNTING SCREW |
| 5. WHITE TO WHITE WIRE CONNECTION | 11. CANOPY |
| 6. BLACK TO BLACK WIRE CONNECTION | 12. DECORATIVE NUT |

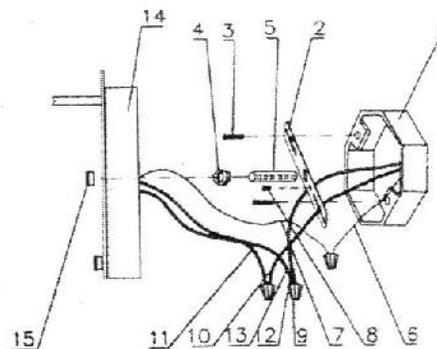


Fig.6

- | | |
|-----------------------------|------------------------|
| 1. OUTLET BOX | 9. WIRE NUT |
| 2. MOUNTING BRACKET | 10. BLACK SUPPLY WIRE |
| 3. #8-32 IPS MOUNTING SCREW | 11. BLACK FIXTURE WIRE |
| 4. 1/8 IPS HEX NUT | 12. WHITE SUPPLY WIRE |
| 5. NIPPLE | 13. WHITE FIXTURE WIRE |
| 6. SUPPLY GROUND WIRE | 14. BACK PLATE |
| 7. FIXTURE GROUND WIRE | 15. DECORATIVE NUT |
| 8. GROUND SCREW | |