


OWNER MANUAL

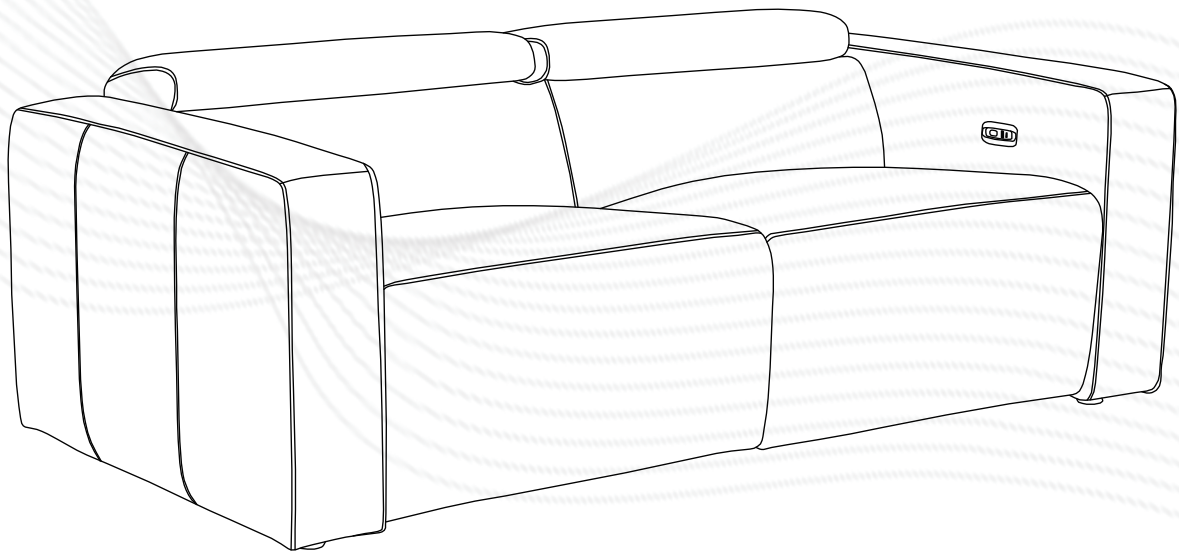

NOTICE

[If you have any questions, please contact us via internal messaging.]

Firmly secure all parts before use.

Reconfirm that all parts are securely fastened every 90 days.

Do not use or store this product near open flames or flammable/combustible chemicals.

Do not expose this product to water.

This chair is designed for single-person use only.

Do not stand on the chair.

Keep children and pets away during assembly.

Do not sit on the armrests or edges of the seat cushion.

Do not use this product in any manner inconsistent with the manufacturer's instructions, as this may void the warranty.

WARNING

This product contains electrical components. Avoid exposure to high temperatures or humidity.

Always disconnect the power supply when the product is not in use.

Use only a properly grounded electrical outlet.

Do not use extension adapters or incompatible power adapters.

Do not modify the power plug.

Do not allow unattended children or individuals unable to operate the chair safely to use this product.

Do not stand on any part of the chair.

Do not use this product outdoors.

Do not use this product if the massage mechanism is exposed or damaged.

If you experience discomfort, dizziness, or illness while using this chair, discontinue use immediately and consult a physician.

Do not use this product simultaneously with other medical or therapeutic devices, such as electric blankets or massage devices.

Always operate this chair on a stable, flat surface.

Do not operate the massage or heating functions continuously for extended periods.

Do not pull the power cord to unplug the product. Turn off all functions before disconnecting power.

Consult your healthcare provider before use if you have any medical conditions.


Do not use this product if you are under the influence of alcohol or if you have a pacemaker, heart condition, skin injury, pregnancy, diabetes, osteoporosis, chronic pain, fever, sensory disorders, or any other condition that may affect safe operation.

CHAIR SPECIFICATIONS

Item	Specification
Net Weight (N.W.)	109.46 lbs
Gross Weight (G.W.)	120.15 lbs
Power Input	100–240VAC ~ 50/60Hz
Power Output	29V DC 2000mA
Rated Voltage	DC 29.0V
Rated Power	58W
Maximum Power	174W
Rated Current	2.0A

Thank you for purchasing our product. Please read this manual carefully before assembly and use. Assemble all parts in the correct order and retain these instructions for future reference. Please confirm that all parts listed in the package are included before assembly.


COMPONENTS

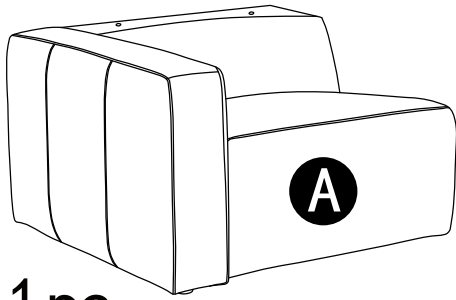


1 pc




1 pc

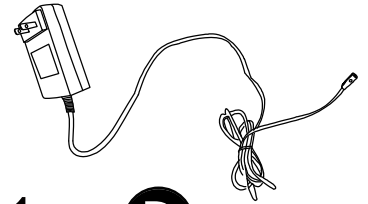


1 pc

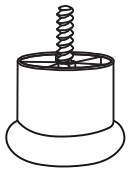

4pc



4pc




1 pc



1 pc




1 pc

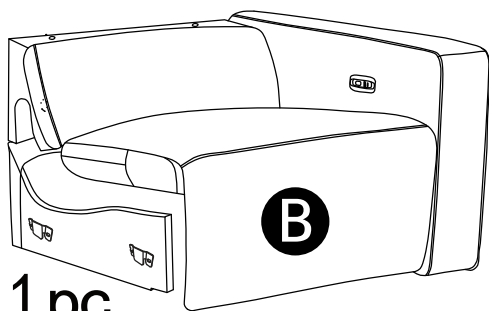


1 pc




1 pc

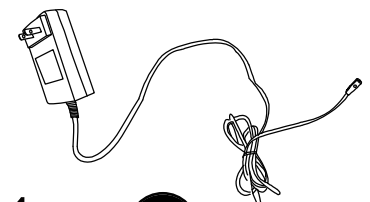


1 pc

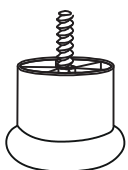

pc



4pc



1 pc




1 pc

ASSEMBLY INSTRUCTIONS


STEP 1

Cut the securing straps and remove the power supply box from the package.

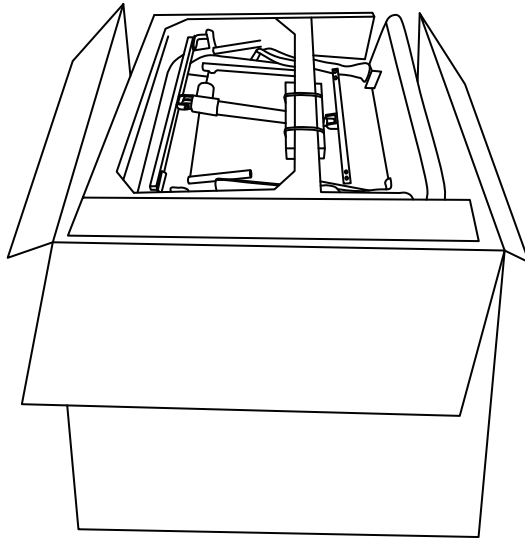

STEP 2


Install footrest part G using screws H as shown in the illustration.

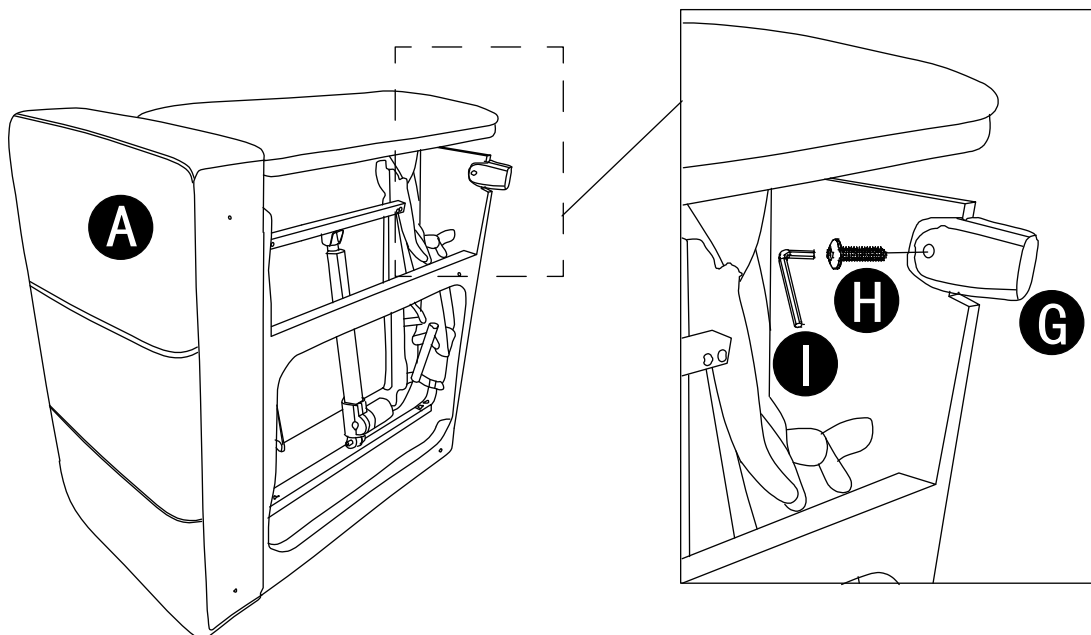

ASSEMBLY INSTRUCTIONS


STEP 3

Install plastic feet E and large flower pieces F.

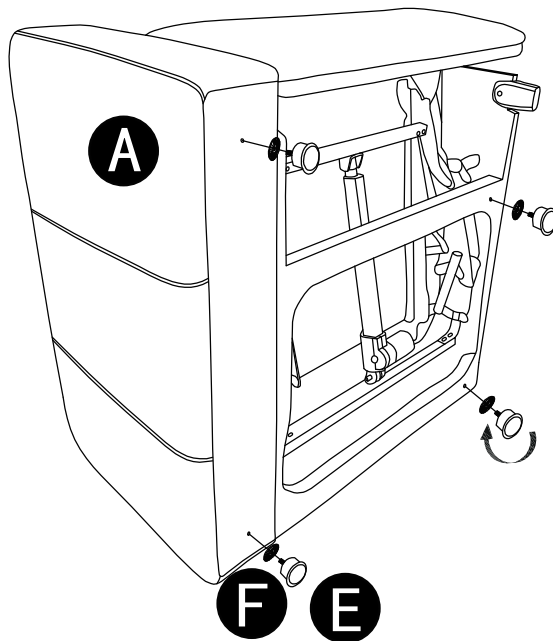

STEP 4


Install step foot G with screws H as shown.

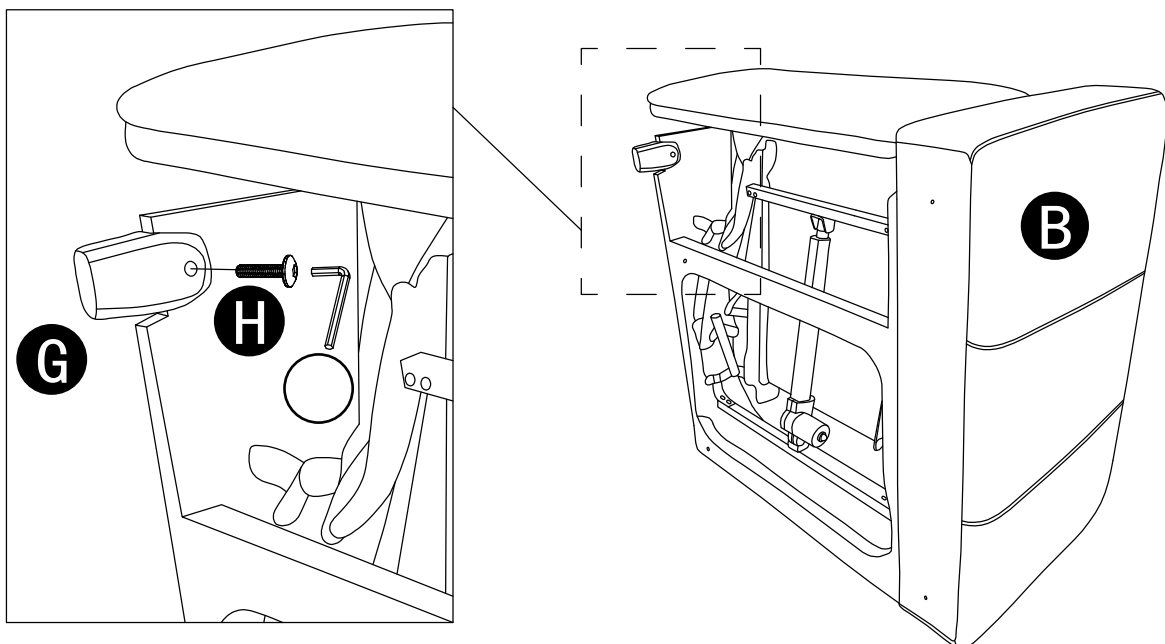

ASSEMBLY INSTRUCTIONS


STEP 5

Install plastic feet E and large flower pieces F.

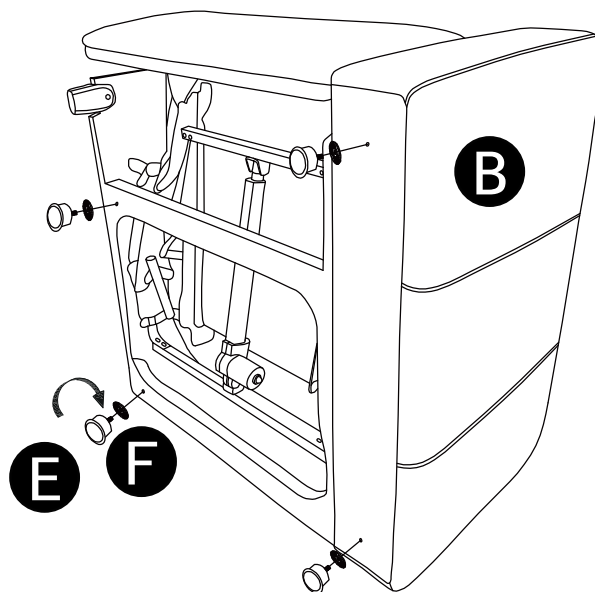

STEP 6


Assemble the two sides of the sofa together as shown.

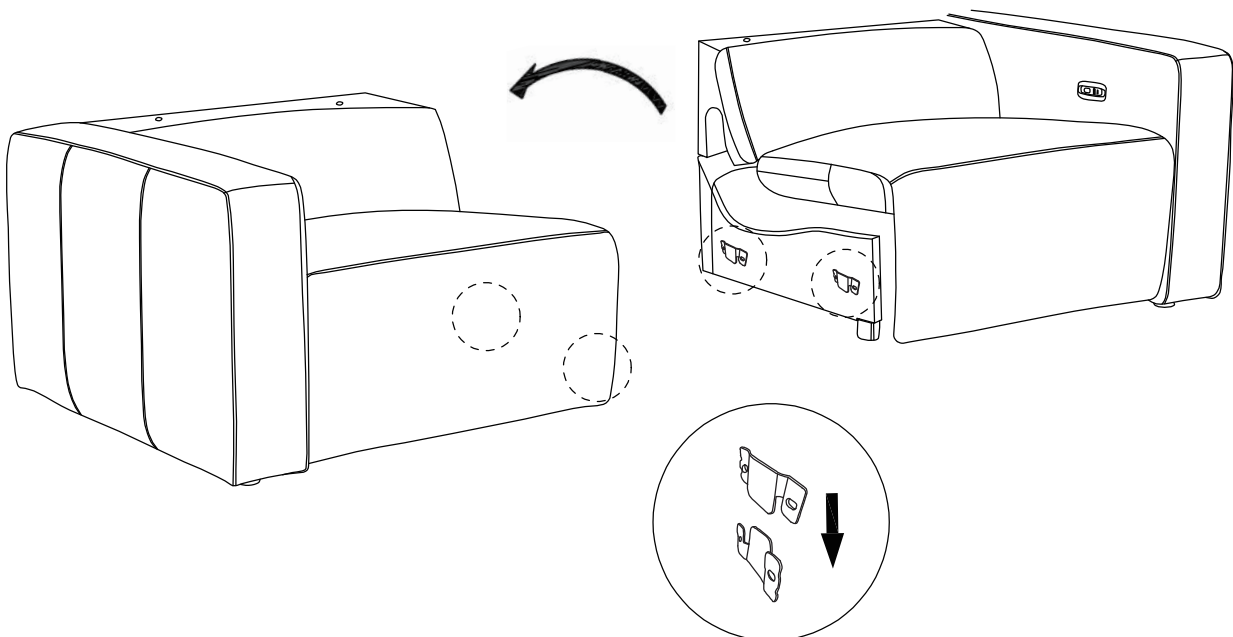

ASSEMBLY INSTRUCTIONS


STEP 7

Install headrest C on backrest.

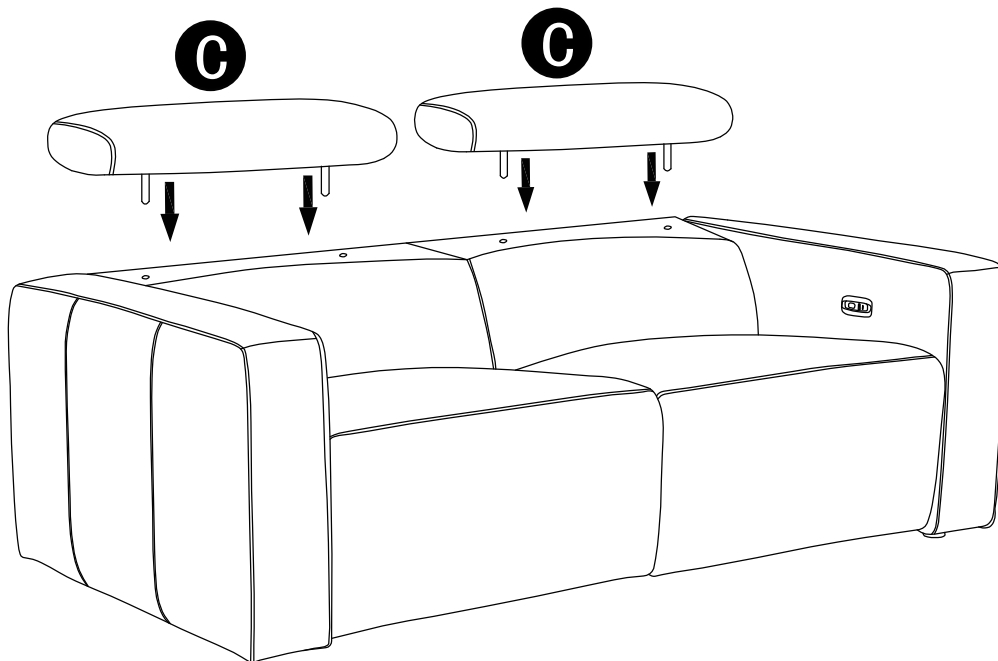

STEP 8


Connect distributor D as shown .

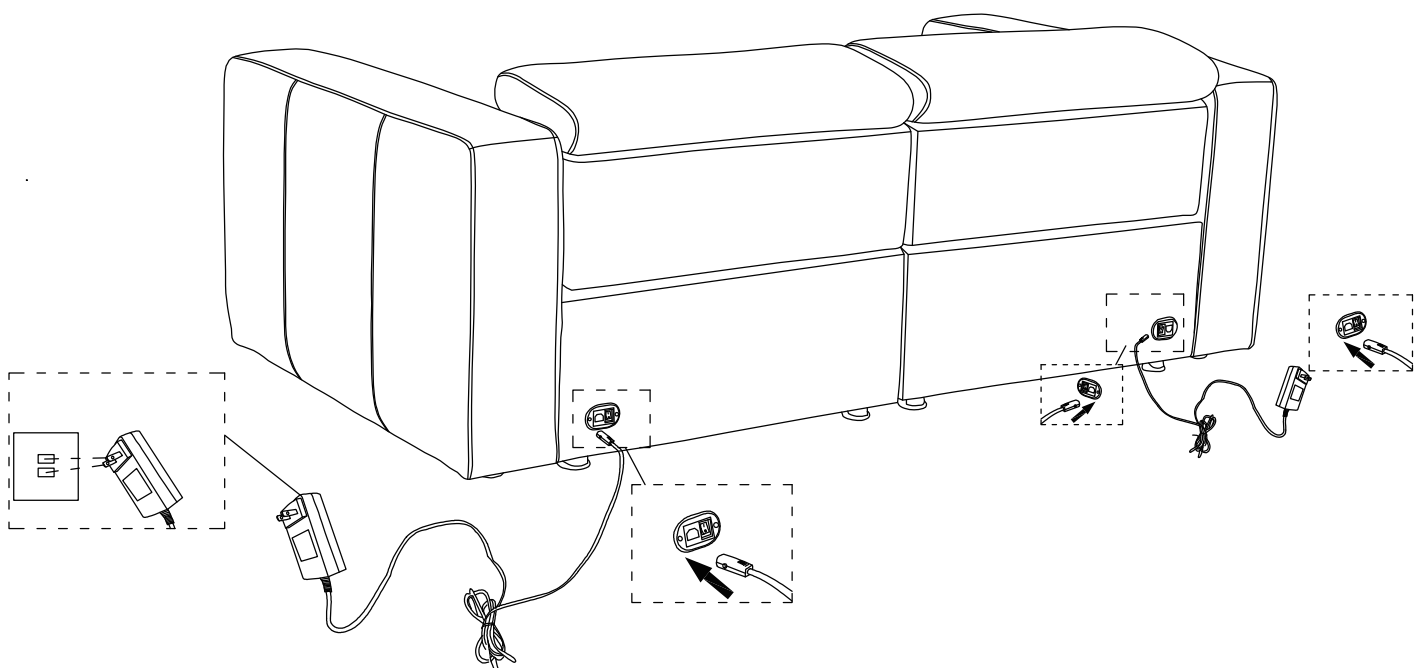

ASSEMBLY INSTRUCTIONS




STEP 9

The diagram indicates the switch for extending the chair backrest and footrest.

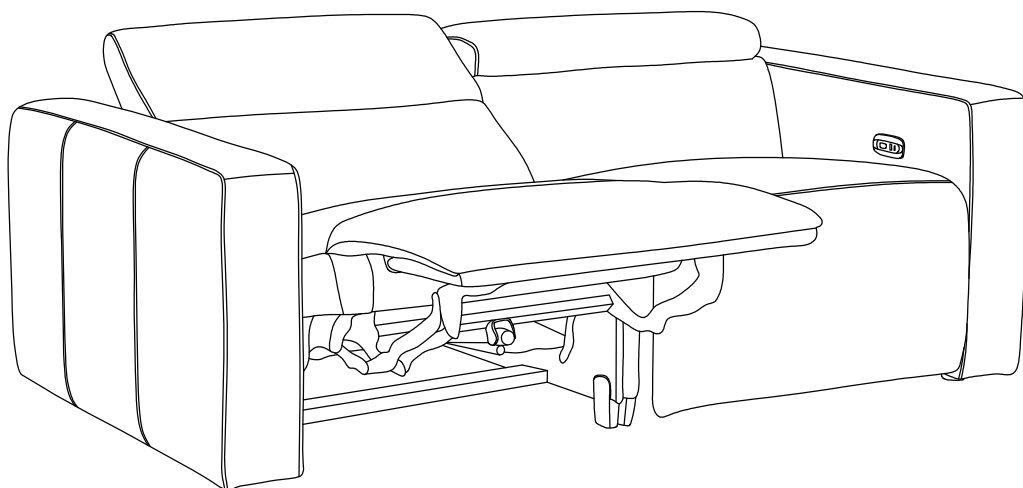

STEP 10

This illustration indicates the switch for opening the headrest.

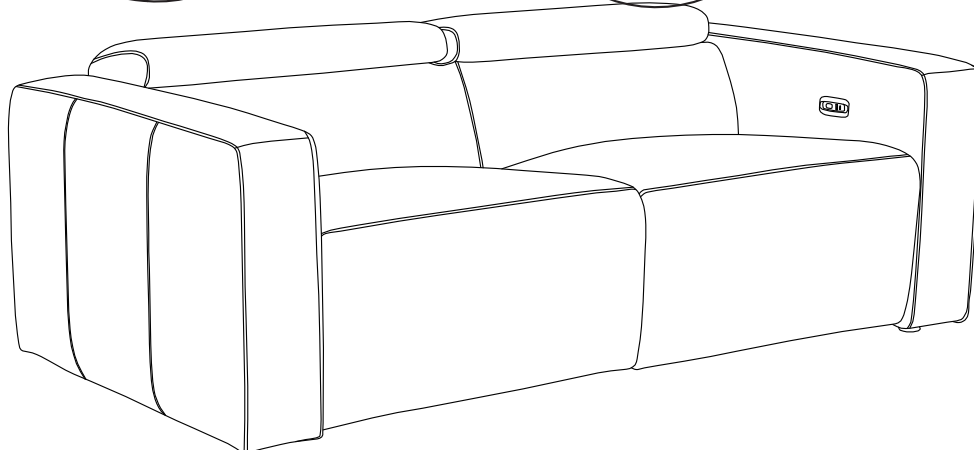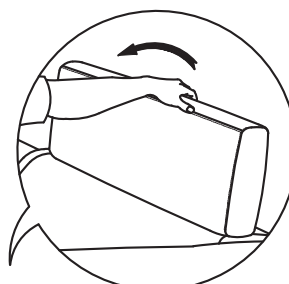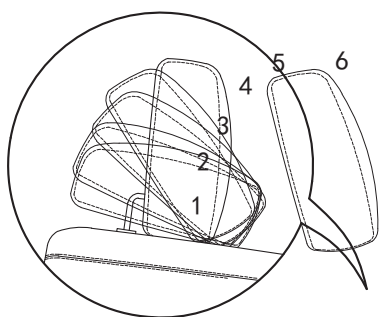



Chat Support



Product Consult



Orders FAQ



Product Assembly



Returns & Refunds

PRODUCT WARRANTY DETAILS

1. If you need to return and the reason for return is a result of an error by the Seller, please contact the after-sales team. Please include a brief description of the problem and photos of the damaged product in your email.
2. Please Note: If the customer does not contact the after-sales team to provide a return label, the customer purchases the return label by themselves, which may incur expensive return shipping charges.
3. If the product is damaged by the customer, we have reason to refuse to provide a prepaid return label, and the customer will need to pay for the return shipping.
4. Boxes for return shipping will not be provided by the seller and is the customer's responsibility to either use the original shipping boxes, or purchase new boxes if no boxes.
5. After all returned items arrive at Return Center, please contact the After-sales team and we will fully refund back to the original payment method.
6. If you have any ideas and questions, please feel free to contact us, we will provide you with a satisfactory solution.



Note

Manufacturer and seller expressly disclaim any liability for personal injury, property damage or loss, whether direct, indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, unapproved modification, or neglect of this product.

