


Assembly Instructions

READ THIS MANUAL

Do not use this product until you read and understand the instructions in this manual.

KEEP THIS MANUAL FOR FUTURE REFERENCE.

TIPS: Some accessories are placed under the seat base.

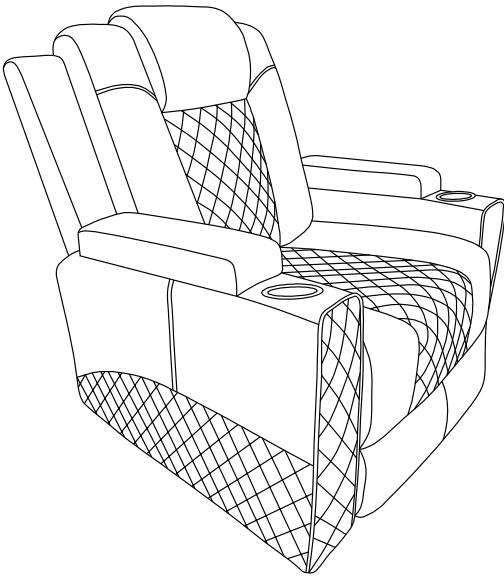

This manual is intended for installation and use. The pattern should be subject to the product you receive.

If you have any inquiries regarding the item, please reach out to us using the contact information provided on the left. We strive to resolve your concerns within 24 hours (excluding weekends and holidays).

WARNING:

This unit is intended for relaxation purposes only and should not be used in an attempt to treat any medical ailment.

Please note that should you have any medical condition, be under a health professional or physicians care. Or should you have a medical device fitted (eg. Pacemaker etc.), you must consult a qualified medical practitioner before using this massage system.

- Do not massage any part of the body that is painful, swollen, inflamed or covered with skin irritation, consult your medical practitioner before use.
- The massage system should not be used during pregnancy.
- Do not allow children to play on the chair or leave them unsupervised in the same room with the chair.
- Never operate this appliance if it has a damaged cord or plug. Contact your supplying retailer.
- Do not interfere with any part of the massage system or attempt to dismantle or repair the unit in any way.


DANGER

- Disconnect the electrical plug from the wall outlet before cleaning, moving, servicing or when it's not in use for an extended period of time.
- Do not use this product if it is wet, in water, around water or any liquid.
- To prevent suffocation, keep plastic bags away from children.
- Plug directly into a wall outlet. Do not use an extension cord, adapter or surge protector.


PARTS AND ACCESSORIES

*** Note: Accessories are placed under the the seat base.**

Please take out the backrest ear part, assembly box and other accessories under the chair base to ensure proper installation.

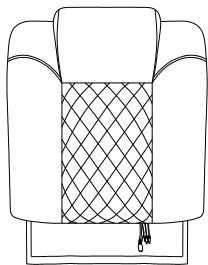


A Backrest *1pc

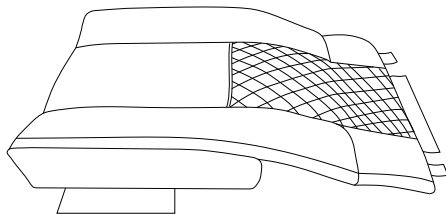


B Seat Cover *1pc


The Backrest & Seat Cover you received has been vacuum-packed. Open the plastic bag, take out the backrest / seat cover, let them breathe to the normal state.

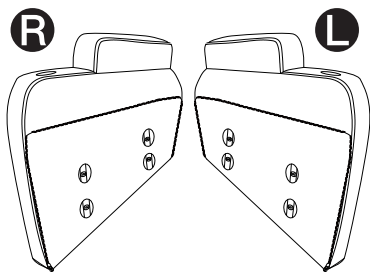

C Foldable Armrest R&L *2pcs

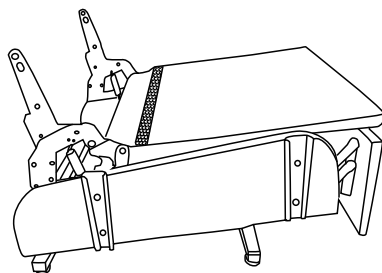


D Seat Base *1pc

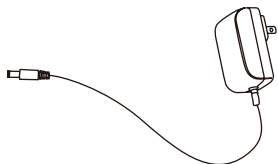


E Power Cord *1pc



F Screw M6*10 *8pcs



G Remote Control * 1pc



H Hand Control * 1pc



I Metal Bolt * 4pcs



J Cup Holder * 2pcs



K Power Transformer * 1pc




M Transformer Power Cord * 1pc



N Screw M6*20 * 8pcs



O M6 Wrench * 1pc

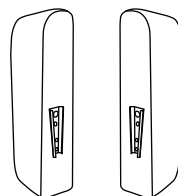


P Backrest Ear Part* 2pcs

♦ Please check and ensure all the things are in the package. Please contact us if something is not included. We will reply within 24 hours and try our best to solve it.

ASSEMBLY INSTRUCTIONS

CAUTION: At least two adults are required to safely assemble this recliner chair.



Other lifting attempts may risk back safety due to large and heavy part(s).


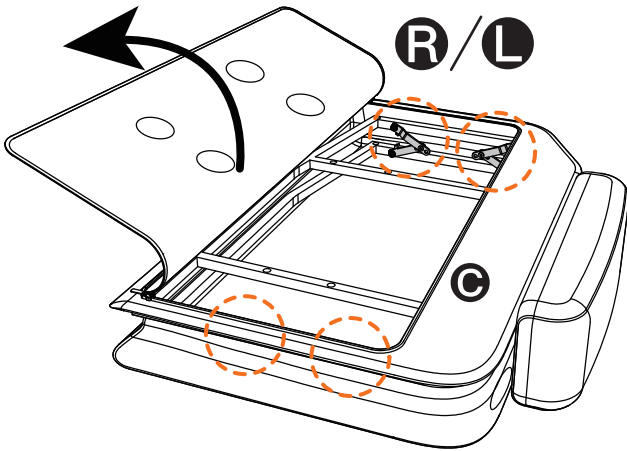




1. Carefully unpack and place parts on a clean flat surface.

2. Unzip the foldable armrests.

3. Expand the iron frame of the foldable armrest, fix the iron frame with the screw **F**.

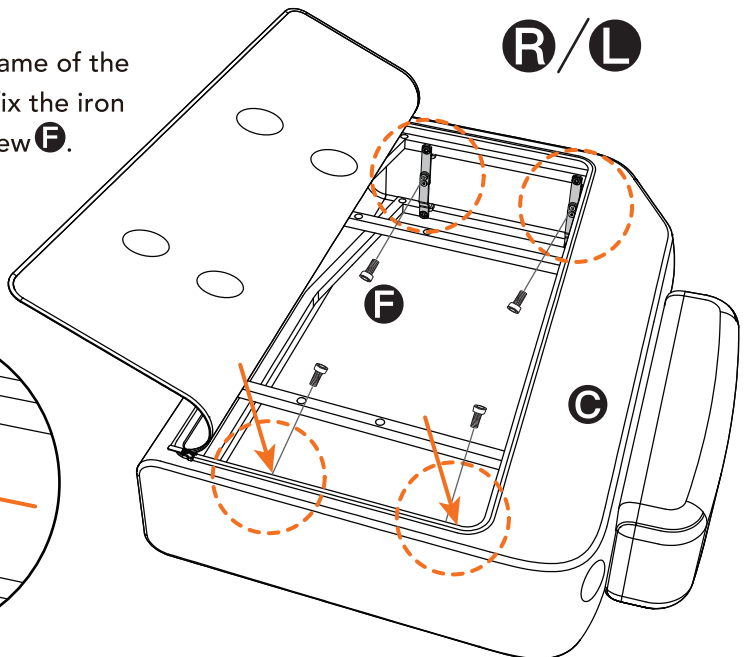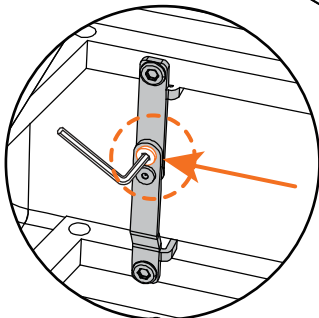

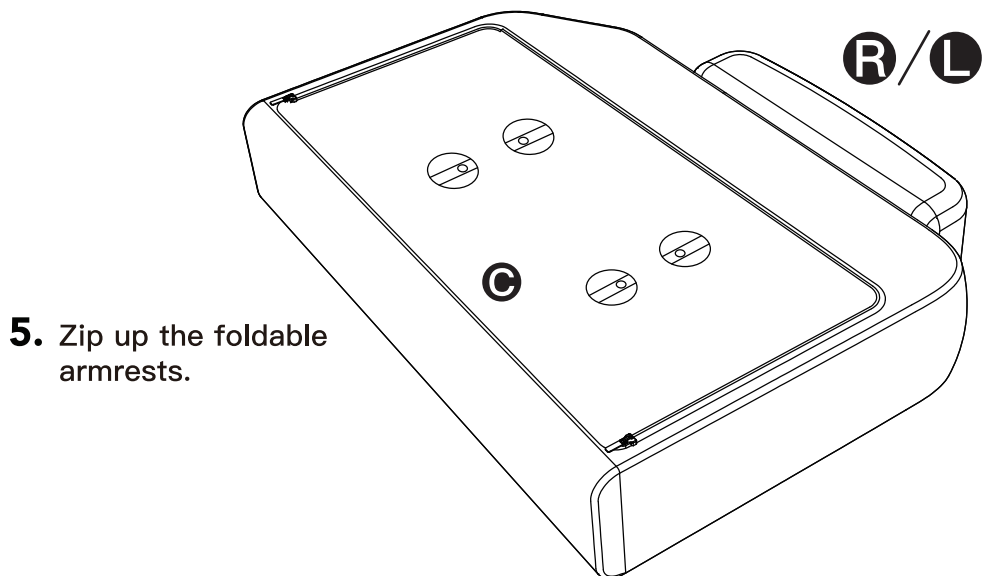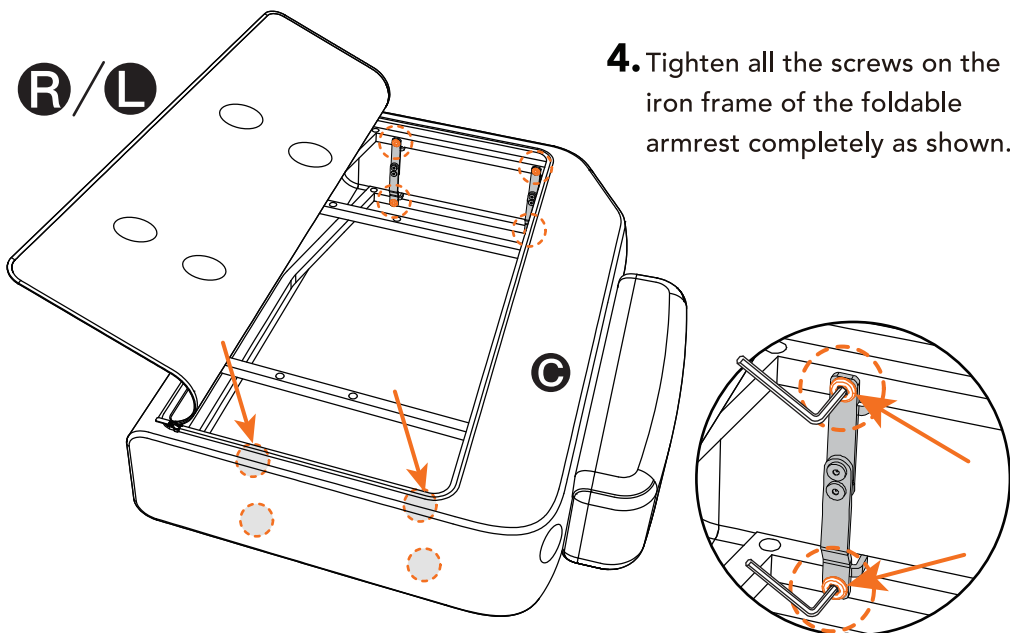


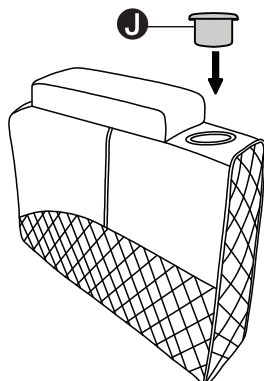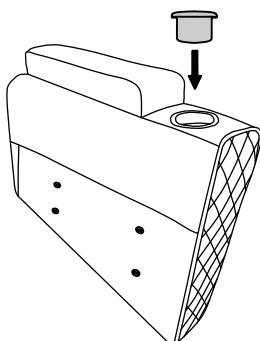R**L**


6. Install the cup holders into the armrests on both sides.

7. Attach the metal bolts **I** to the armrest L & R with screws M6x20 **N**.

*NOTE: Place the wide side of the metal bolts upward for installation. If the position is incorrect, these parts cannot be properly snapped into the seat's metal bolts.

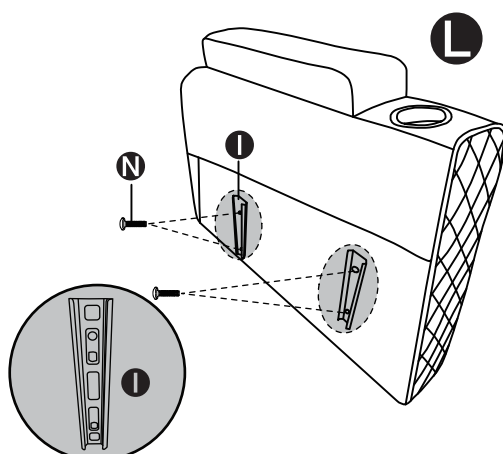


Wide side up

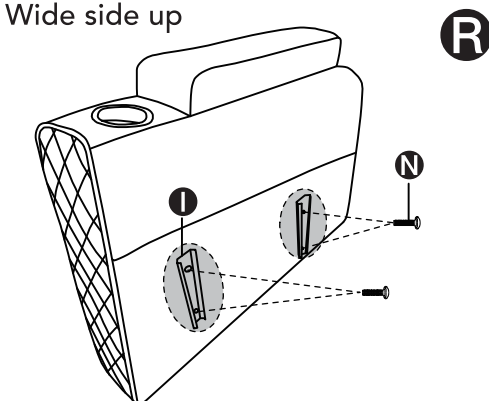


VELCRO PRESENTATION

- 8.** The Velcro is presented in red and marked with numbers B1, B2 and D1, D2 etc.


Note: B1 should be aligned with D1 in installation, B2 aligned with D2, and so on.

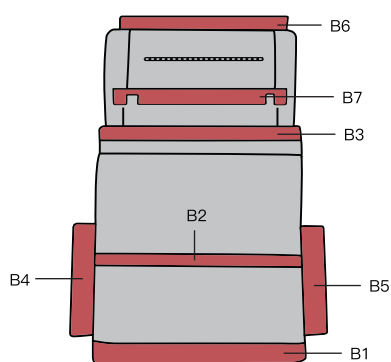


B Seat cover bottom

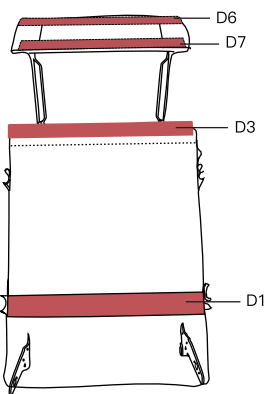


D Seat base

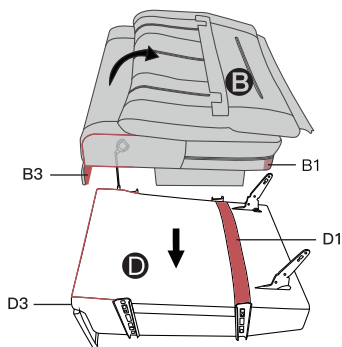

- 9.** Flip the foot of seat cover up, align the red-marked line of **B** and **D** to put **B** on **D**. Align B3 with D3 and connect them, next align B1 with D1 and connect them, too.

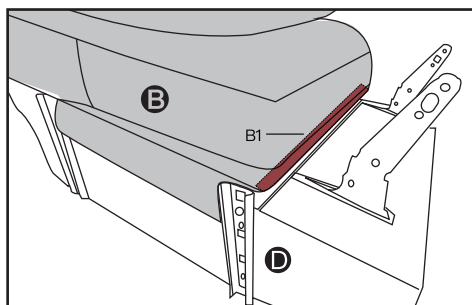


Put **B** on **D**.

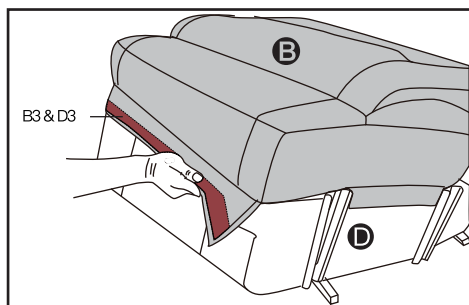

Flip down the Velcro B3 at the middle of **B** and connect it with D3 on **D**.



- 10.** Align B4 and D4 and connect them. Repeat the step with B5 and D5, B6 and D6.

Note: the two sides of **B** and **D** should be symmetrical.

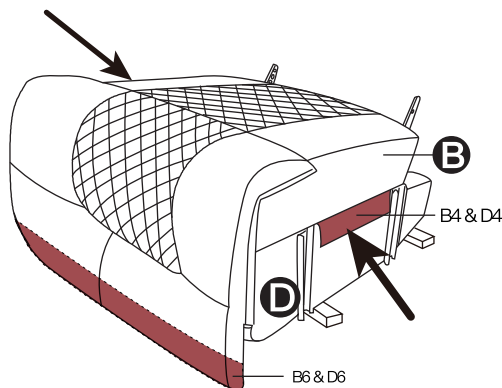


- 11.** After connecting the power cords, plug the hand control **H** in the power source.



Press the Recline & Legrest button of the hand control once to lift the footrest.

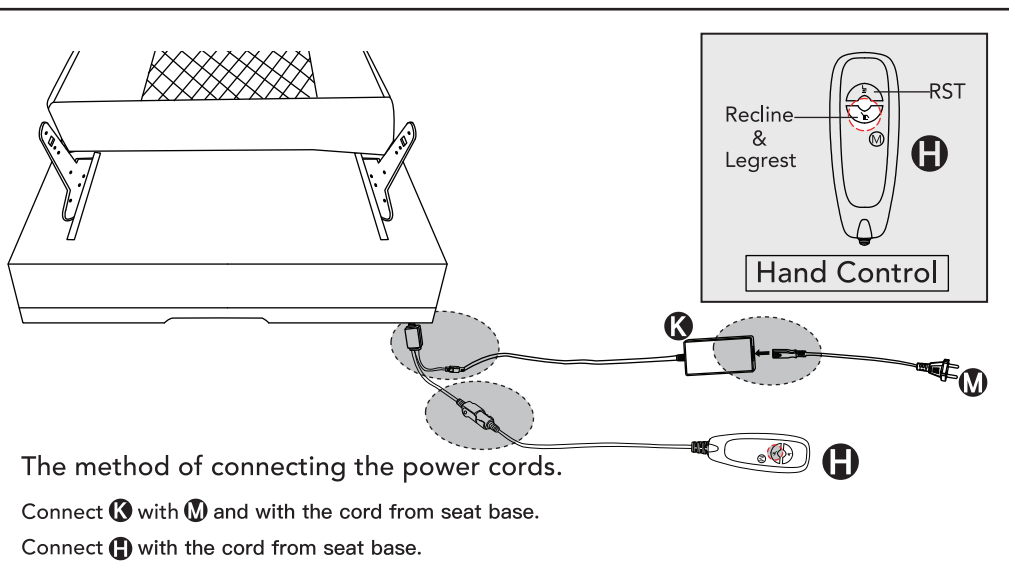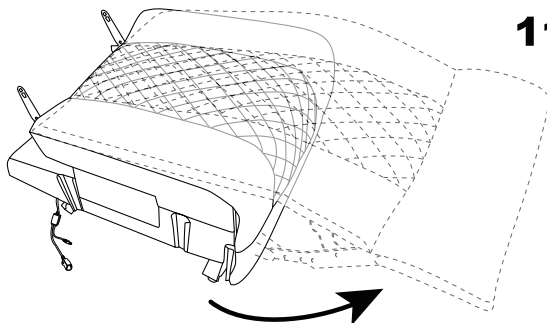


12. Align B7 and D7 and connect them. Press once RST button of the hand control to restore the chair state.

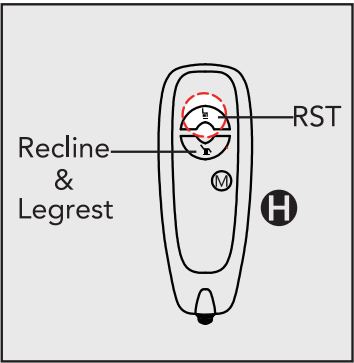




Hand Control

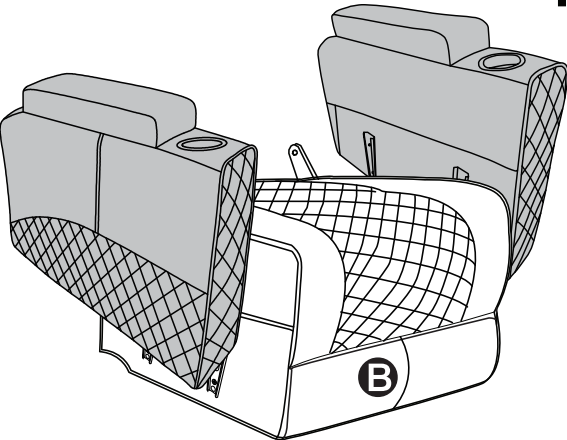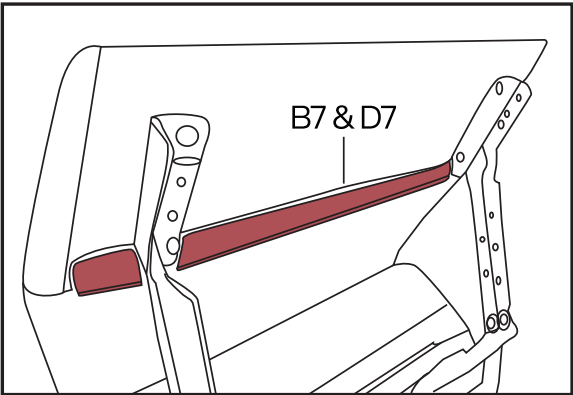


13. Insert the metal bolts of the armrests to the seat as shown below. Ensure that they are correctly installed in place.

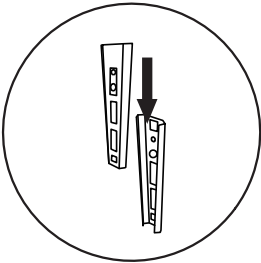


- 14.** Insert the metal bolts of the armrests to the seat as shown below. Ensure that they are correctly installed in place.

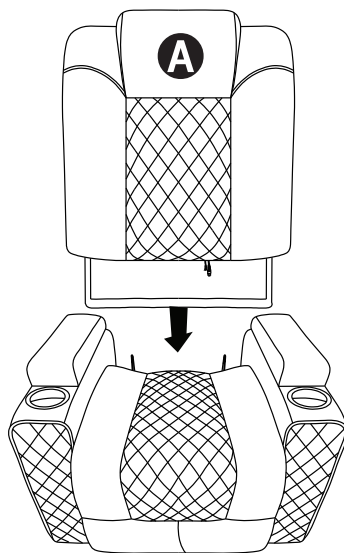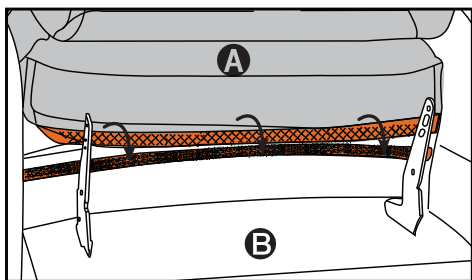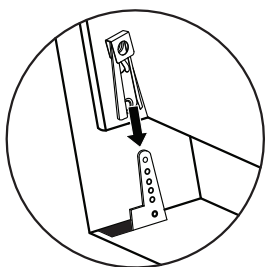


***Tips:** First stick the Velcro between the backrest and the seat, and then insert the backrest into the seat.

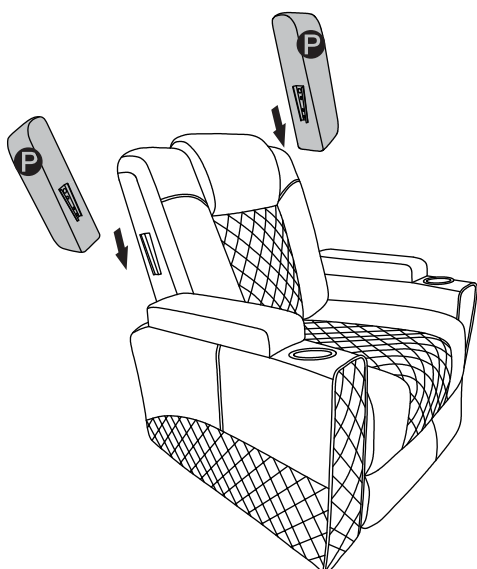


- 15.** Insert metal bolts of parts **P** (both) to the backrest. Ensure they are installed correctly.

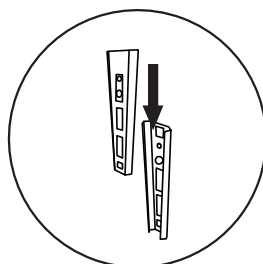

- 16.** Unstick the Velcro of the seat base **B** and the backrest **A**.
Connect the cables.

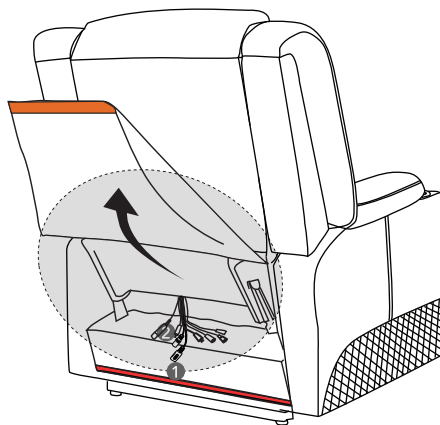


The method of connecting the cables.

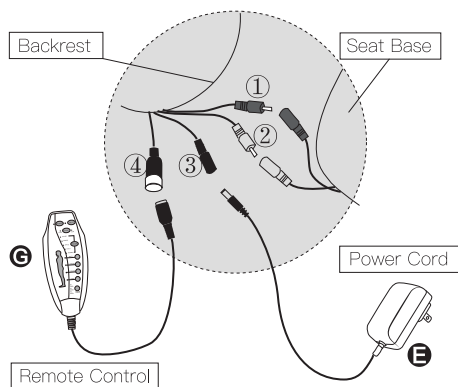


Connect ①② with wires of same color from the seat base.

Connect ③ with Power cord **E**
and ④ with Remote control **G**

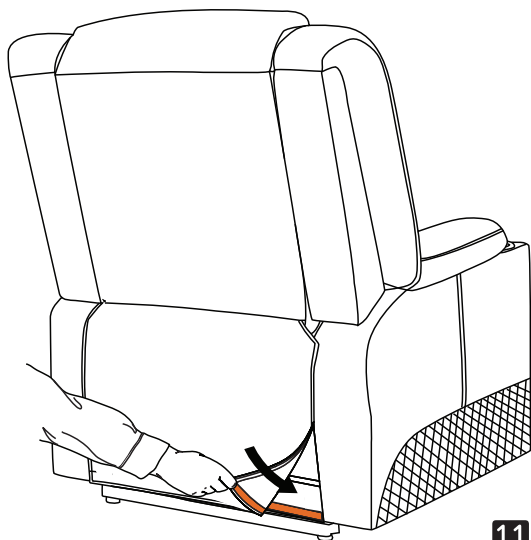


- 17.** Cover the back fabric.
Assembly is complete.

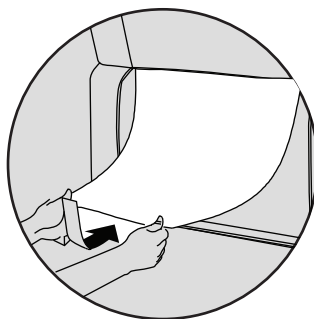

RECLINE & MASSAGE OPERATING

A. Recline & Legrest

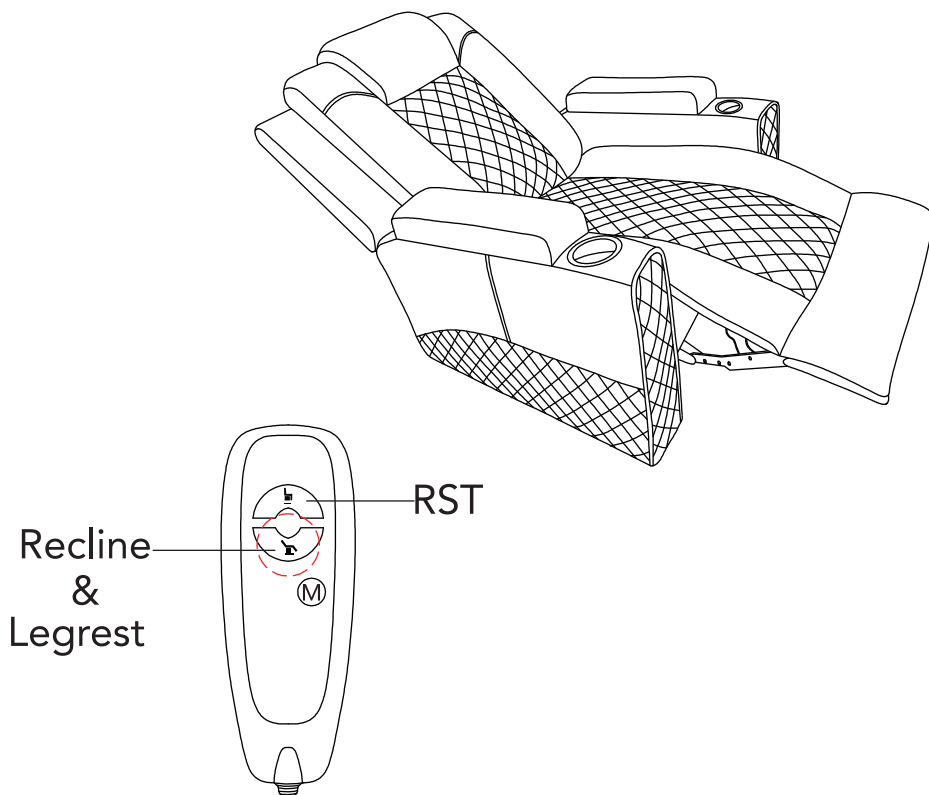

1. Power on.

Plug the power cord into a power source.

2. Recline the backrest and raise the legrest.


Press once the Recline & Legrest button to recline and raise the legrest to the desired position.

3. Press the RST button once to restore the chair state.

4. Note: Press the Recline & Legrest or RST button once. Do not hold it all the time to avoid damage to the recliner motor.



B. Massage operation

INTENSITY: Change intensity (HIGH or LOW) during all modes.

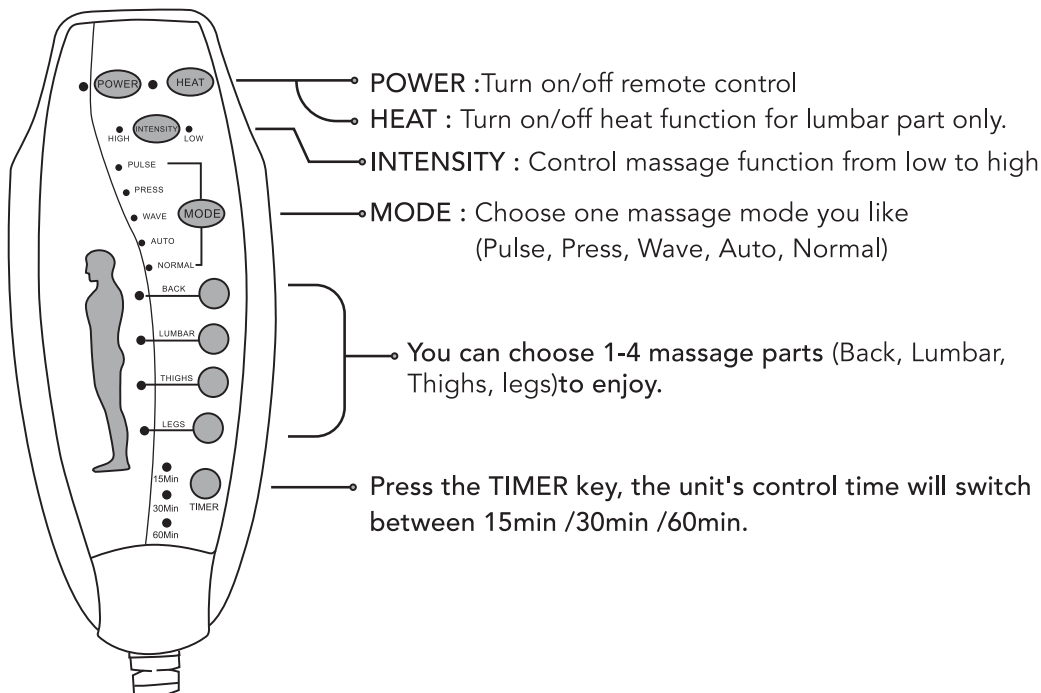

We recommend that the unit be used only for a few minutes initially, to allow your body to get used to the massage sensation. Gradually increase the length of time you use the massage function, over the first few periods of use. Should you experience any adverse reactions, stop using immediately and consult your medical practitioner.

C. Ambient Light

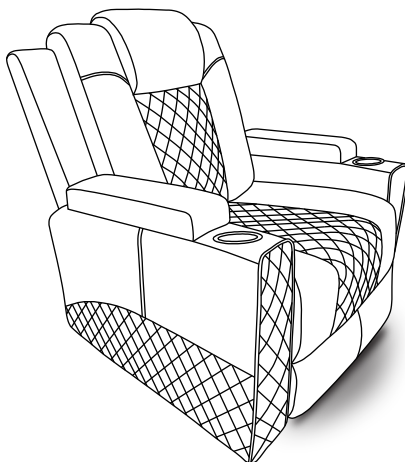
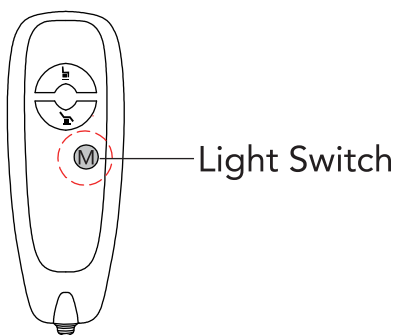


1. Press the **M** light switch once to turn on the ambient light (blue) under the footrest.
2. Press the **M** light switch once again to turn off the ambient light.

Note: DO NOT place objects under the power recliner, the footrest when the power recliner is in the fully reclined position. Make sure the area is clear of obstructions, including pets and kids during operation.


USAGE

Leave
enough space
for reclining back

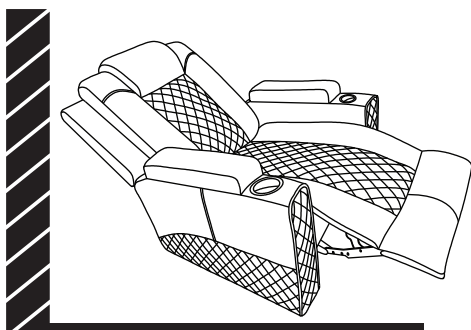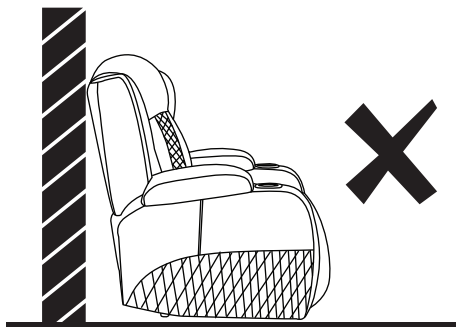

The recliner should be placed
18" away from the wall, and
the reclining function can be
used normally.


PROPER USAGE

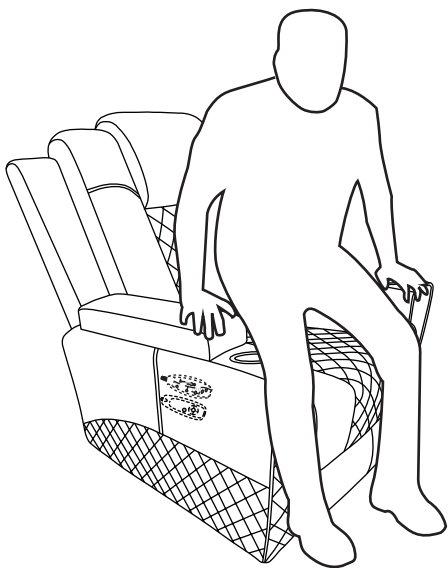


Steps to safely stand up from your Recliner Chair

1. Store the remote control **G** and the hand control **H** safely in the seat's side pocket
2. Plant feet firmly on the ground
3. Evenly distribute weight on both arms of the chair
4. Slowly stand up from **closed** position

* Remember to store remote control safely in the seat's side pocket when it is not in use.

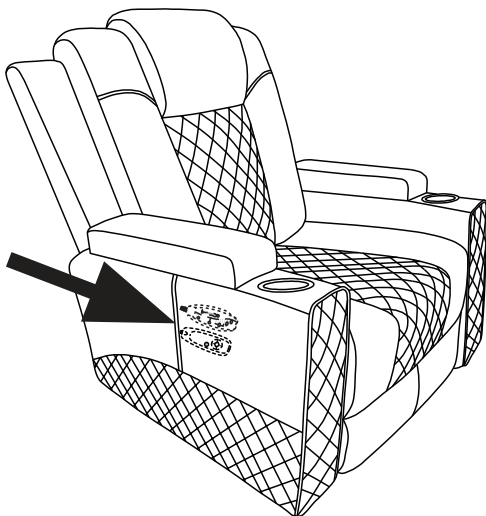

As all action products contain moving parts, handle all items with care.

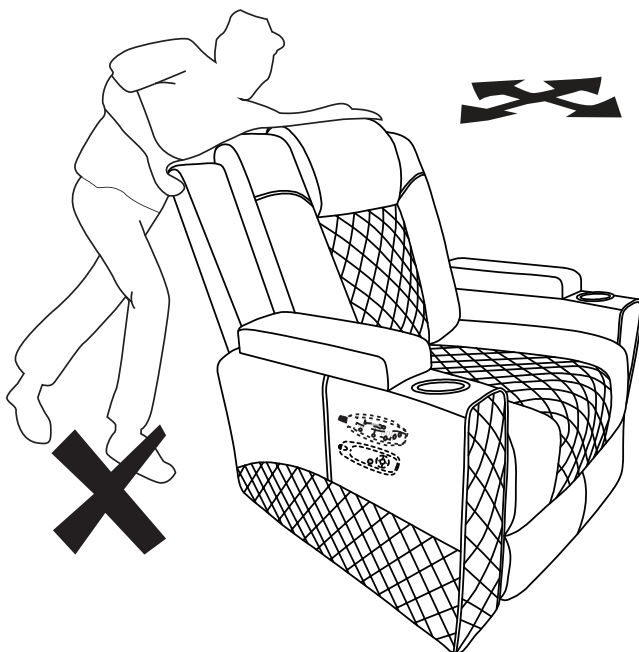


* Only move the recliner when it is in the “initial position”.
Never attempt to move the recliner when it is in any reclining position.

Always use the armrests to move the recliner.


– DO NOT use the backrest or backrest ear parts to move the recliner.

IMPROPER USAGE

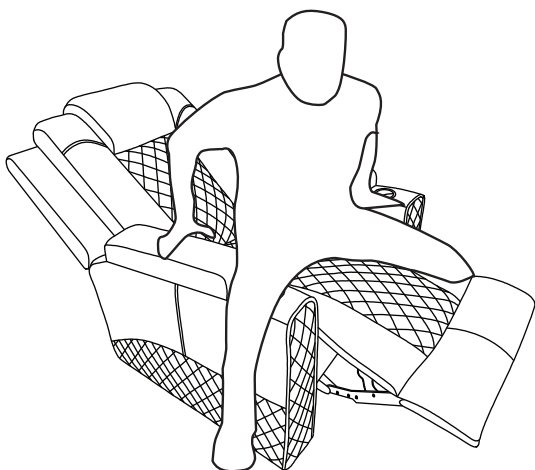

DO NOT stand up when the footrest is in the upright position.

DO NOT stand up from your recliner chair with uneven weight.

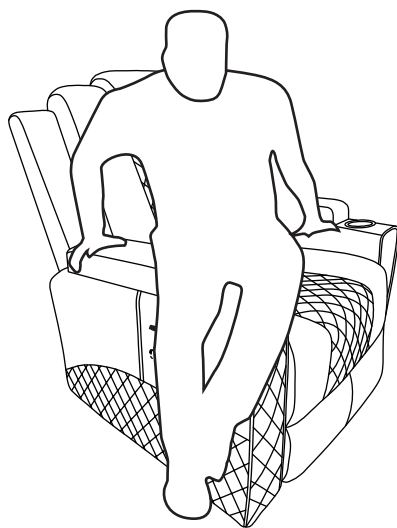

DO NOT stand up from your Recliner chair with only one arm.

Dear Customer,

Thank you for choosing us.

For safe use, please read this manual before installation, and keep it for after use. Please feel free to email us if you have any concerns about our products. We'll reply within 24 hours.

The following are the things you need to pay attention to so that we can provide you with services when you encounter problems during the installation and use of the product:

- When the product is damaged due to courier problems, please contact our customer service in time for verification.
- We will rectify the issue as soon as possible.

We offer product explanations, installation instructions, product maintenance and maintenance methods.

If you feel satisfied with our product and service,

- Please set our store as your favorites;
- Please recommend our products to your friends;
- Please and leave us your purchase experience in our store or product page.

Feedback or reviews from you will greatly help us offer better services to players around the world.

Best regards!

Avoid using sharp objects such as a knife to cut open packing as you may accidentally damage the upholstery.