
# **ORIGINAL INSTRUCTION MANUAL**

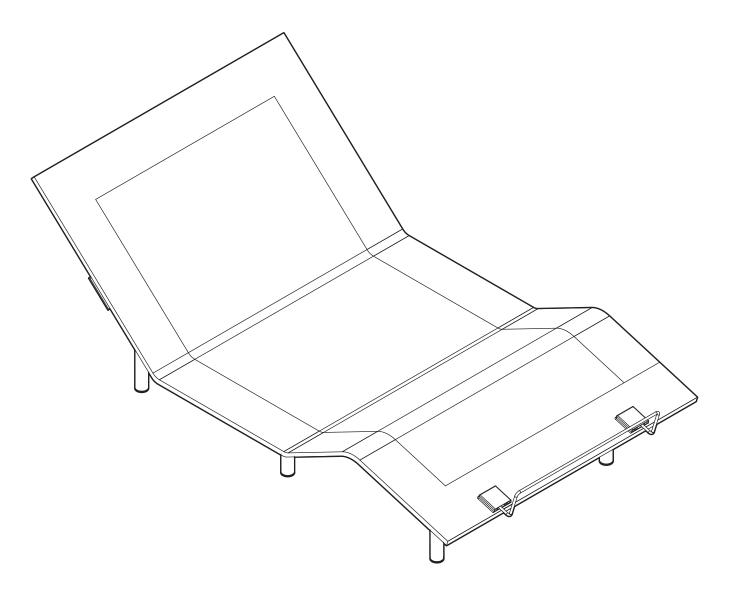

#### DEAR CUSTOMER,

Thank you for choosing our product. Please read this manual carefully before assembling or using the product, to avoid damage caused by improper use. If the product is passed on to third parties, this manual should be passed on along with the product. If you have any questions, please don't hesitate to contact us.

# TABLES OF CONTENTS

1.Wireless Remote Instruction	4
2.Parts List7	7
3.Assemble the Frame	10

## WARNING



Read these instructions carefully and retain them for future use. If this product is passed to a third party, then these instructions must be included.

**A** WARNING To reduce the risk of burns, fire, electric shock, or injury to persons:

• Read all instructions before using the furnishing.

**A** DANGER To reduce the risk of electric shock; always unplug this furnishing from the electrical outlet before cleaning or servicing.

**A** WARNING Risk of injury! Keep children away from the foot support.

**A** CAUTION Risk of injury and fire! Connect only to the furnishing specified in this

instruction manual.

- Unplug from outlet before putting on or taking off parts.
- Close supervision is necessary when this furnishing is used by, or near children, invalids, or disabled persons.
- Use this furnishing only for its intended use as described in these **instructions**. Do not use attachments not recommended by the manufacturer.
- Never operate this furnishing if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return the furnishing to a service center for examination and repair.
- Keep the cord away from heated surfaces.
- Never drop or insert any object into any opening.
- Do not use outdoors.
- Do not operate where aerosol (spray) products are being used or where oxygen is being administered.
- To disconnect, turn all controls to the off position, then remove plug from outlet.
- To reduce the risk of electric shock, this furnishing has a polarized plug (one blade is wider than the other). This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install the proper outlet. Do not change the plug in any way.

## Battery Warnings

• Exhausted batteries should be immediately removed from the remote control

and properly disposed.

# SAVE THESE INSTRUCTIONS

## Intended Use

- This furnishing is a motorized bed base with a wireless remote intended to hold and adjust the position of a mattress.
- This furnishing is intended for household use only. It is not intended for medical or therapeutic use.
- This furnishing is intended to be used in dry indoor areas only.
- No liability will be accepted for damages resulting from improper use or non-compliance with these instructions.

## Before First Use

- Check the furnishing for transport damages.
- Remove all the packing materials.
- Before connecting the furnishing to the power supply, check that the power supply voltage and current rating corresponds with the power supply details shown on the specifications.


**A** DANGER Risk of suffocation! Keep any packaging materials

away from children – these materials are a potential source of danger, e.g. suffocation.

#### Specifications

Actuator rating: Max.weight limit: Dorsal angle: Leg angle: 24V,3A (Max) 800 LBS 0-70° 0-45°


#### a.Brief introduction of remote control(W) panel function and install the battery

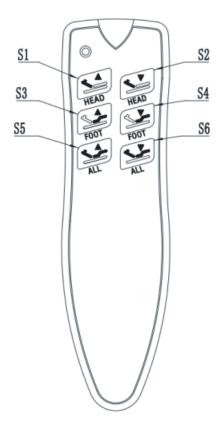


Function analysis of six key wireless key

- S1 key: head up
- S2 key: head down
- S3 key: leg up
- S4 key: leg down
- S5 key: both up
- S6 key: both down

The S1-S6 keys are inching type, release to stop

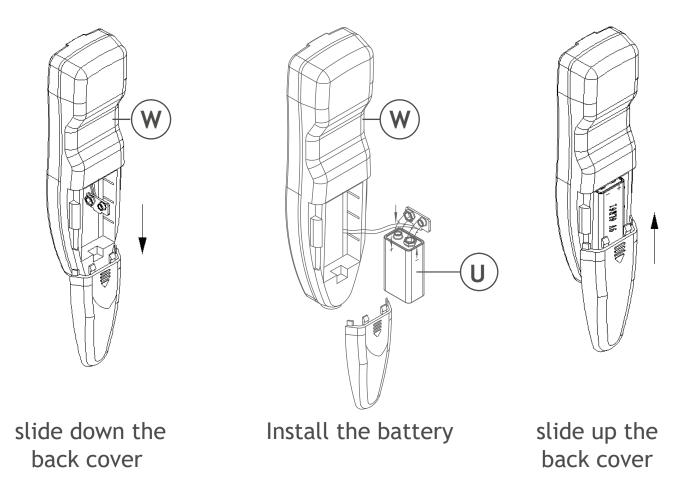


Please install the battery(S) as shown, pay attention to the battery polarity.

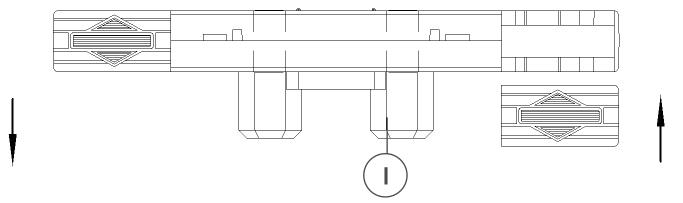


if you can't slide off the back covers smoothly, use hammer or other heavy stuff to knock the edge slowly.

### b. Build connection

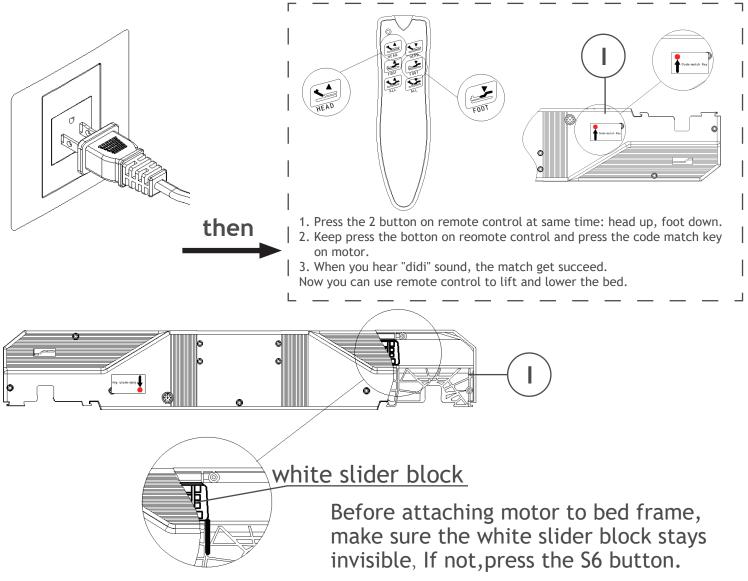


- c. If you encountered a power outage, you can install the spare battery on the motor.
- The spare battery can only be used to flat the frame and MUST be removed after the frame got flat!

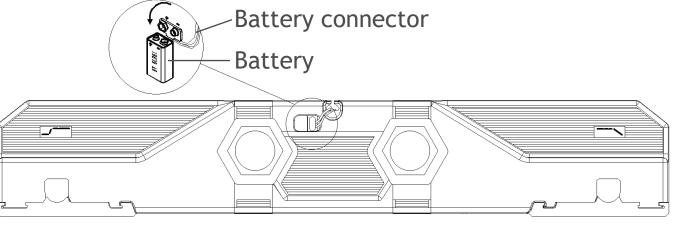





Attention: Can only be used in emergency situations!

#### PARTS LIST

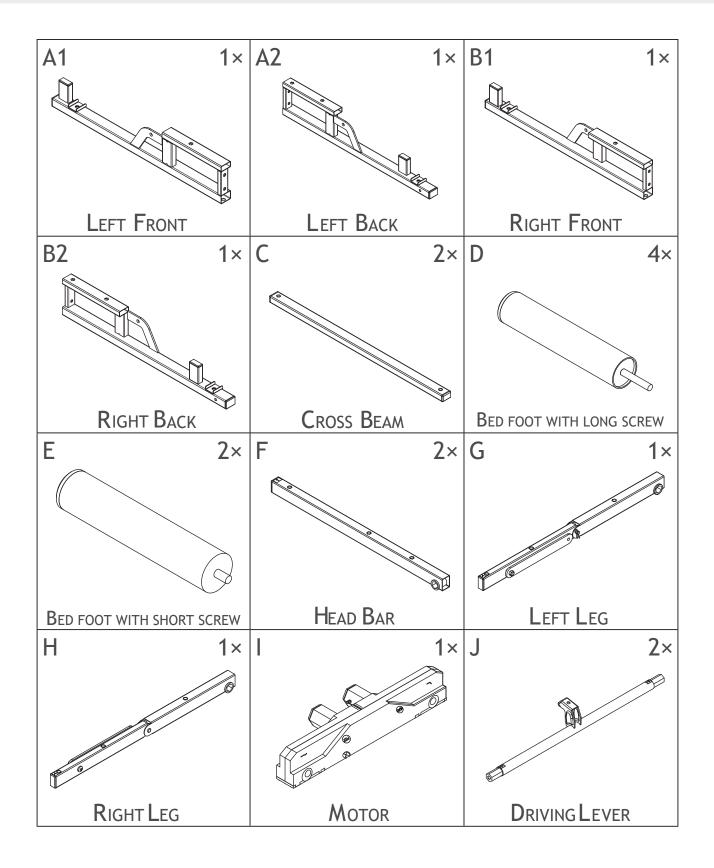


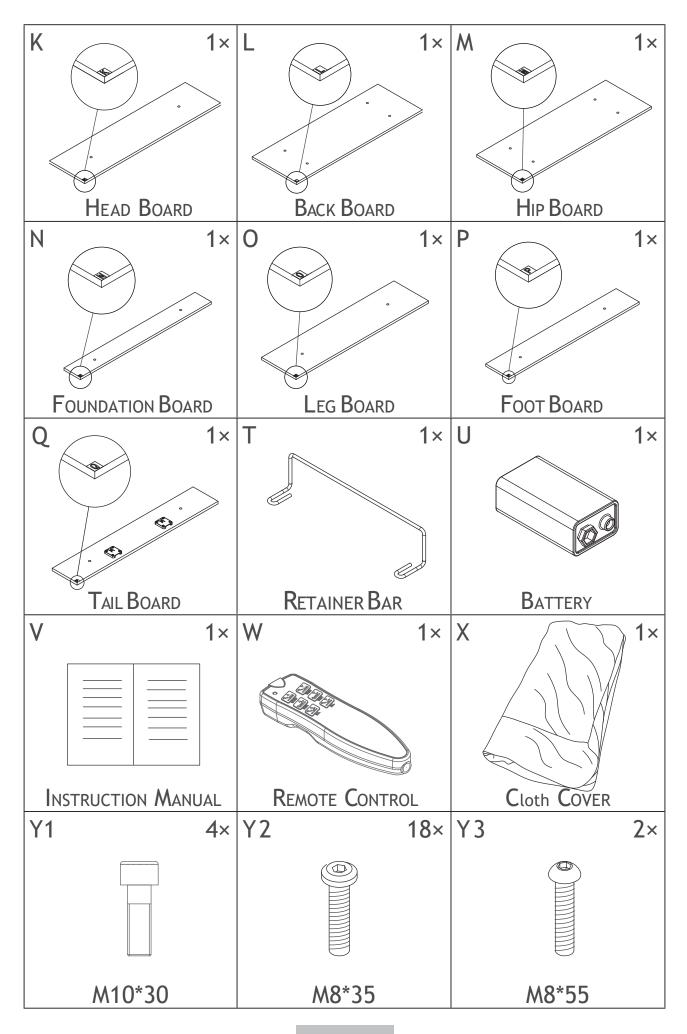


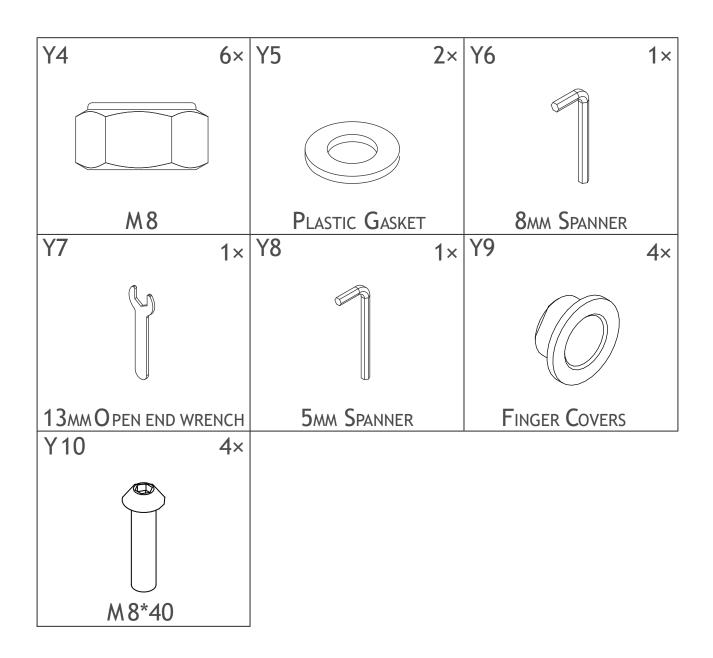

Please check that you have all the parts listed before you start assembling, if you do find that something is missing, do not continue assembly, please contact us immediately.

NOTE: Please do not tighten all the hardware completely until the entire assembly is completed!

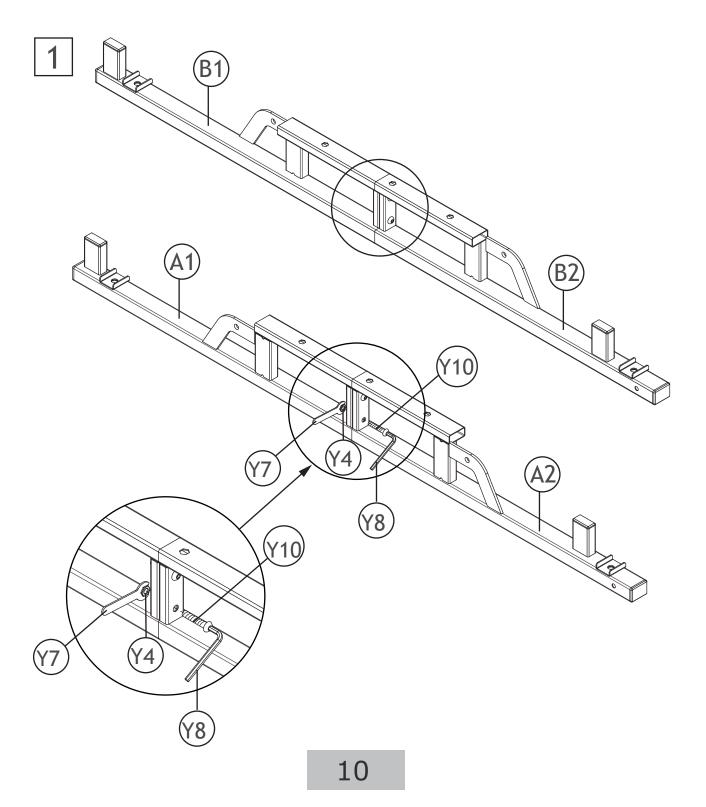


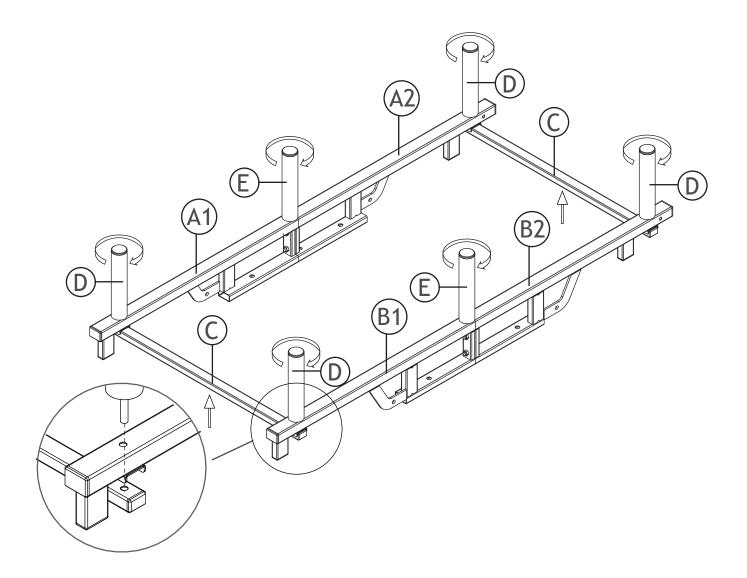


Round hole facing up( Part C)


2

The left and right brackets(A1,A2&B1,B2) are placed upside down and placed symmetrically;

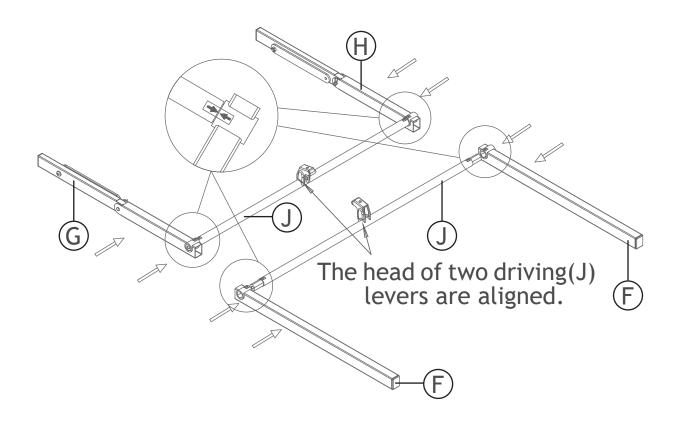


The left and right bars(F,G,H) are connected with the driving lever, lever(J), please align the arrows as indicated.

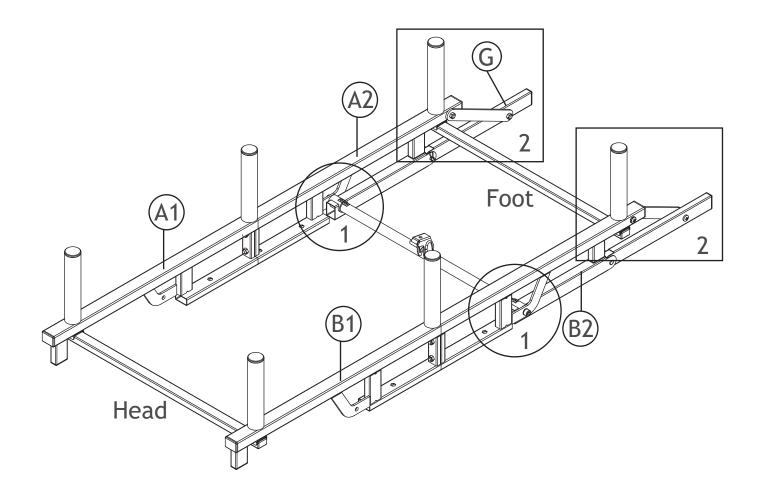


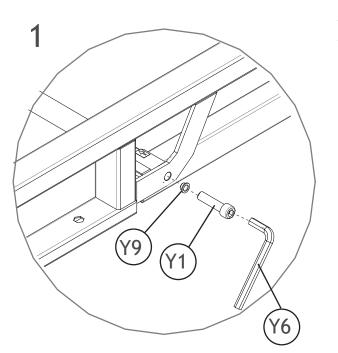


Assemble the circled part , pls check circle 1;

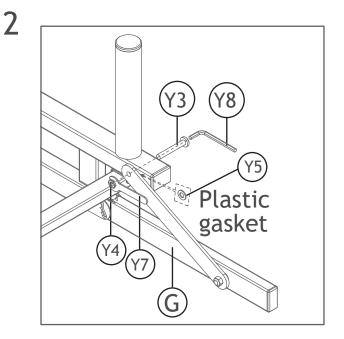


Assemble the square part, pls check square 2.

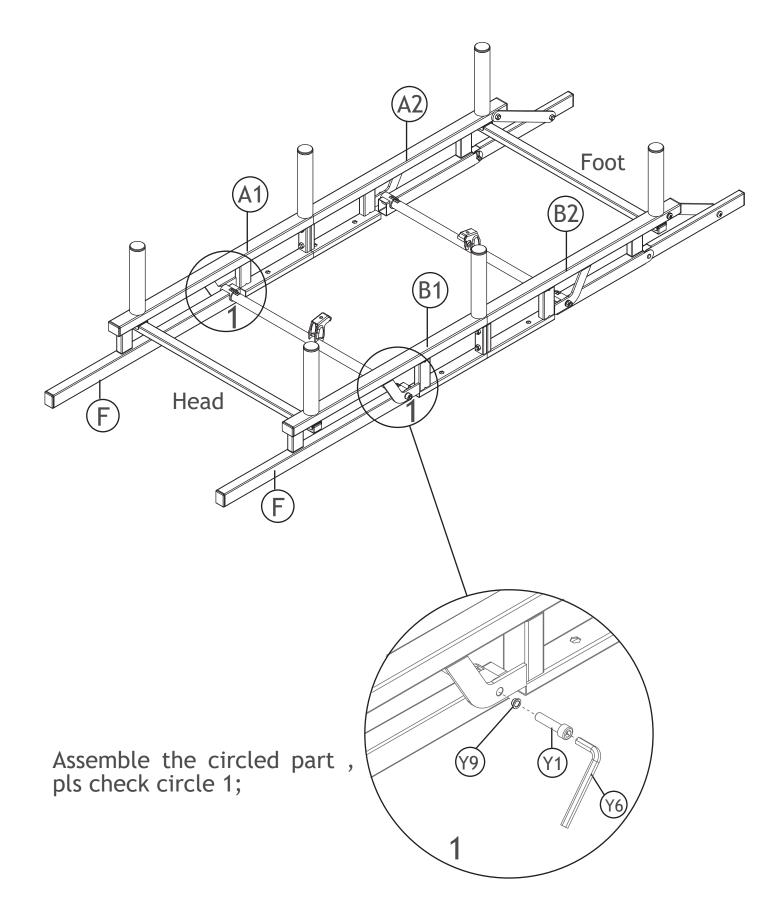

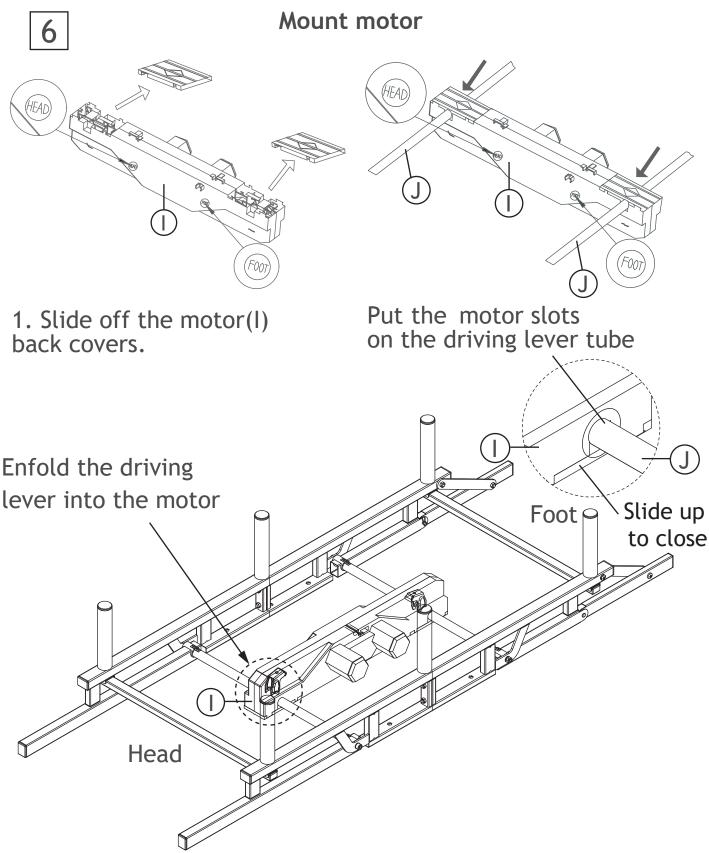


2.Insert the motor into the driving lever, please pay attention to the direction of the motor, check the mark head and foot. Then buckle the back covers into place.

If the back covers don't slide in, lift the driving lever until it slides in.

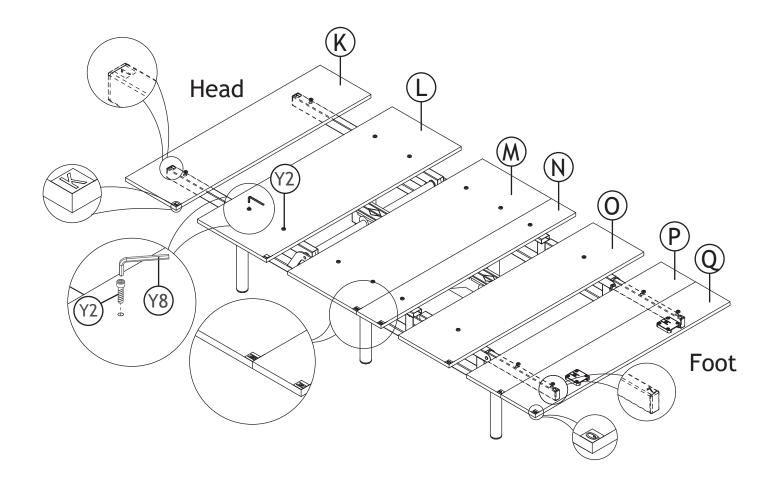


Turn the bed frame over, then place the 7 bed boards in the direction of the arrows and screw them with M8\*35(Y2) screws.

Before put on cloth cover, push S5 button till the bed elevate to the highest degree.

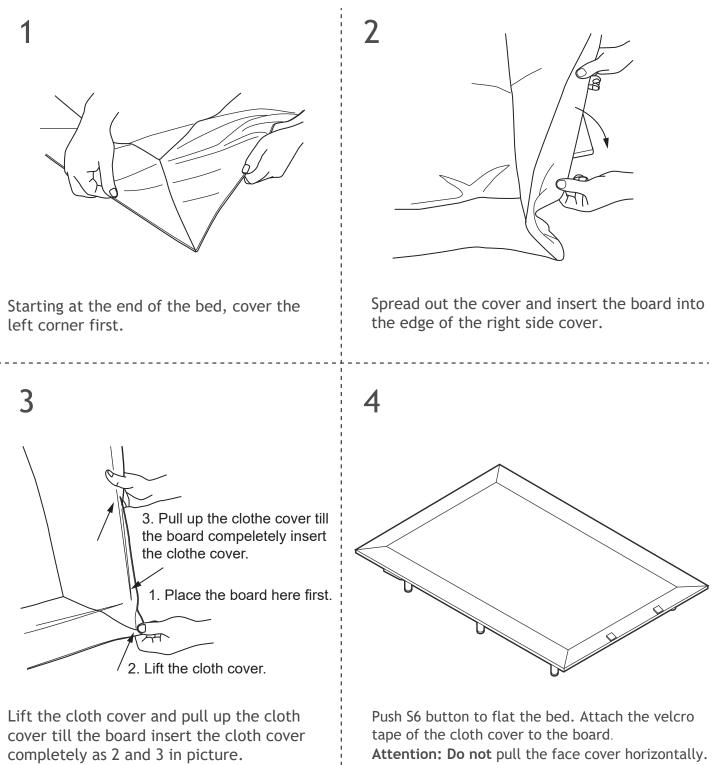


Cover the head of the bed as Step 1-3.

17

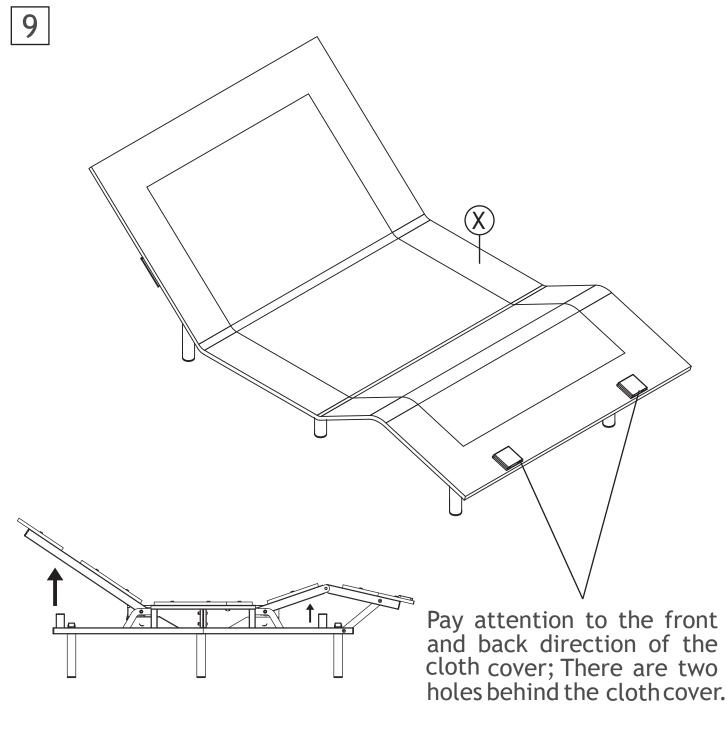

Raise the head to put on the cloth cover, put down the head after all the corner are wrapped.

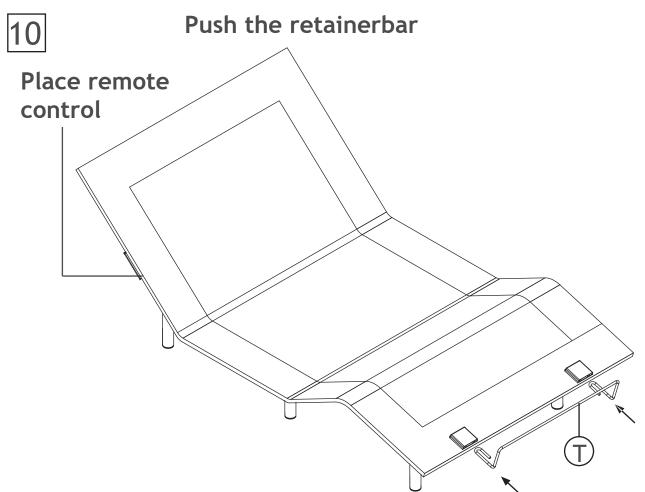

At the end of the bed, push the retainerbar into the plastic slider

