Instructions for: 6393JCLEG/6393JC251LEG Adjustable Table Leg Assembly

<u>^!\</u>

WARNING:

CHOKING HAZARD/SHARP POINTS- Assembly hardware contains small parts and components with sharp points.

Adult assembly required.

Hardware Package HCIC


Qty <u>Description</u>

(16) **XGAE** Panhead Screw, #10 X 1"

(4) **XAKD** Leveler, 3/8"-16 x 1"

Assembly Instructions:

- 1. Slide the leg under the table leg bracket so that the holes in the leg plate are aligned with the holes in the bracket (Figure 1). You may need to loosen the table leg brackets to slide the leg under it.
- 2. Secure the leg by installing four $#10 \times 1''$ panhead screws per leg (Figure 2).
 - a. Two screws should go through both the bracket and leg plate and into the tabletop.
 - b. Two more screws should go through the leg plate and into the tabletop.
- 3. Repeat step 1 & 2 for all four legs.
- 4. To adjust the height of the table, remove the two adjustment screws on the leg. Determine the desired height of the table and reinstall the two adjustment screws at that height. **Note: The upper leg has two pairs of holes. See the drawing below to determine which holes to use.**
- 5. Turn the table over onto the legs and, if needed, adjust the levelers up or down by turning them to level the table.

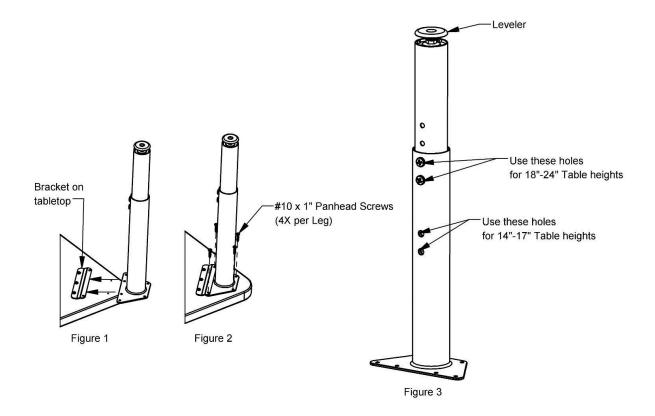

Attention: To avoid damage to the table surface, liquids must be wiped up promptly. On Sensory Tables, empty liquids from the trays and dry the laminate surface under the trays as well as any liquid on other parts of the table immediately after use. Move tables away from area to be cleaned when mopping floors to prevent corrosion on the legs and glides. Dry off metal legs to prevent rusting.