


DOMe CLIMBER

Instruction Manual

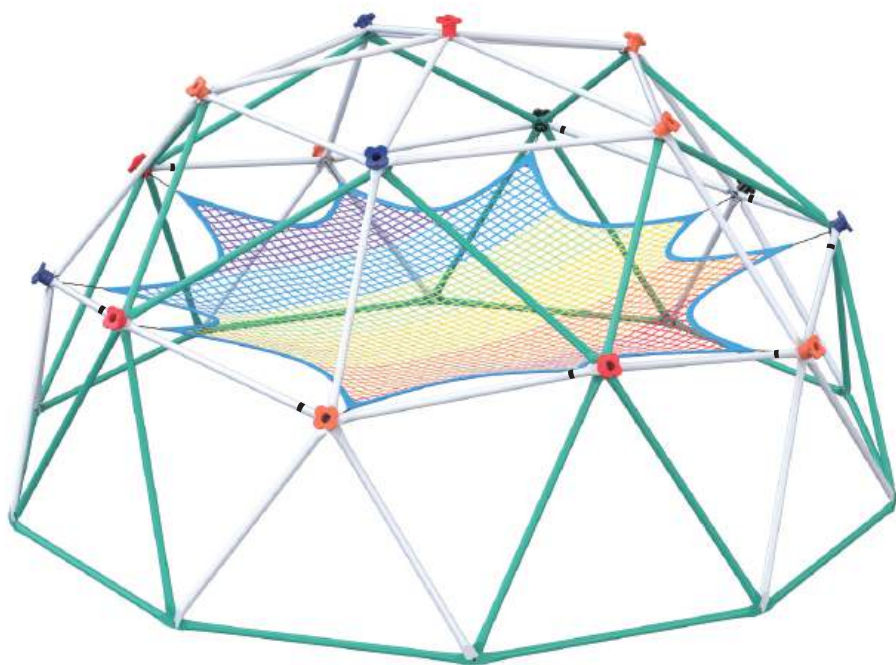

WARNING!

- Please read the instruction carefully before assembling and using.
- Retain this manual for future reference.
- Children are not allowed to play under the Net Hammock while it is in use.

WARNING!

SAFETY INSTRUCTION

FAILURE TO FOLLOW THESE WARNINGS MAY RESULT IN SERIOUS INJURY OR PROPERTY DAMAGE AND WILL VOID THE WARRANTY.

All users must understand and follow the instruction for the safe operation of this product.

Do not attempt to assemble this product without following the instructions carefully.

Proper assembly, use and supervision are necessary.

- Be careful if a ladder is used during assembly.
- Two capable adults are recommended for the installation.
- Keep children away from the assembly area.
- Be aware that parts can be damaged by over-tightening the screws.
- All who participate in the assembly process should wear safety glasses throughout the assembly

Most injuries are caused by misuse and/or not following instructions.

● Adult supervision is required at all times!

- The product is intended for domestic use only, not for the commercial.
- Do not install the product over concrete, asphalt, packed earth or any other hard surface. A fall onto a hard surface can result in serious injury to the user.
- Place the equipment on level ground at least 6.6 ft (2 m) from any structure or obstruction such as a fence, garage, house, overhanging branches, laundry lines or electrical wires.
- Provide enough space so that children can use the product safely.
- To prevent serious injury, do not allow children to use the equipment until properly installed.
- Do not use the dome climber when it is wet.
- Do not move the equipment while it is in use.
- Do not attach other items to the product that are not designed for the equipment, such as, but not limited to, jump ropes, clotheslines, pet leashes, cables and chains, as they may cause a strangulation hazard.
- To prevent entanglement and strangulation, dress children appropriately, using well-fitting shoes and avoiding ponchos, scarves, jackets with neck drawstrings, helmets with straps, and other loose-fitting clothing that is potentially hazardous while using the equipment.
- Children are not allowed to play under the Net Hammock while it is in use.

Recommended age: 3-10 years old

Maximum player: 6 persons

Maximum weight: 800 pounds

PLAYGROUND AND SURFACE MATERIALS INSTRUCTIONS

- Use containment, such as digging out around the perimeter and/or lining the perimeter with landscape edging.
- Do not install loose fill surfacing over hard surfaces such as concrete or asphalt.
- Installation of rubber tiles or poured-in place surfaces (other than loose fill materials) generally requires a professional and are not “do-it yourself” projects.
- Use playground surfacing materials (other than loose fill material) that comply to the safety standard ASTM F1292 Standard Specification for Impact Attenuation of Surfacing Materials within the Use Zone of Playground Equipment.

CONSUMER INFORMATION SHEET FOR PLAYGROUND SURFACING MATERIALS

Select Protective Surfacing—One of the most important things you can do to reduce the likelihood of serious head injuries is to install shock absorbing protective surfacing under and around your play equipment. The protective surfacing should be applied to a depth that is suitable for the equipment height in accordance with ASTM Specification F1292. There are different types of surfacing to choose from; whichever product you select, follow these guidelines:

Loose Fill Materials—Maintain a minimum depth of 9 inches (23 cm) of loose fill materials such as wood mulch/chips, engineered wood fiber (EWf), or shredded/recycled rubber mulch for equipment up to 8 feet (244 cm) high; and 9 inches (23 cm) of sand or pea gravel for equipment up to 5 feet (152 cm) high.

NOTE: An initial fill level of 12 inches (30 cm) will compress to about a 9 inch (23 cm) depth of surfacing over time. The surfacing will also compact, displace, and settle, and should be periodically refilled to maintain at least a 9 inch (23 cm) depth. Use a minimum of 6 inches (15 cm) of protective surfacing for play equipment less than 4 feet (122 cm) in height. If maintained properly, this should be adequate. (At depths less than 6 inches (15 cm), the protective material is too easily displaced or compacted.)

NOTE: Do not install home playground equipment over concrete, asphalt, or any other hard surface. A fall onto a hard surface can result in serious injury to the equipment user. Grass and dirt are not considered protective surfacing because wear and environmental factors can reduce their shock-absorbing effectiveness. Carpeting and thin mats are generally not adequate protective surfacing.

Ground level equipment—such as a sandbox, activity wall, playhouse or other equipment that has no elevated play surface—does not need any protective surfacing.

Use containment, such as digging out around the perimeter and/or lining the perimeter with landscape edging. Don't forget to account for water drainage. Check and maintain the depth of the loose fill surfacing material. To maintain the right amount of loose fill materials, mark the correct level on play equipment support posts. That way you can easily see when to replenish and/ or redistribute the surfacing. Do not install loose fill surfacing over hard surfaces such as concrete or asphalt. Poured-In-Place surfaces or Pre-manufactured Rubber Tiles—You may be interested in using surfacing other than loose fill materials—like

rubber tiles or poured-in-place surfaces. Installation of these surfaces generally requires a professional and are not a “do-it-yourself” project.

Review surface specifications before purchasing this type of surfacing. Ask the installer/manufacturer for a report showing that the product has been tested to the following safety standard: ASTM F1292 Standard Specification for Impact Attenuation of Surfacing Materials within the Use Zone of Playground Equipment.

This report should show the specific height for which the surface is intended to protect against serious head injury. This height should be equal to or greater than the fall height—vertical distance between a designated play surface (elevated surface for standing, sitting, or climbing) and the protective surfacing below—of your play equipment. Check the protective surfacing frequently for wear. Placements—Proper placement and maintenance of protective surfacing is essential.

Be sure to:

Extend surfacing at least 6.6 feet (2 m) from the equipment in all directions.

For to-fro swings, extend protective surfacing in front of and behind the swing to a distance equal to twice the height of the top bar from which the swing is suspended. For tire swings, extend surfacing in a circle whose radius is equal to the height of the suspending chain or rope, plus 6.6 feet (2 m) in all directions.

BEFORE BEGINNING ASSEMBLY

Identify and check all parts and hardware using the PART LIST in this document. Make sure that all parts and accessories are intact and complete before assembly. Test all bolts by inserting them into their respective holes. Do not scrape the powder coating. Bare metal may rust! You may need to pound some bolts with a hammer or mallet.

NOTE:

- The assembly requires two adults.



Carefully follow all directions. Scan the QR code to watch the installation guide.

PART LIST



A Long Tube x30



A1 Long Tube x5



B Short Tube x20



B1 Short Tube x10



C Handgrip(in 3 color) x 16



E Long Bolt x16



F Short Bolt x10



G Safety Nut x26



H Washer x36



I Allen Key x1




J Wrench x1



K Nut x16




Gloves 2 pairs

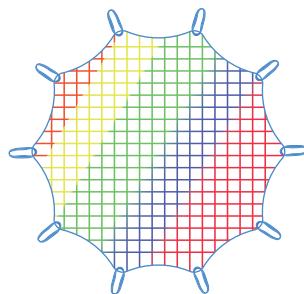

Net Hammock and Strap

ASSEMBLY INSTRUCTION

Step 1 Take 10x pole (part A) and lay out a decagon with it.

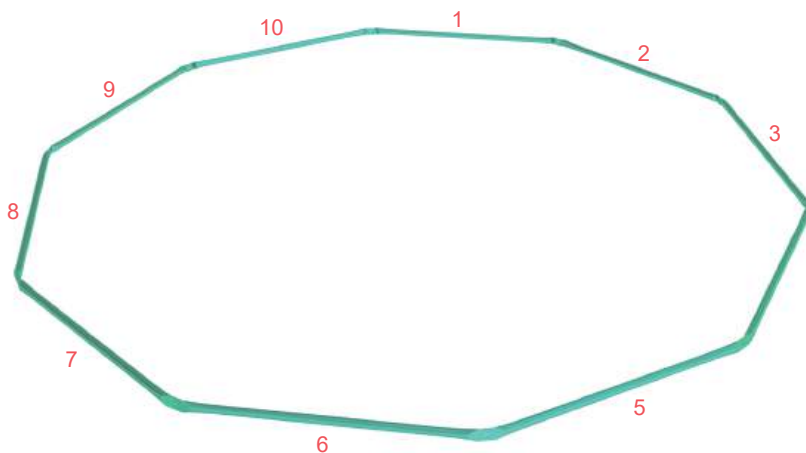

Step 2


Take 1x pole (part A) and 1x pole (part B).

Connect them with 1x bolt (part F), 1x nut (part G), 2x washer (part H).


The order of the poles must correspond to the order shown in the figure.

First put a washer over the bolt. Then insert the bolt through pole 1, then pole 2, then pole 3,

then another washer, then screw the nut onto the bolt hand-tight.

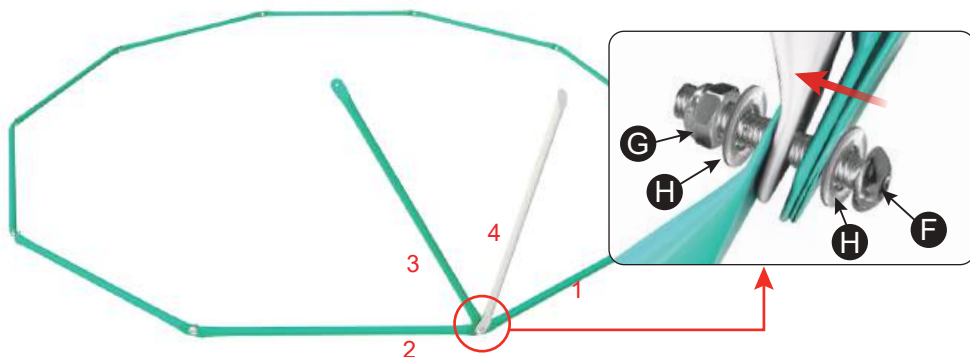

The bolts ONLY FACE IN on the first layer

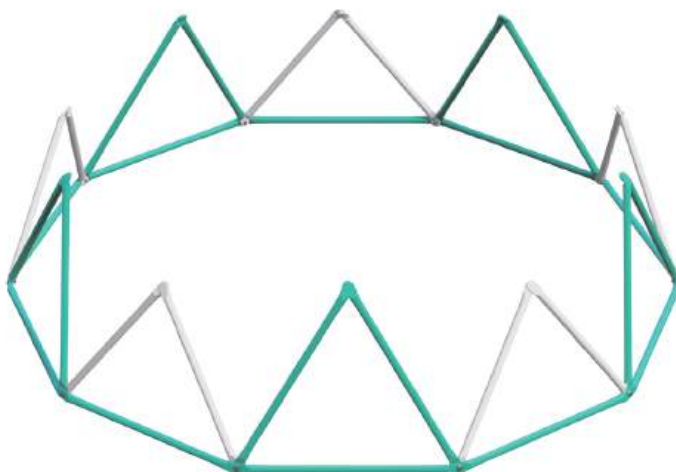

Repeat step 2 until the bottom circle is created as shown.


Step 3

Take 2x partB1 and 1xpart B.

Connect them with 1x bolt (part E), 1x nut (part K), 1x washer (part H).The order of the poles must correspond to the order shown in the figure.First put a washer over the bolt. Then insert the bolt from the inside through pole 1, then pole 2.then

pole 3, then pole 4, then pole 5, then screw the nut onto the bolt hand-tight.

Make sure that the poles are always aligned counterclockwise.

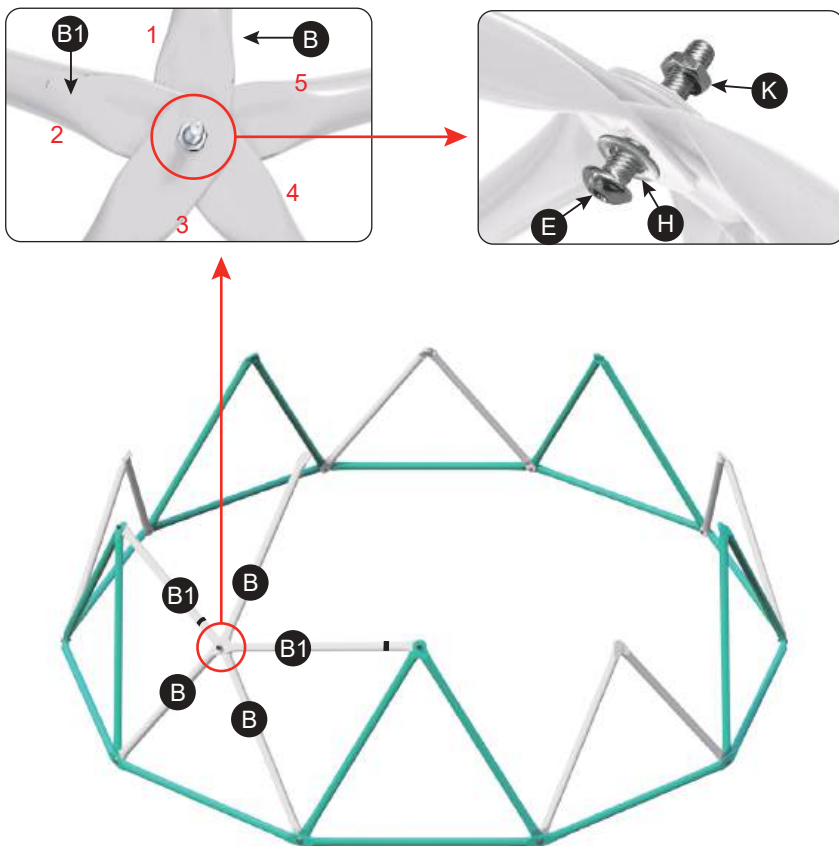

Step 4


Take 2x pole (part A) and 1x pole (part B1).

Connect them with 1x bolt (part E), 1x nut (part K), 1x washer (part H).

The order of the poles must match the order shown in the figure.

First put a washer over the bolt. Then insert the bolt from the inside through pole 1, then pole 2, then pole 3, then pole 4, then pole 5, then pole 6, then screw the nut onto the bolt hand-tight.

Make sure that the poles are always aligned counterclockwise.

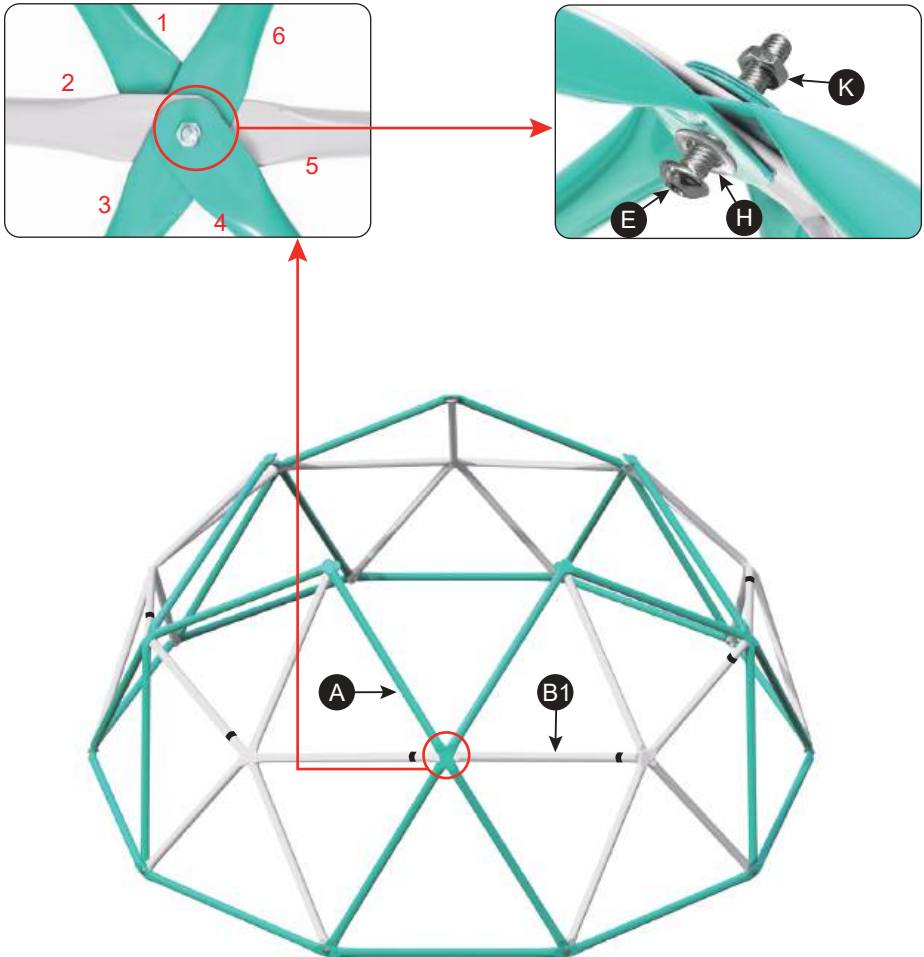

Repeat steps 3 and 4 until the center circle is created as shown.


Step 5

Take 2x pole (part A1) and 1x pole (part B).

Connect them with 1x bolt (part E), 1x nut (part K), 1x washer (part H).

The order of the poles must correspond to the order shown in the illustration. First place a washer over the screw. Then insert the bolt from the inside through pole 1, then pole 2, then pole 3, then pole 4, then pole 5, then pole 6, then screw the nut onto the bolt hand-tight.

Make sure that the poles are always aligned counterclockwise.

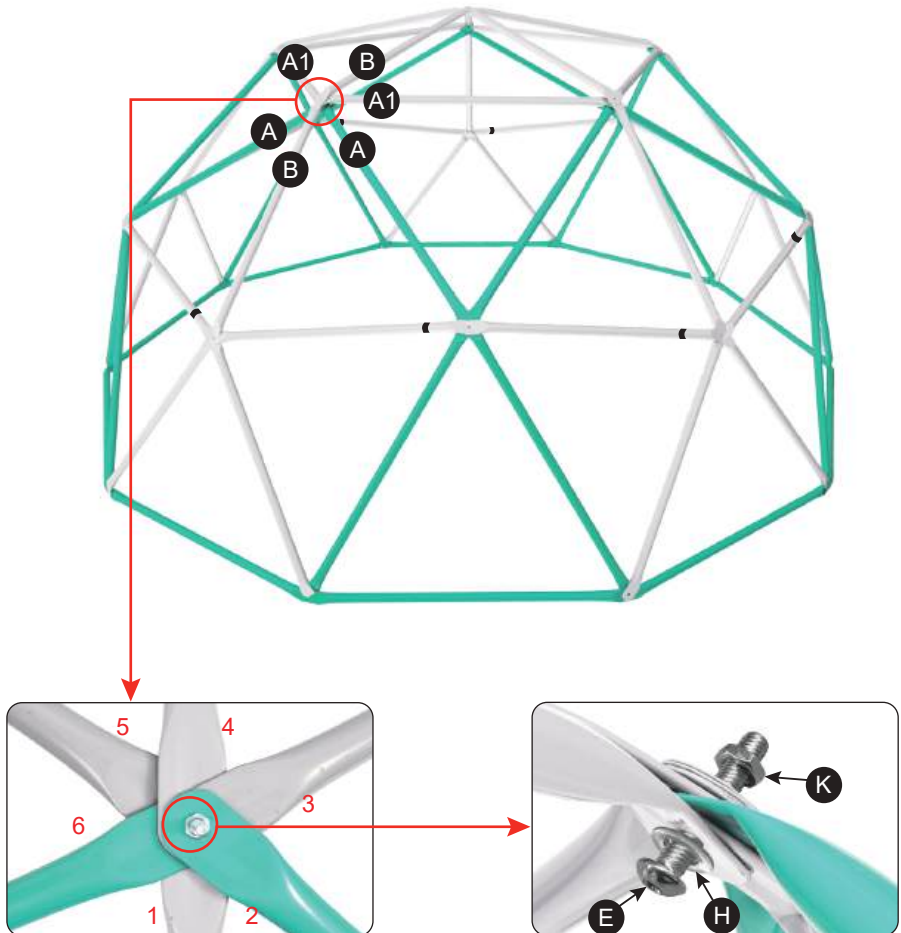

Step 6


Connect the upper node with 1x bolt (part E), 1x nut (part K), 1x washer (part H).

The order of the poles must correspond to the order shown in the figure.

First put a washer over the bolt. Then insert the bolt from the inside through pole 1, then pole 2, then

pole 3, then pole 4, then pole 5, then screw the nut onto the bolt hand-tight.

Make sure that the poles are always aligned counterclockwise.

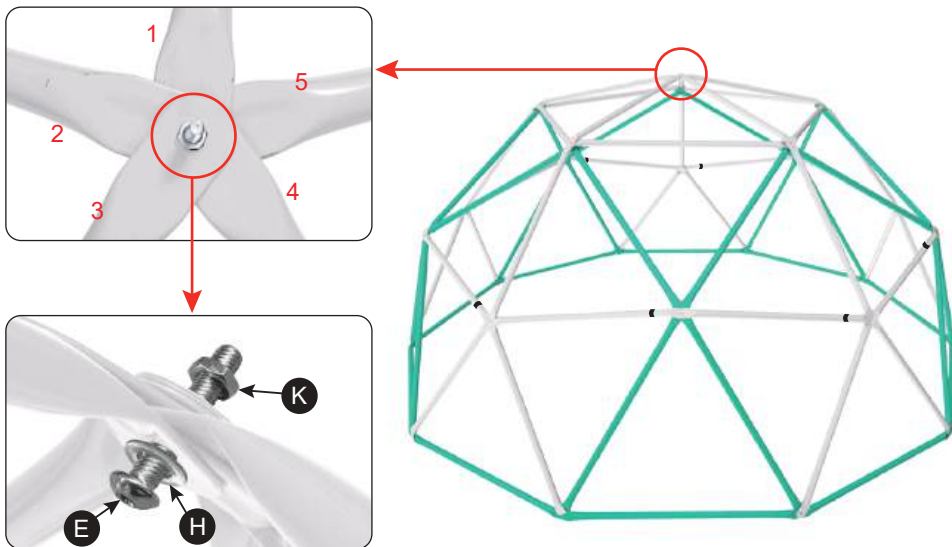


Now tighten all screw connections firmly with tools I and J.

Step 7

(1): press the G screw into the handle, aligning it with the inside of the handle. Note: The G screw should have the blue anti-slip ring facing upwards.


(2): Place the handle over the end of the screw on the framework. Fasten it.

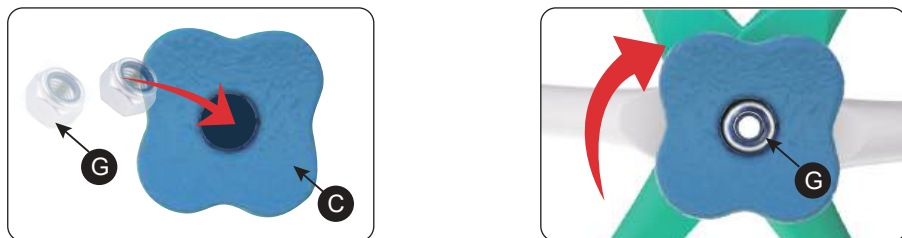


Step 8

Now repeat step7 and tighten all "Part C".

If you have any problems with the assembly or questions about it please contact us and we will do our best to help you solve it.

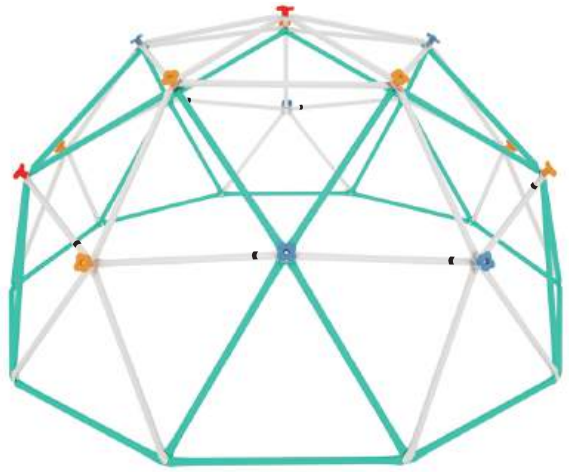

Hammock installation

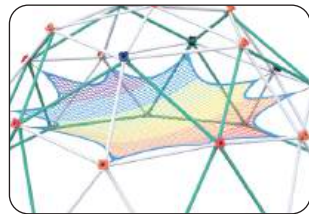

Hang the other ends of the 10 straps on the 10 hairgrips of the climbing dome.

Note: Due to the elastic nature of the net ropes, the hammock may become slack after use; this is normal. When it is too loosened, you can tighten it by rewinding and hanging the connecting straps.



The assembly is complete.

Note : Children are not allowed to play under the Net Hammock while it is in use.



物料名称：AD0204C-攀爬顶-说明书-B1管带黑标签

设计尺寸：单面尺寸 148*210mm,12P

设计时间：24-07-12

物料材质：封面120g铜版纸，内页80g双胶纸，骑马订

设计人员：Deen

颜色工艺：单面尺寸

备 注：打样试装