

ASSEMBLY INSTRUCTIONS

HAND SANITIZER DISPENSER

FLOOR STAND

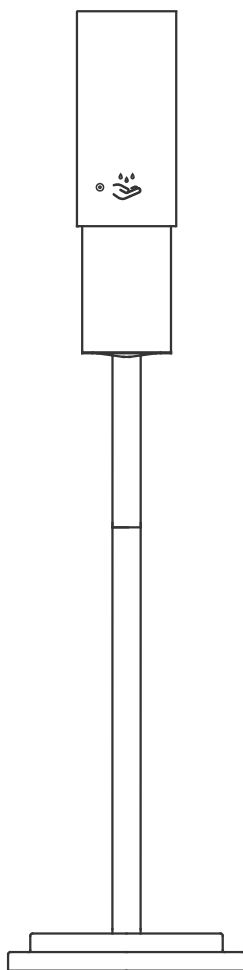


TABLE OF CONTENTS

Instructions

1. Important Safety Information 3

2. Parts Included 4

3. Assembling 5

4. Using the Device13

5. LED Indicator Light 13

6. Attention And Troubleshooting 14

7. Cleaning and Maintenance15

8. Warranty Information 16


IMPORTANT SAFETY INFORMATION

READ THIS INFORMATION BEFORE USING YOUR PRODUCT

Before you use your product, it is important that you read and understand the information found in this guide. Basic precautions should always be followed, including the following:

- * This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- * This product is not a toy. Intended for adult use only.
- * This product is for indoor use only.
- * Do not allow children to play with this product.
- * Ensure product is always in an upright position.
- * Cleaning and user maintenance shall not be made by children without supervision.

PARTS INCLUDED

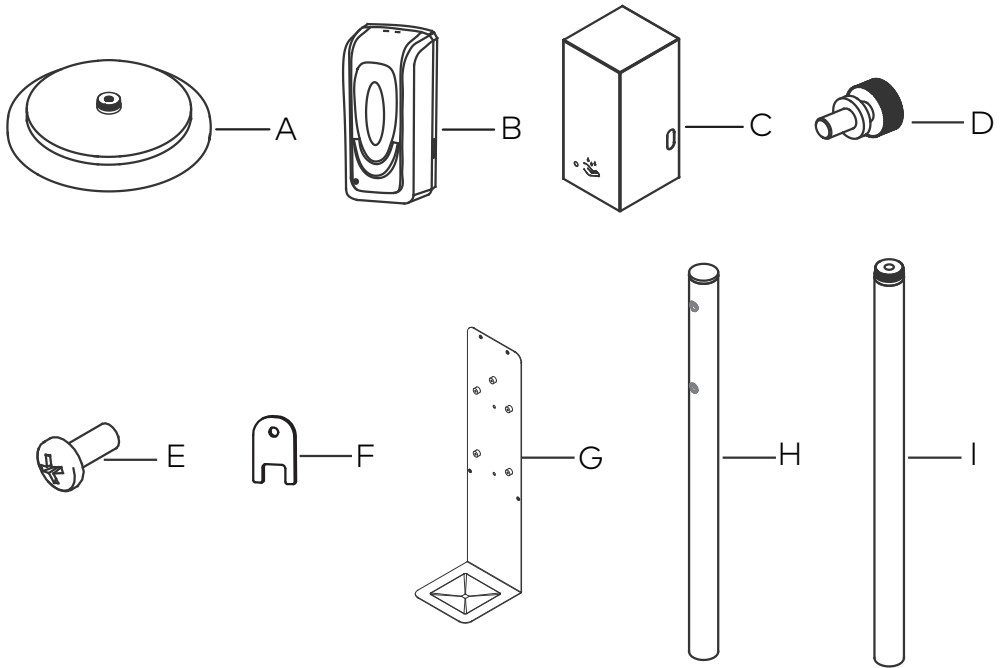


- Part A: Stand Base (1)
- Part B: Hand sanitizer dispenser (1)
- Part C: Metal cover (1)
- Part D: Knurled Screws (4)
- Part E: Mounting Screws (5)
- Part F: Key (1)
- Part G: Drip Tray (1)
- Part H: Upper Tube (1)
- Part I : Lower Tube (1)

ASSEMBLING

Carefully unpack your new product and lay out all the parts on a clear area. Take care not to lose any small parts.


STEP 1

Assemble the Lower Tube (I) onto the Stand Base (A) by threading clockwise.

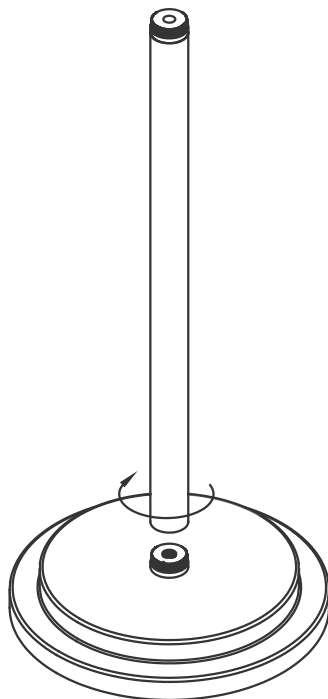


STEP 2

Thread the Upper Tube (H) to the Lower Tube (I) until fully tightened.

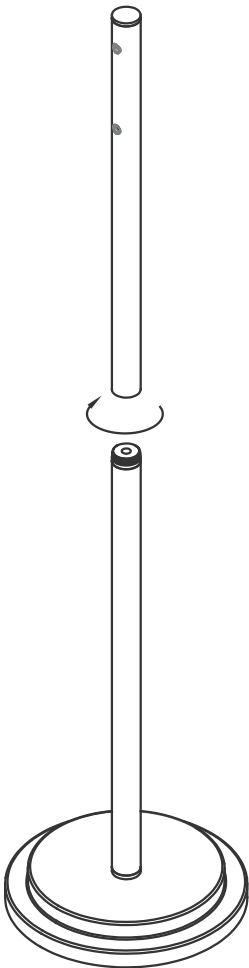

STEP 3


Unscrew the Mounting Screws (E) from the Upper Tube (H), align the two holes on the Drip Tray (G) to the holes on the Upper Tube (H), and secure by the Mounting Screws (E).

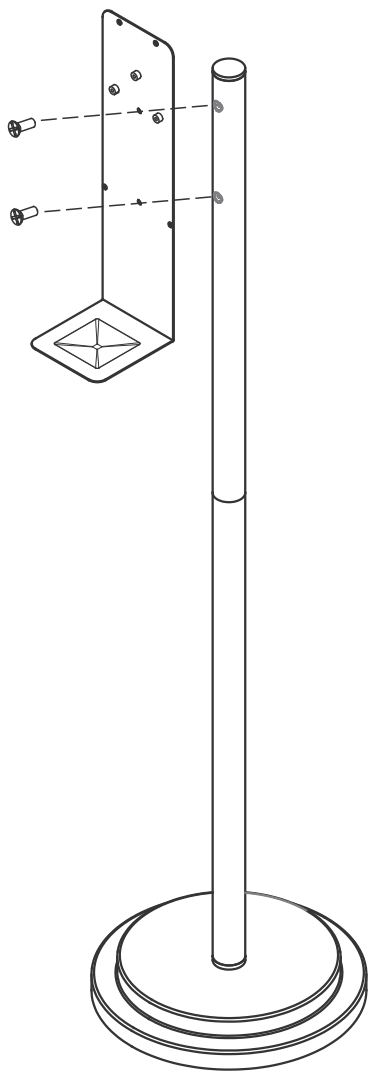

STEP 4


To open the dispenser, use the provided Key (F) to press down at the top of the front housing where the key slots are located. Hold the dispenser from the top and gently pull the front housing down and toward you. The front housing is hinged at the bottom of the dispenser.

Grasp the holder with both hands and press it inward slightly, then pull out the Assembly, put the Assembly aside for later use.

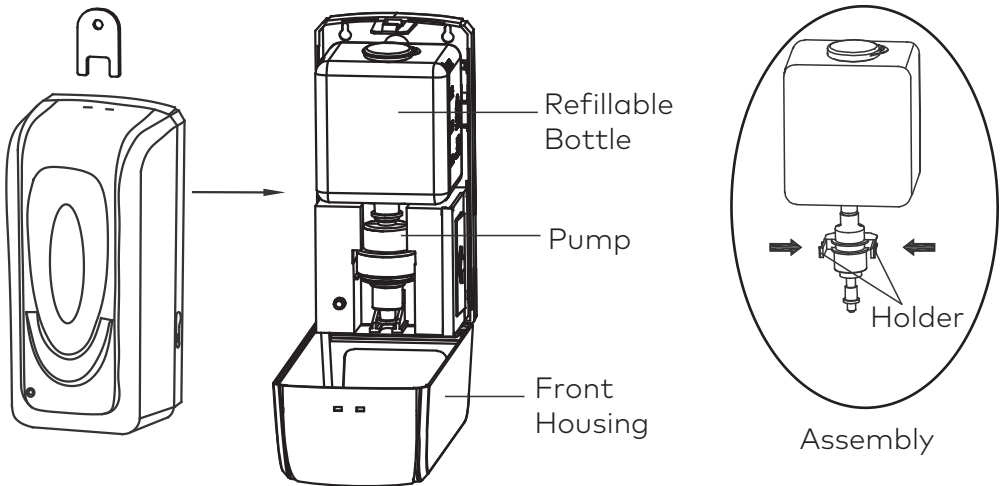

STEP 5


Unscrew the Mounting Screws (E) from the Drip Tray (G), align the holes on the dispenser back housing to the holes on the Drip Tray (G), secure with the provided Mounting Screws (E).

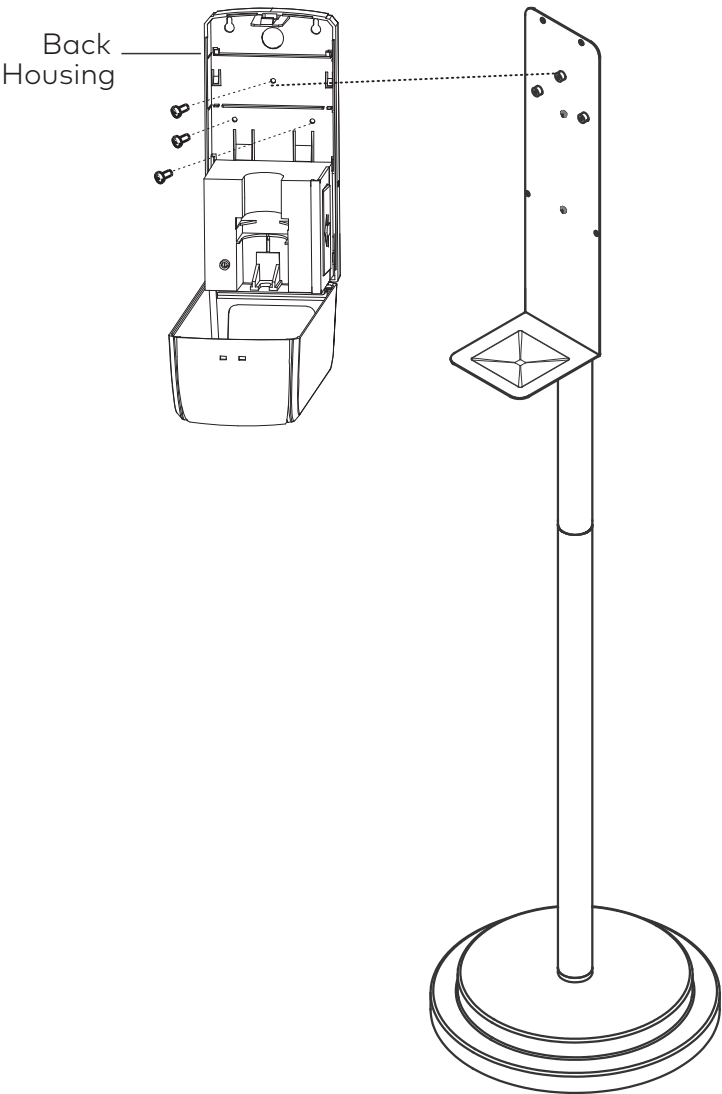

STEP 6


Locate the battery box, slide the battery box cover forward, place four (4) C cell alkaline batteries in the proper orientation and replace the battery box cover.

Do not mix old and new batteries. The use of re-chargeable batteries is not recommended.

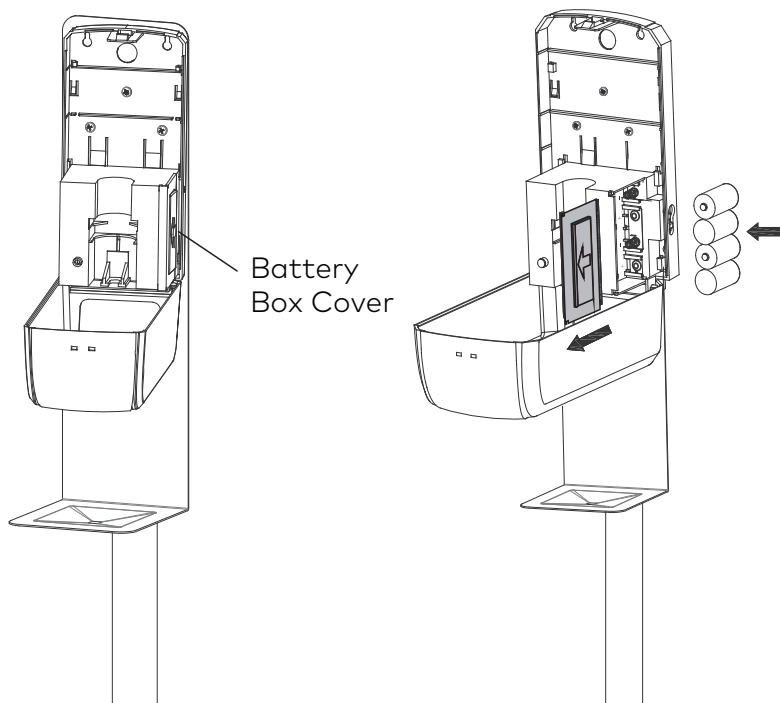


STEP 7

Place the Assembly into the control box, the pump should fit into the groove on the control box. Make sure the pump nozzle is at the correct location. Pour the sanitizer into the refillable bottle. Close the dispenser front housing.

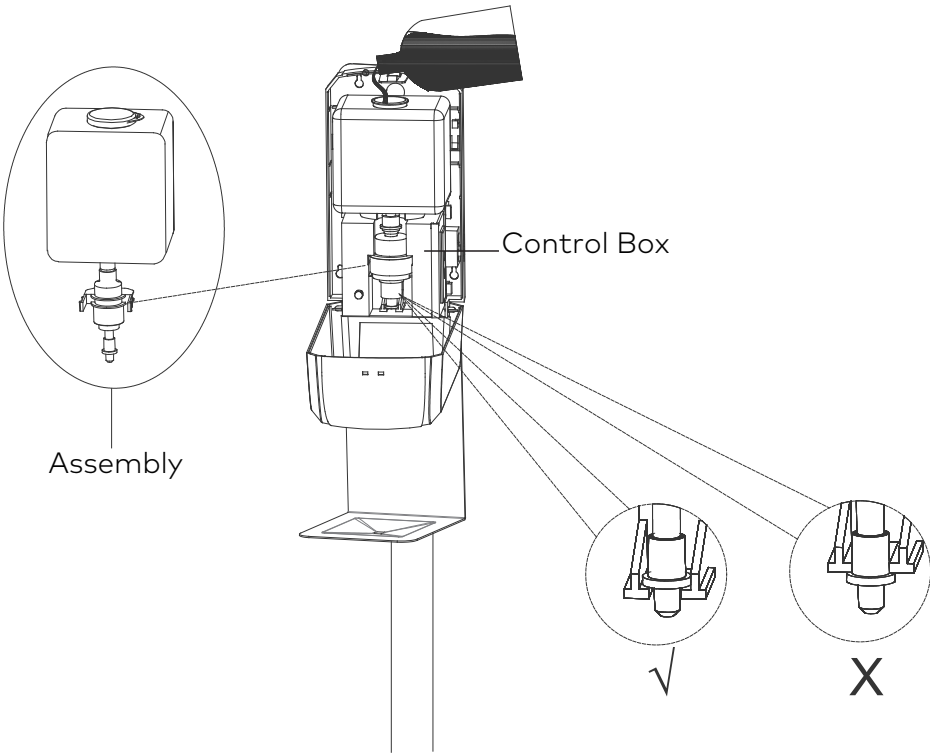


STEP 8

Unscrew the Knurled Screws (D) from the Drip Tray (G), place the Metal Cover (C) over the dispenser, align the holes on the Metal Cover (C) to the holes on the Drip Tray (G), secure with the provided Knurled Screws (D).

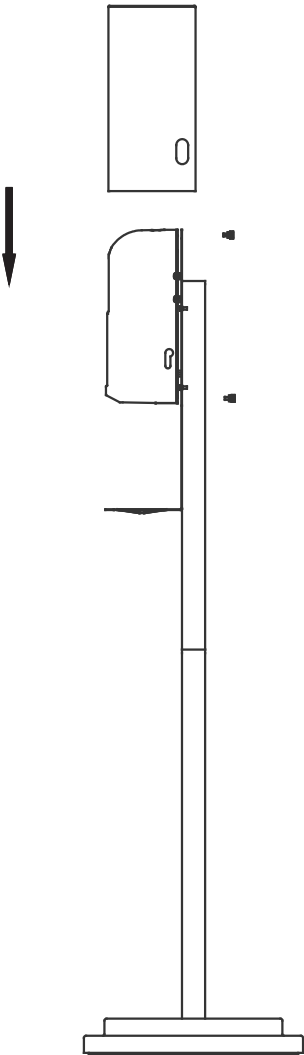

USING THE DEVICE

1. Turn on the switch.
2. Place hand(s) underneath the dispenser within 6cm of the sensor. The LED will blink GREEN and dispense 0.8ml of sanitizer into your hand(s).
3. To receive additional sanitizer, remove hands from below dispenser and repeat 2.

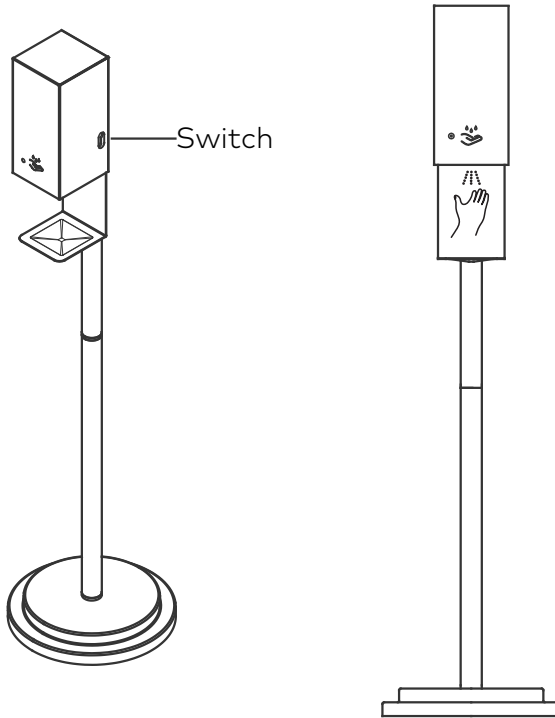

LED INDICATOR LIGHT

1. Green color 5 seconds flash: working condition.
2. Red color 5 seconds flash: low battery charge.
3. Red color 2 seconds flash: something is under sensor and should be removed.
4. Red color keeps flashing: low volume sanitizer.

ATTENTION

- * Please allow for a 1 minute warm up period after turning on the unit.
- * Please note that the user's hands are to be inserted from front to back to trigger the sensor that is situated to the left of the center.
- * Please do not take apart the refillable bottle from the pump, keep the refillable bottle and the pump assembly, unless replace the individual refillable bottle and the individual pump.

TROUBLESHOOTING

No Dispense, Motor Does Not Run

- * Hands are not directly underneath sensor
- * No refill is loaded
- * Incorrect refill is loaded
- * Batteries are not loaded, or are loaded incorrectly

No Dispense, Motor Runs

- * Refillable bottle is empty or is loaded improperly
- * Pump is not primed

CLEANING AND MAINTENANCE

* To clean the outside of the product, use a dry or slightly dampened clean cloth (use clean water, never a solvent) to wipe the surface of the product.

* Do not use any cleaners with chemicals, solvents or harsh abrasives. Use only a dry soft cloth to dust or wipe carefully.

WARRANTY INFORMATION

This product is one year warranty of manufacturer's defects from date of purchase.