


FOLDING ADJUSTABLE BASE

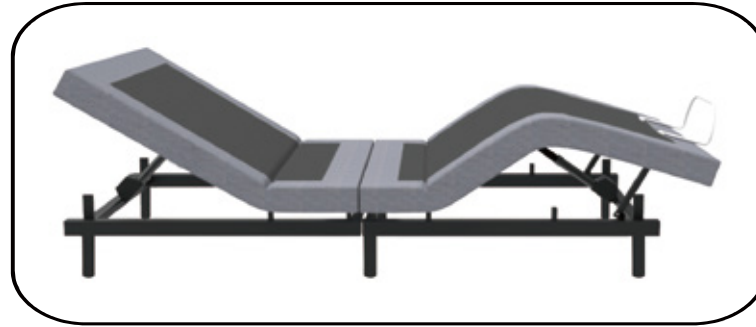

If you need help or have damaged or missing parts, contact customer service

WARNINGS

IMPORTANT: PLEASE READ ALL SAFETY INSTRUCTIONS THOROUGHLY BEFORE USING THIS PRODUCT. SAVE THESE INSTRUCTIONS.

ELECTRICAL

Always connect this product to a grounded surge protector and grounded standard 120-volt circuit wall outlet. DO NOT OPERATE THIS PRODUCT WHEN ANY OF THE CORDS OR ELECTRICAL UNIT IS DAMAGED. Keep all cords away from moving parts and any heated surfaces. FOR INDOOR USE ONLY. When moving or cleaning this product, turn off all electrical functions prior to unplugging from wall outlet.

SMALL CHILDREN/PETS

Immediately dispose of all packaging materials as soon as the product is unpacked. DO NOT ALLOW CHILDREN OR PETS TO PLAY ON OR UNDER THE BED. CHILDREN SHOULD NOT OPERATE THIS PRODUCT WITHOUT ADULT SUPERVISION.

PACEMAKERS

Some pacemakers may falsely interpret the optional massage feature's vibration as movement/exercise. Please consult a physician prior to using the massage functionality.

IN-HOME USE / HOSPITAL DISCLAIMER

This product is designed solely for in-home use. This product is not designed to use as a hospital bed and does not meet hospital standards. Do not use with oxygen equipment or near explosive/flammable gases.

WEIGHT RESTRICTIONS

Recommended weight restrictions for i500 folding adjustable bases:
(all weights include the weight of the mattress and bedding)

Weight Capacity: 850 lbs

This product will support the recommended weight limits when weight is distributed evenly across the base. This product is not designed to support or lift this amount in the head or foot sections alone. Consumers should not enter or exit the bed when any portion of it is in the raise position. Do not sit on the head or foot sections while in the raised position. Exceeding the recommended weight restrictions or other misuse of this product could damage the bed and void the warranty.

SOUND

The massage function will inherently emit an audible tone during operation. The volume of this tone is directly related to the location and environment. For example, a bed placed on wood flooring may result in a more audible tone than if placed on carpet.

PRODUCT RATINGS

IMPORTANT: USE THIS PRODUCT ONLY AS DESCRIBED IN THESE INSTRUCTIONS. DO NOT MODIFY ANY PARTS OR COMPONENTS.

MOTOR RATINGS

The i500 folding motors are not designed to operate for more than two (2) continuous minutes within an eighteen (18) minute time period. Exceeding this rating will shorten the life of the motors, and will void the warranty.

POWER RATINGS

INPUT: AC 100-240V-50/60HZ, 1.5 Amp

OUTPUT: DC 29V-2A

FUSE: 1.5A 250V

If a short circuit should occur, unplug the product from the wall outlet. The customer should seek professional assistance from a licensed electrician. DO NOT open any motor compartment, alter the wiring, modify the base, or change the product in any way as it will void the warranty.

FCC COMPLIANCE

Operates on 2.4 GHz frequency transmitter.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

To comply with the FCC RF exposure requirements, no change to the antenna or the device is permitted. Any change to the antenna or the device could result in the device exceeding the RF exposure requirement and void users right to operate the device.

CONTENTS

■ Overview	01 - 02
■ Assembly	03 - 10
■ Remote Control	11 - 18
■ APP Instructions	19 - 20
■ Massage	21 - 22
■ Electric Components Setup	23 - 26
■ Emergency Backup Battery	27 - 28
■ Test All Functions	29 - 30
■ Warranty / Electric Components	31 - 32
■ Additional Help	33 - 34








OVERVIEW







Step 1

Place the bed box in a desired location with the top of the box facing up.

Step 2






Before discarding the packing materials, check to make sure all parts are included. All electronics and components are located in boxes under the base or attached to the frame.

A	Bed Base		1 pc
B	Retainer Bar		1 pc
C	Transformer		1 pc
D	Wireless Remote Control		1 pc
E	Washer		6 pcs
F	Short Leg		6 pcs
G	Long Leg		6 pcs

H	Power Cord		1 pc
I	AAA Battery		3 pcs
J	Connecting Plate		2 pcs
K	Connecting Bolt		4 pcs
L	12mm Wrench		1 pc
M	Washer		4pcs

ASSEMBLY

Contents:

A	Bed Base		1 pc
J	Connecting Plate		2 pcs
K	Connecting Bolt		4 pcs
L	12mm Wrench		1 pc
M	Washer		4pcs

Step 1

Unfold the base to flat position. Refer to image (i)/ (ii).

Step 2

Align the holes of the connecting plates (J) and the bed base, secure by tightening the bolts (K) with the wrench (L). Refer to image (i).

i



ii







iii



ASSEMBLY

Contents:


A	Bed Base		1 pc
E	Washer		6 pcs
F	Short Leg		6 pcs
G	Long Leg		6 pcs

Step 3

Place Washer (E) on Short Leg (F) and connect to Bed Base (A). Then connect Long Leg (L) to Short Leg (G). Refer to image (i).

Note: Short Leg (F) can be omitted to accommodate lower profile beds

i

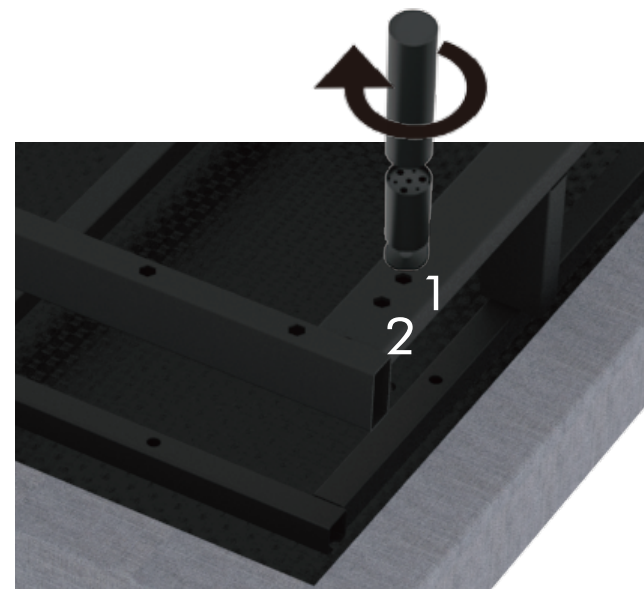

ASSEMBLY

Contents:

A	Bed Base	1 pc
C	Transformer	1 pc
H	Power Cord	1 pc

Step 4

Insert power cord located on Bed Base (A) into Transformer (C). Refer to image (i).

Step 5

Insert Power Cord (H) into Transformer (C). Refer to image (ii).

i



ii



ASSEMBLY

Contents:

A Bed base 1pc



B Retainer Bar 1pc



Step 1

Turn over the whole base with legs standing on the floor. Hold the metal frame when turning over the base, do not hold the plywood only.

Step 2



Insert the retainer bar (B) into 2 holes on the foot end of Bed Base (A). (Refer to image i) .

i



REMOTE CONTROL

Contents:

D	Wireless Remote Control		1 pc
I	AAA Battery		3 pcs


Overview

All function of the bed can be operated with the Remote Control (D). The Remote Control (I) comes with programmable buttons with pre-set positions. Refer to image (i) for a complete list of remote control functions.

Remote Control Battery Installation:

Remove the battery cover on the backside of Remote Control (D). Insert the AAA Batteries (I). Refer to image (ii).

i

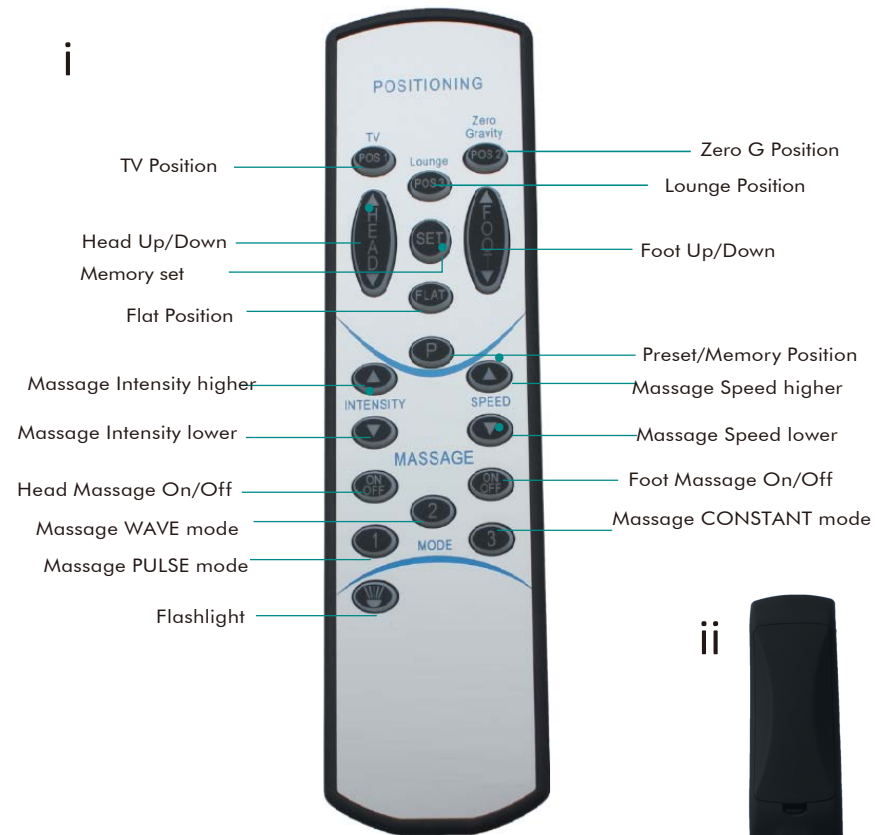

ii



REMOTE CONTROL

Customied buttons

Buttons shown to the left are preprogrammed with manufacturer's suggestioned bed postion


No programming is necessary by the user unless modified positions

TV Position

ZERO G Position

Lounge Position

Flat Position

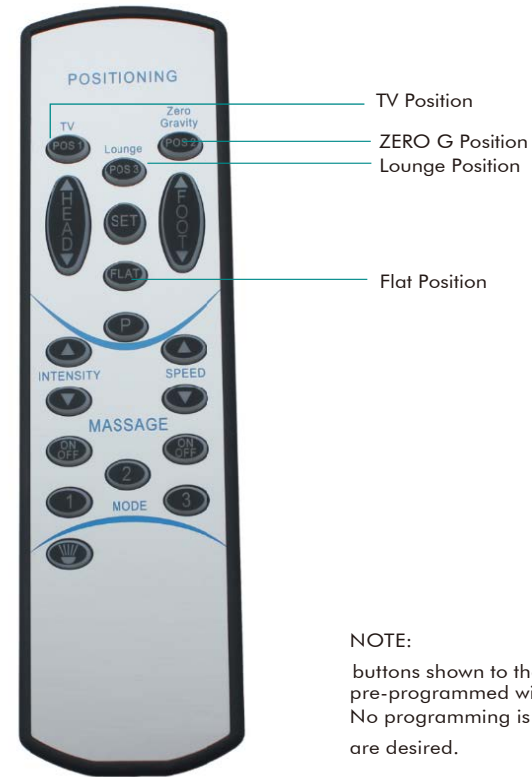



NOTE:

buttons shown to the left are pre-programmed with the manufacturer's suggested bed positions. No programming is necessary by the user unless modified positions are desired.



REMOTE CONTROL

Contents:

D	Wireless Remote Control		1 pc
H	Power Cord		1 pc

Note: We've already paired your remote to your bed base so you don't have to worry about syncing them up, In the event that the remote is not paired with the bed base, follow the steps below:


Pairing Set Up

1. Insert Power Cord (H) into wall outlet. Refer to image (i).
2. Press and hold the  (Head Up) and  (Foot Up) buttons simultaneously, while holding in the button; press the small button on the extension cord of control box
3. You will hear three quick Beeping sounds. Press the Head Up button and quickly release
4. If the remote does not sync, check the remote control batteries and repeat the process.

i



ii

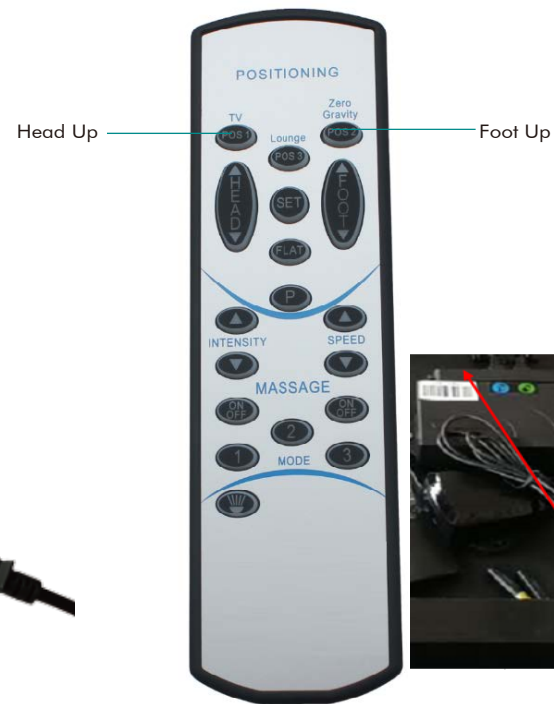

REMOTE CONTROL

Contents:


A Bed Base		2 pcs
D Wireless Remote Control		2 pcs

Using one remote for both base

Step 1: Plug base A and base B to power source.

Step 2: According to pairing set up instruction on page 15, use Remote "a" / "b" pair to base A

Step 3: Also use same remote "a" / "b" pair to base B, Remote a will control both base simultaneously once paired successfully.

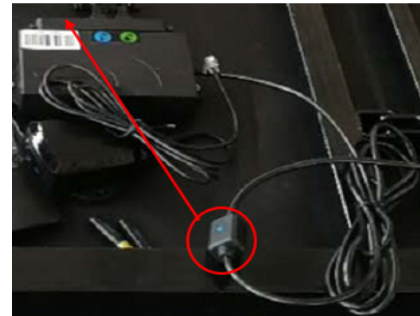

APP INSTRUCTIONS

Step 1

Use phone scan QR code (i),download AppRM control on website.

Step 2

For Android phone,click"Google Play" to download.



For iphone,pls click "App Store" to download.

Step 3


Open AppRMControl,connect to "QRRMXXXXXX"device(ii)

Step 4

Open APPRM Control,use it scan QRcode which sticked on the back of remote.

Then APP RM Control is connected successfull.(iii)

ii

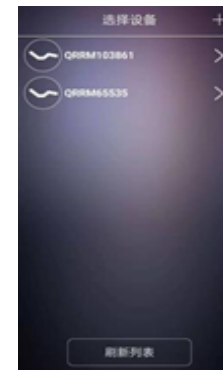

iii




MESSAGE


Message Function:


To activate the head massage function, press the (Head Massage On/Off) button once.
To turn off head massage, press the same button again.

To activate the foot massage function, press the (Foot Massage On/Off) button once.
To turn off foot massage, press the same button again.


To adjust the message intensity, press  to higher message intensity


To press  to lower message intensity

To adjust the message speed, press  to higher message speed


To press  to lower message speed

Massage Mode:

Press  to PULSE mode

Press  to WAVE mode


Press  to CONSTANT mode

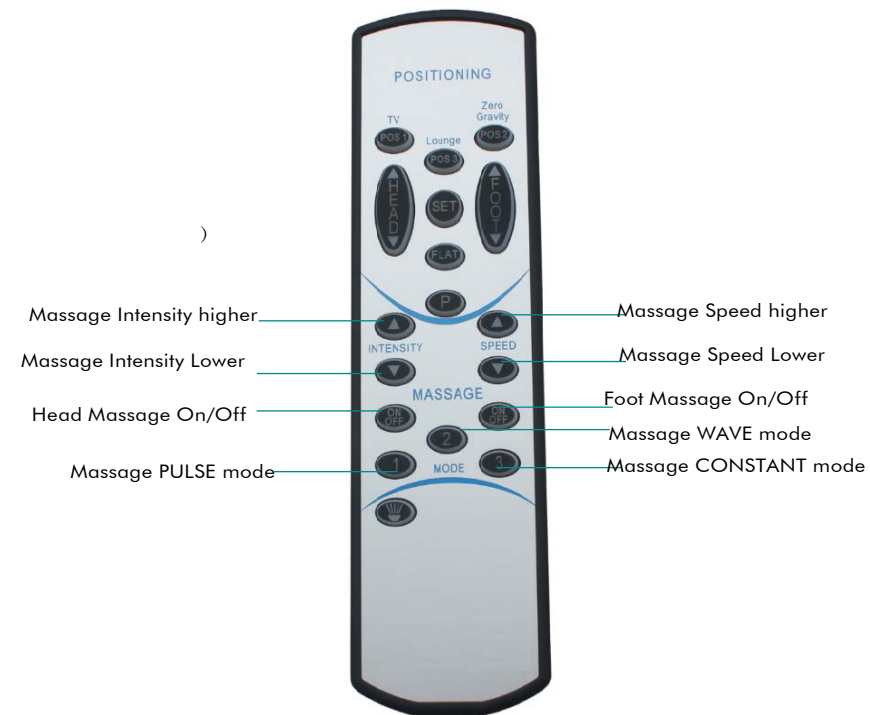


ELECTRIC COMPONENT SETUP

USB Ports

USB ports are located under the head portion of the bed base at two (2) locations. Refer to image (i).

To access the USB ports, press the  (Head Up) button to raise the bed to reveal the USB ports. Once your device is plugged into the USB port, you may lower or adjust the bed to your preference.

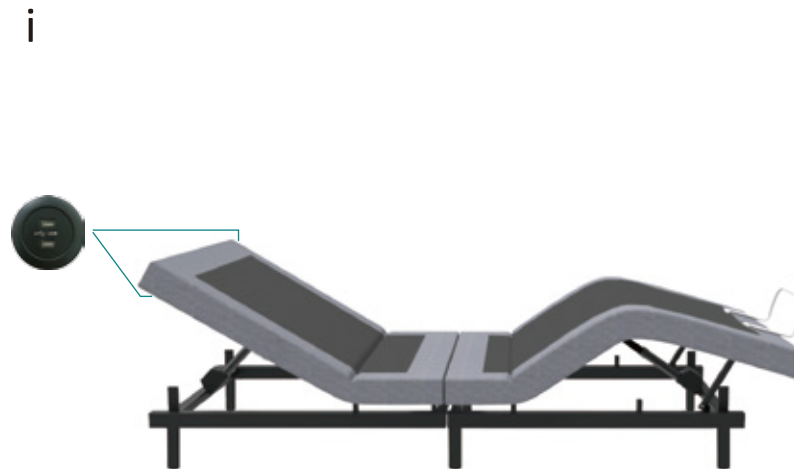

ELECTRIC COMPONENT SETUP

Overview

The electronic components are pre-installed and no assembly is necessary. However, some input locations are important for proper set up and functionality. Refer to image (i) and (ii) to familiarize yourself for proper setting and part locations.

i



ii



EMERGENCY BACKUP BATTERY

Contents:

C Transformer



1 pc

H Power Cord



1 pc

Step 1

Remove Power Cord (H) from wall outlet.

Step 2

Open the battery cover located on the backside of Transformer (C), insert two (2) 9V batteries (not included). Refer to image (i/ii/iii).

Note: the emergency backup battery is only to be used in case of a power outage, it's not to be used for normal operation of the bed.

i



ii



iii



TEST ALL FUNCTIONS

Overview

To ensure proper setup, use remote and test all functions for three (3) seconds.

- ☐ Head Motor
- ☐ Foot Motor
- ☐ Head Massage
- ☐ Foot Massage
- ☐ Massage Intensity
- ☐ Massage Speed
- ☐ TV Position
- ☐ Lounge
- ☐ Zero G
- ☐ Memory
- ☐ Flat
- ☐ USB Charger



WARRANTY

Electric Components

1- Year Full Warranty

We will replace the electric components when electric components fail during the 1st year from the date of purchase to the original purchaser.

2-5 Year Warranty









During the 2nd and 5th year from the date of purchase, We will provide replacement electronic components in the event they fail. The purchaser will be responsible to pay for the cost of components.

Bed Frame

20 - Year Warranty

We provide 20 - Year full warranty on the bed frame from the date of purchase to the original purchaser.

ELECTRIC
COMPONENTS

a	Head Motor		1 pc	f	Power Cord		1 pc
b	Foot Motor		1 pc	g	USB Port		2 pcs
c	Remote Control		1 pc	h	Massage Vibrator		2 pcs
d	Transformer		1 pc				
e	Control Box		1 pc				

ADDITIONAL HELP

If one or more functions of the bed have stopped working:

Check under the bed base to verify the wired connections are secure and there are no cords or bedding obstructing the movement of the base.

The remote control wont operate the bed functions:

Make sure the remote control is plugged in completely to the input location underneath the bed. Ensure that the power cord is properly connected and that the power cord is plugged into the wall outlet.

No functions of the bed will operate:

Check to ensure the power cord is properly connected.
Unplug the base for 1 hour to reset the electronic components.
Plug base into a different electrical outlet, or test current outlet with another working appliance. A grounded electrical surge protector is recommended with use of this product.

For further assistance contact us

ASSEMBLY COMPLETE

