

2 DOOR 3 DRAWER BUFFET

ASSEMBLY INSTRUCTION

Pg.1/10

ASSEMBLY
REQUIREMENTS

2-Person
Assembly

2.5 Hour
Assembly Time
(Approximate)

Tool Required
(Not Provided)



Thank you for purchasing our product!

Please refer this assembly instructions to assemble the product.

Contact our customer service department in case there are any missing or damage parts or hardware.

Replacement parts are normally shipped within 2 or 3 days.

We appreciate your business!

ASSEMBLY PREPARATION:

1. Remove all packaging materials, staples and packing straps from the carton.
2. Refer to Parts List and Hardware List and ensure parts and hardware are correct before assembly.
Contact customer service for missing parts.
3. Place all wooden parts on a clean, flat and soft surface (e.g. carpet or rug) to prevent scratch and damage to parts.

SAFETY PRECAUTION:

1. **KEEP ALL HARDWARE PARTS OUT OF REACH OF CHILDREN.**
2. **DISPOSE PLASTIC PACKAGING MATERIAL IMMEDIATELY TO AVOID ANY RISK OF SUFFOCATION TO CHILDREN AND ANIMALS.**

TIPS FOR ASSEMBLY:


1. Allow ample room for assembly and in close proximity to where product will be placed.
2. Assemble the product on a surface that does not scratch or damage the exterior gloss and finish of the furniture.
3. Identify all of the parts, hardware and quantities required for each step.
4. During assembly, do not over-tighten any fittings as this may cause damage.
5. **DO NOT USE POWER TOOLS TO ASSEMBLE THIS PRODUCT.**
6. Always place the product on a flat, level surface.
7. Do not sit or stand on the partially assemble product; only use the product for which it is intended.

CARE AND MAINTENANCE:

- Use a slightly damp cloth to clean the product. Do not use bleach or abrasive cleaning material.
- Check all the fittings periodically and re-tighten as necessary. Do not use the product if any of the parts is damaged or broken.
- Never allow any kind of liquid to remain on your furniture. Absorption can cause wood to warp or delaminate.
- Do not place hot items (e.g. hot drinks) directly onto the wood surface.
- Do not drag and pull your furniture.

2 DOOR 3 DRAWER BUFFET
ASSEMBLY INSTRUCTION

Pg.2/10

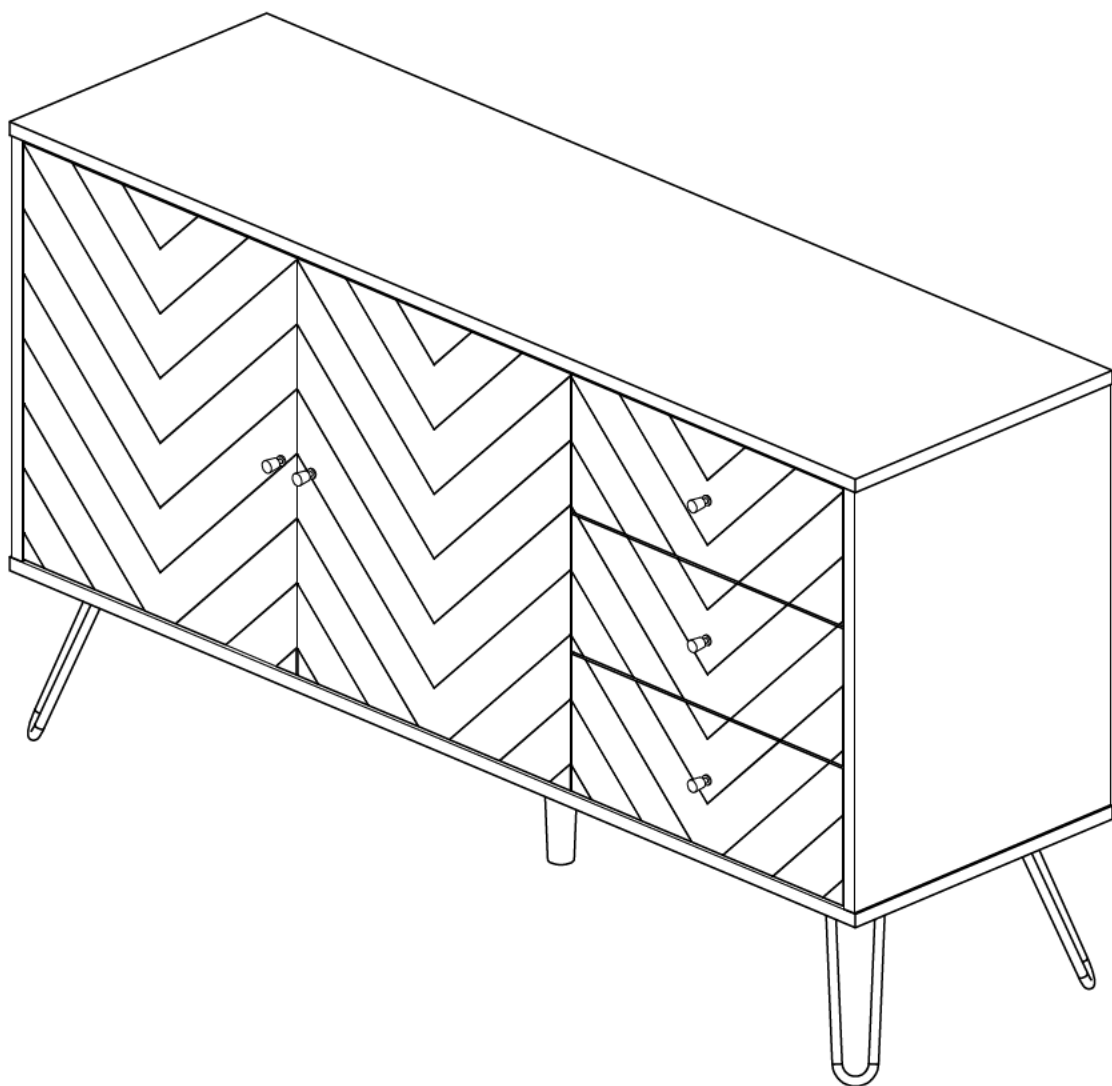


2 DOOR 3 DRAWER BUFFET


ASSEMBLY INSTRUCTION

Pg.3/10

PARTS LIST

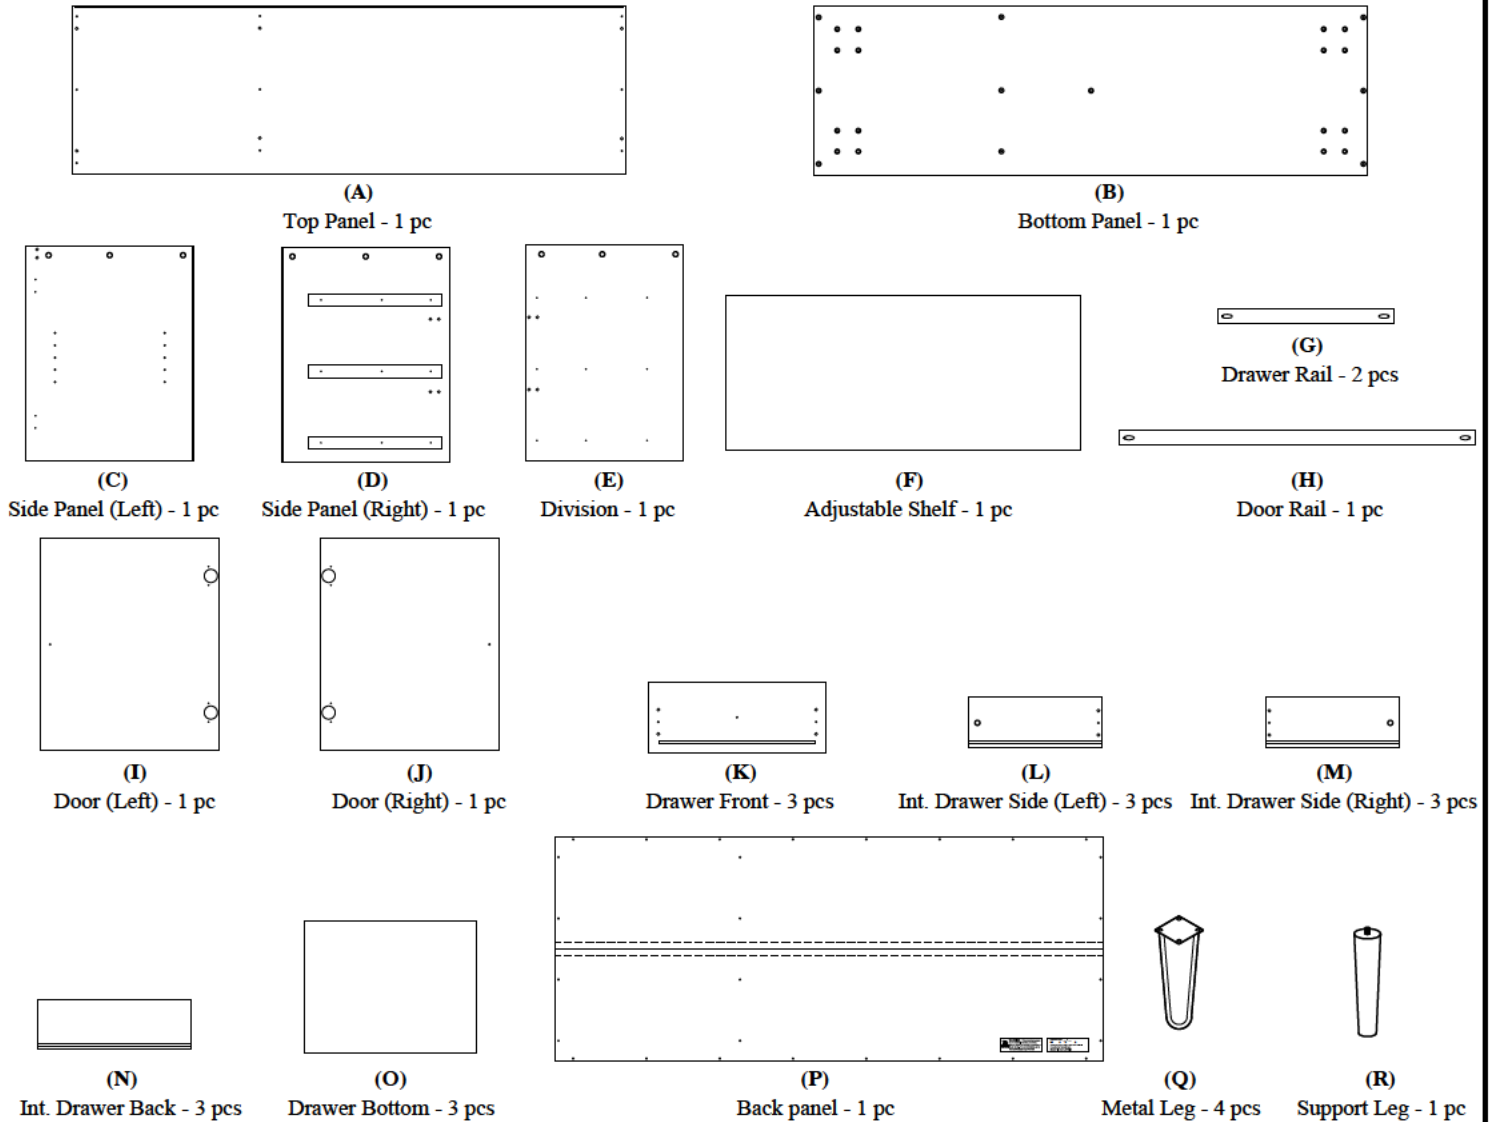

HARDWARE LIST

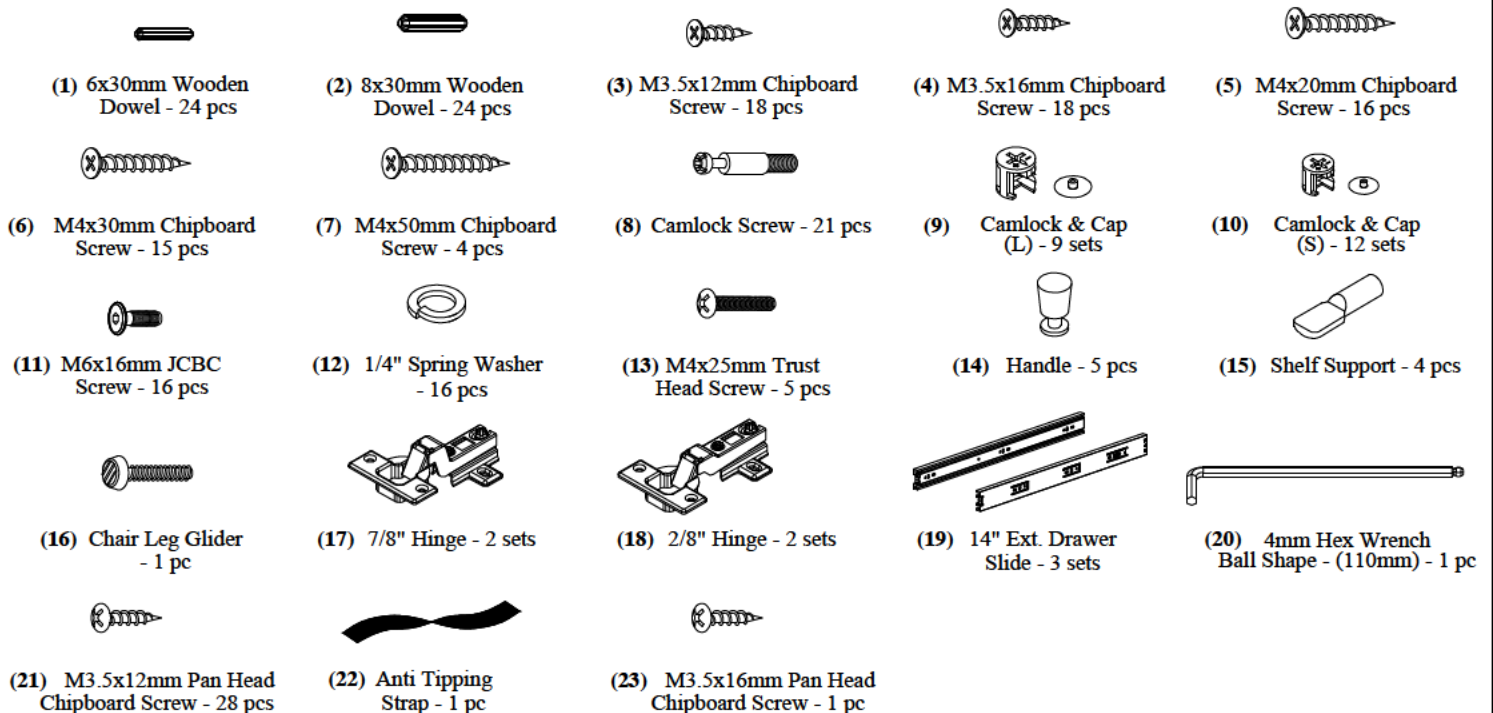

2 DOOR 3 DRAWER BUFFET


ASSEMBLY INSTRUCTION

Pg.4/10

PARTS POSITION

BOX 1 (ITEM NO# 417120AK1)		
ITEM	PART DESCRIPTION	QTY.
A	TOP PANEL	1
B	BOTTOM PANEL	1
C	SIDE PANEL - LEFT	1
D	SIDE PANEL - RIGHT	1
E	DIVISION	1
F	ADJUSTABLE SHELF	1
G	DRAWER RAIL (20 X 40MM)	2
H	DOOR RAIL (20 X 40MM)	1
P	BACK PANEL	1


BOX 2 (ITEM NO# 417120AK2)		
ITEM	PART DESCRIPTION	QTY.
I	DOOR - LEFT	1
J	DOOR - RIGHT	1
K	DRAWER FRONT	3
L	INT. DRAWER SIDE - LEFT	3
M	INT. DRAWER SIDE - RIGHT	3
N	INT. DRAWER BACK	3
O	DRAWER BOTTOM	3
Q	METAL LEG	4
R	SUPPORT LEG	1
	HINGES	4
	DRAWER SLIDE	3
	HARDWARE PACKET & MANUAL	1

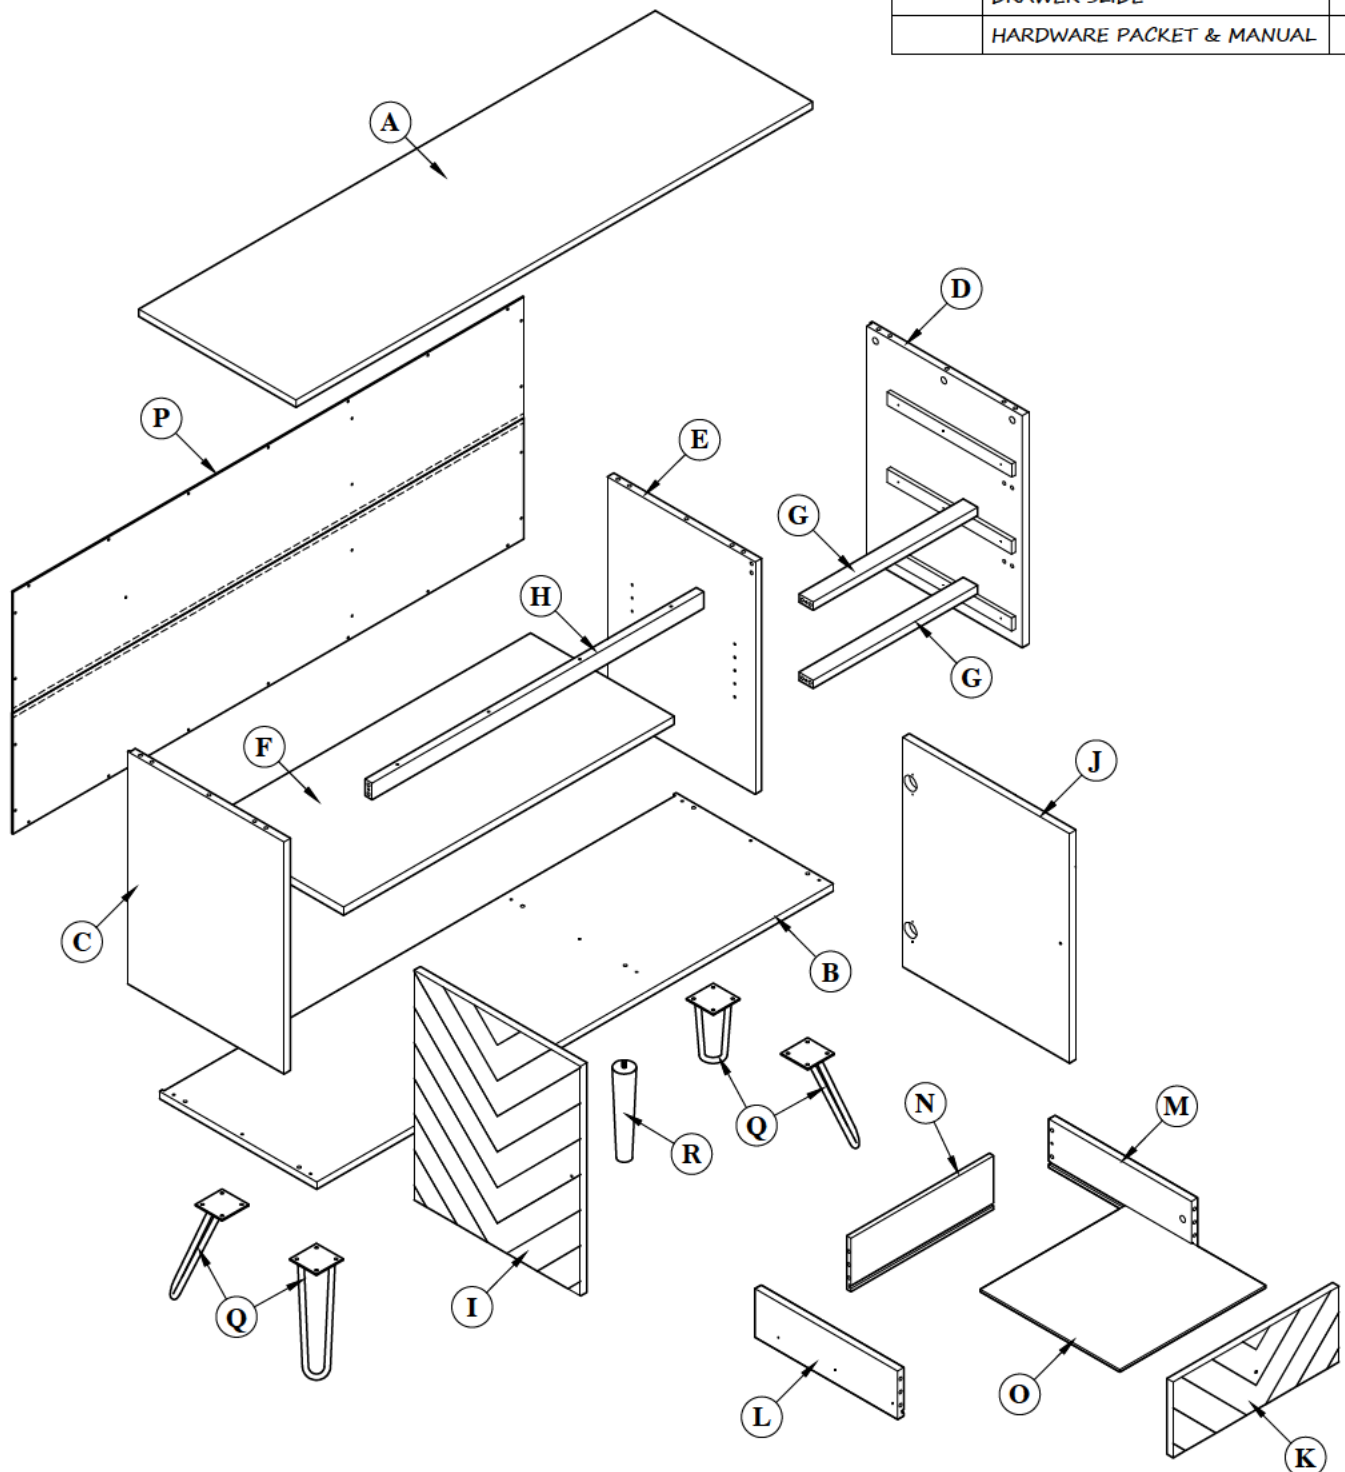

2 DOOR 3 DRAWER BUFFET


ASSEMBLY INSTRUCTION

Pg.5/10

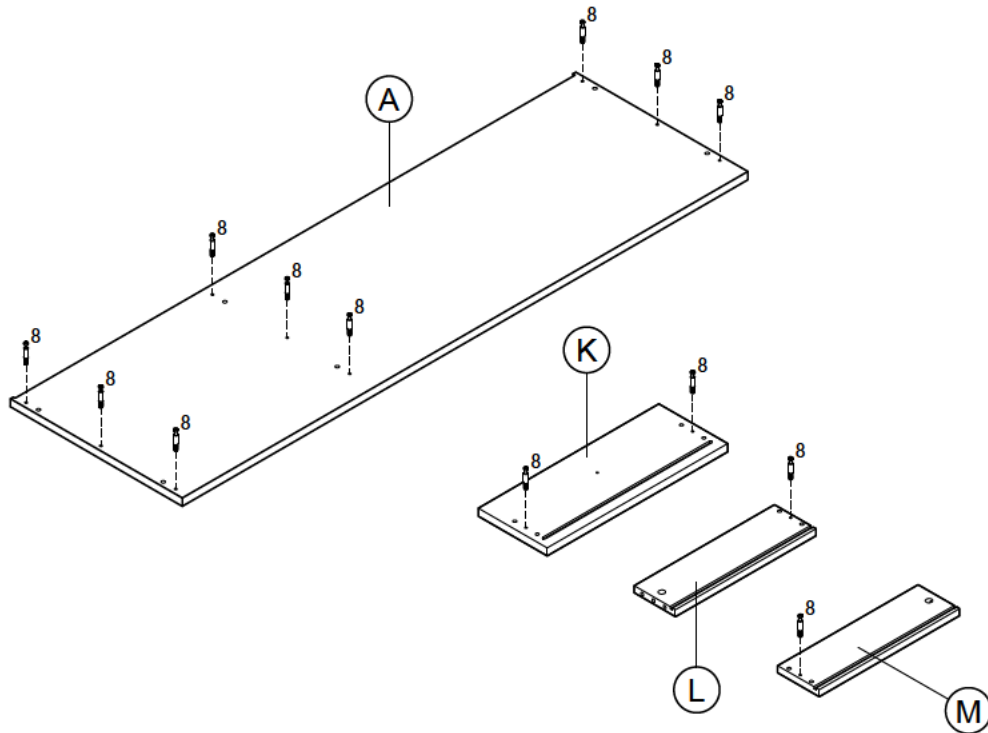



1

Insert Camlock Screw (8) into holes on **TOP PANEL (A)**, **DRAWER FRONT (K)** & **INT. DRAWER SIDES (L,M)**. Fully tighten Camlock screw using Philips Head Screwdriver.

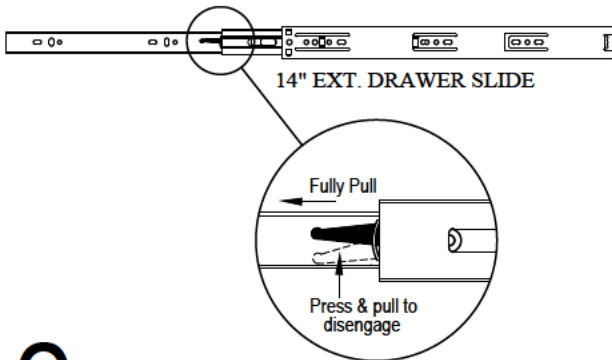


2

Disengage 14" Ext. Drawer Slide (19) by operating the release lever in the drawer slide.

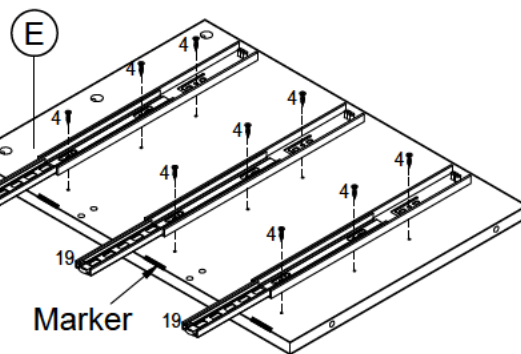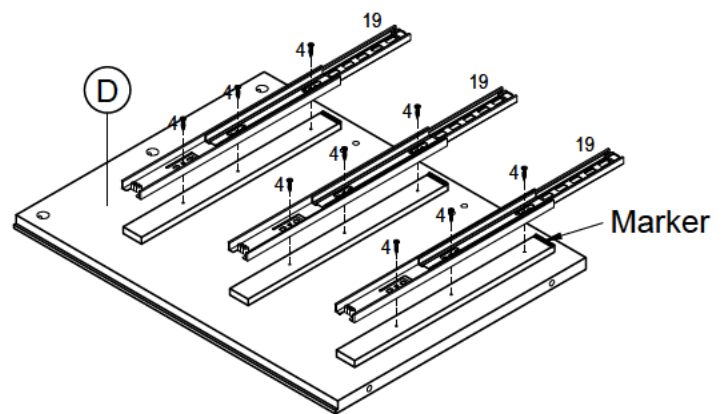

- (i) Align 14" Ext. Drawer Slide (19) - Front to the marker on **SIDE PANEL - RIGHT (D) & DIVISION (E)**.
- (ii) Attach 14" Ext. Drawer Slide (19) to predrilled holes at **SIDE PANEL - RIGHT (D) & DIVISION (E)** using M3.5x16mm Chipboard Screw (4).
- (iii) Fully tighten the screw with Philips Head Screwdriver.

NOTE : Please move internal slide to find the correct hole position.


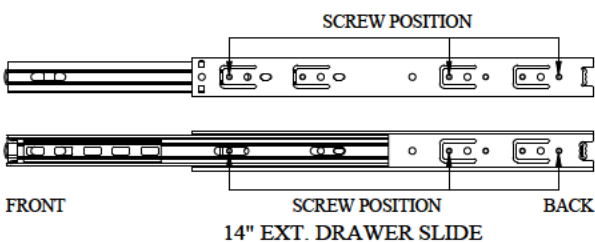


3

2 DOOR 3 DRAWER BUFFET

ASSEMBLY INSTRUCTION

Pg.6/10

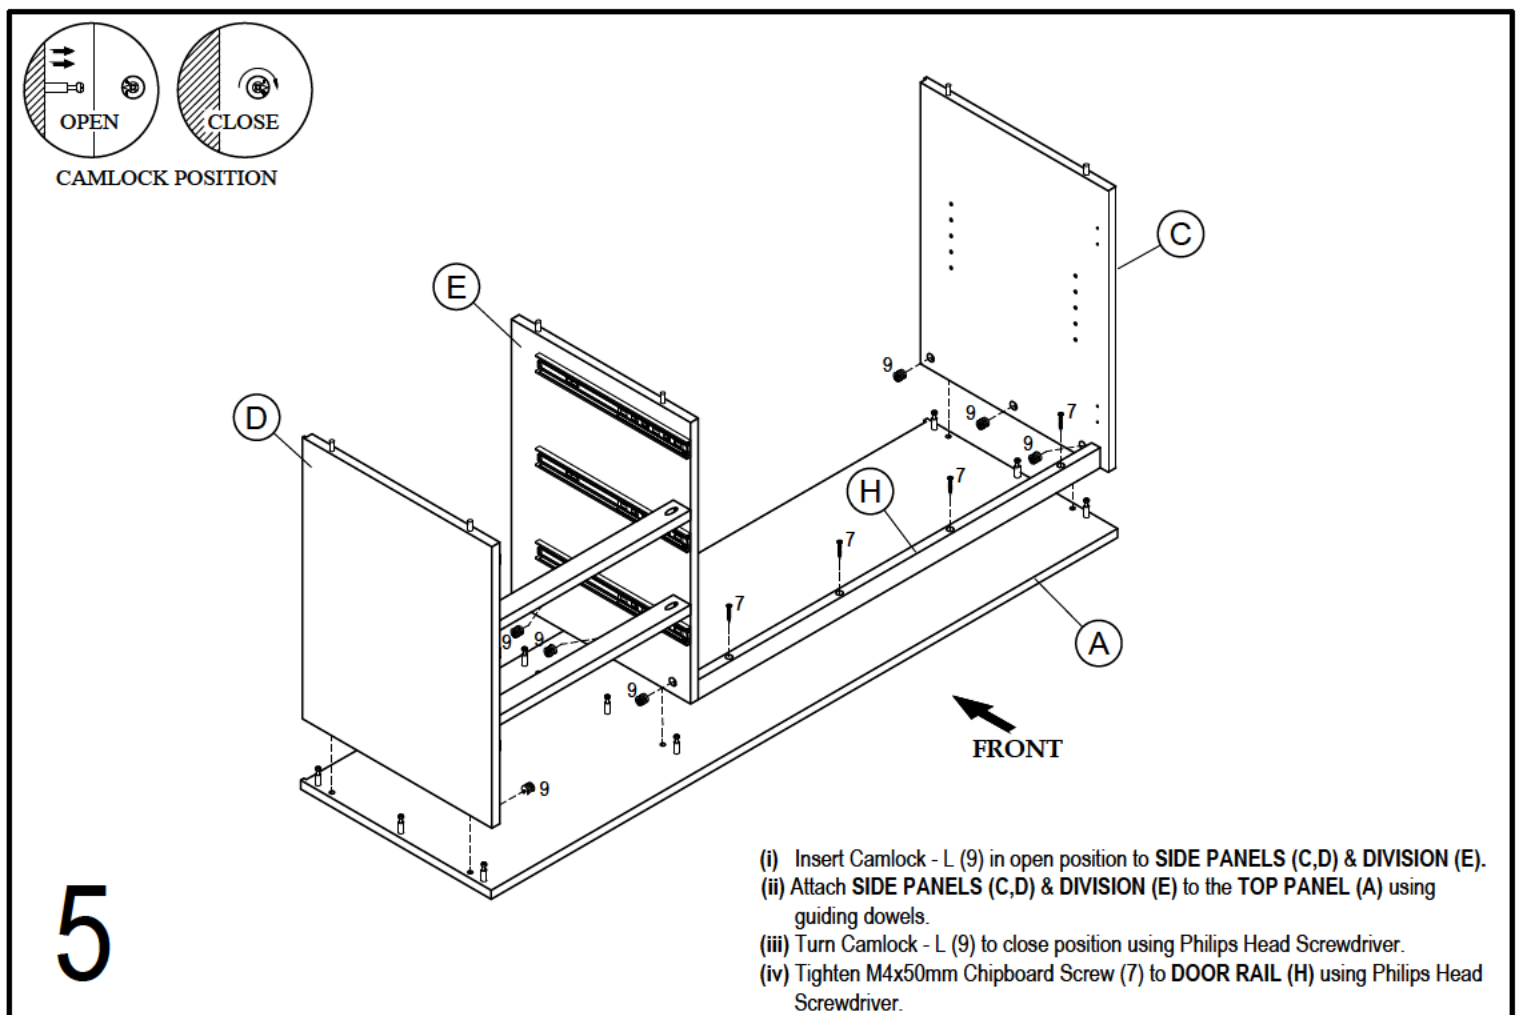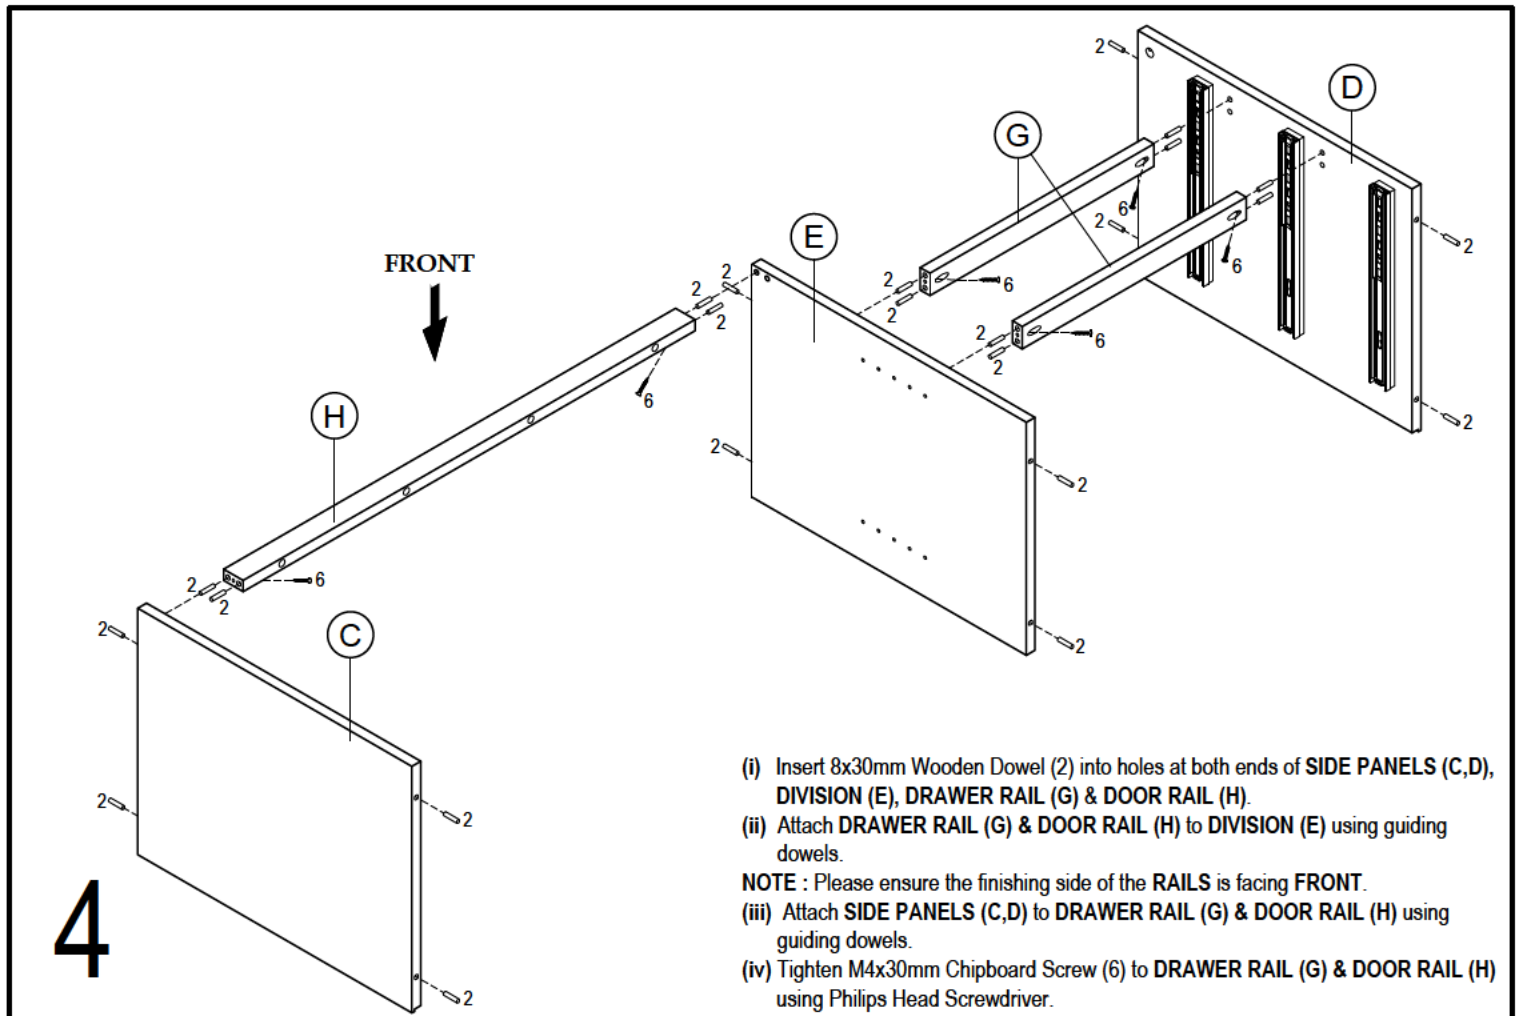


2 DOOR 3 DRAWER BUFFET

ASSEMBLY INSTRUCTION



Pg.7/10

6

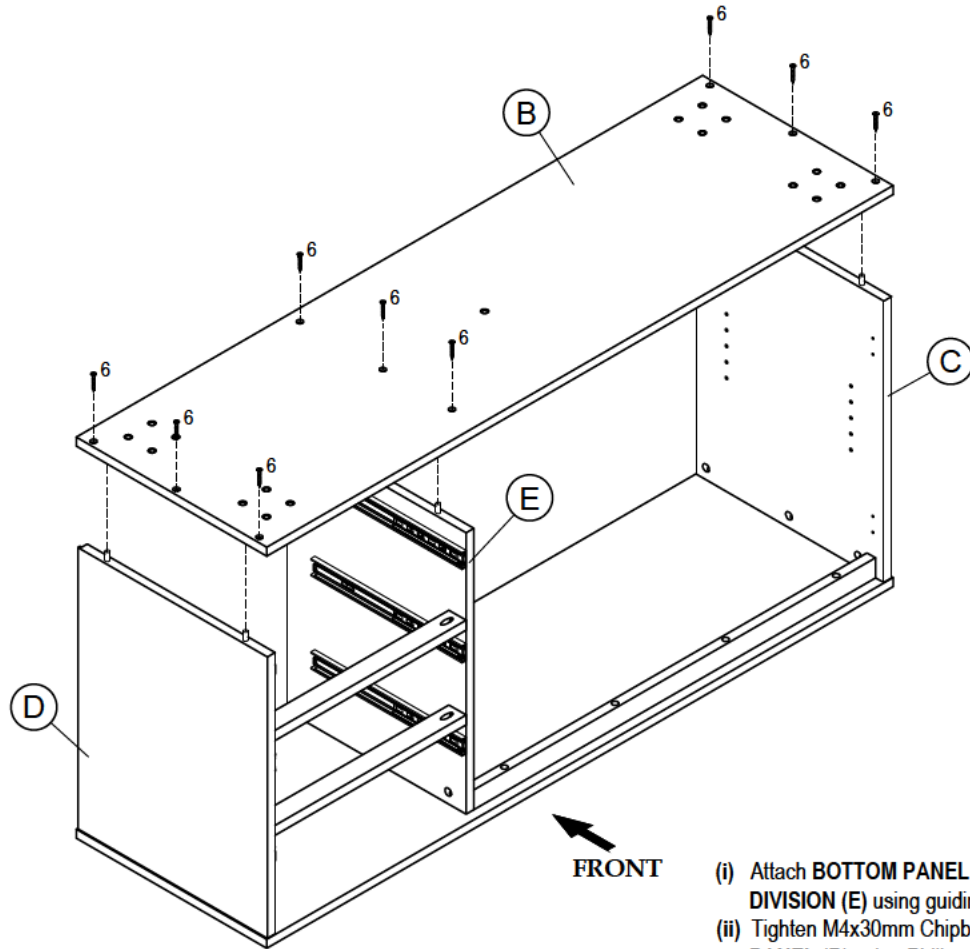

- (i) Attach **BOTTOM PANEL (B)** to **SIDE PANELS (C,D)** & **DIVISION (E)** using guiding dowels.
- (ii) Tighten **M4x30mm Chipboard Screw (6)** to **BOTTOM PANEL (B)** using Philips Head Screwdriver.

7

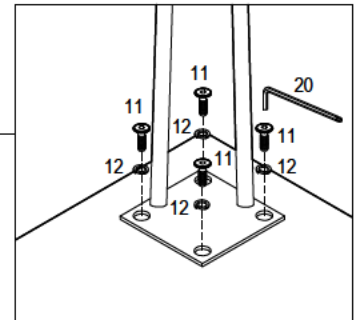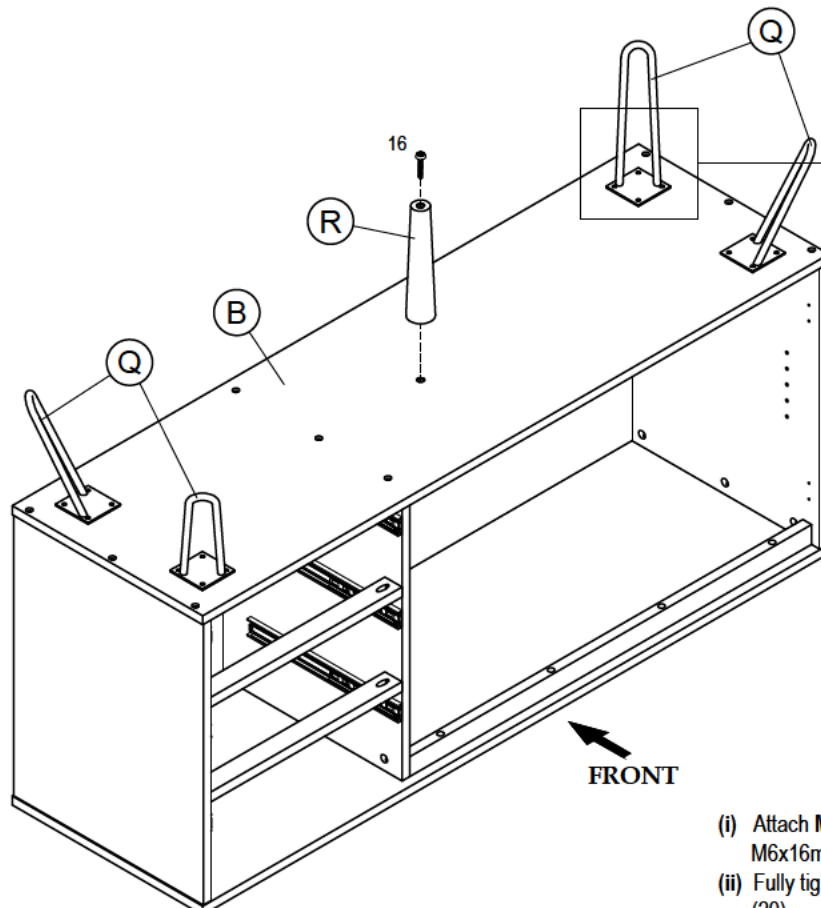


- (i) Attach **METAL LEG (Q)** to the **BOTTOM PANEL (B)**, by inserting **M6x16mm JCBC Screw (11)** together with **1/4" Spring Washer (12)**.
- (ii) Fully tighten the screw using **4mm Hex Wrench Ball Shape - 110mm (20)**.
- (iii) Attach **Leg Glider (16)** to **SUPPORT LEG (R)**,
- (iv) Attach **SUPPORT LEG (R)** to the **BOTTOM PANEL (B)**.

2 DOOR 3 DRAWER BUFFET


ASSEMBLY INSTRUCTION

Pg.8/10

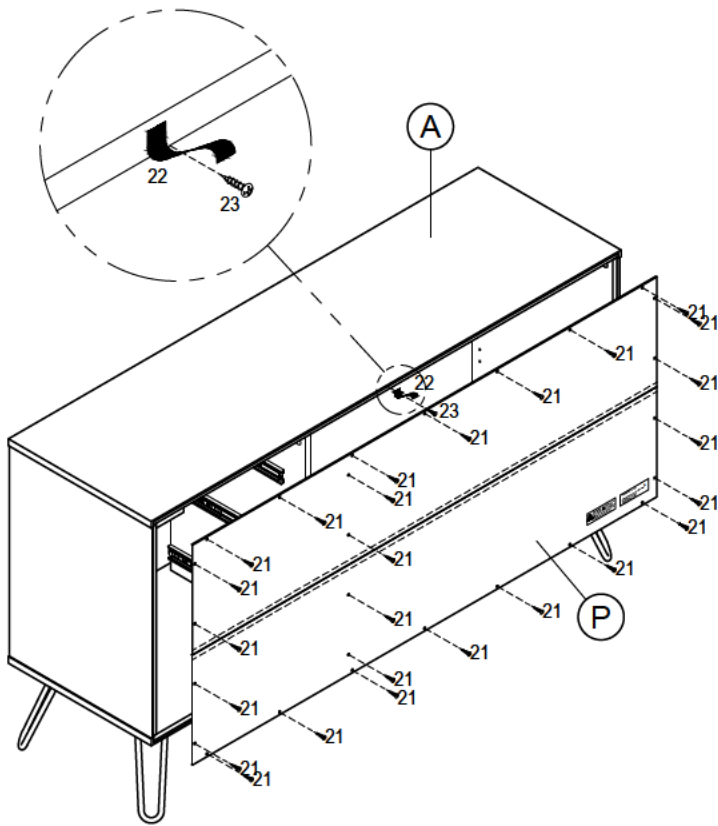


8

- (i) Attach BACK PANEL (P) using M3.5x12mm Pan Head Chipboard Screw (21) with Philips Head Screwdriver.
- (ii) Install Anti Tipping Strap (22) to back of TOP PANEL (A) using M3.5x16mm Pan Head Chipboard Screw (23) with Philips Head Screwdriver.

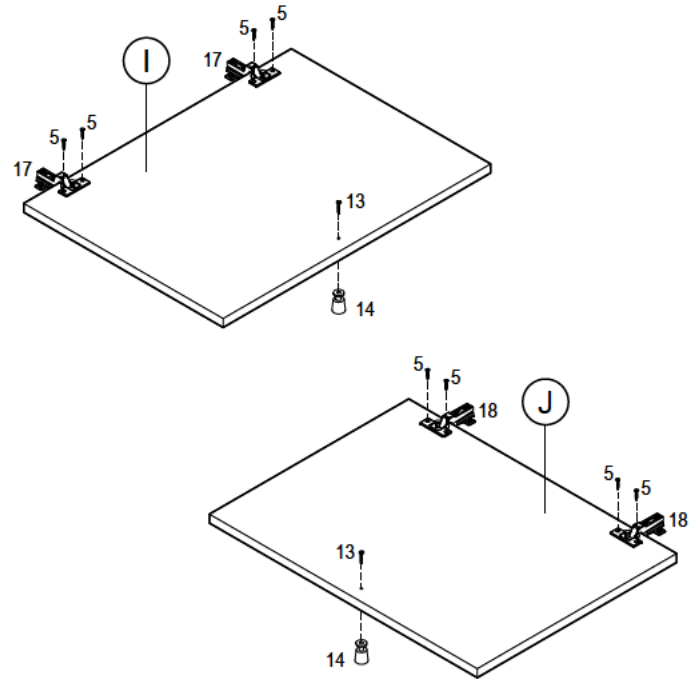


9


- (i) Attach 7/8" Hinge (17) to DOOR - LEFT (I) using M4x20mm Chipboard Screw (5) with Philips Head Screwdriver.
- (ii) Attach 2/8" Hinge (18) to DOOR - RIGHT (J) using M4x20mm Chipboard Screw (5) with Philips Head Screwdriver.
- (ii) Install Handle (14) with M4x25mm Trust Head Screw (13) with Philips Head Screwdriver.

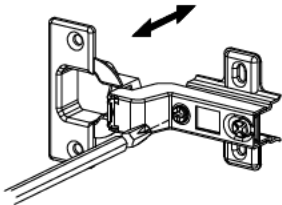


Turn Screwdriver clockwise or anti-clockwise to move door left or right.

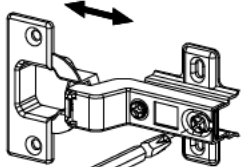

Turn Screwdriver clockwise or anti-clockwise to move door invert or outvert.

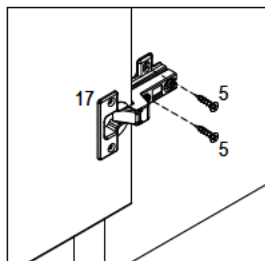

10


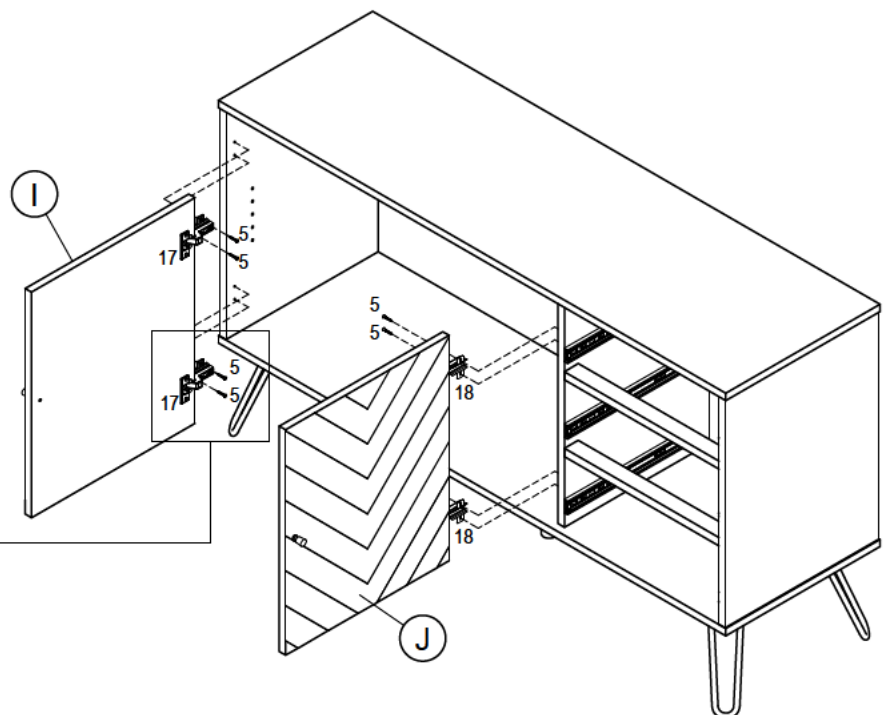


- (i) Attach DOOR - LEFT (I) with 7/8" Hinge (17) to predrilled holes at SIDE PANEL - LEFT (C) using M4x20mm Chipboard Screw (5) with Philips Head Screwdriver.
- (ii) Attach DOOR - RIGHT (J) with 2/8" Hinge (18) to predrilled holes at DIVISION (E) using M4x20mm Chipboard Screw (5) with Philips Head Screwdriver.

2 DOOR 3 DRAWER BUFFET



ASSEMBLY INSTRUCTION

Pg.9/10

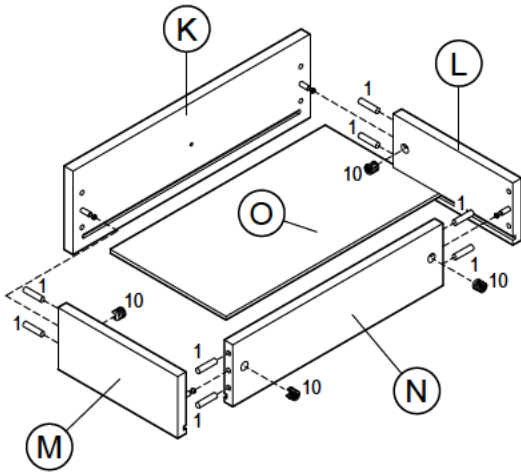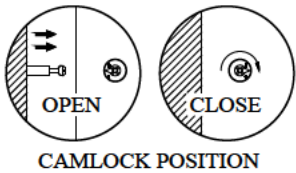


11

- (i) Insert 6x30mm Wooden Dowel (1) into holes at both ends of INT. DRAWER SIDES (L,M) & INT. DRAWER BACK (N).
- (ii) Insert Camlock - S (10) in open position to INT. DRAWER SIDES (L,M) & INT. DRAWER BACK (N).
- (iii) Attach INT. DRAWER SIDES (L,M) to INT. DRAWER BACK (N) using guiding dowels.
- (iv) Insert DRAWER BOTTOM (O) into slot.
- (v) Attach DRAWER FRONT (K) to drawer half (L,M,N,O), tighten all Camlock - S (10) to close position using Philips Head Screwdriver.

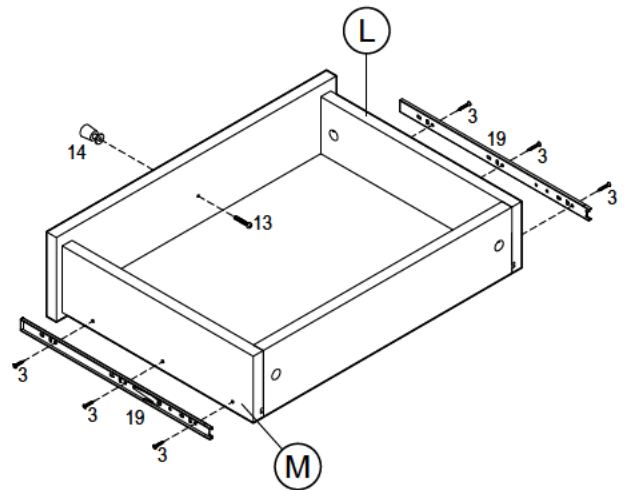
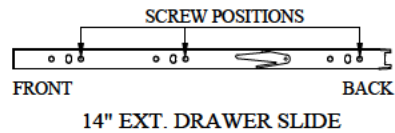


12

- (i) Attach 14" Ext. Drawer Slide (19) to predrilled holes at INT. DRAWER SIDES (L,M) using M3.5x12mm Chipboard Screw (3).
- (ii) Install Handle (14) & M4x25mm Trust Head Screw (13) with Philips Head Screwdriver.

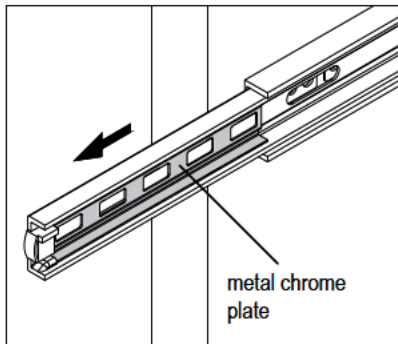


Pull out the metal chrome on runner towards front.

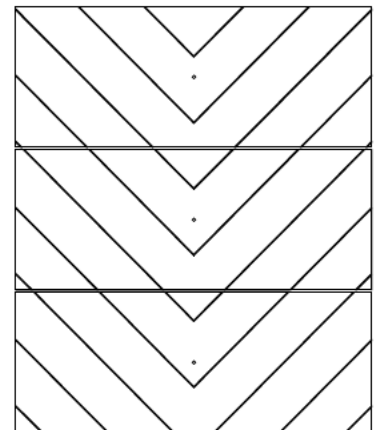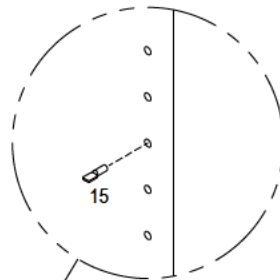

Note: Please align the "v" groove patterns on the Drawer Front (K) as per illustrated.

13

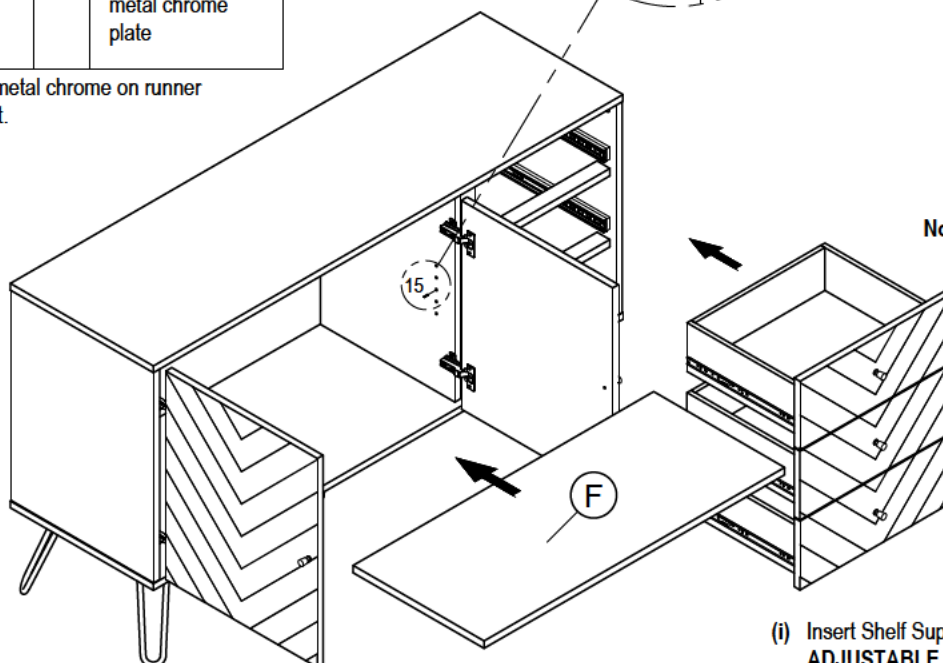


- (i) Insert Shelf Support (15) to desired position and place the ADJUSTABLE SHELF (F).
- (ii) Insert Drawer to the unit.


2 DOOR 3 DRAWER BUFFET

ASSEMBLY INSTRUCTION

Pg.10/10

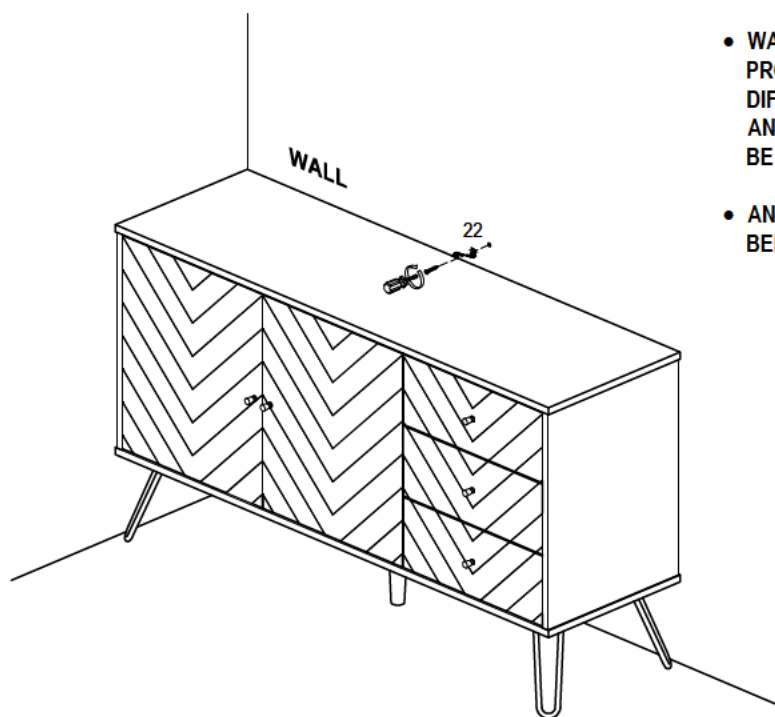

- WALL PLUG & SCREW ARE NOT SUPPLIED WITH THIS PRODUCT AS DIFFERENT WALL MATERIAL REQUIRE DIFFERENT TYPE OF FIXING HARDWARE. SUITABLE ANCHORING HARDWARE FOR THE TYPE OF WALL MUST BE USED TO MOUNT THIS PRODUCT TO THE WALL.
- ANTI TIPPING STRAP (11) MUST BE FOLDED BACK 15MM BEFORE IT IS AFFIXED TO THE WALL ANCHOR.

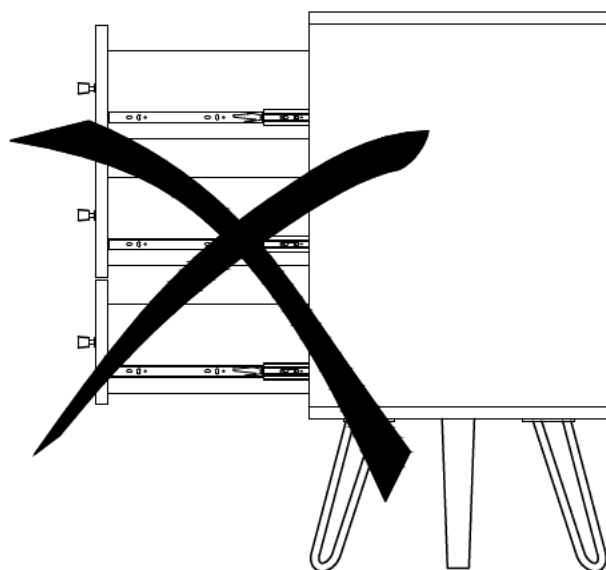

CAUTION:
PLEASE DO NOT FULLY OPEN DRAWERS SIMULTANEOUSLY AS
IT WILL CAUSE THE ASSEMBLED UNIT TO TIP OVER.