



Installation Instruction



SAFETY INFORMATION

Please read all safety information and instructions before installing the ceiling fan and save this manual for future reference.

SAFETY INFORMATION	01
PRE-INSTALLATION	02
INSTALLATION INSTRUCTION	04
OPERATION INSTRUCTION	08
SPECIFICATIONS	09
TROUBLESHOOTING	10



SAFETY INFORMATION



WARNING

- Before connecting the power supply, make sure that the power supply used matches the specifications of the ceiling fan.
- All wiring must comply with national and local electrical codes ANSI/NFPA70. If you are not familiar with wiring, please use a qualified electrician.
- To reduce the risk of fire or electric shock, turn off the power to the fuse box or circuit breaker before installing the fan.
- To reduce the risk of personal injury, attach the fan directly to the building's support structure and ensure that it can accept at least 35 pounds (15.9 kg).
- Make sure that the installation location allows the fan blades to rotate without obstacles.

Installation Location



WARNING


- Do not operate this fan with a variable (Rheostat) wall controller or dimmer switch.
- Doing so could result in damage to the ceiling fan's remote control unit.

PRE-INSTALLATION


Tools Required (Not Included)



Power Drill

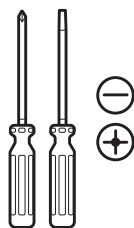


Screwdriver

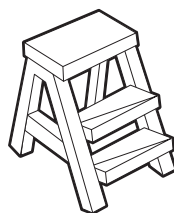

Step Ladder



Wire Stripper

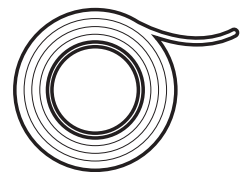

Electrical Tape



Parts List



Mounting Bracket X 1



Canopy X 1



LED & Light Kit Pan X 1



Motor X 1



Coupling Cover X 1



Light Cover X 1



Downrod X 2




Fan Blade X 3



Remote Control X 1



Remote Control Bracket X 1

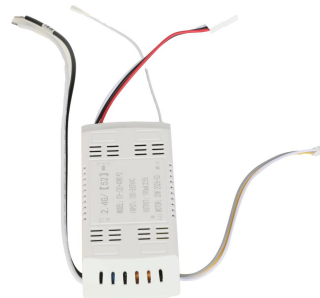

Receiver X 1



Blade Screw X 6



Self-tapping Screw X 4



Wire Caps Screw Terminals X 3



Expansion Bolt X 2




Plastic expanding screw anchor X 4




INSTALLATION INSTRUCTION

Step 1: Mounting Bracket Installation

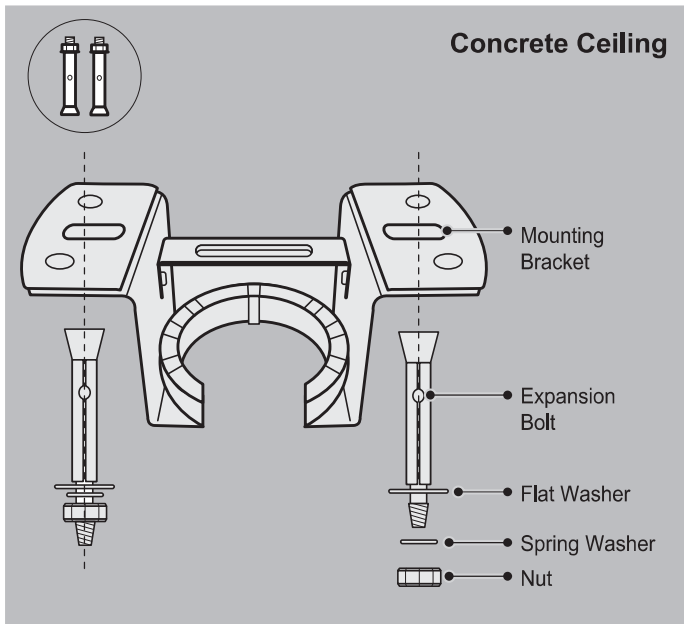

1. Drill holes with electric drill ($\phi 8$ mm).
2. Use expansion screws to fix the mounting bracket to the ceiling.

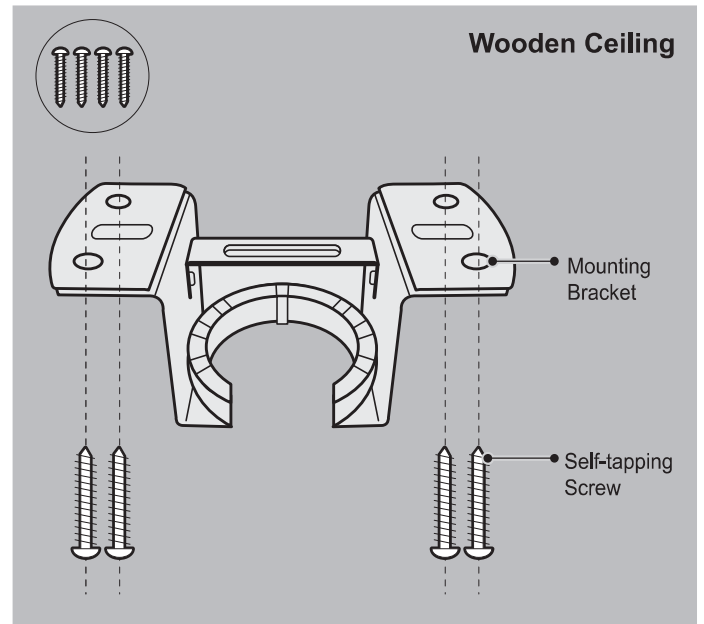

Fasten the mounting bracket to the ceiling with self-tapping screws.


Step 2: Fan Blade Installation



- 1 Fix the fan blade to the motor with screws.

Note:

- The fan blade needs to be aligned with the "center" position of the screw hole group.
- Do not lock the screws when installing the blades and then tighten all the screws after all the fan blades are installed.

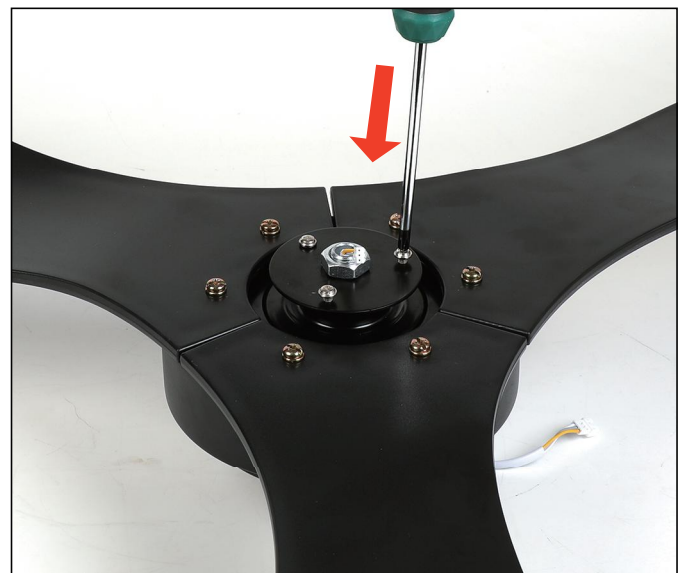

- 2 Loosen the screws of the upper cover of the motor with an electric drill.



Step 3: Installation of LED Board



- ③ Thread the motor line through the LED board, then align the LED board with the triangular cover on the motor and put it on.




- ④ Route the light source wire from the motor through the light source plate with magnet on the back, plug in the terminal, and then place the light source plate in the center of the lamp panel.



- ⑤ Connect the motor line and the lamp panel line.

Step 4: Downrod Installation

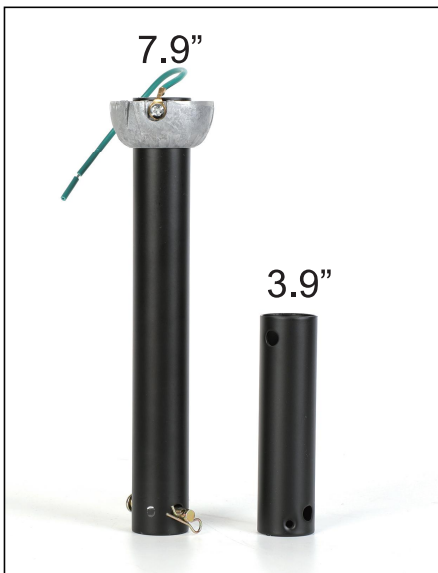

- ① Select a suitable downrod. (2 lengths are available 3.9\"/>



- ② Take out clevis pin on the motor.



- ③ Loosen the screws on the motor, and do not take them out completely.




④ Assemble the canopy, and coupling cover to the downrod in turn.




⑤ Thread the motor wire through the lower pull rod, lock the fixing screw with the clevis pin, and tighten the motor screw.

Step 5: Installation of the Assembled Fan

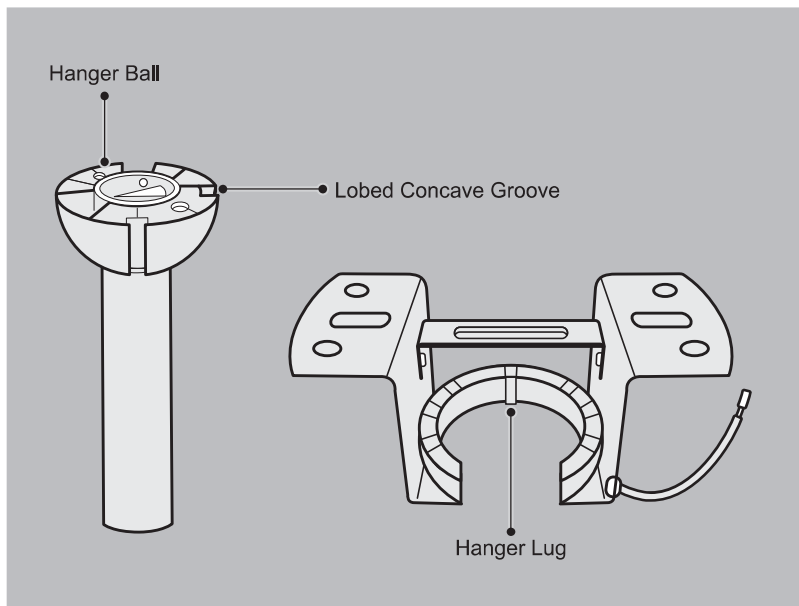

① Lift the assembled fan onto the mounting bracket.

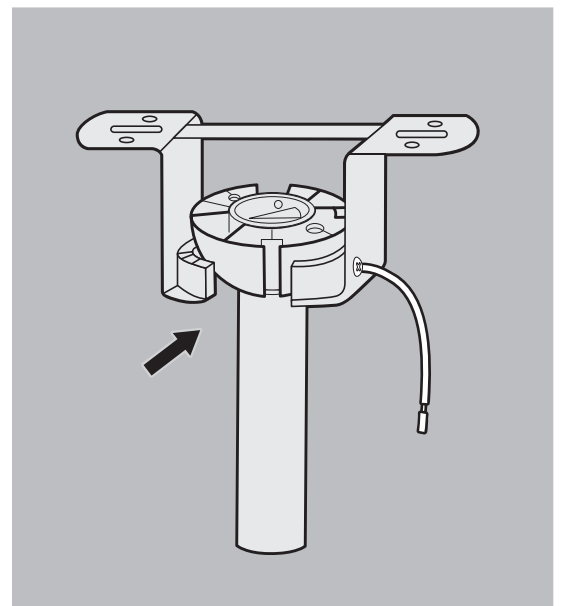


② Ensure the concave groove of the hanger ball is positioned on the hanger lug of the mounting bracket.



Step 6: Wiring Instruction

⚠ Shut off the power to the fuse box or circuit breaker before wiring.

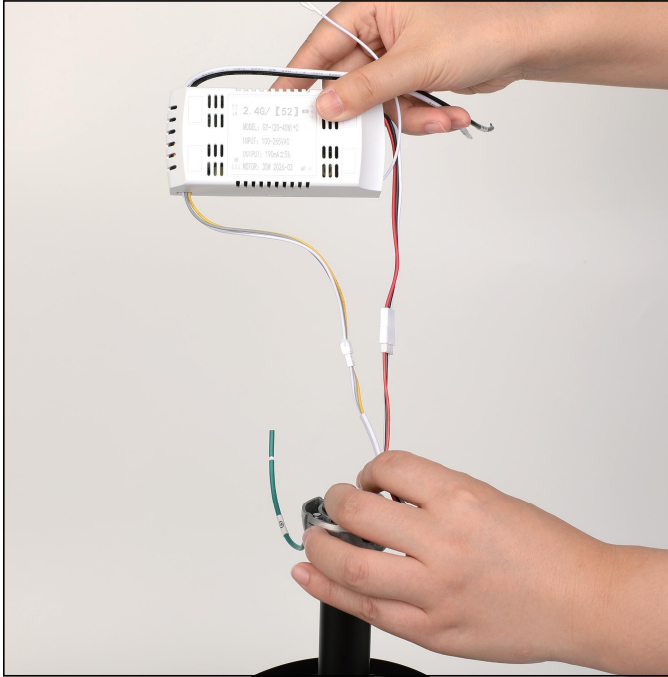

1 The receiver is connected to the motor power cord and the ceiling power cord respectively.

Note:

Connect wires color to color, plug to plug.




Live Wire




Neutral Wire




Ground Wire

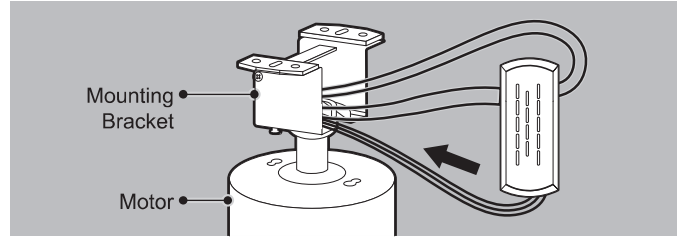

2 Put the receiver into the mounting bracket.

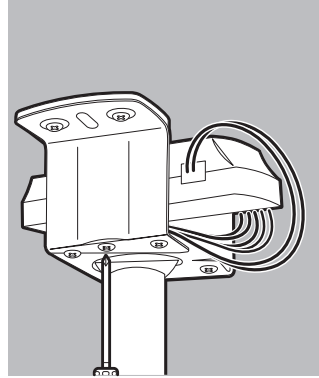

3 Cover the receiver and power cord and tighten the screws.

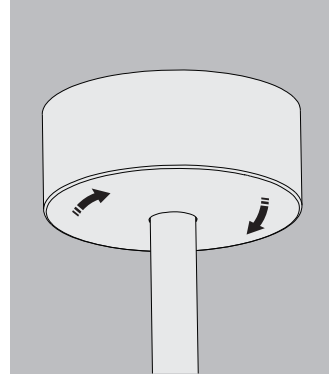

4 Decorative cover on, rotate, tighten .

Step 7: Install the Lampshade



1 Put the light cover to the LED board.



2 Spin forward to tighten the light cover.



Step 8: Change Downrod(OPT)


How to choose different lengths of downrod

1. The ceiling of the house is 100 inches from the ground, suitable for installing a 7.8inch downrod.
2. The ceiling distance of the house is 110 inches, which is suitable for installing a 13.8 inch downrod.
3. The ceiling of the house is 120 inches from the ground, which is suitable for installing a 14-inch downrod.
4. If the space requires a longer boom, you will need to use a longer extension wire, the wire thickness should be selected close to the motor wire thickness, too thick or too thin (changing the resistance required by the receiver), the motor may not work.


NOTICE

If the house suitable for installing a 1.5m(590 inches), it should a new controller, Please contact us for customization


If you need to change different length downrod, please follow these steps:

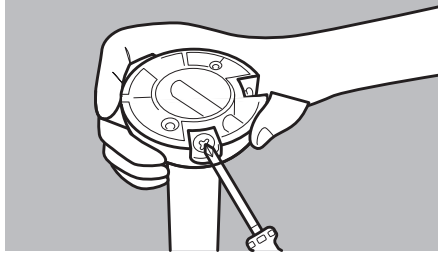


① Loosen the screws on the hanging ball.

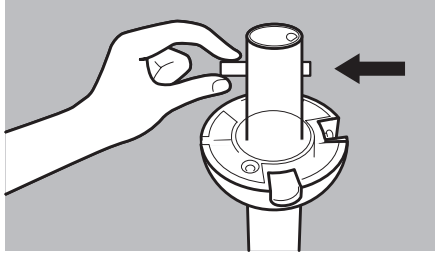


② Remove the metal bar.

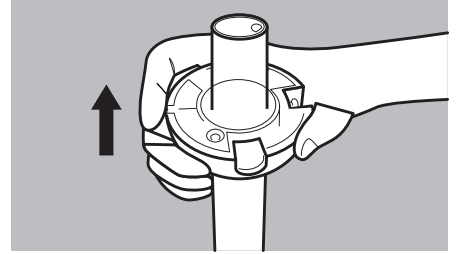


③ Take off the hanging ball from the original downrod.

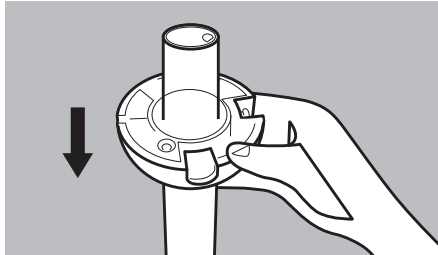

④ Install the hanging ball to an appropriate downrod.

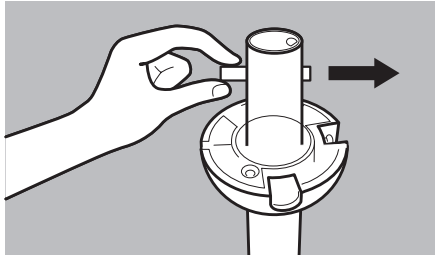


⑤ Insert the metal bar.

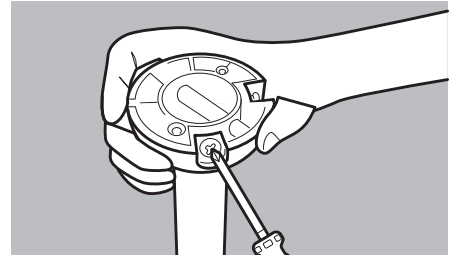

⑥ Tighten the screws.

OPERATION INSTRUCTION

Control Method

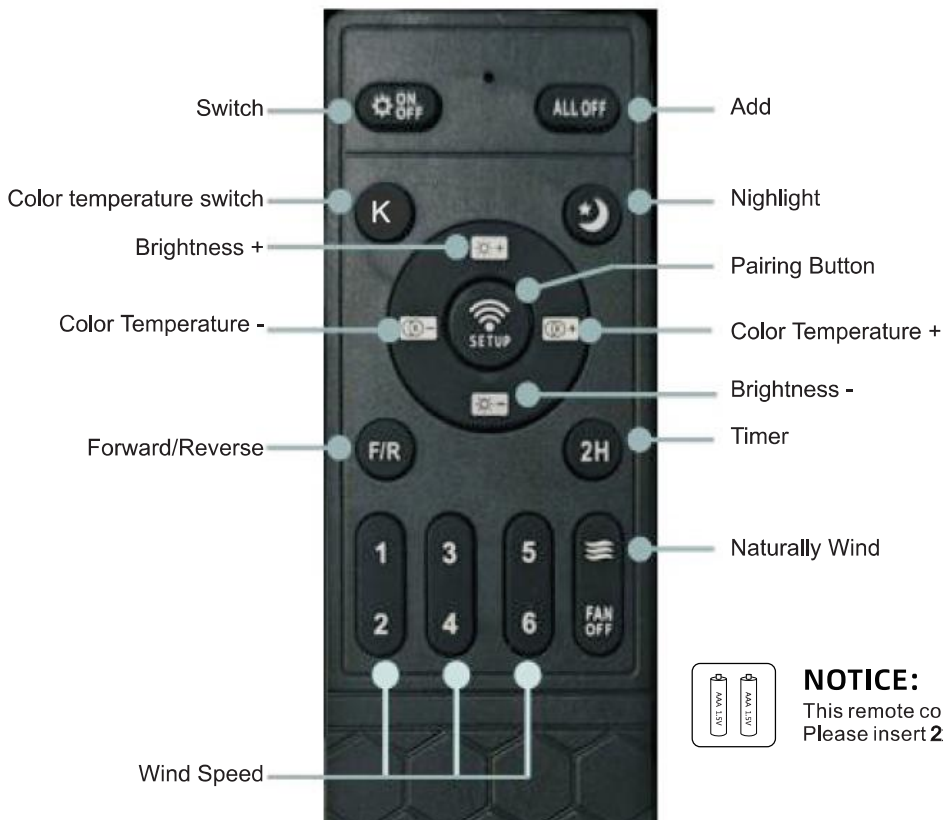

NOTICE:

This remote control does not contain batteries. Please insert 2x1.5V batteries before use.