


User Instructions

Villa Pergola for motorized operation Size:300x300(117"x117") 300x400(117"x157") 400x400(157"x157")

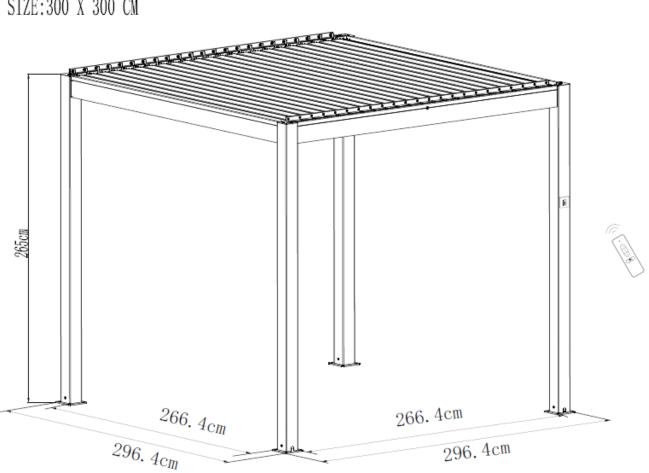

SIZE:300 X 300 CM

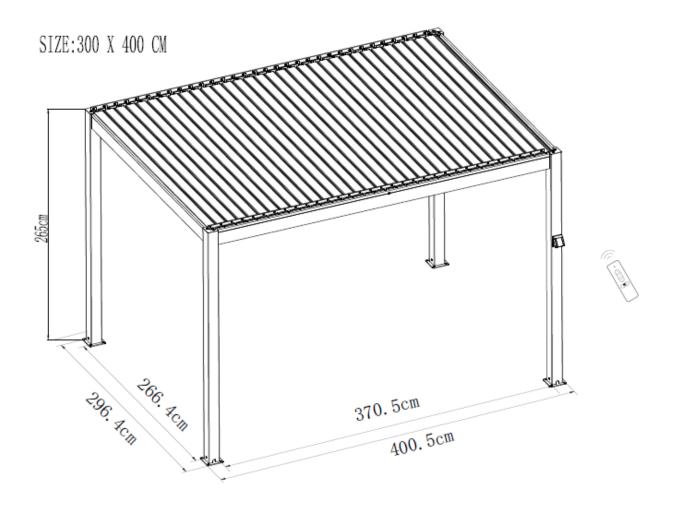

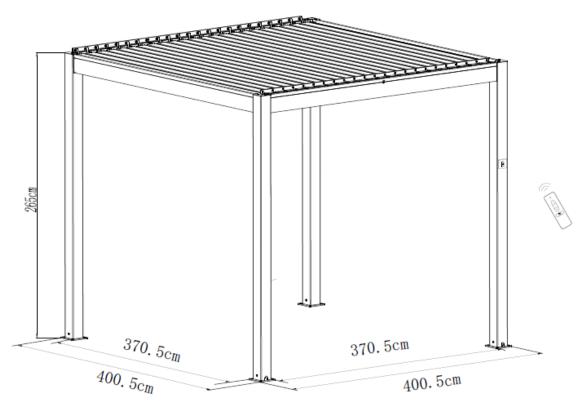

Content

Tools and man force	3
Parts List	4-6
Product Description	7
Safety Instruction	7-8
Mounting	9-18
Dismounting	19
Storage	19
Disposal	20



Attention:

Read this instruction manual carefully and completely before mounting and usage. Keep this manual for future reference.

Dear Customer,

Congratulations and thank you for choosing to buy the Villa Pergola from our company. To enjoy this product for a long time and for your own and the safety of other people, please follow the assembly instructions.

Before you start the assembly process and then using the Pergola, we suggest you are best to get familiar with this product. Make sure all parts listed up in below packing lists are delivered and intact. If you find that there are parts missing or damaged please do not install the pergola but contact us immediately. Do not start the assembly process if parts are missing or defective.

Tools and man force


Recommended: 2 or 3 people


Additional tools :

- 1.Ladder
- 4.Tape measure
- 7.Spirit level
- 5. 5mm hexagon wrench supplied8.Electric drill

2. M10/13 open wrench supplied

3.Rubber mallet 6.Pencil

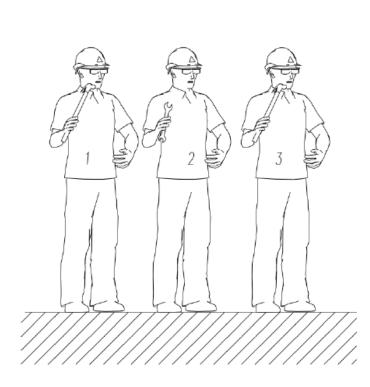

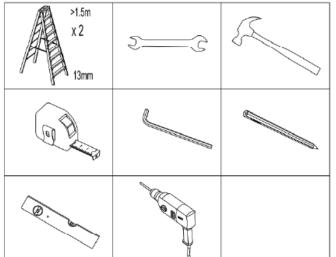


4

Parts List

Please check all parts against the parts list before commencing construction of pergola.

SIZE:300X300CM PARTS LIST:

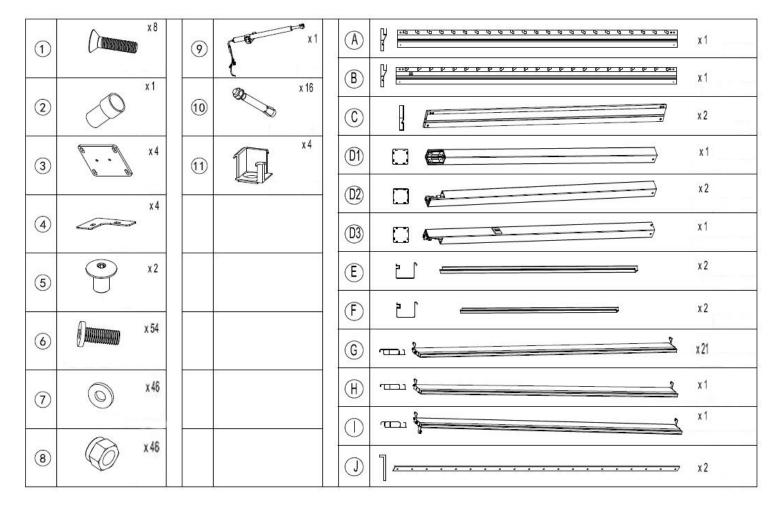

SIZE:300X400CM and 400X400CM PARTS LIST:

1	×8	9	1 ar	x1		x 1
	x 1	-	<u>ং</u>	x 16	$\mathbb{B} \left\{ \begin{array}{c} \frac{1}{2} \\ \frac$	x 1
2		10	a b		© .	x 2
3	×4	1	A	x 4		x 1
	x4	-				x 2
4	les a					x1
5	(*) x2				(E) 간	x 2
	۵	-			(F) L'	x 2
6	× 72					x 30
7	© × 64					x1
	x 64		5			x1
8					0]	x 2

Hardware and other parts:

10M8x20 countersunk screw	2 50 to 40 connector
③Base plate	④Upright cover
⑤M10 screw cap	⑥M8x20 Hexagon bolt
⑦Plastic Spacer	
	®M8X100 expansion bolt
Gutter connector	

Aluminum profile parts list:

Beam with slots	Beam with motor direction & slots
©Beam	D1 Post + post connector
D2 Post + post connector	D3 Post + post connector
© Gutter	©Gutter
©Common louver	Centre louver
①Driving louver	<pre>①Control rod</pre>

Product Description

Make the most of your outdoor living area with your pergola. Relax and enjoy the outdoors while being protected from sun. The coated aluminum frame pergola is perfect for shading your garden, deck, courtyard and swimming pool.

Important Safety Instructions

Warning: For the safety of you and other persons it is important to follow below instructions and obey warnings.

Symbol explanation

 \wedge

This warning triangle calls attention to hazards that that can lead to death or to severe injuries or which are important for the functioning of the Pergola.



This sign identifies important notes.

Safety instructions



To install this pergola technical knowledge is necessary. Do not mount this pergola yourself but contact a professional workman for help if

- you are unsure if the pergola can be mounted on the place you chose for installation.
- you do not understand the instruction manual or parts of it.
- you do not have necessary tools available.
- you do not have necessary technical knowledge



A minimum of three healthy adults are required to move and install the pergolaas the product is big and heavy. Do not try to install the pergola alone. If the pergola falls, it could cause serious injuries and damages! Contact an authorized assembler for help.



Do not install the pergola when you find damage parts are that parts are missing. Contact your dealer.



Keep children and pets out of the working area during assembly and adjustments.



This product and its fixing parts are only suitable for installation on a plain cement wall or stable brickwork. If the wall/brickwork shows cracks you have to consult a professional.



Nobody is allowed to change the products' design and structure without the permission of manufacture or authorized deputy.



Please make sure that your hands are clean at the time of the assembly; otherwise you may soil frame.



Nobody is allowed to climb onto the Pergola. Hanging anything on the Pergola is forbidden.

Sheeting was used to protect the paint. This must be removed afterwards.

This structure is a non-permanent structure and the warranty does not cover damage incurred under extreme weather conditions including heavy rain, high winds or if exposed to high heat from heaters or BBQs.


Safety precautions should always be followed when assembling and using this product to reduce the risk of personal injury and damage to equipment. Please read all instructions before assembly and use. Never leave children unattended around/under this pergola. Do not attempt to assemble or use the pergola in moderate or heavy wind conditions. Always **keep the pergola louver open** and secure it during heavy winds or extreme weather conditions to avoid damage to the pergola or personal injury.


Mounting and usage


Step 1

Attach base plate 3x4 to the bottom of posts (1x1, 02x2 and x3x1), use bolts 3x8 to attach with hex key or electric drill


(p2) posts should be installed diagonally as below

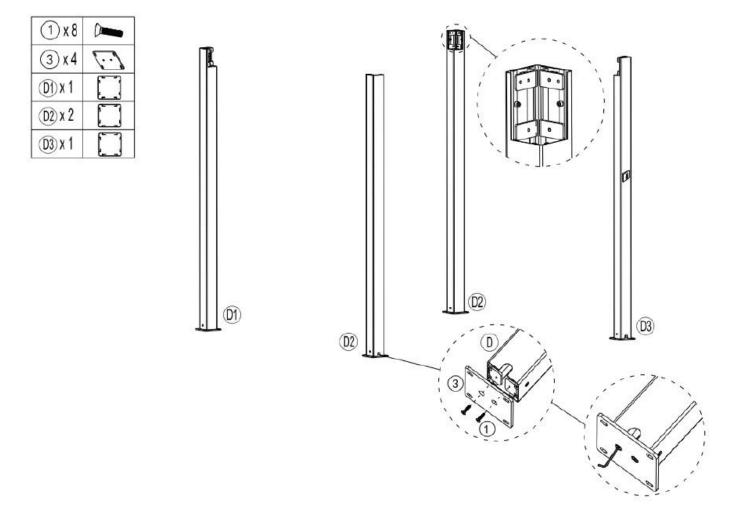

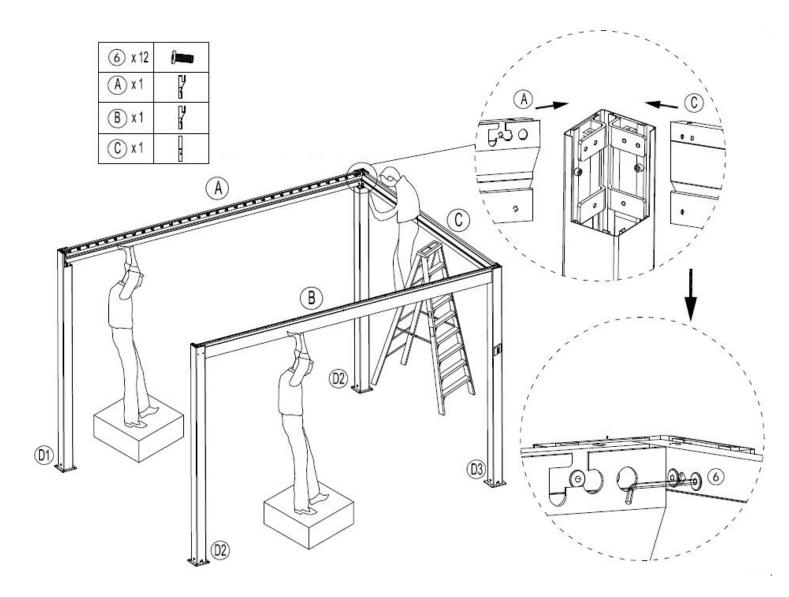


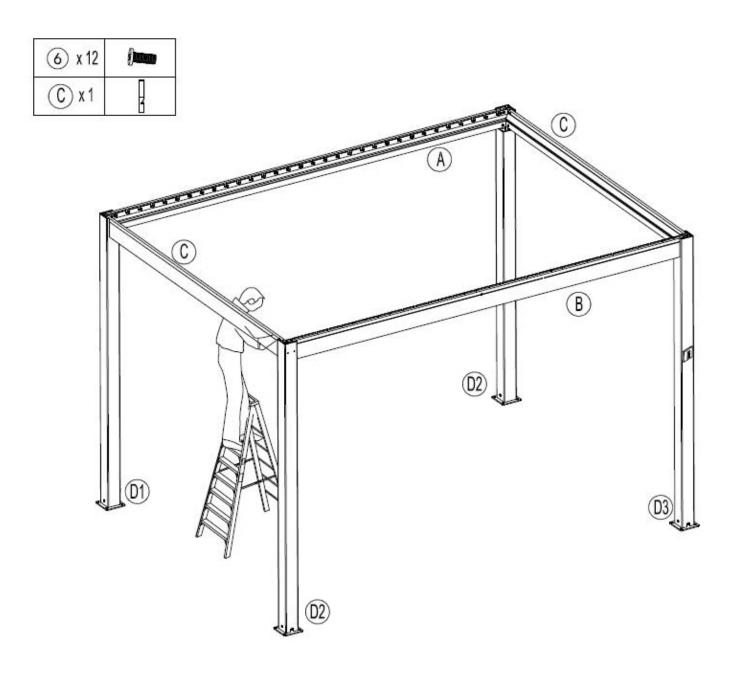

Attach upright cover @x4,use bolts 6x8 to fasten

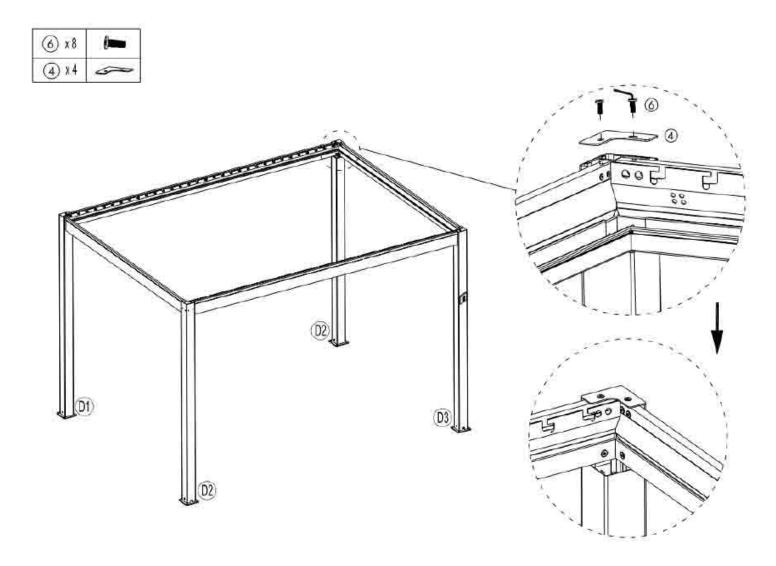

Step 5 Attach all four gutters (©x2 and © x2)by hooking inside the (@), (@), (©) beams

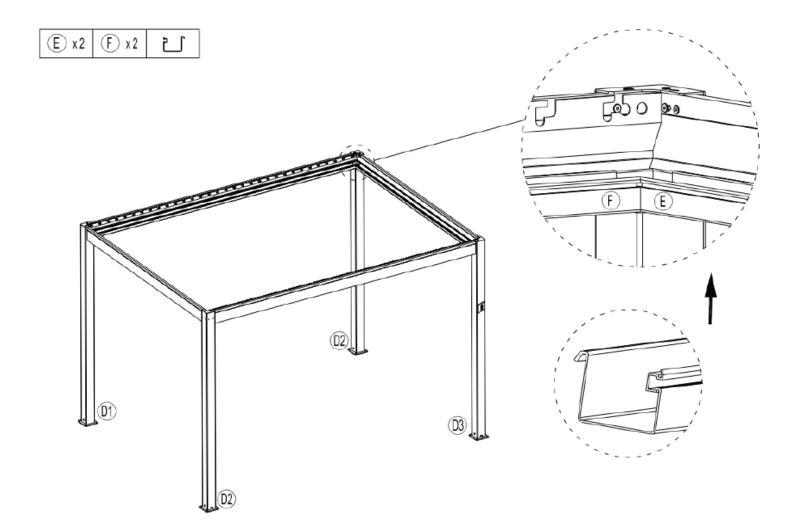

Located holes in center of beams(@and®)


Place center louver (Binto <u>12th slot</u>, lining up with the holes for 300x300 cm size.

Place center louver \textcircled into <u>**16th slot**</u>, lining up with the holes for 300x400 cm and 400x400 cm size.


Using M10 nut ⑤X2, secure the louver in place

Place Driving louver ①in line with <u>6th slot</u> on the beam @and®.


Fit all common louvers **©**X21 for 300x300cm and **©**X30 for both 300x400 and 400x400 cm size into the remaining slots in the beams

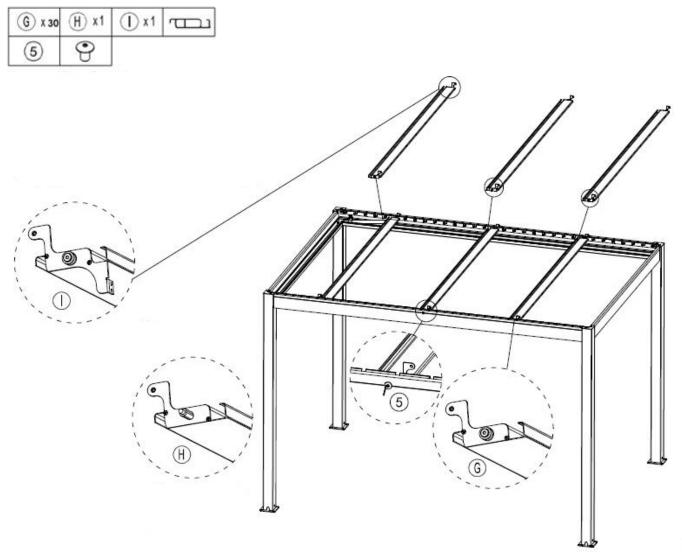

Step 7 Fasten motor **③x1** as shown below.

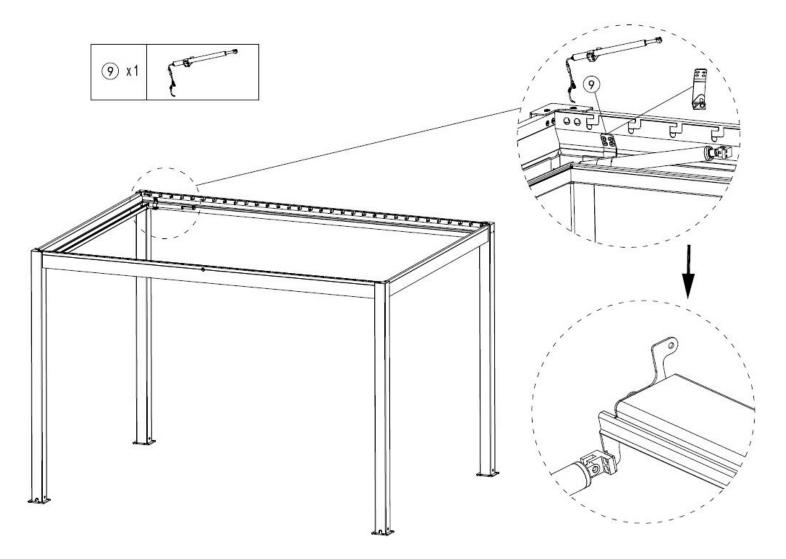

Fasten @x4 gutter connector and @x1 50 to 40 connector. Connect the female and male plugs for the LED lighting (DC24V to DC24V) and motor (DC24V to DC24V) and plug the power cable into local socket.

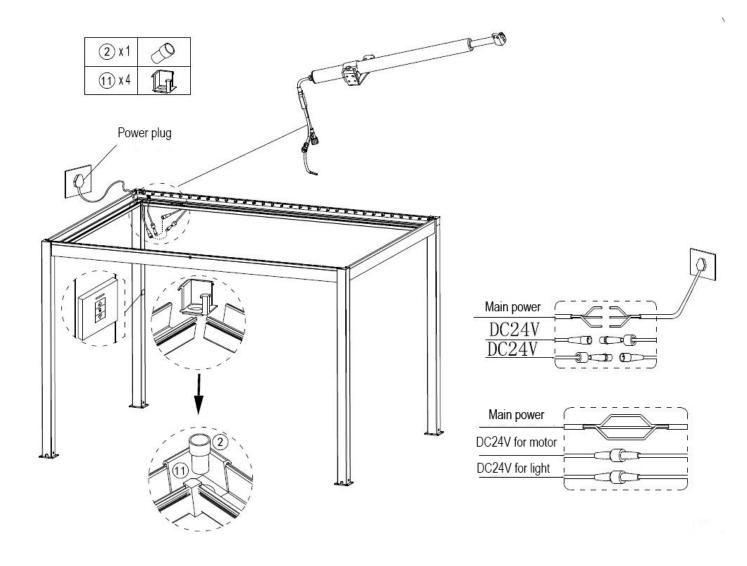

Fix $\bigcirc x 2$ (flat L-shaped aluminum profile).


One for each other of the slats is required.

Use bolt@x46, plastic spacer⑦x46 and nut@x46 to tighten for 300x300 cm and 400x400cm size.

Use bolt®x64, plastic spacer⑦x64 and nut®x64 to tighten for 300x400 cm and 400x400cm size.

Secure the louvers at each end.

NOTE: Do not over tighten. Over tightening will prevent louvers from moving.

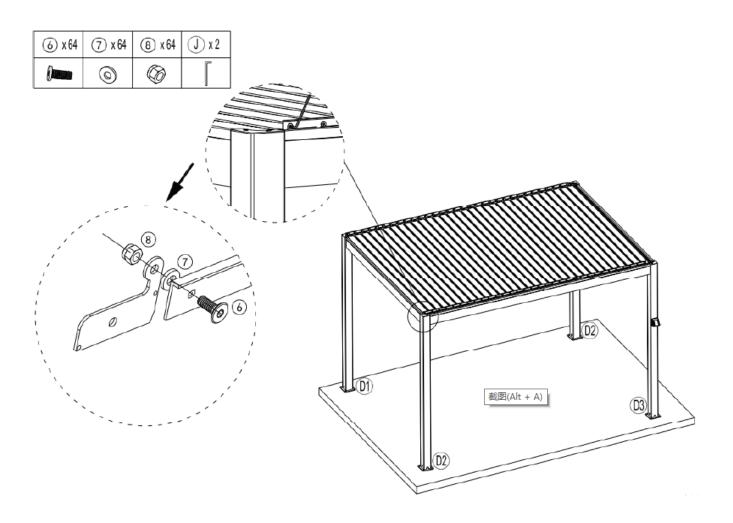


Mark holes for expansion bolt (10) x4 on each post.

Note the drill size should be 12 mm.

Insert the bolts. Use a hammer drill if necessary. Place the posts


over the bolts. Tighten the nuts.

Once installed, make sure any remaining plastic is removed and silicone is used along all corners and gutters to waterproof.

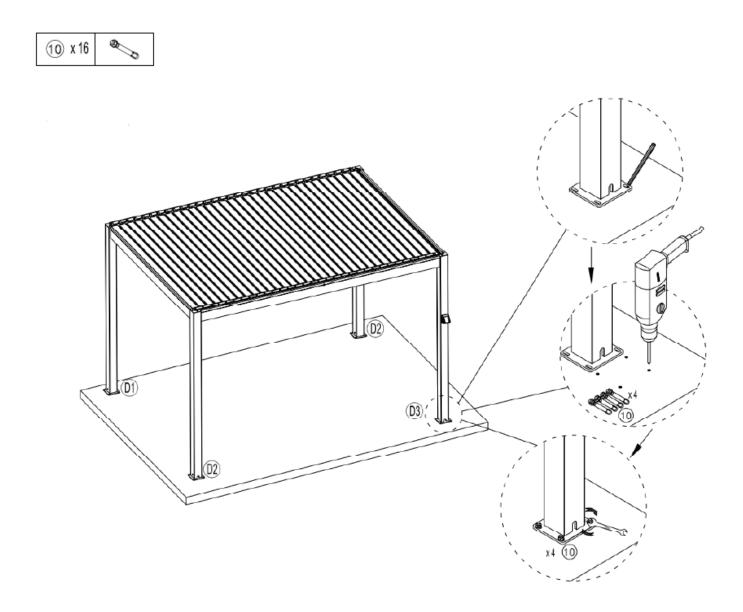

WARNING: Ensure louvers are open during periods of mild to strong winds.

Motor setup

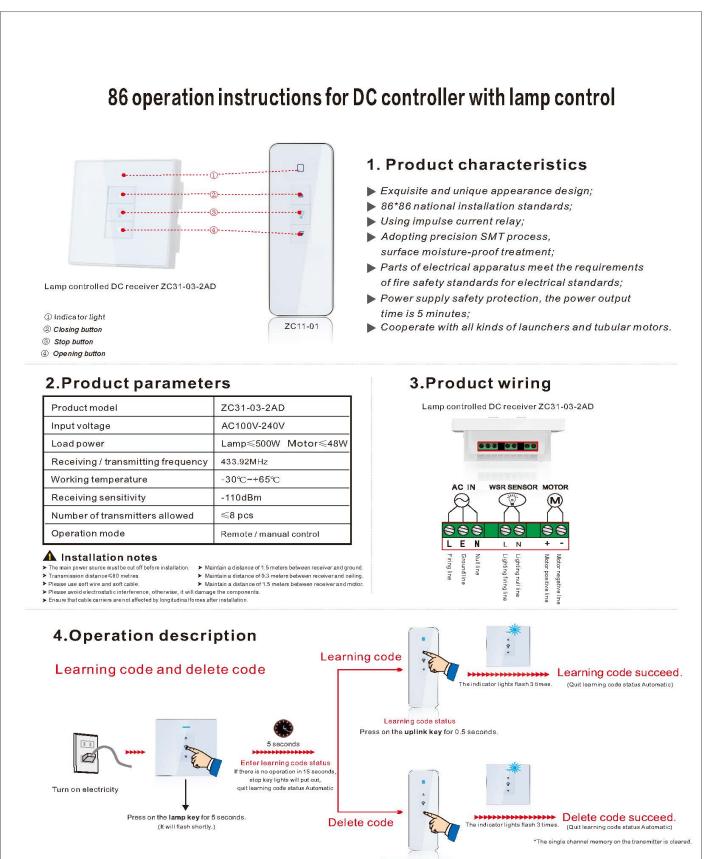

Dismounting

If you want to disassemble the Pergola, please follow the following process.

Attention! At least two people are needed for this step.

- Keep the Pergola louvers open before you begin with dismounting. Bind the Louvers of the Pergola together to avoid unintended unfolding. This might cause damage and injury. You can use the protection band that was fixed on the Pergola when purchasing it.
- Follow the mounting instructions in reversed order to dismount the Pergola.
- Make sure that drilling holes in the wall will be sealed professional.
- Attention! Safety hints and instructions have to be followed for dismounting as well.

Storage

When you do not want to use the Pergola for a longer period of time it is recommended to take the Pergola out of the brackets and store it.

- Make sure that the frame is dry completely before storing.
- Store the Pergola at a dry and safe place that is not reachable for children.

Disposal

Do not dispose this Pergola with other household wastes. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling. Dispose packing materials according to local guidelines.