




Summer Sideboard Cabinet



ASSEMBLY INSTRUCTIONS

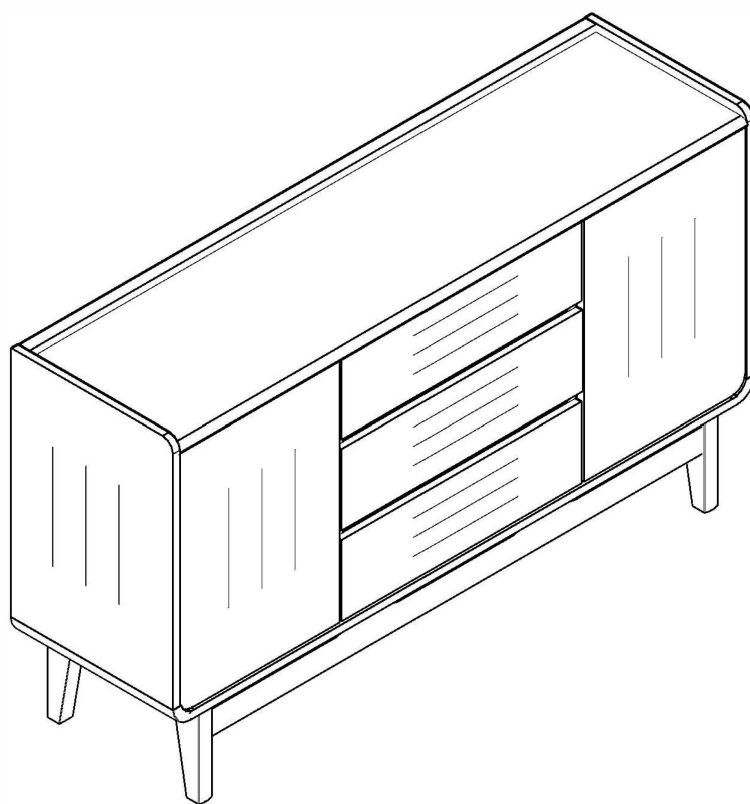

60 min. assembly
2 person

* The estimated assembly time may vary depending on the individual.

Hey,there

Now is assembly time!

Deeeeeeep breathe.... and again....
Tools ready,
Easy peasy!

Estimated



60 min. assembly
2 person

Tools Required

- Allen Wrench(included)
- Phillips screwdriver(not included)
- Hammer(not included)
- Power Drill(not included)
- Drill bit(not included)

important.Cautious when you use power tools

Thank you for purchasing this LuxenHome product.
This product has been manufactured with the
highest standards of safety and quality.

**PLEASE READ ALL INSTRUCTIONS CAREFULLY
BEFORE ASSEMBLY.**

Unpack all parts from the packaging inside the
carton to ensure there are no missing or damaged
parts. Lay out all the parts on a clean, flat,
and soft surface to prevent scratches. Refer to the
steps provided as assembling guide.

Do not attempt to assemble or use the product if
any parts are missing or damaged.

Please save this manual for future reference.

REMINDERS


SAFE USAGE IS KEY

Your well-being is our top priority when you use our
product. Please prioritize your safety by diligently
following the assembly guidelines and inspecting
the product carefully both when it arrives and before
each use. Please be aware that LuxenHome and
Winsome House, Inc. cannot be held liable for any
injuries or fatalities that occur due to not adhering to
the provided instructions or misuse of the product.


DO NOT MODIFY

Our products undergo rigorous testing to ensure
they meet established safety standards before being
released for sale. Altering the product in any way
can lead to serious safety concerns, for which
LuxenHome cannot assume responsibility.

Furniture components:

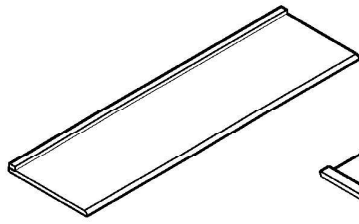

① Top Panel x1

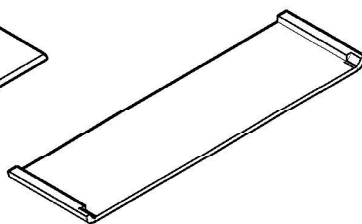


② Bottom Panel x1




③ Side Panel (L) x1




④ Side Panel (R) x1




⑤ Center Panel (L) x1




⑥ Center Panel (R) x1

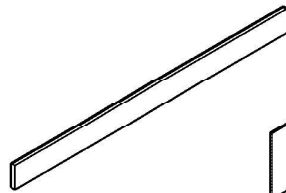

⑦ Back Support Panel x1

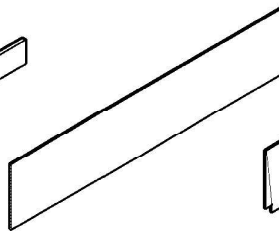


⑧ Back Mdf Board (A) x1

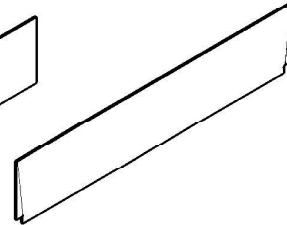

⑨ Back Mdf Board (B) x1




⑩ Internal Support Panel x2




⑪ Shelf Panel x2




⑫ Top Support Panel x1




⑬ Door Panel (L) x1



⑭ Door Panel (R) x1



⑮ 1st Drawer Face Panel x1




⑯ 2nd & 3rd Drawer Face Panel x2




⑰ Drawer Side Panel (L) x3




⑱ Drawer Side Panel (R) x3




⑲ Drawer Back Panel x3




⑳ Drawer Mdf Board x3



㉑ Complete Leg Frame x2

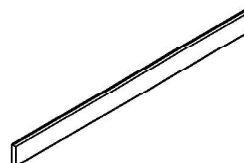


㉒ Long Back Leg Frame x1

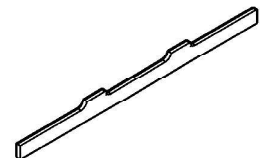


㉓ Long Front Leg Frame x1

Furniture components:

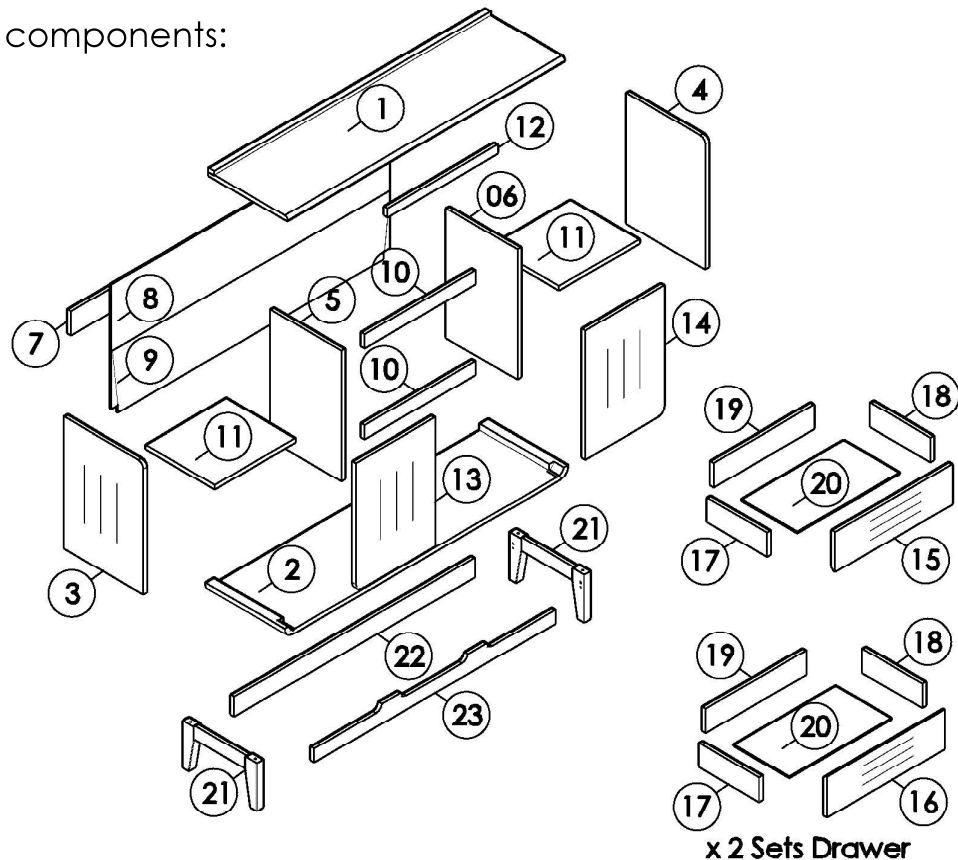

Provided hardware:

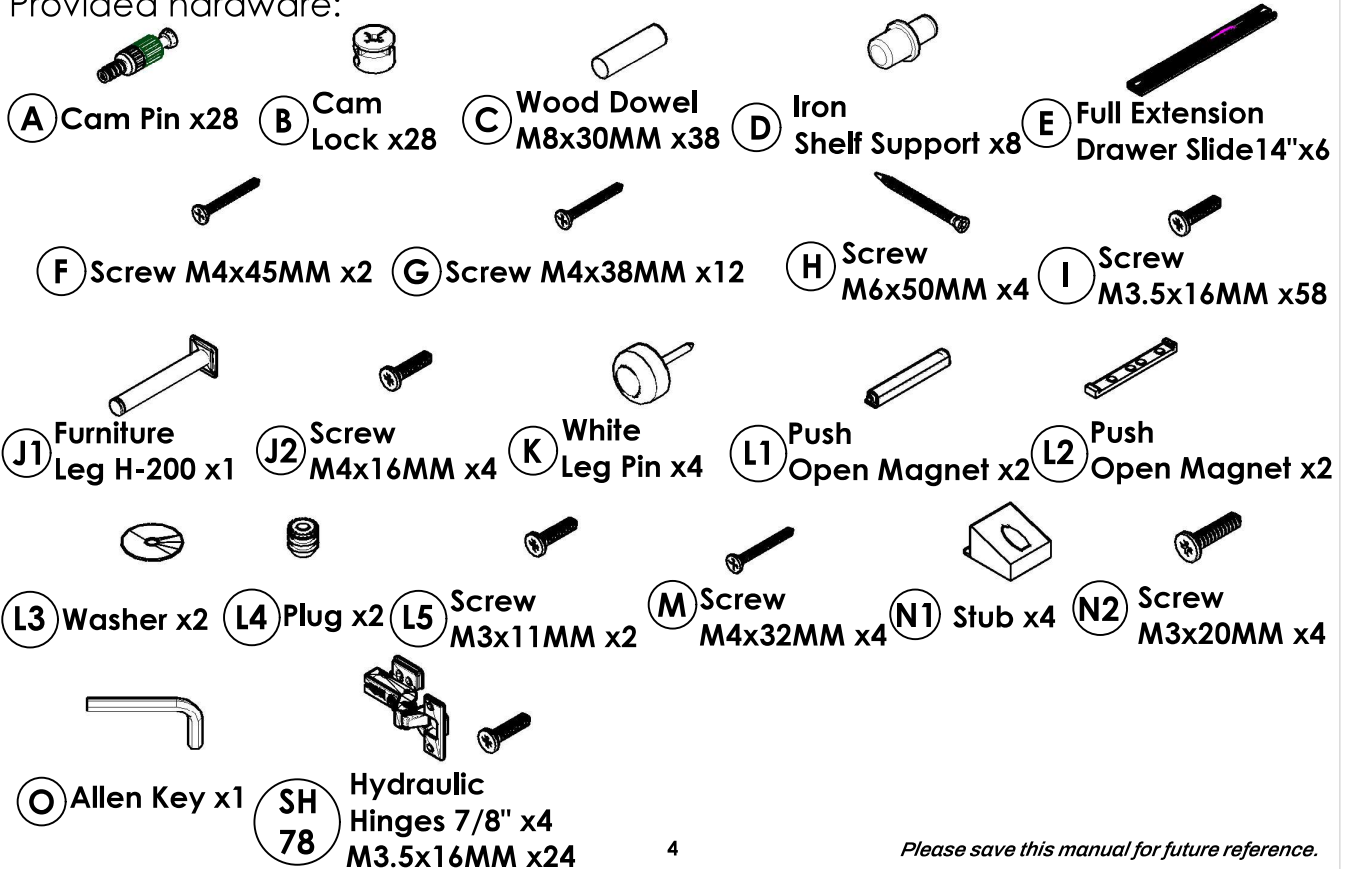

Step 1

Installing Push Magnet Base Kit on Component 1

Prepare Component 1: Place Component 1 (top panel) with the hole facing upwards.

Install Push Magnet Base Kit: From the hardware L pack, take the Push Magnet Base Kit. Align its hole with the hole on the top panel of Component 1.

Secure with Screw: Use an M3.5 x 16mm screw and a screwdriver to tighten and secure the Push Magnet Base Kit to the top panel.





Inserting the Push Magnet

Insert Push Magnet: After installing the Push Magnet Base Kit, take the Push Magnet L.

Slot and Push: Slot it in from the front and push down on the back side.



Listen for Click: A click sound will indicate that the Push Magnet is properly installed.

Ⓛ1 x2	Ⓛ1 x2	Ⓛ x4

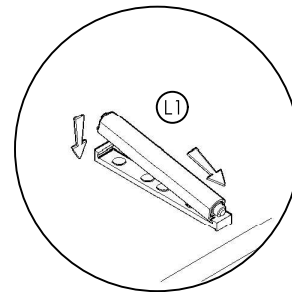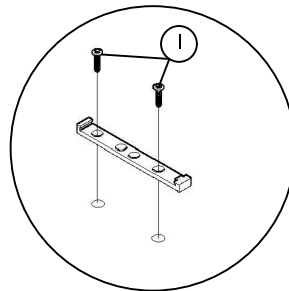
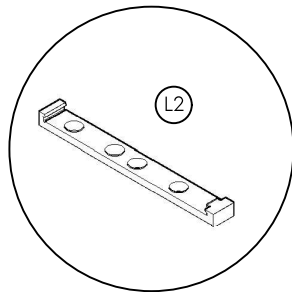
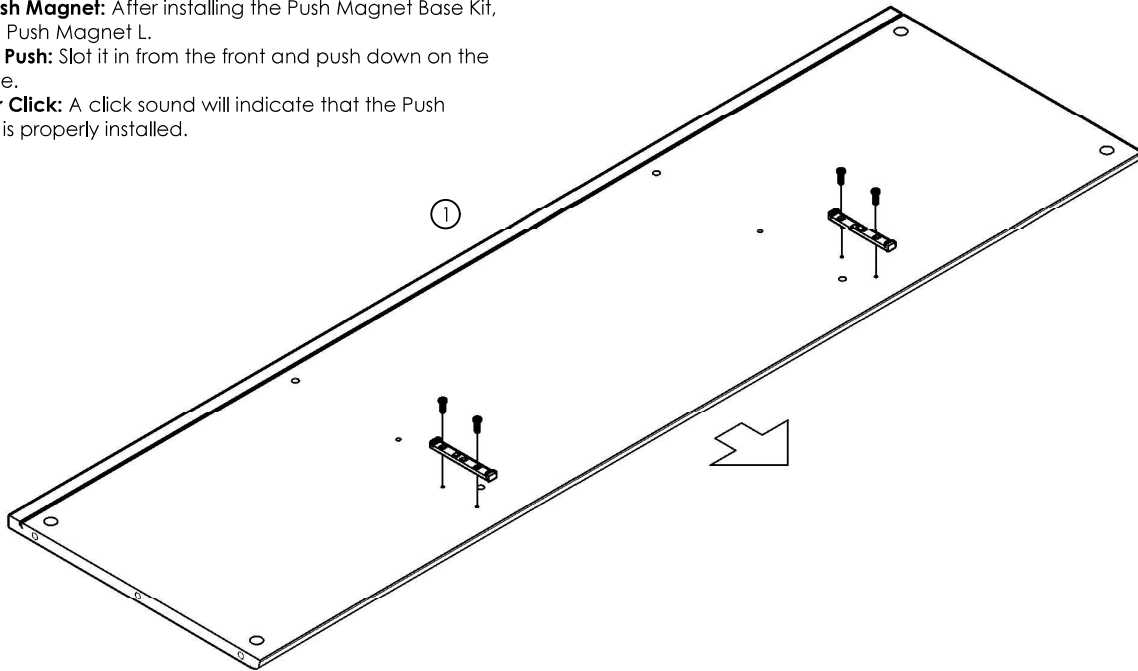


Step 2


(A) x12	(B) x14	(C) x20

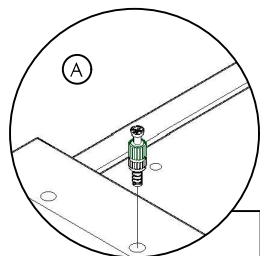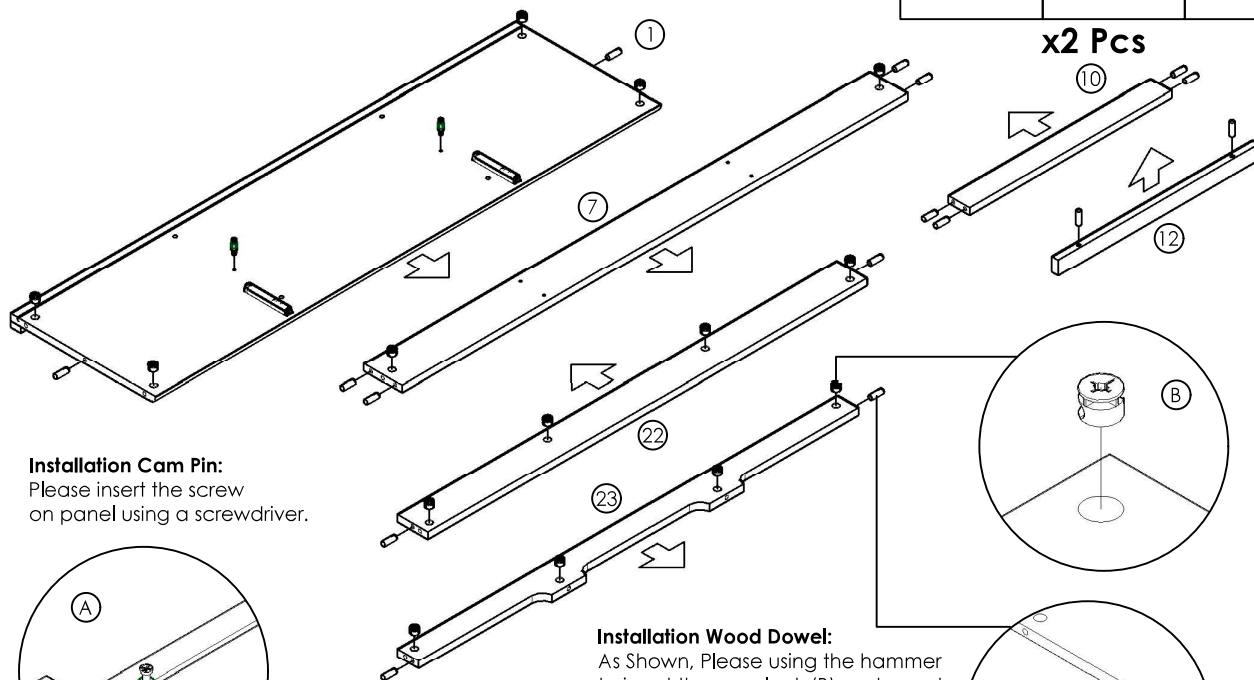


Installation Wood Dowel:
As Shown, Please using the hammer to insert the cam lock (B) and wood dowel (C) into hole of panel.

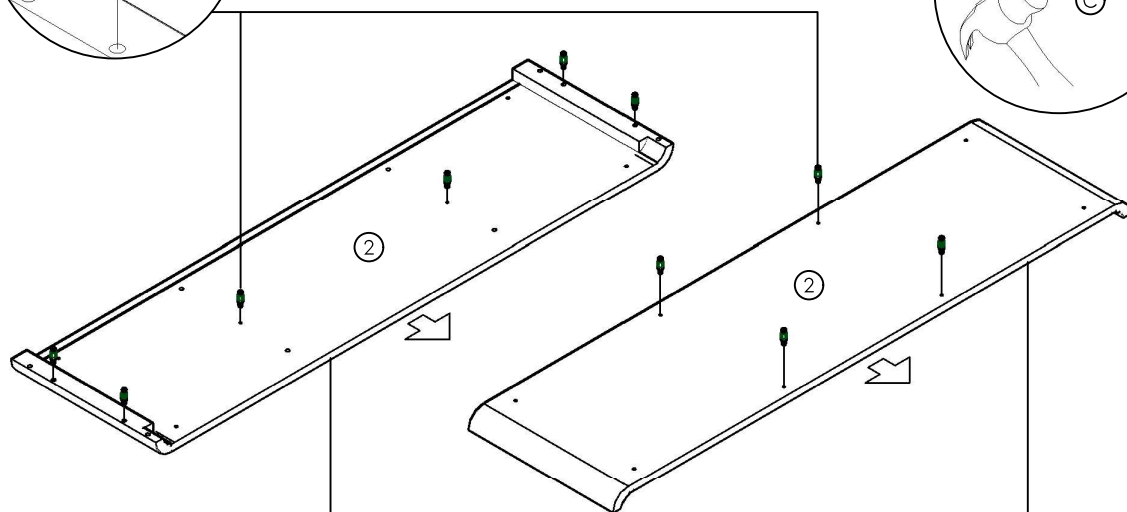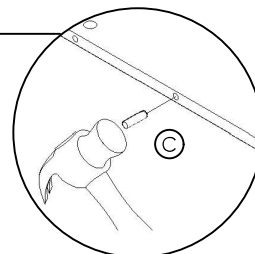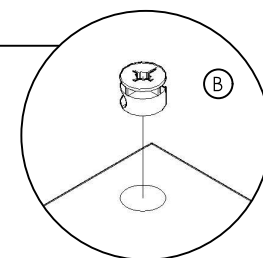


Top View:

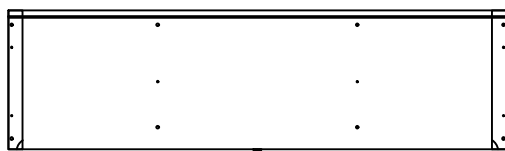


Bottom View:

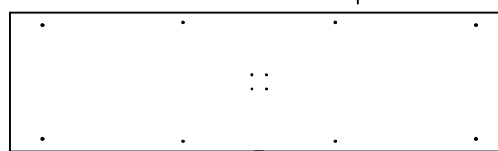

Step 3

(A) x16	(B) x10	(C) x10	(D) x4	(K) x4
				

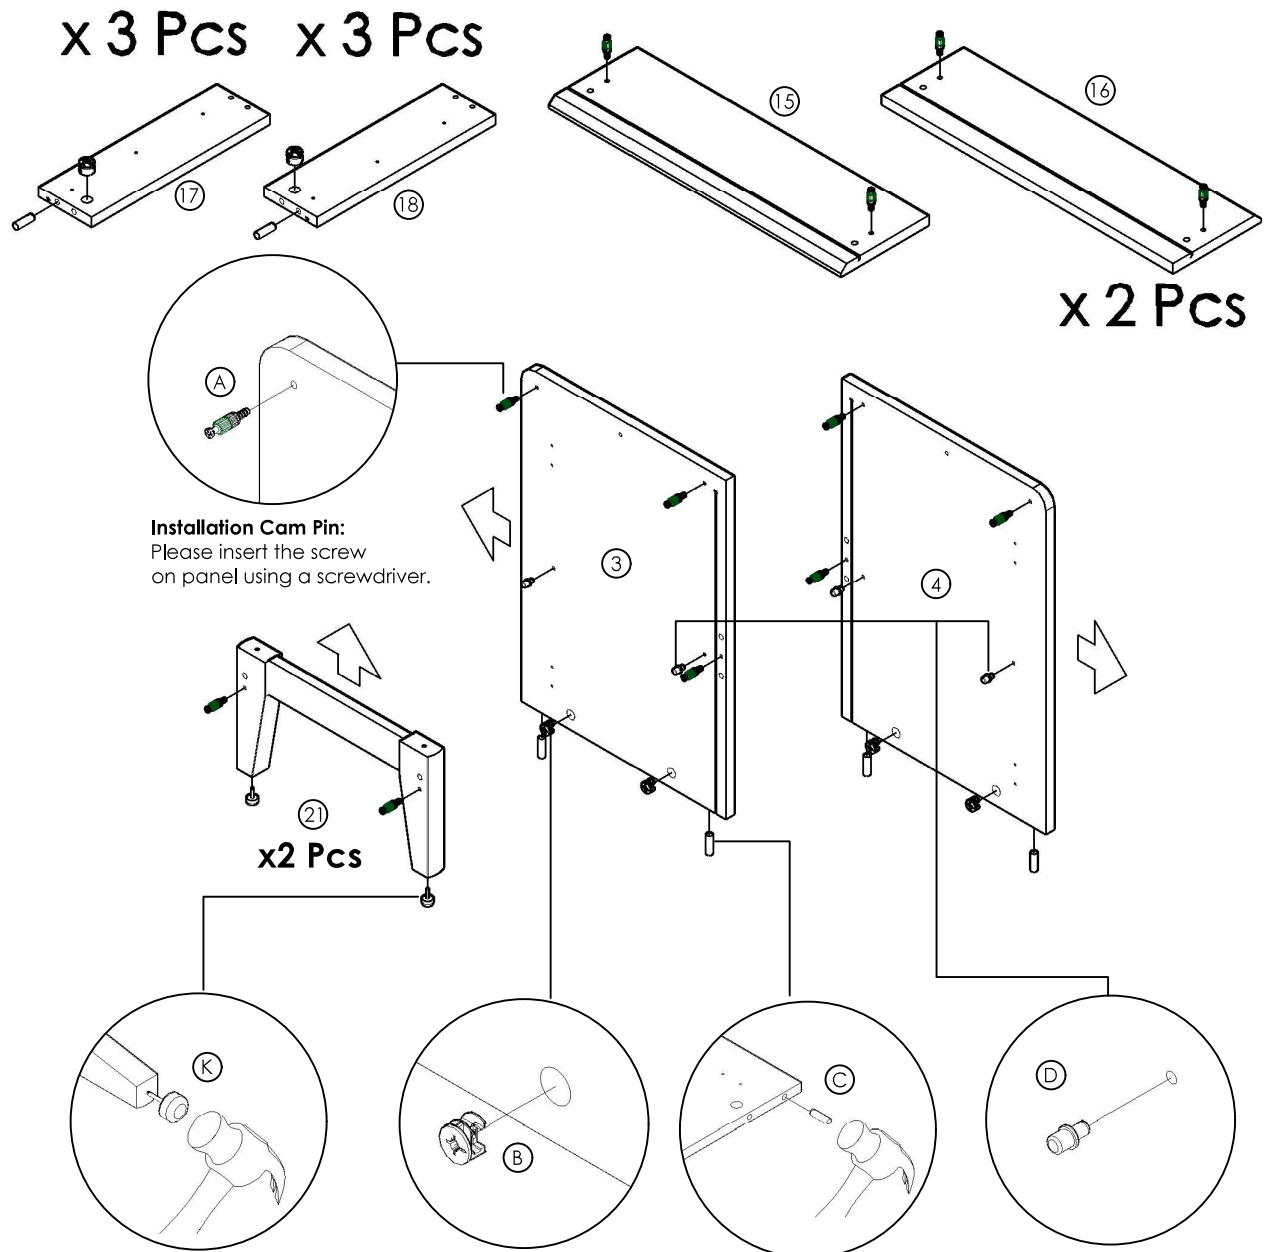

Installation Cam Pin:
Please insert the screw
on panel using a screwdriver.

Insert White Leg Pin:
Press insert the white leg pin
on the leg panel with using hammer.

Installation Hardware:
As Shown, Please using the hammer to insert
the cam lock (B), wood dowel(C) and iron
shelf support (D) into hole of panel.


Step 4

Step 1: Separate the Slide:

Release the Lock: Inside the slide, locate a lock. Move part A down, and part B up. Push the lock device down to release the lock. Separate the two parts.

Identify the Parts: This will result in two separate components, now referred to as Part A (E 1) and Part A (E 2).

Ⓔ x6	Ⓛ x18

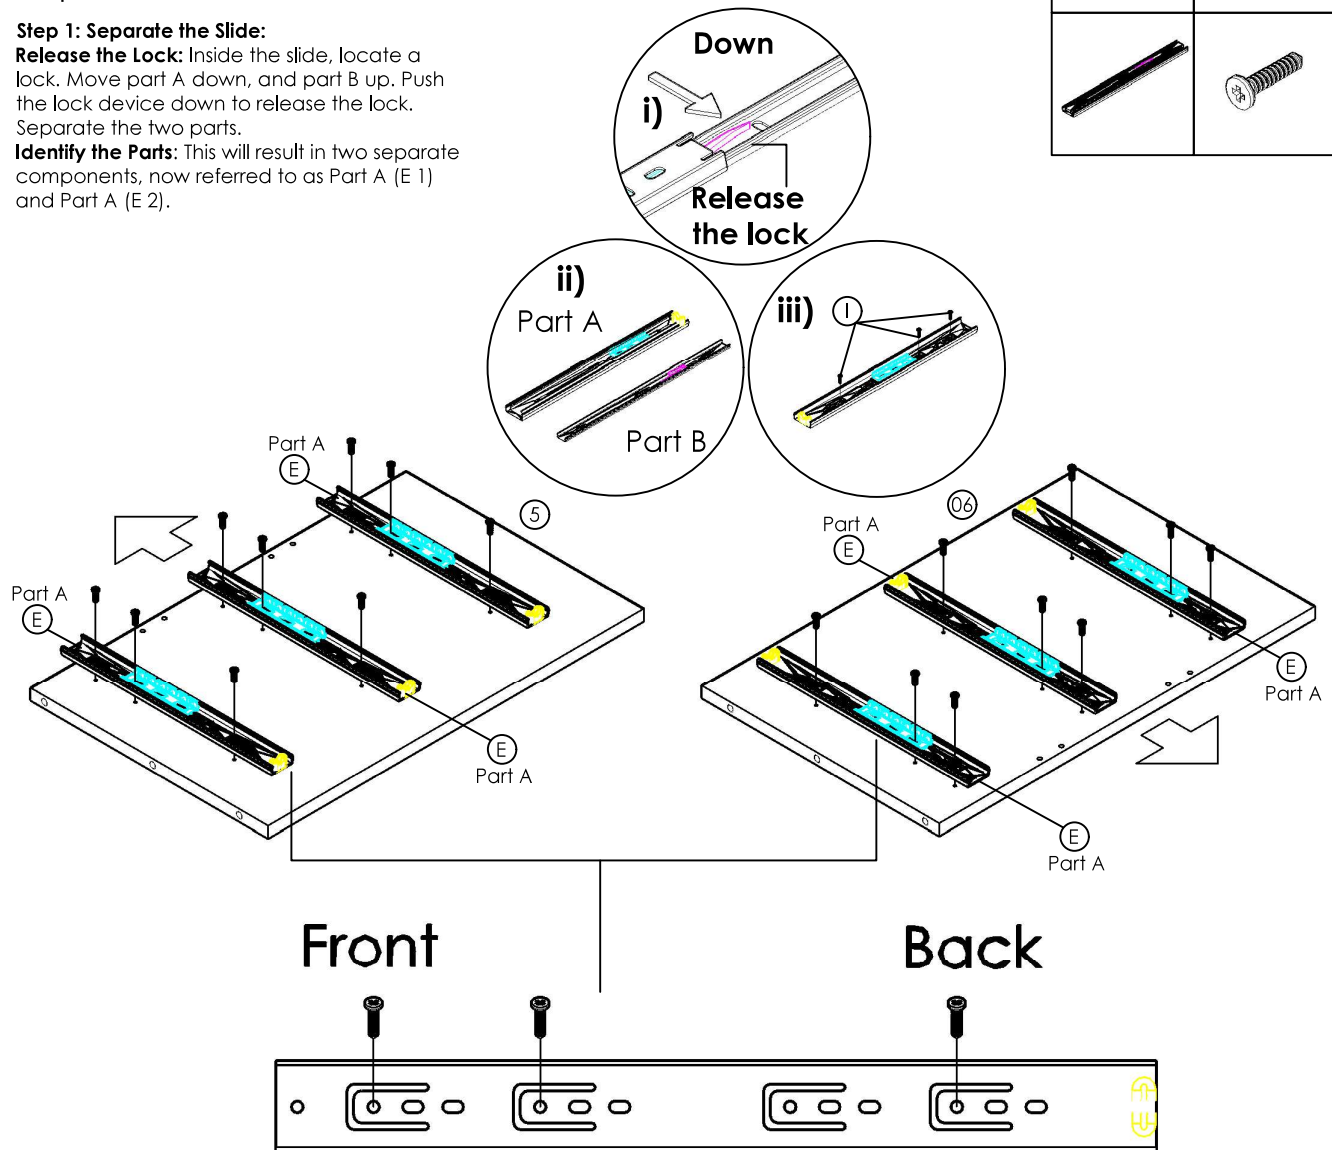


Step 2: Attaching Part A of the Full Extension Drawer Slide to the Panel


- **Insert Part A:** Place Part A of the extension drawer slide into the panel.
- **Align the Holes:** Ensure that Hole No. 2 from the front of Part A aligns with the pre-drilled hole on the panel.
- **Secure with Screw:** Use the screwdriver to fix an M3.5x16mm screw into the aligned holes.

Step 5

Left View:

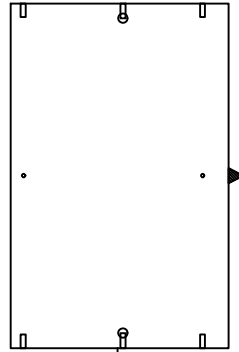


Right View:

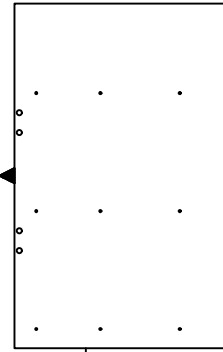


(B) x4	(C) x8	(D) x4

Installation Hardware:


As Shown, Please using the hammer to insert iron shelf support (D) into hole of panel.

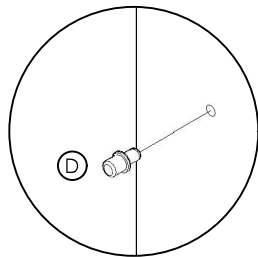


Left View:

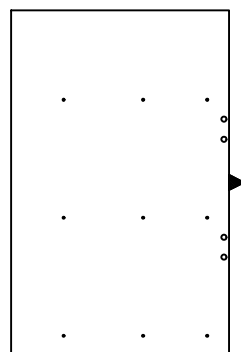

Right View:

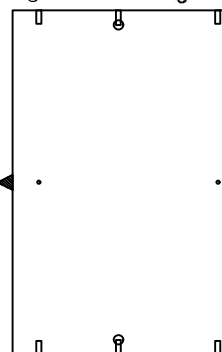


Turn panel 5 over 180 degrees.

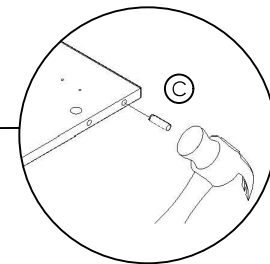


Installation Hardware:

As Shown, Please using the hammer to insert the cam lock (B) and wood dowel (C) into hole of panel.

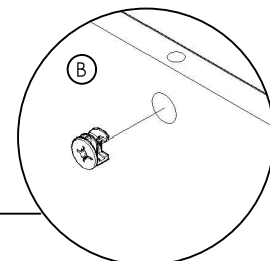



Turn panel 6 over 180 degrees.

Step 6

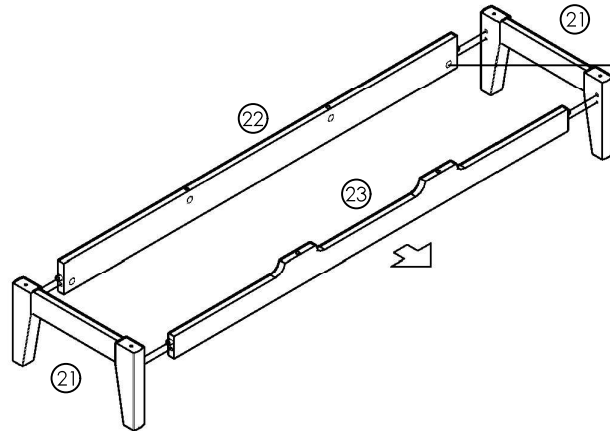


Installation:

As shown, the head of minifix housing goes into the open mouth of the mini fix bolt. Use Allen Key then turn the minifix housing so it tightens over the mini fix bolt.

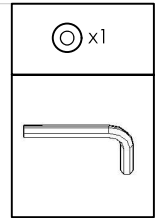
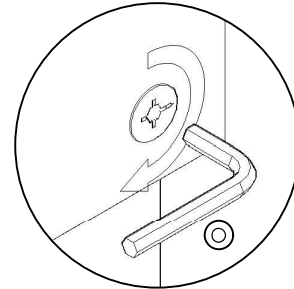


Step 7

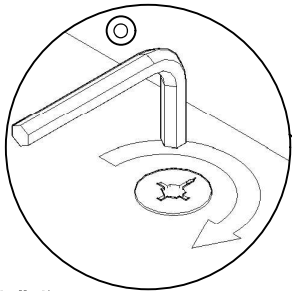


Installation:

As shown, the head of minifix housing goes into the open mouth of the mini fix bolt. Use Allen Key then turn the minifix housing so it tightens over the mini fix bolt.

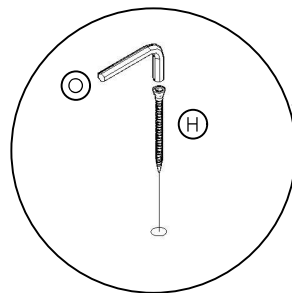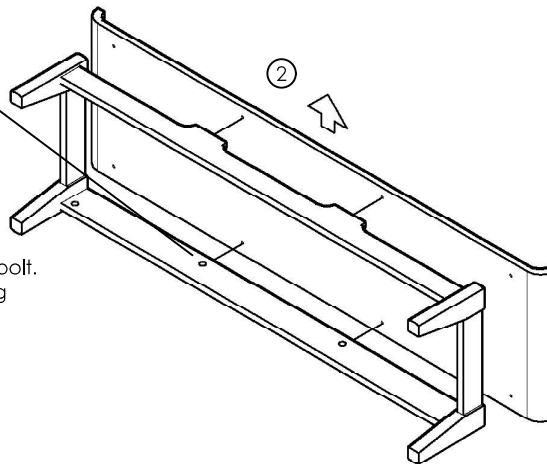


Installation Screw:

Please insert the screw (H) on panel using a allen key.

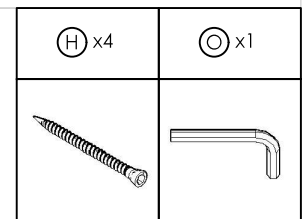


Step 8

(F) x2	(C) x1

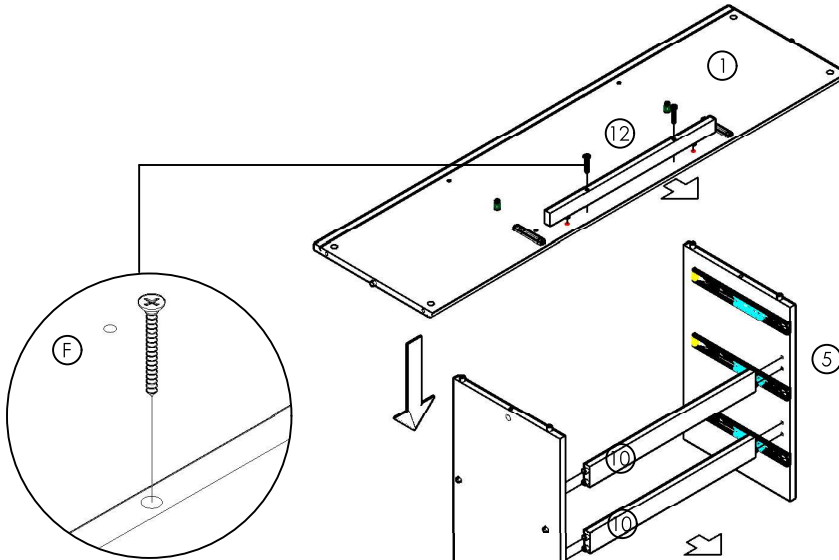

Installation Screw:



Please insert the screw (F) on panel using a screwdriver.

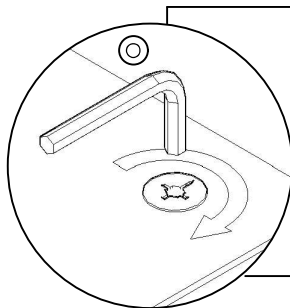



Installation:

As shown, the head of minifix housing goes into the open mouth of the mini fix bolt. Use Allen Key then turn the minifix housing so it tightens over the mini fix bolt.

Place foam to support the panel during the installation process. Use foam in the box.

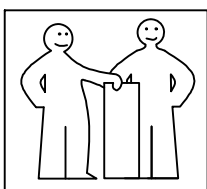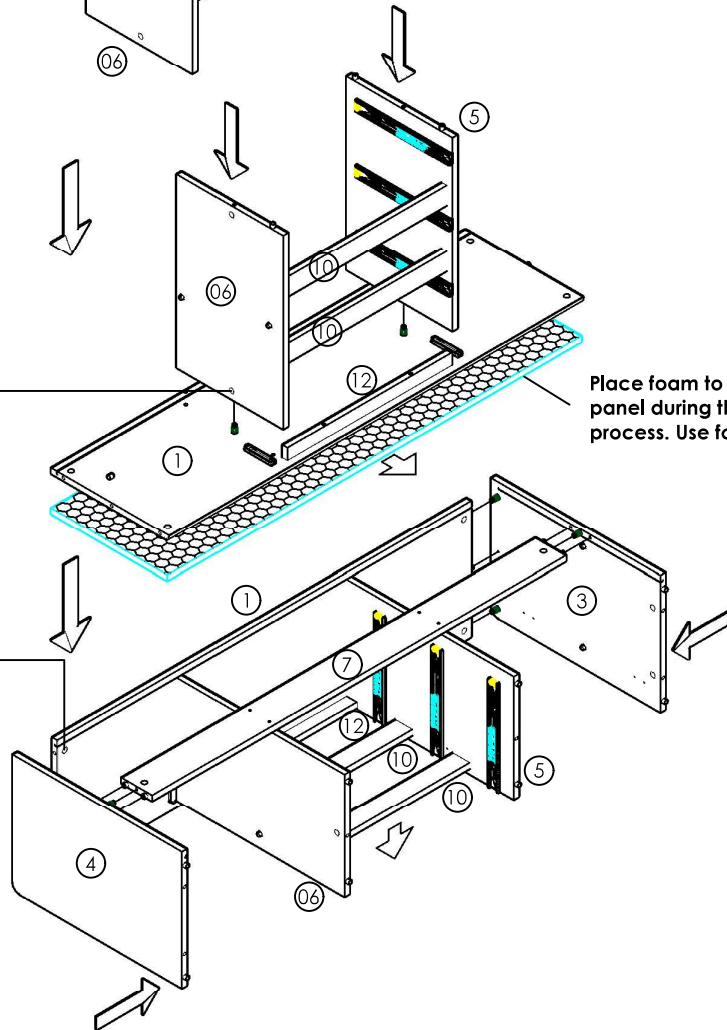



Step 9

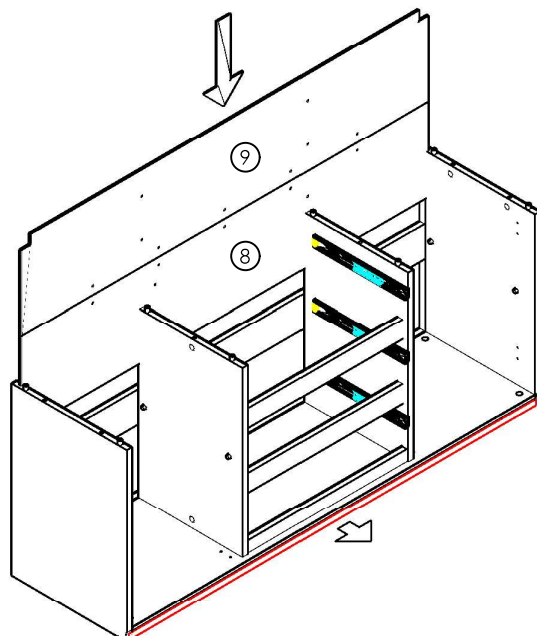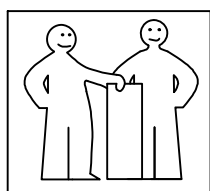

Step 10

Installation Leg:



Align the hole leg with hole marking then insert the screw (J) on panel using a screwdriver.

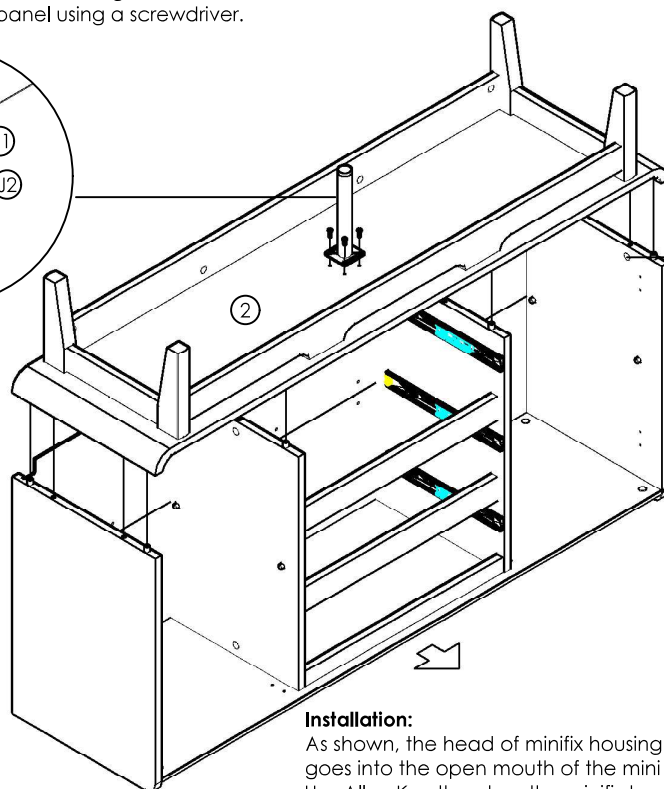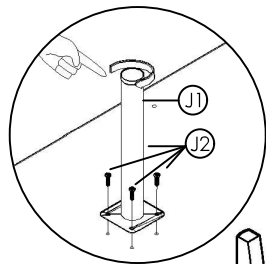

Installation:

As shown, the head of minifix housing goes into the open mouth of the mini fix bolt. Use Allen Key then turn the minifix housing so it tightens over the mini fix bolt.



(J1) x1	(J2) x4	⊙ x1

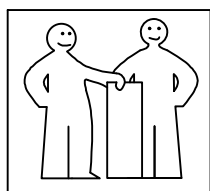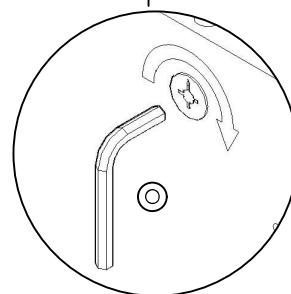

Step 11



Installation Screw:

Please insert the screw (M) on panel using a screwdriver.

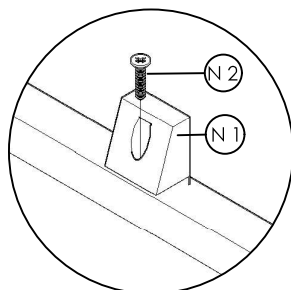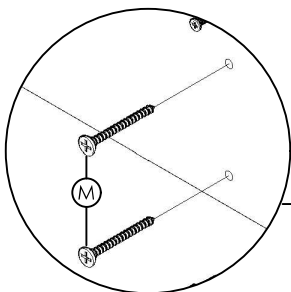

Installation Screw:


Please insert (N 1) inside the groove fasten it with screw (N 2)

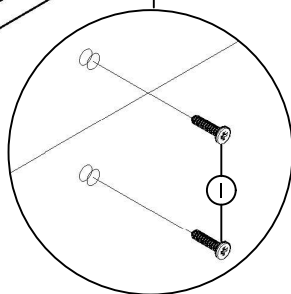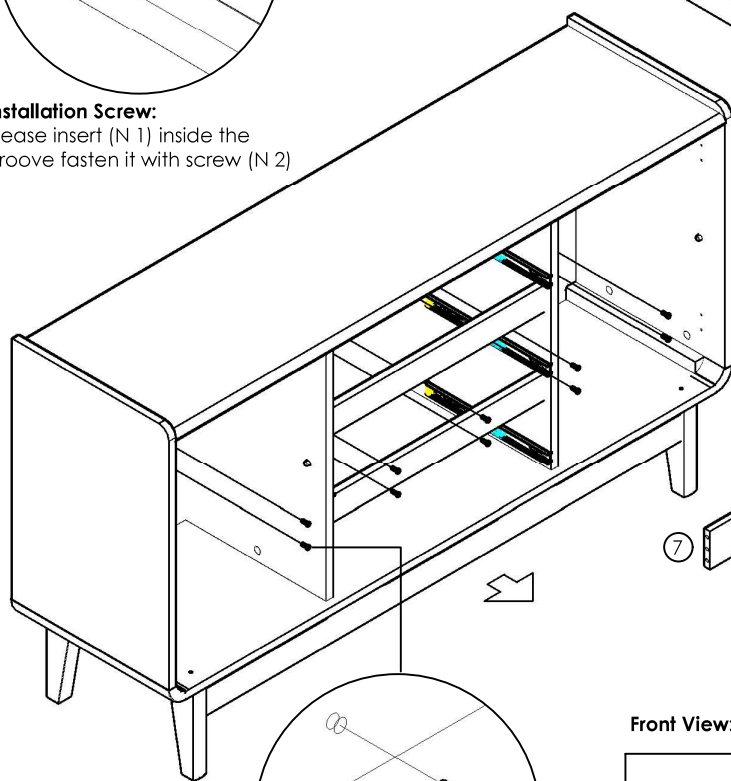


Installation Screw:

Please insert the screw (I) on panel using a screwdriver.

ⓐ x18	Ⓜ x4	Ⓝ1 x4	Ⓝ2 x4

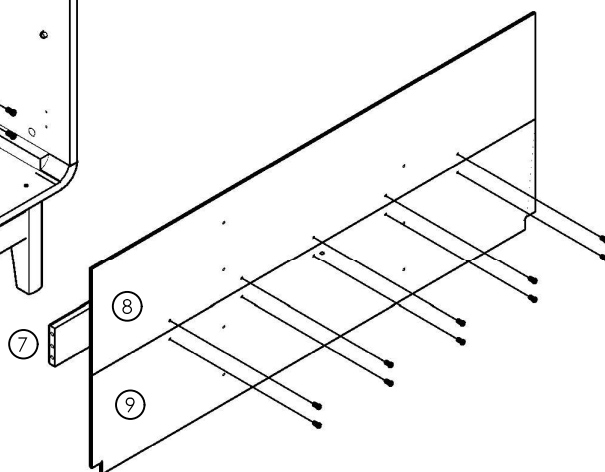


Front View:

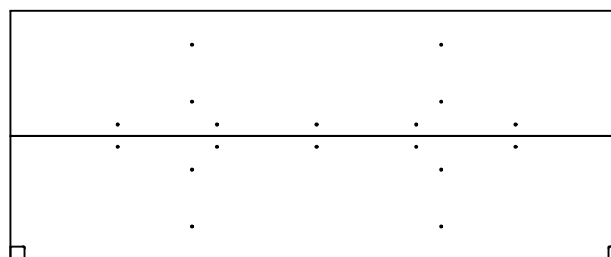

Step 12


Ⓒ x12

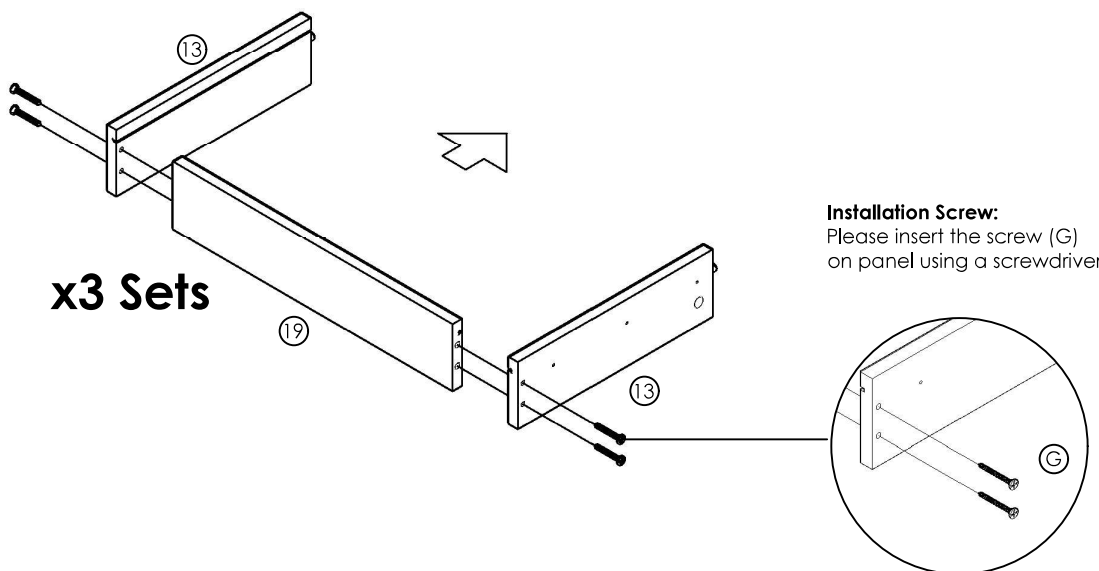

x3 Sets

Installation Screw:
Please insert the screw (G)
on panel using a screwdriver.

Step 13

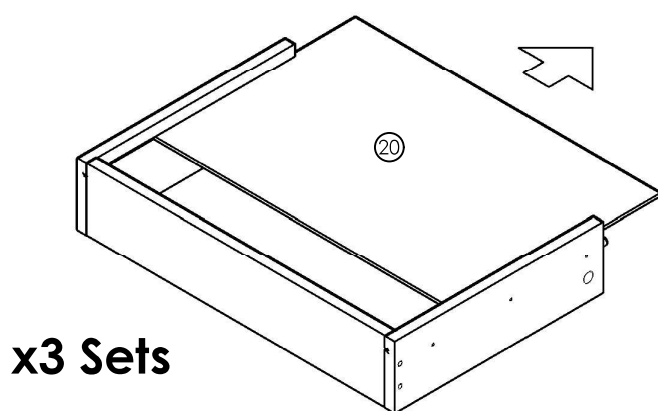


x3 Sets

Installation Drawer MDFoard:
Please insert drawer MDF board into
the groov of panel.



Step 14

⊙ x1

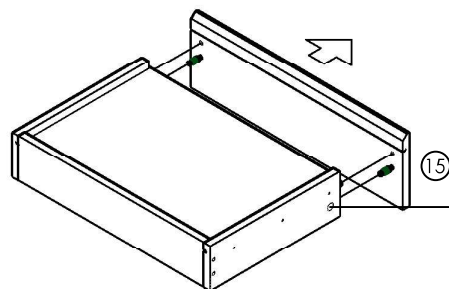

Installation:

As shown, the head of minifix housing goes into the open mouth of the mini fix bolt. Use Allen Key then turn the minifix housing so it tightens over the mini fix bolt.

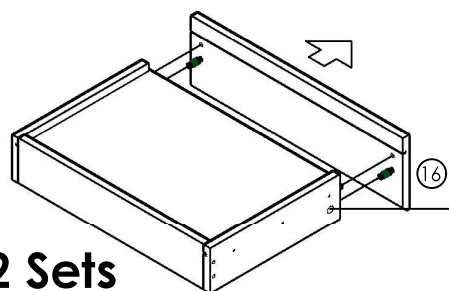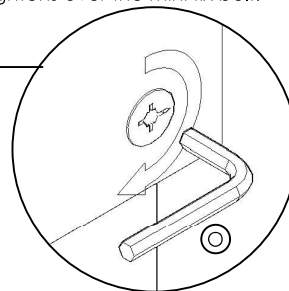


x2 Sets

Step 15

Ⓔ x6


Ⓛ x12

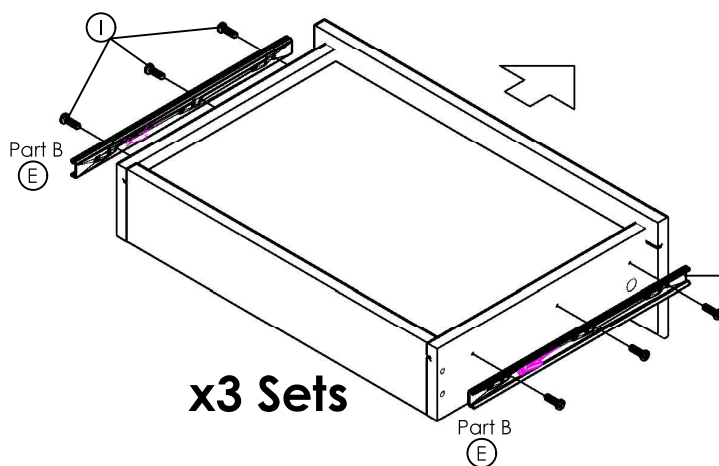

x3 Sets

Part B
Ⓔ

Part B
Ⓔ

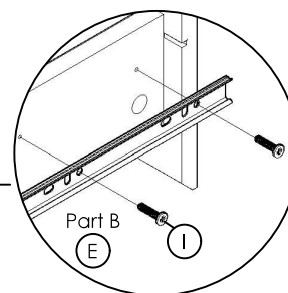


Attaching Full Extension Drawer Slide to the Drawer Face:

Align Drawer Slide: Position the extension drawer slide sliding Part B and align it with the lower part of the drawer face.


Secure with screw: Use an M3.5 x 16mm screw and a screw to securely fasten it in place.

Back

Front

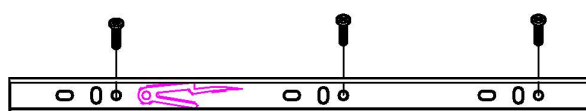


Step 16

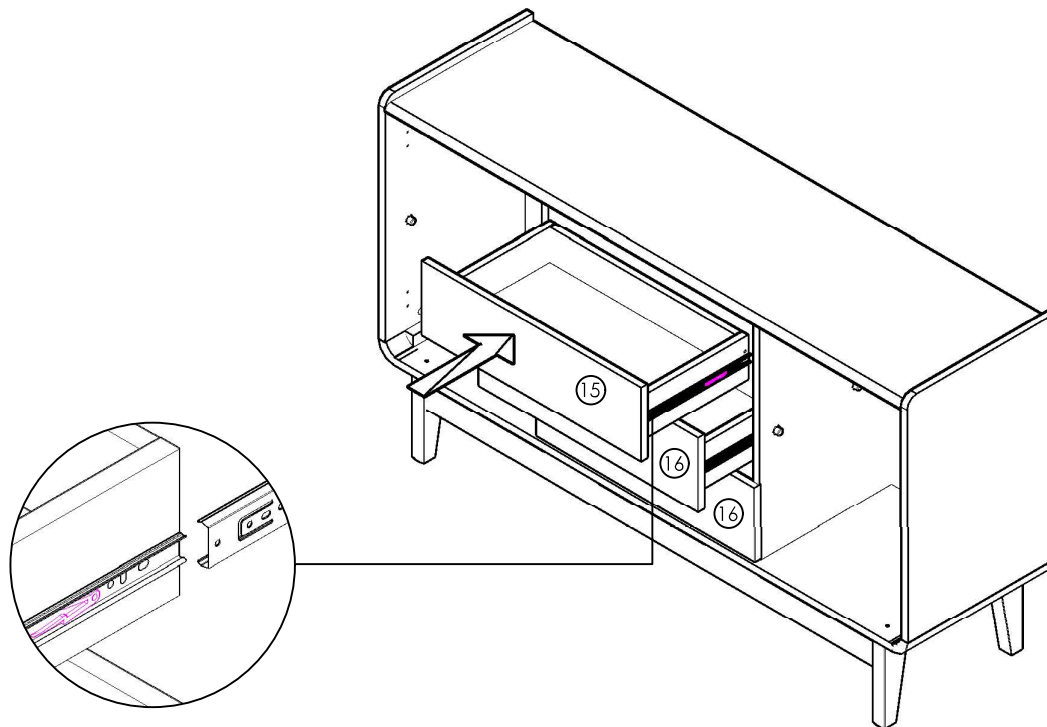

Insert the Drawer:

Please insert the drawer according the numbering. Slide the drawer into the cabinet.

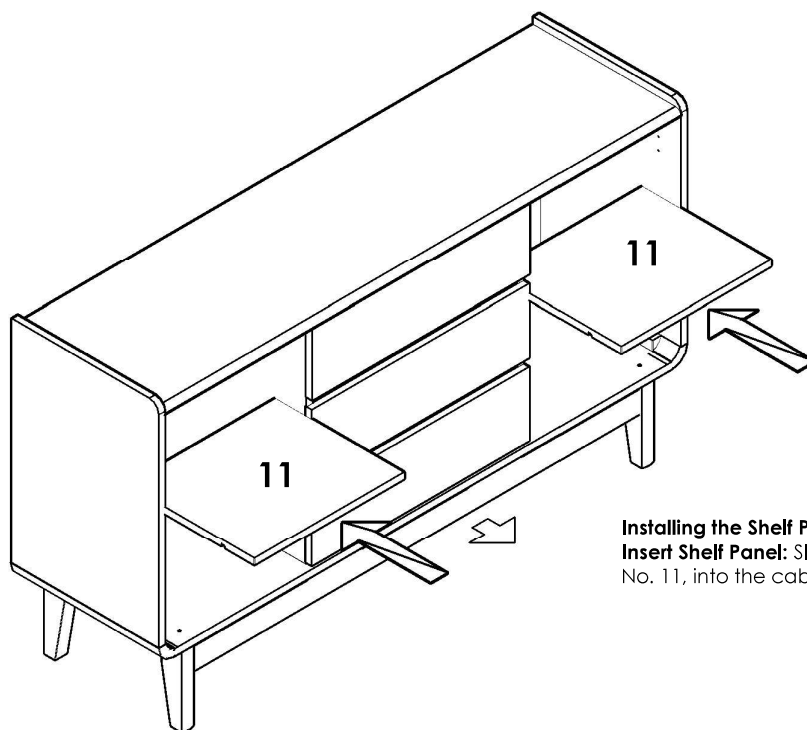


Installing the Shelf Panel:

Insert Shelf Panel: Slide the shelf panel, Part No. 11, into the cabinet.


Step 17

(SH 78) x4	(L3) x2	(L4) x2	(L5) x2

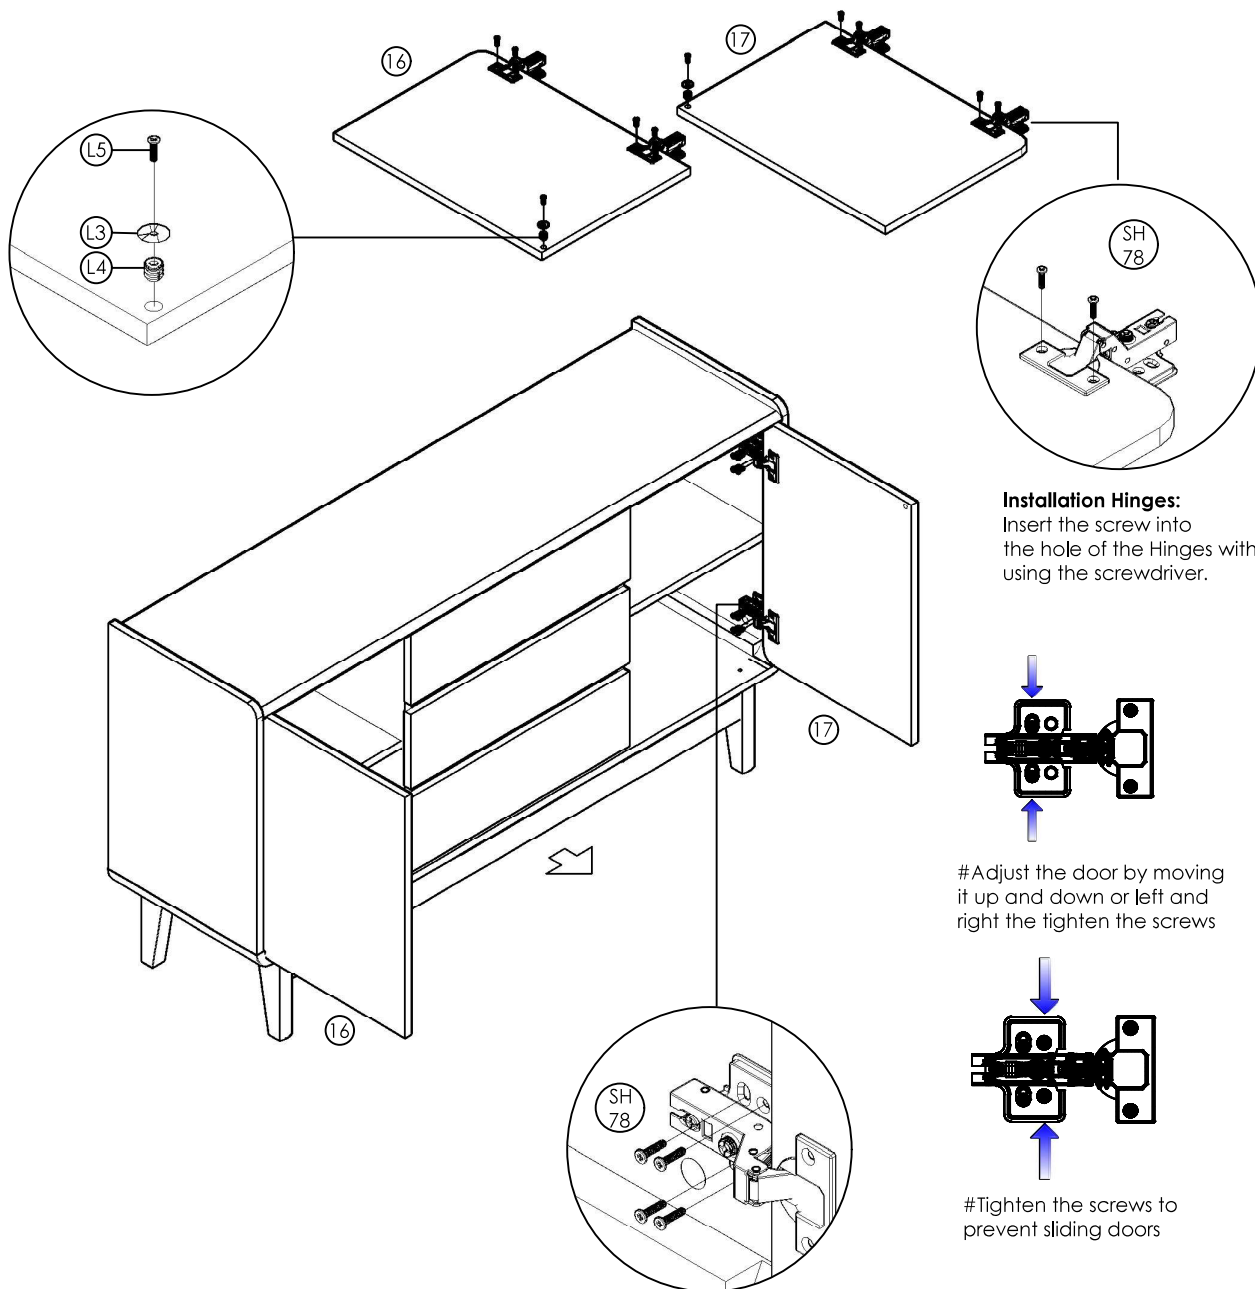

VOILA!

Now enjoy.

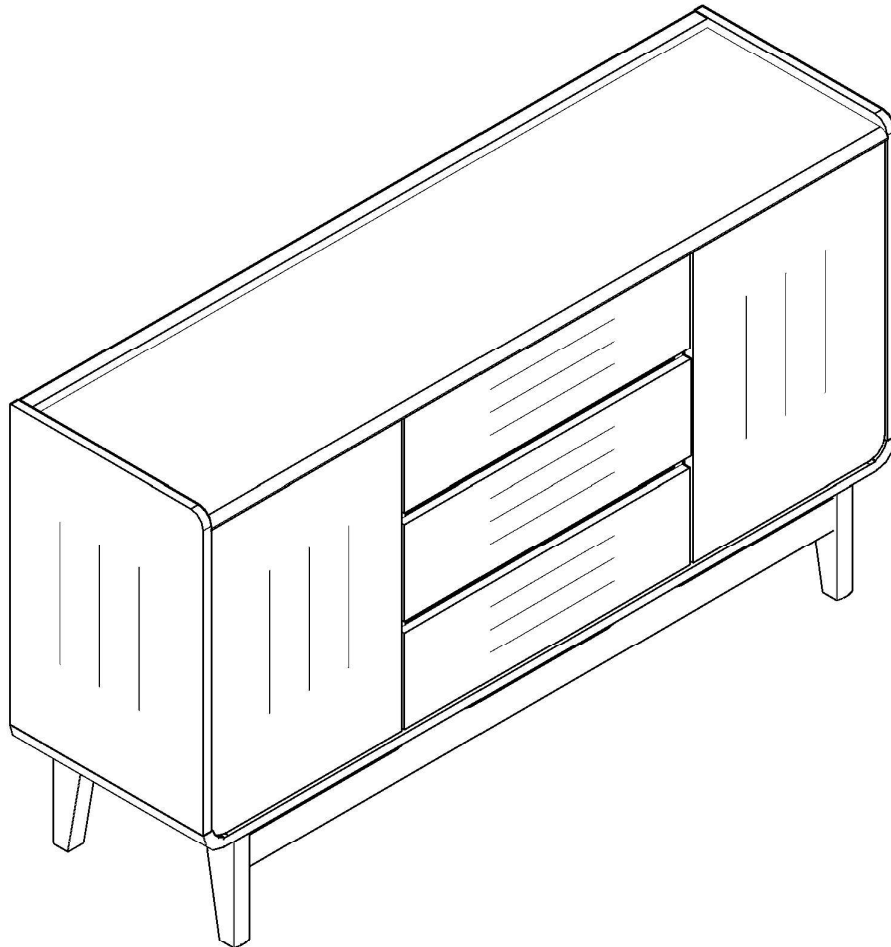

Warning !!!

DO NOT climb, sit or stand on the cabinet as this may damage the product and cause serious bodily injury.

Something not right?

We are always here to help.

We make mistakes like every human does. Though we always strive to provide the best possible products at competitive prices and the best service in the industry, it's not possible to completely eliminate mistakes. If you experience any dissatisfaction, feel free to contact us immediately. Our in-house customer care team will respond ASAP.

Things to do to expedite the process

- Have your order# ready
- Take photos/videos to help us better identify the issues
- DO NOT throw away the packaging


Happy with our product?

Leave us a review

It really help us as a small business

Find the product you purchased on our website and leave us a review.

Alternatively, you can always return to the marketplace where you purchased it and leave a review there.

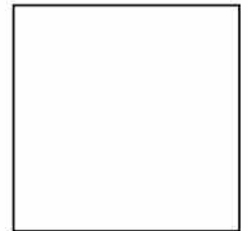


Please save this manual for future reference.




HOW TO ADJUST GLASS/DOORS

- There is a gap between the door and the shelf with doors closed

Loosen the back adjustable screw which is one of the two screws looking from the front while supporting the doors, adjust the door by moving it back and forth, then tighten the back screw.

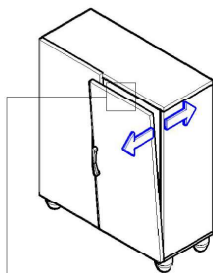


If there is a gap between the doors on the top.

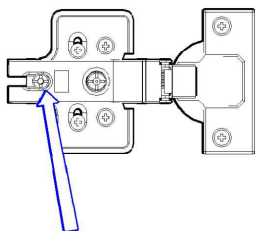

Loosen this screw, adjust by moving back and forth


- There is a gap in the middle with doors closed

Loosen the ① back adjustable screw which is one of the two screws looking from the front while supporting the doors, tighten the ② screw clockwise, then adjust the middle gap. After adjusted, tighten the ① screw.

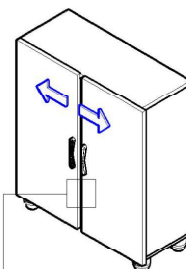

If the gap is wide


① Fixing screw

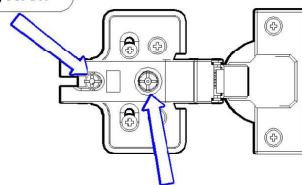


② Adjusting screw
(If you twist clockwise once, the door moves about 2mm inward)

- There is a gap on the top of the door when doors are closed
(Glass slide hinge does not require this step)
(4 screw hole hinge does not require ①)

Loosen the slide hinge screw while supporting the door, adjust the door by moving it up and down then tighten the screws.
(Please loosen the slide hinge screws of the door completely you are adjusting before moving it up and down.)

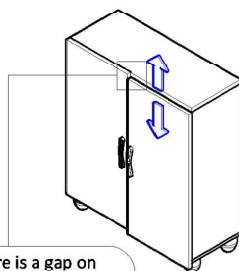

If there is a gap on the top of the door

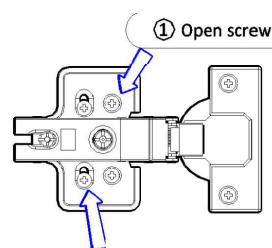


① Open screw

② Slide hinge screws (Please loosen these screws before adjusting)


- There is a V gap when doors are closed

Loosen the ① back adjustable screw which is one of the two screws looking from the front while supporting the doors, tighten the ② screw clockwise, then adjust the middle gap. After adjusted, tighten the ① screw.


If there is a gap between the doors on the top
(Please adjust slide hinge the top part door)

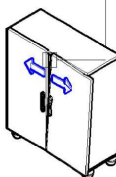


If there is a gap between the doors on the bottom
(Please adjust slide hinge the bottom part door)

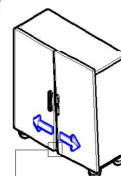

① Fixing screw

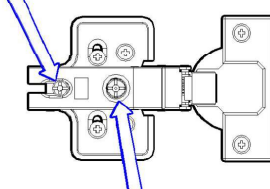

② Adjusting screw
(If you twist clockwise once, the door moves about 2mm inward)


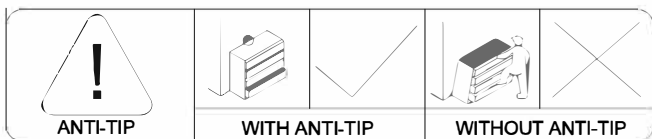


Installation Instruction :

A tip restraint must be attached to a wall stud using the 2" screw enclosed.

- 1. Mark Bracket Position :** Place the cabinet close to the wall. Mark the spot on the wall where the safety strap bracket will be installed.
- 2. Install Wall Screw :** Use a drill to make a hole. Insert a wall plug if necessary, then screw the bracket into the wall.
- 3. Attach Safety Strap Bracket :** Secure the other end of the safety strap bracket to the top back of the cabinet using a screw.
- 4. Secure and Tighten :** Adjust and tighten the strap to ensure the cabinet is firmly secured and won't tip over.
- 5. Confirm that the strap is securely laced and locked.**

Part Include :

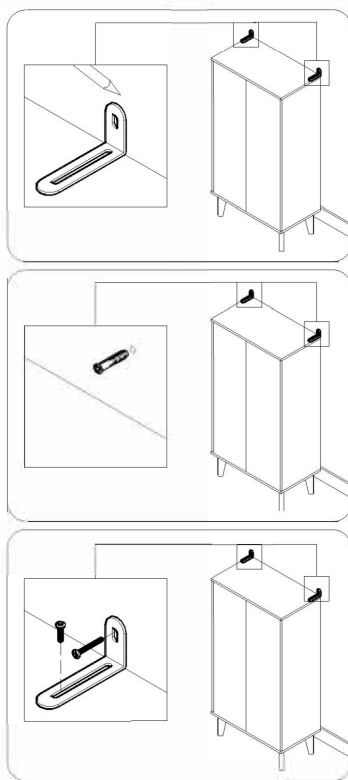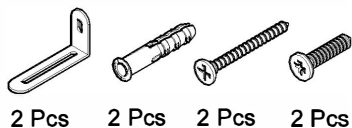

ANTI-TIP DEVICE INSTALLATION INSTRUCTION

IMPORTANT SAFETY INSTRUCTIONS

Read and follow all instructions when using the range to prevent the risk of personal injury or damage. This guide does not cover all possible conditions that may occur. Always contact your service agent or manufacturer about problems that you do not understand.



This is the safety alert symbol. This symbol alerts you to potential hazards that can result in property damage and/or serious bodily harm or death. All safety messages will follow the safety alert symbol and either the word WARNING or CAUTION. These words means:



WARNING - Indicates a hazardous situation which, if not avoided, could result in death or serious injury.



CAUTION - Indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.

ANTI-TIP DEVICE

WARNING

- TO REDUCE THE RISK OF TIPPING, THE APPLIANCE MUST BE SECURED BY A PROPERLY INSTALLED ANTI-TIP DEVICE, TO CHECK IF THE DEVICE IS INSTALLED PROPERLY, VERIFY THAT ANTI DEVICE IS ENGAGED, OR GRASP THE TOP REAR EDGE OF THE RANGE BACK GROUND AND CAREFULLY ATTEMPTED TO TILT IT FORWARD.** Refer to the installation section for instructions.
- A child or adult can tip the range and be killed.
- Install the anti-tip device to the structure and/or the range. Verify the anti-tip device has been properly installed and engaged following the instructions on the anti-tip bracket template.
- Engage the range to the anti-tip device following the instructions on the anti-tip bracket template. Ensure the anti-tip device is re-engaged when the range is moved by following the instruction on the anti-tip bracket template.
- Re-engage the anti-tip device if the range is moved. Do not operate the range without the anti-tip device in place and engaged.
- See installation instruction for details.
- Failure to do so can results in death or serious injury to children or adults.
- Never remove the dresser/chest of drawer legs. The range will not be secured to the anti-tip bracket if the legs are removed.
- Do not step or sit on drawers. The range could be tipped and injury might result.
- Do not rest large heavy items on the open drawer. The range could tip forward and cause injury.
- Re-engage the anti-tip device after pulling the range out for moving or any other reason.
- Failure to follow these instructions can result in serious injury or death to children or adults.