


Model:

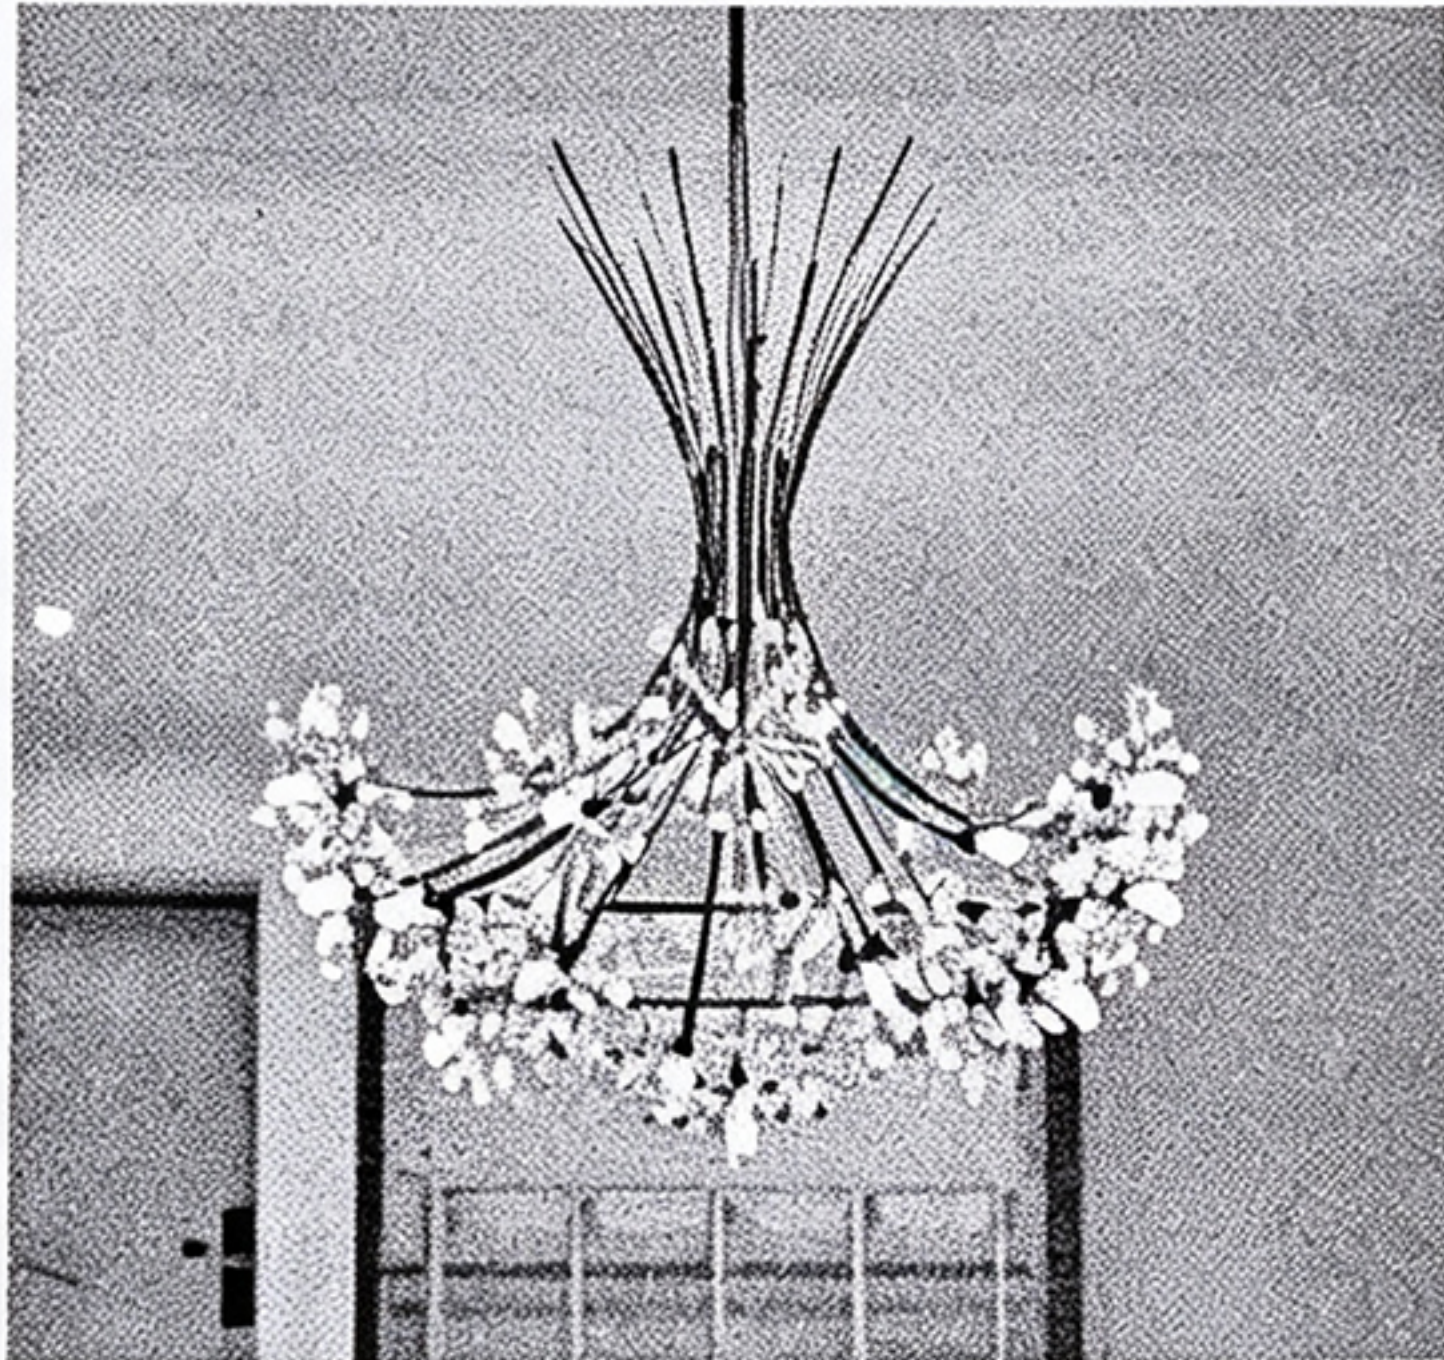

MAINTENANCE:

1. After installing this lamp, do not place acidic chemical solutions in the space, otherwise it may cause permanent damage to the surface of the lamp.
2. Please turn off the power when cleaning. Please choose a non corrosive cleaning agent.

Installation steps:

1. Assemble the lighting fixtures

According to the installation manual, the lamp will become an integral part, and the length of the filament wire should be appropriate. The multi strand flexible wire ends should be coated with tin layer, and attention should be paid to the uniformity of the wiring color to distinguish between the live and neutral wires inside the lamp.

2. Installation of lighting fixtures

Universal bulb installation: Cut off the power cord and strip off the end, then install the connecting screw inside the lamp box.

Offline lamp holder installation: First, ensure that the length of the power cord is sufficient for maintenance work, then cut off the remaining wires and peel off the outer skin, thread the wires through the lamp holder, and fix the base to the junction box with connecting screws.

Take out a sample wire, fix one end on the lampshade tightly, and insert the other end of the lamp wire into the base cover bowl. After bending the lamp wire in the cover bowl, connect it to the power cord on the base through a crimping cap, and finally tighten the cover plate.

3. Turn on the power and test.

Installation notes:

1. This device is rotatable and suitable for T10-230V power supply.
2. Please read the instruction manual before use.
3. After power failure, there is no overheating phenomenon and there is no noise during operation.
4. When the device is in operation, do not install it on insulation materials.