

JK6CZ6-000400ND120x50cm 9 档力度按摩座垫 美插 3 档通风 3 档加热-带线控 5vUSB 说明书翻译 英



MASSAGE CUSHION

Model: 308E

Instruction Manual

Dear Customer.

Thank you very much for purchasing this product, which has been rigorously tested and proven to be safe and reliable. Before you use it, please read this manual in detail in order to grasp the correct use of this product, please pay special attention to the important safety warnings when reading, and keep this manual in a safe place for reference.

Note: The company reserves the right to change the design and interpretation of the product, any changes without notice, the product colour and appearance in kind shall prevail.

*Take care to preserve it for future use!

Precautions

- The power plug must be unplugged after use or before cleaning.

- This machine should not be used in a humid environment and bathroom, after use, please keep in a dry and no strong direct light place.
- Functional areas such as kneading, massaging and heating should not be used during sleep to prevent prolonged stimulation of a certain area from affecting your health.
- Do not use the massage cushion within half an hour after meals, otherwise adverse consequences will occur due to the different body constitution.
- Stop using it immediately if it causes discomfort due to excessive stimulation during use.
- When children or people who are not physically free to use this product, there must be a suitable counsellor on the side of counselling.
- After massage, please drink 50cc of water or hot tea to promote the excretion of metabolic substances in the body.
- Once the machine power cord is damaged, you must consult the manufacturer with a special power cord replacement, or contact with the manufacturer, do not replace the unqualified cord by yourself.



Warning:

- This appliance is not intended for use by persons (including children) who are physically handicapped, have sensory or neurological deficiencies or lack relevant experience and common sense, unless they are supervised and instructed by a guardian.
- Children must be supervised to ensure that they do not play with the appliance.
- This appliance generates surface heat during use and care must be taken when using the appliance by persons who are not sensitive to heat.

Prohibited Population

1. For those with weak physical condition, such as those who are old and weak, have been ill for a long time, or are bedridden all year round, please consult a doctor before use.
2. Pregnant women and infants are prohibited from using it.
3. People with blood diseases and bleeding tendencies are prohibited from using it in the early stage of acute closed soft tissue injury, purple spot disease, and fractures.
4. It is recommended not to use it on an empty stomach, and on the contrary, it is also not recommended to use it when full. It is also not recommended to use it after excessive drinking or intense exercise.
5. It is contraindicated for patients in the recovery period of nerve anastomosis or those with open injuries.
6. Critical patients, such as patients with various malignant tumors.
7. Prohibited for patients with acute spinal injury.
8. It is not recommended to use massagers for patients with poor heart, gastric ulcers, gastric bleeding, lung disease, severe heart disease, liver disease, malignant tumors, acute abdomen, etc.
9. It is contraindicated for individuals with severe infections such as purulent arthritis and osteomyelitis.
10. Patients with tumors should pay attention to avoiding their location.

Simple Fault Analysis and Handling

Common Phenomena	Fault	Possible Cause	Handling
The whole machine is not working.		Whether the power is out. Whether the adapter is plugged into a power outlet; Whether the power switch is on. Whether the USB plug of the adapter is plugged into the USB port of the massage	Use after incoming call. Insert the adapter correctly and securely into the AC power cradle. Switch on the power switch. Firmly and securely insert the USB plug into the USB port.

	cushion.	
There is noise.	Whether it is placed in too hard a place to use.	Place on a soft bed/sofa/car cushion or put a soft cushion under the product.
Too little force.	The voltage of the mains electricity is too low. Failure to align the massage area.	Use a voltage regulator or voltage stabiliser to adjust the body to the massage area.
The small pillow doesn't work.	Whether the USB plug of the small pillow and the USB port of the massage cushion are plugged into each other.	Firmly insert the USB plug of the small pillow and the USB port of the massage cushion.

If the above methods do not solve the problem, please contact our local dealerships.

Warm Tips.

1. If the massage cushion is in a faulty state or can not be used, please disconnect the power supply.
2. Please do not disassemble or repair the massage cushion by yourself, disassemble or repair the product damage will cause the product warranty will be invalidated, the company will not be responsible for any consequences caused by the situation.

Product Maintenance and Cleaning

Maintenance

- Disconnect the power supply when not in use and place the product in a safe, dry and cool place.
- Avoid contact with sharp objects that may puncture or damage the product.
- Do not store the product in high temperature, near open flame or under direct sunlight, as this may cause colour fading and damage.
- Avoid exposing the product and accessories to benzene, thinner or other corrosive liquids.
- When storing, do not tie the product with cords or hang the product with wires.


Cleaning Method


- Before cleaning, please switch off the power supply and wipe gently with a soft, slightly damp sponge or soft cloth.
- The product must not be moistened in any liquid and must not be rinsed directly with water or any liquid.
- Do not use sharp brushes, petrol, paraffin, furniture cleaning solution, etc. to wipe the product.

Product Parameter

Product Name	Massage Cushion
Product Model	308E
Rated Voltage	5V ---
Rated Power	15W
Standard	GB4706.1-2005 GB4706.10-2008

Product Schematic

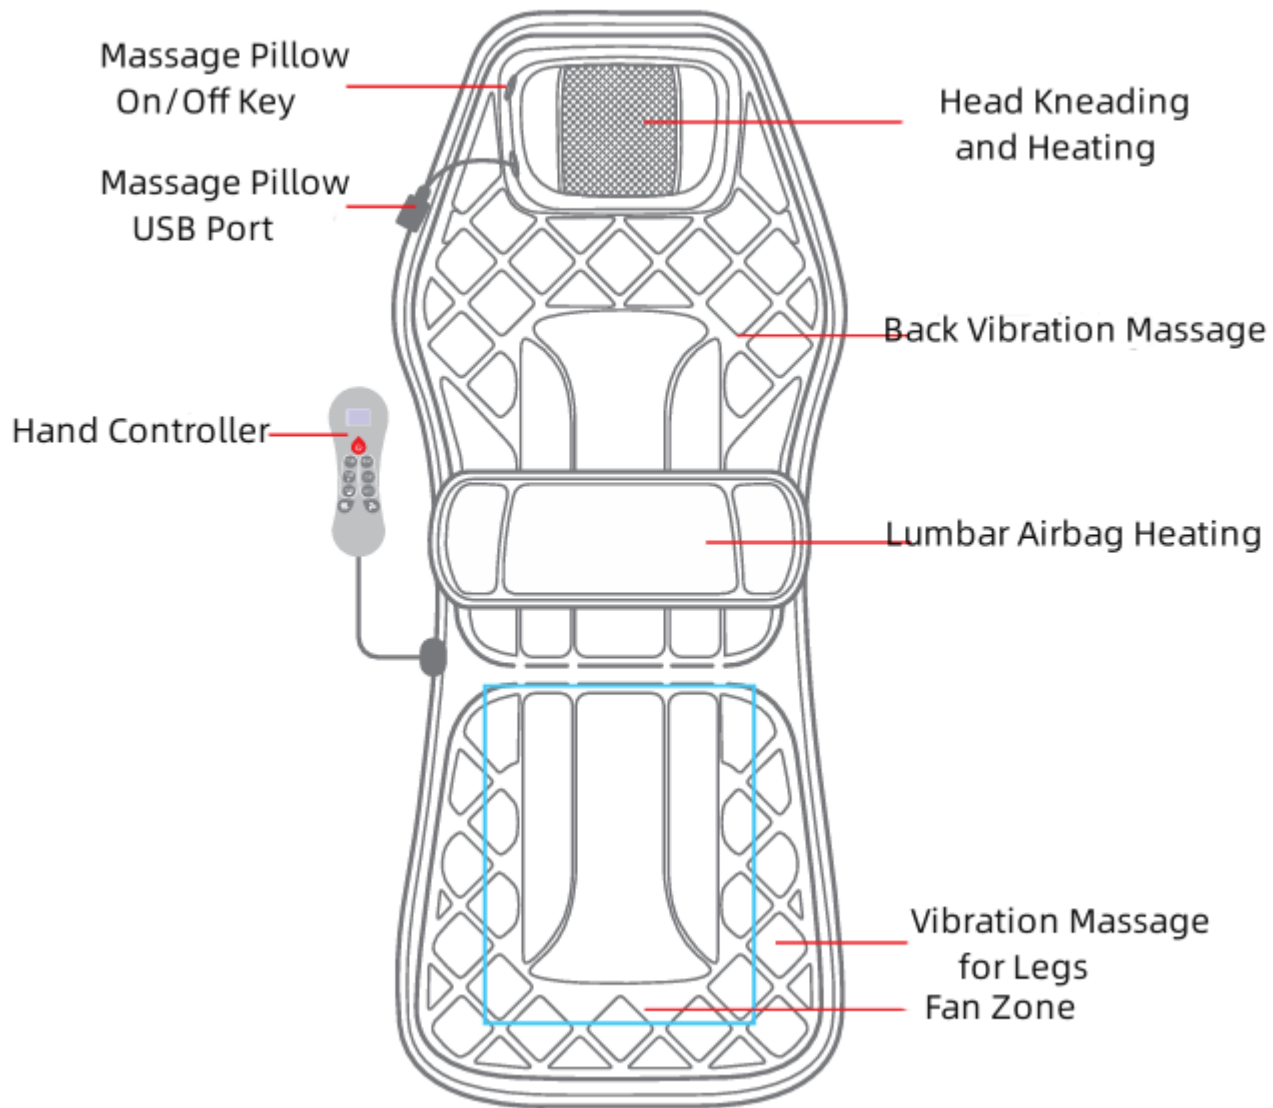

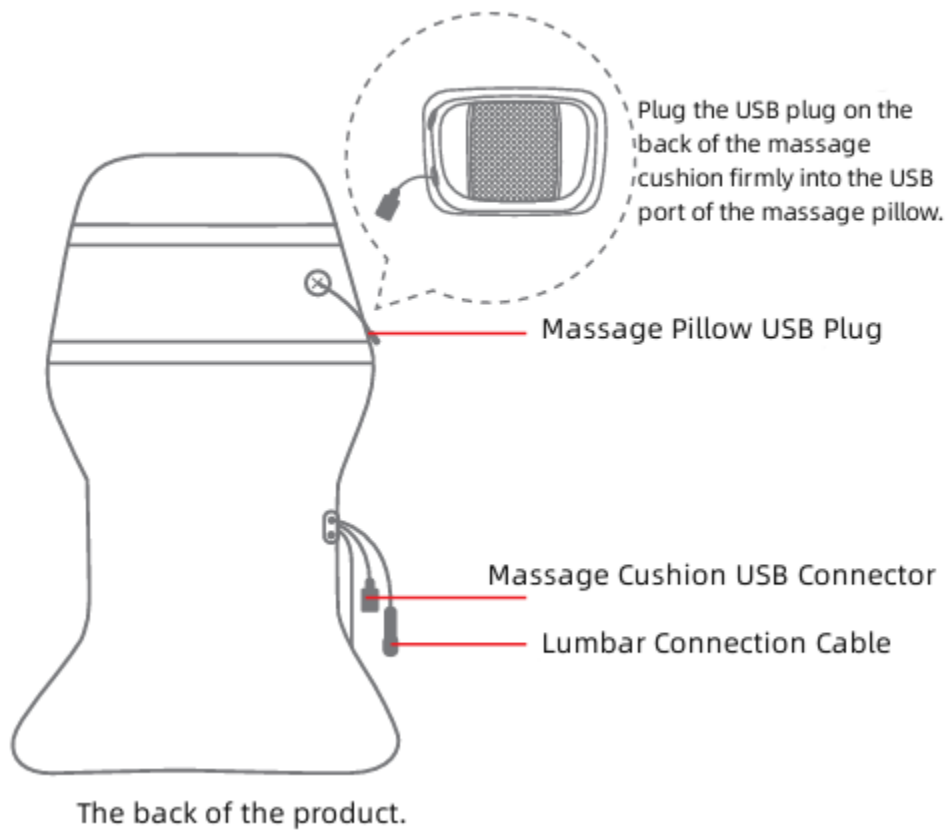


Massage Pillow Controller Instructions for Use

Massage cushion pillow on/off key: one key to start, single press to open the kneading massage, re-press to open the infrared light heating, press again to close the kneading heating function. **(Deluxe and Supreme editions only)**




Massage Pad Controller Instructions

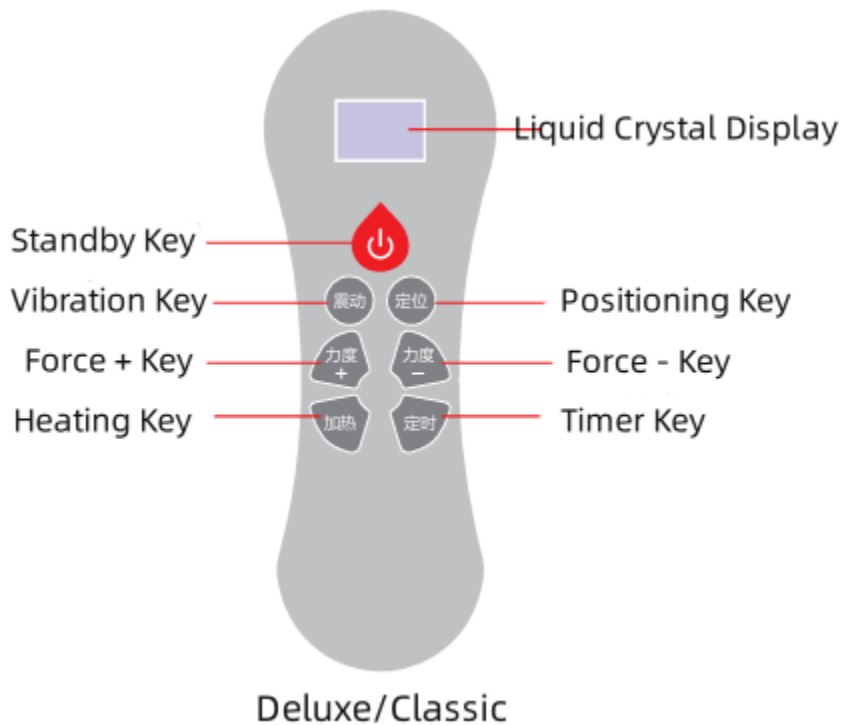

Deluxe/Classic

1. Standby Key: press this key to turn on the product in working condition, the default working time is 10 minutes, then press this key to turn off the machine.
2. Vibration Key: the machine has a total of 9 vibration mode can be selected by the user, in turn, press the key F1-F8, close the vibration mode at the same time open the medium temperature heating display E2.
3. Positioning Key: Press this key to select 9 groups of different positions fixed-point massage, in turn display P1-P9.
4. Force +: Press this key for strength enhancement, a total of 9 strength, in turn shows S1-S9.
5. Force -: Press this key for the strength of the weakening, a total of 9 strength, in turn, the display S9-S1.
6. Heating Key: the default is no heating, press the heating key to turn on the heating function of 3 levels, the digital display E1 low temperature, E2 medium temperature, E3 high temperature, CL is off heating.
7. Timer Key: press this key to adjust the working time, the default is 10min, press it once for 20min, then press it again for 30min.
8. This machine is designed with lumbar airbag inflatable design, press the airbag ball can make the lumbar inflatable air, it can adjust the lumbar cushion height and comfort, please deflate it when you don't need it. (Deluxe version only)

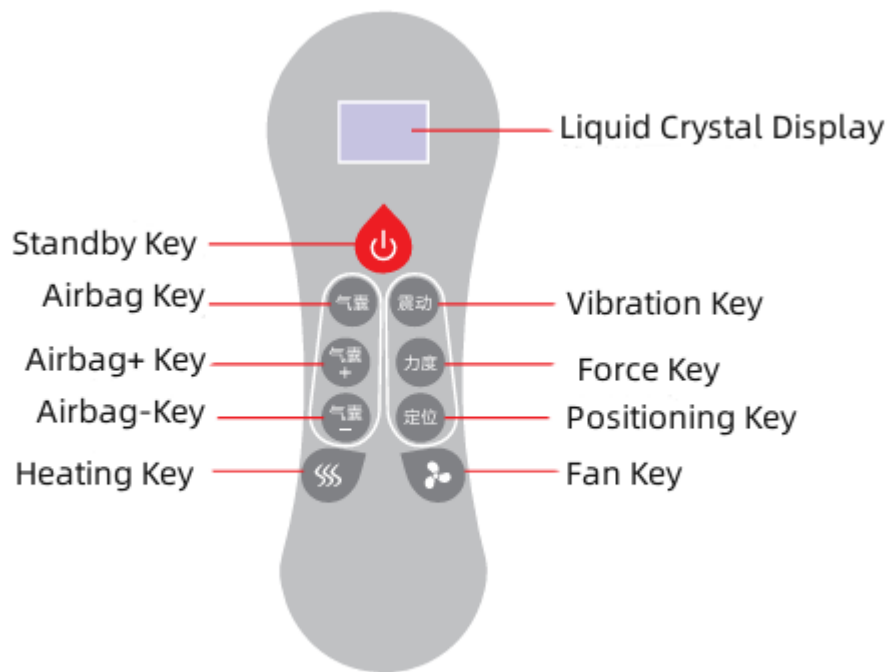

Supreme Edition

1. Standby Key: The functions of this key are switching on, switching off and timing. Press this key to turn on the airbag mode automatically, the digital display A1, 3 seconds later change the display to timer 10 minutes, re-press the timer 20 minutes, then press the timer 30 minutes, and finally switch off the display OF.
2. Airbag Key: open the airbag automatic mode display A1, then press to close the display A0.
3. Airbag + Key: short press to keep inflating for 2 seconds to display 01~02 seconds; long press to keep inflating for 10 seconds to display 01~10 seconds.
4. Airbag - Key: short press deflate for 1 second, digital display deflate time 01~00 seconds; long press deflate for 10 seconds digital display deflate time 10~00 seconds.
5. Vibration Key: the machine has a total of 9 kinds of vibration mode can be selected by the user, open the vibration mode default automatic mode AU, in turn, press the key F1 ~ F8 of a variety of vibration modes, close the vibration mode display F0.
6. Force Key: open the vibration mode, press this key to adjust the intensity of the size of the digital display H1 ~ H9.
7. Positioning Key: Press this key to select 9 groups of different positions for fixed-point massage, the digital display P1~P9.
8. Heating Key: open the heating mode, the default medium. Total three temperature control adjustment, E1 low temperature, E2 medium temperature, E3 high temperature, and finally close the heating display E0.
9. Fan Key: turn on the fan mode, a total of three levels of intensity, U1 low, U2 medium, U3 high, and finally turn off the fan display U0.