


Three-Head Post Light with Outlet Installation Manual



ASSEMBLY INSTRUCTIONS

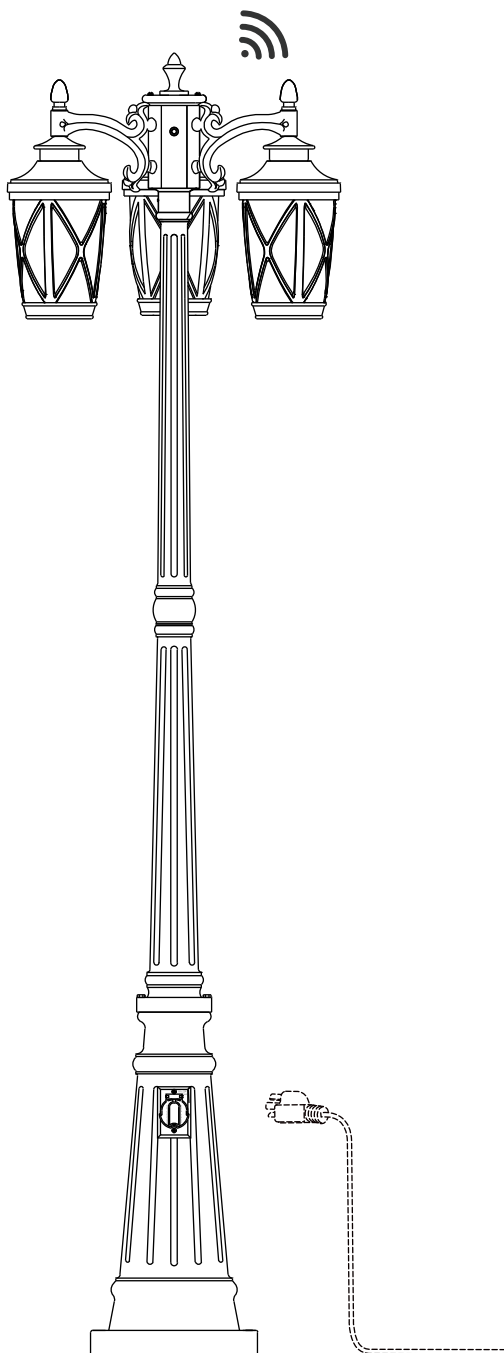

IMPORTANT SAFETY INSTRUCTIONS SAVE THESE INSTRUCTIONS

INSTRUCTIONS PERTAINING TO RISK OF FIRE OR INJURY TO PERSONS READ ALL INSTRUCTIONS

Before starting the installation, disconnect the power by turning off the circuit breaker. Also turn off the light switch to prevent electric shock. All electrical connections and installations must comply with local codes, ordinances, and/or the National Electrical Code, and must be performed by a qualified electrician.

TOOLS AND MATERIALS REQUIRED:



Phillips
Screwdriver



Wire Cutters




Pliers



Wrench



Safety Gloves



Electrical Tape



Safety Glasses



Ladder

SAFETY PRECAUTIONS:

1. Turn off electrical power before starting the installation of the post light.
2. This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.
3. Firmly attach the post light ground wire (bare copper) to the mounting bracket with the ground screw (by wrapping around the ground screw) and then connect it to the house supply ground wire with a wire nut.
4. To clean the post light, turn off the power, wait for it to cool, and wipe the post light with a clean, soft cloth.

Note: the product may not look exactly as shown in the figures.

Product Details:

Outlet Input Wire:	15 AWG
Outlet Max Load:	1875W
Material:	Aluminum
Waterproof:	Weather Resistant
Voltage:	110–120V AC
Power Source:	Hard-Wired
Wattage:	Max: 100W × 3
Bulb Base:	E26 × 3

Note: all specifications are for reference only and are subject to change without prior notice.


3-YEAR LIMITED WARRANTY*

This light fixture is warranted against defects in material and quality for a 3-year period from the purchase date.


Exclusions from Warranty:

- Damage caused by acts of nature, such as lightning damage or corrosion and discoloration of components.
- Damages resulting from abuse, improper installation, electric surges, or actions of third parties.
- Costs related to removing and resealing the lighting fixture.
- Damage caused by incorrect installation orientation.


THREE-HEAD POST LIGHT INSTALLATION MANUAL

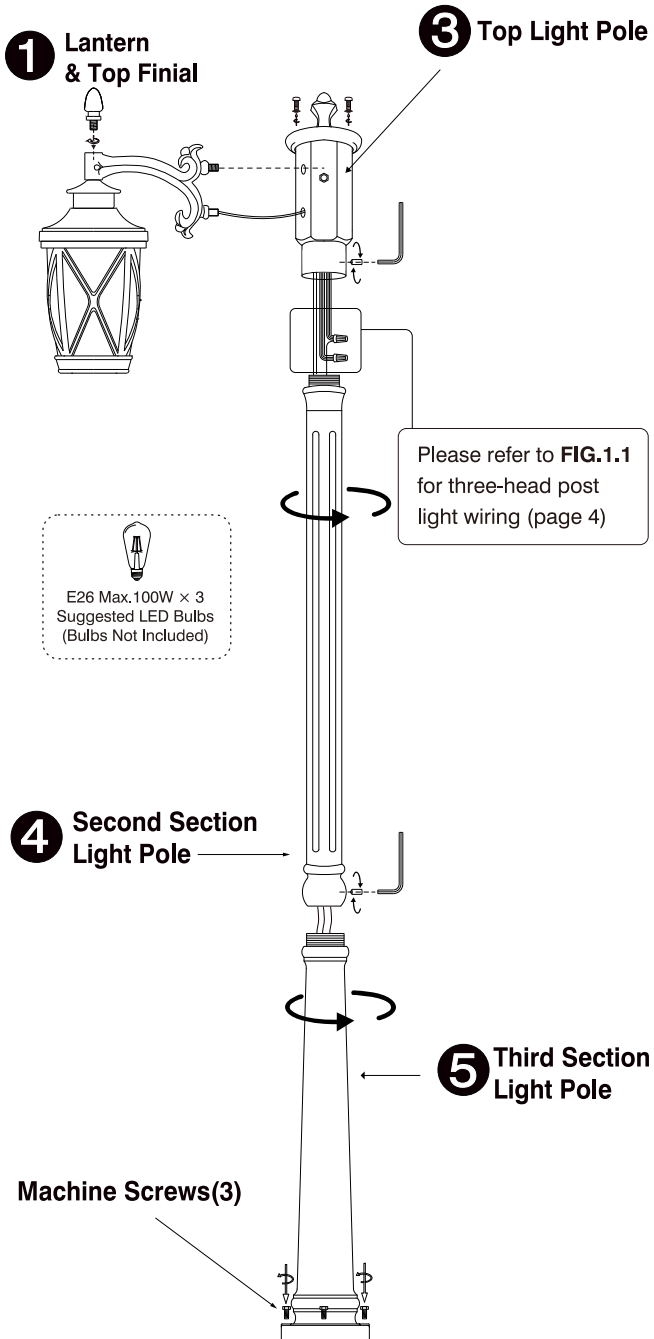


For wiring and installation details of the base, please refer to pages 5 and 6.

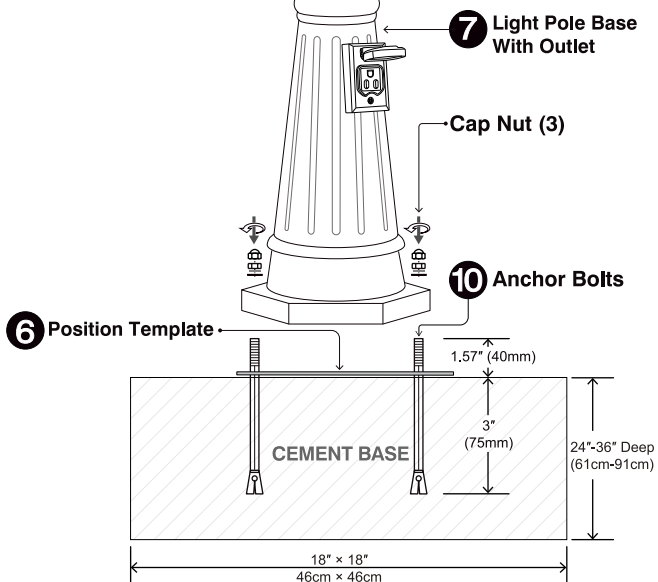


ASSEMBLY INSTRUCTIONS

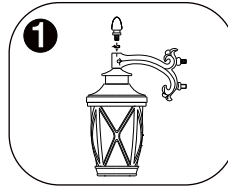


Lantern & Top Finial
x3

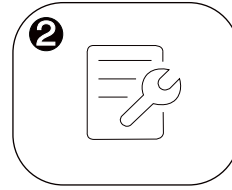


Installation Manual
x1

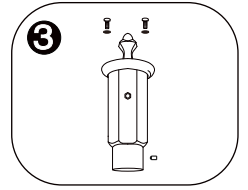


Top Light Pole
(With Photocell Sensor)
x1

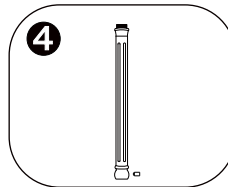


Second Section Light Pole
x1

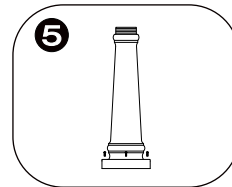


Third Section Light Pole
x1

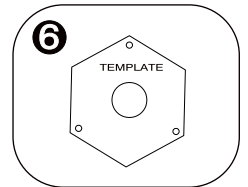


Position Template
x1

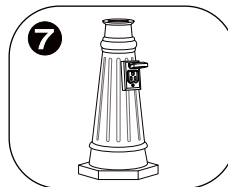


Light Pole Base With Outlet
x1

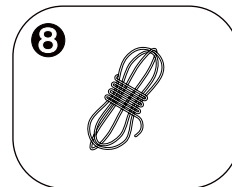


Long White Wire
x1

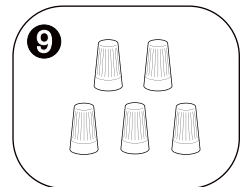

Wire Nuts
x5

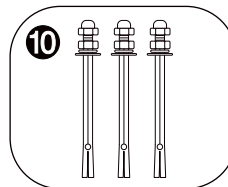

Anchor Bolt
x3

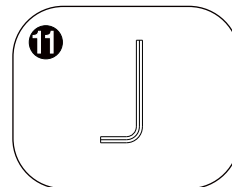

Allen Wrench
x1

Product List


- 1** Lantern & Top Finial x3
- 2** Installation Manual x 1
- 3** Top Light Pole x1 (With Photocell Sensor)
- 4** Second Section Light Pole x1
- 5** Third Section Light Pole x1
- 6** Position Template x1

- 7** Light Pole Base x1
- 8** Long White Wire x1
- 9** Wire Nuts x6
- 10** Anchor Bolt x3
- 11** Allen Wrench x1

CONNECT TRIPLE-HEADED POST LIGHTS


Checklist Needed To Install:

1

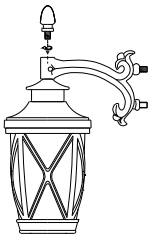


Lantern & Top Finial
× 3

3




Top Light Pole
(With Photocell Sensor)
× 1

8

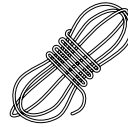


Long White Wire
× 1

9



Wire Nuts
× 2

Top Finial

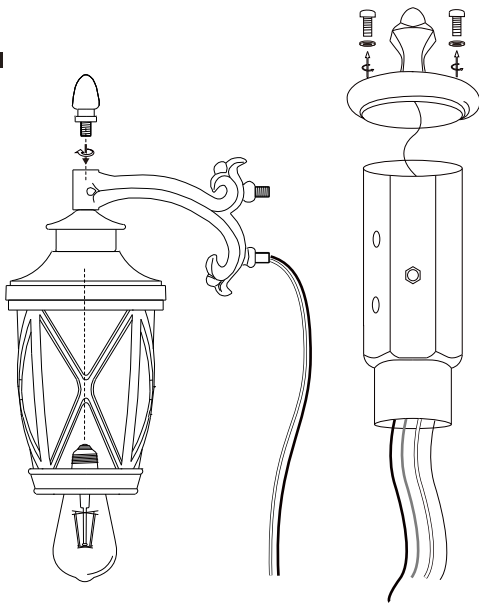


E26 Max.100W × 3
Suggested LED Bulbs
(Bulbs Not Included)

Disassemble The Top Light Pole

1. Attach the **Top Finial** to the **Lantern**, then install one E26 LED bulb. (Bulbs Not Included)
2. Detach the **Top Light Pole** and pull out the wires from its bottom:
 - 1 long black wire
 - 1 red wire
 - 1 white wire
 - 1 ground wire (bare copper)

Assemble 3 Lanterns


3. Remove the nut and washer at point **A** on the **Lantern**.
4. Thread the **Lantern wires** through the **Top Light Pole**.
5. Connect **A** to **B**, and **C** to **D**, then tighten point **B** from inside the Top Light Pole using the nut and washer.
*Note: No nut is needed at point **D**.*
6. After assembling all the lanterns, attach the Top Light Pole cover and tighten the screws.

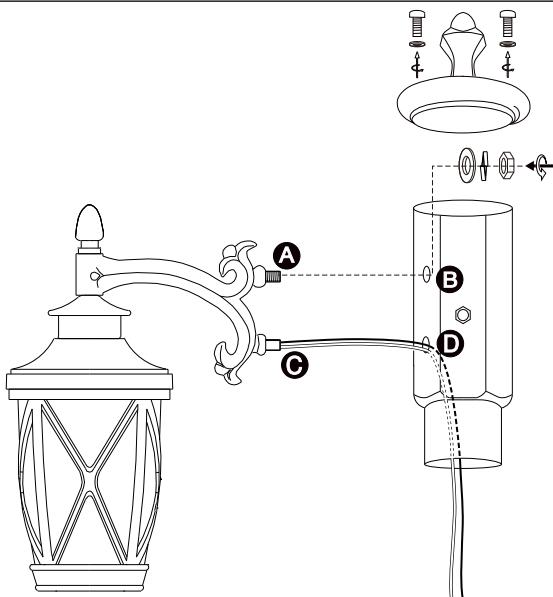

Note: To clearly illustrate this step, the diagram shows only the wires of one lantern, with other wires omitted.

CONNECT THE TOP LIGHT POLE WIRES


FIG.1.1

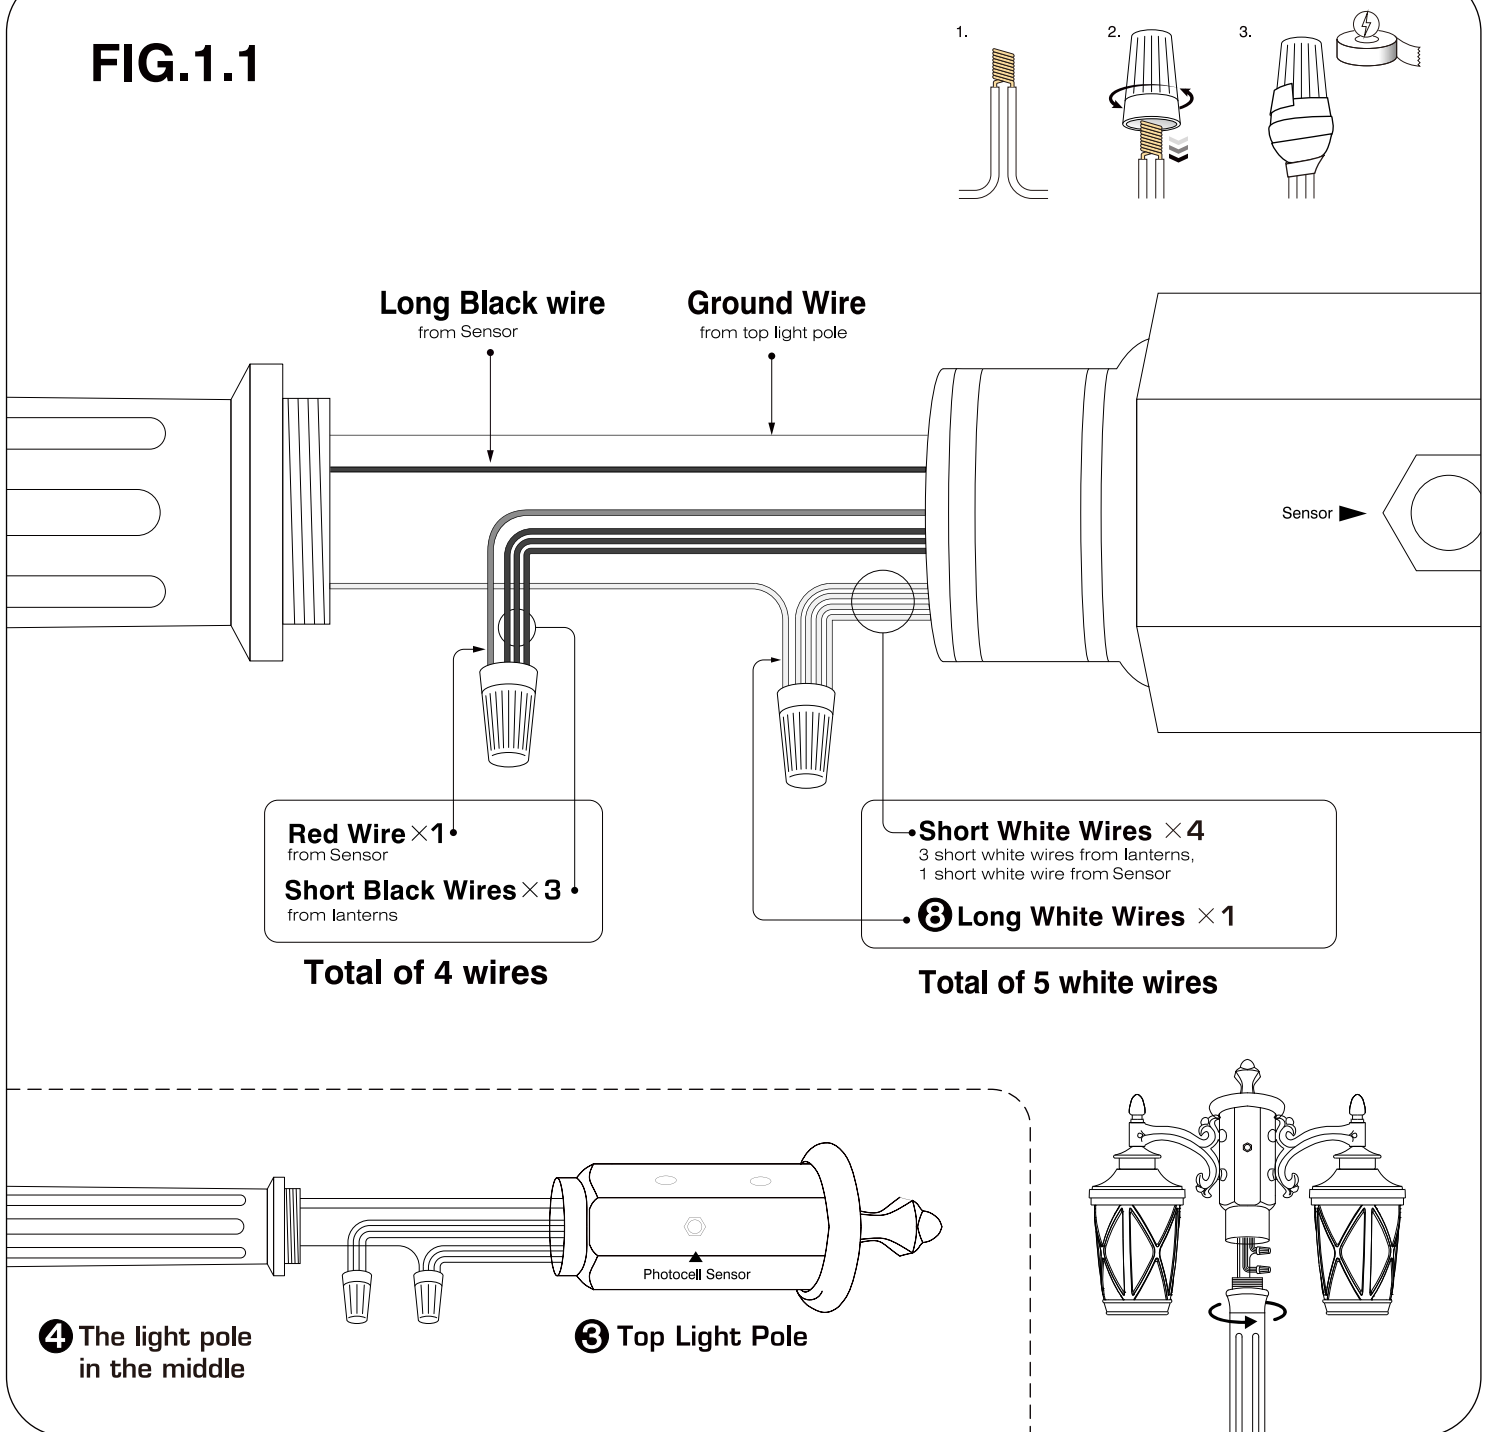



1. Mount the three lamp holders onto the top rod. Next, carefully route all the wires, ensuring they are brought out from the bottom section.
2. Connect the “**Short Black Wires × 3**” and “**Red Wire × 1**” together using a wire nut.
from lanterns
3. Connect the “**Short White Wires × 4**” and the one “**Long White Wire × 1**” provided by using a wire nut.
3 short white wires from lanterns,
4. Assemble all the light poles in sequential order and route all the long wires (black wire, white wire, ground copper wire) from the base(**Next Page FIG.1.2**)


CONNECT LIGHT POLE

Checklist Needed To Install:

- 3**


Top Light Pole ×1
(With Photocell Sensor)
- 4**


Second Section
Light Pole
×1
- 5**

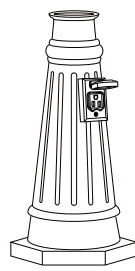
Third Section
Light Pole
×1
- 7**


Light Pole Base
With Outlet
×1
- 9**


Wire Nuts
×3

Connect The Light Posts In Sequence


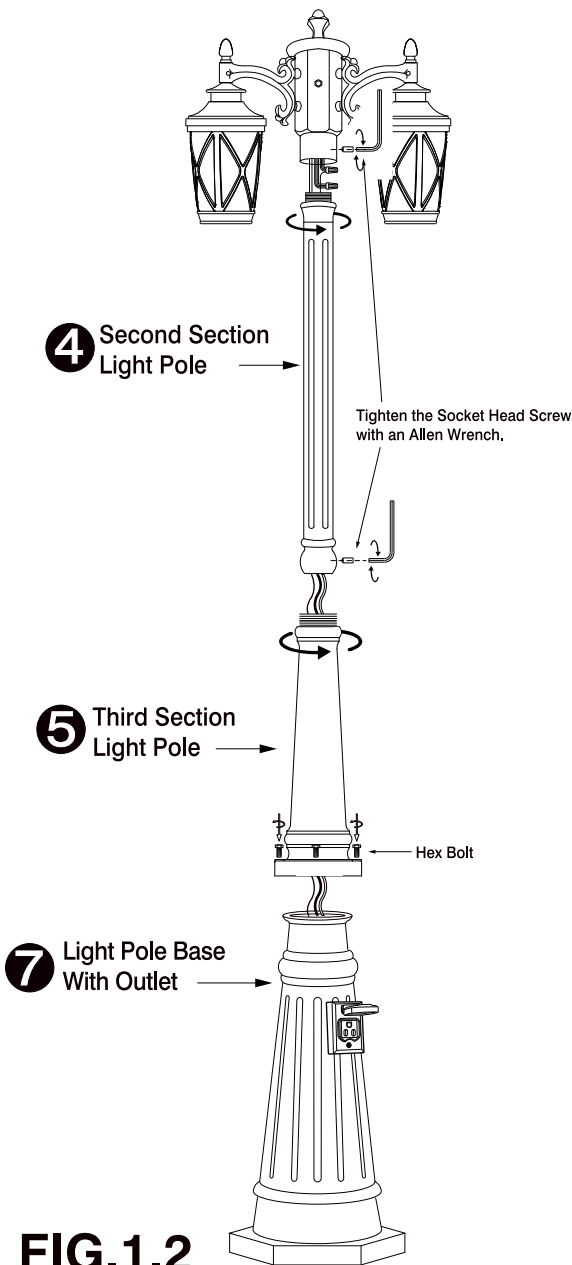


FIG.1.2

Connecting The Power Supply

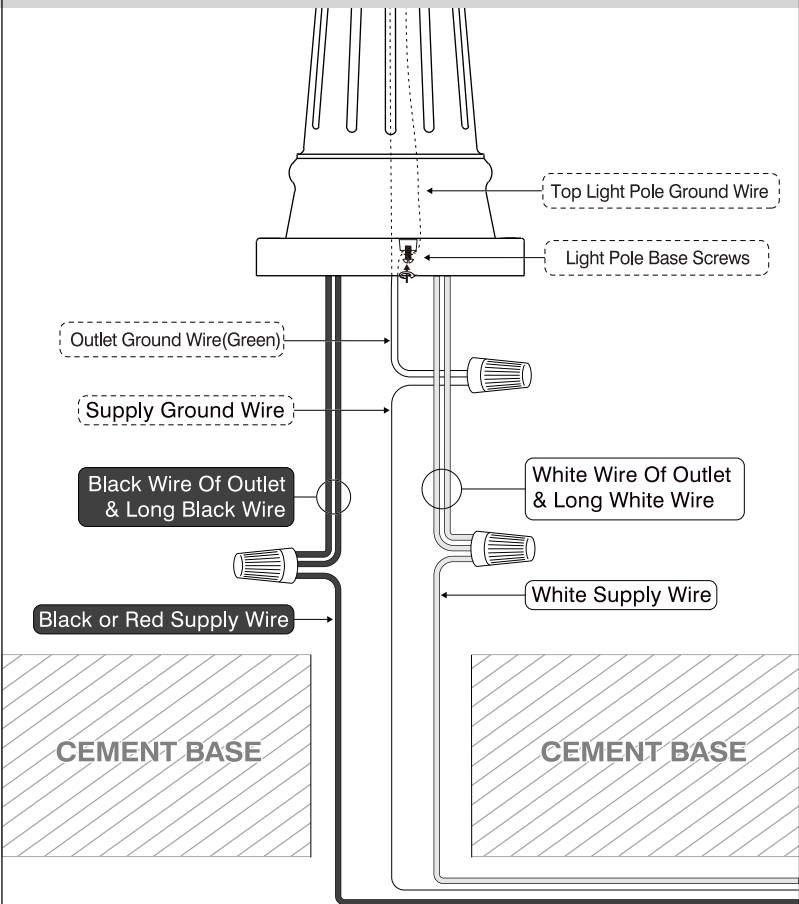

Connect wires according to the below chart

Fixture Side	Black Wire	White Wire	Ground Wire (After securing the screws to the mounting base)
	Connect to ↓	Connect to ↓	Connect to ↓
Power Supply Side	Hot (Black or Red Wire)	Neutral (White Wire)	Ground (Green or Bare Copper Wire)

Note:
When using parallel non-polarized wires (Parallel Wires):
The round and smooth wire is hot, while the square-shaped or ridged wire is neutral.

STEPS TO INSTALL THE LIGHT POLE BASE

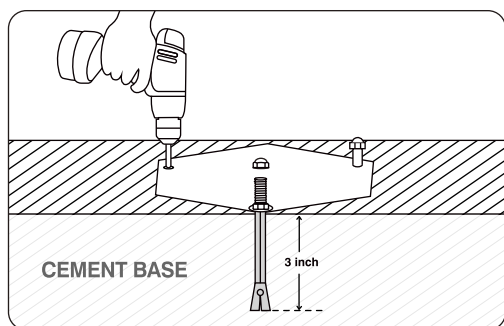


FIG.1

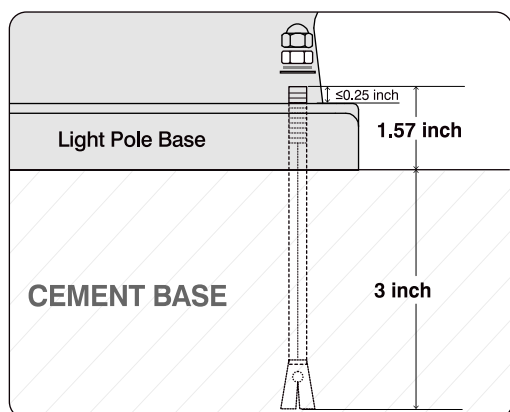


FIG.2


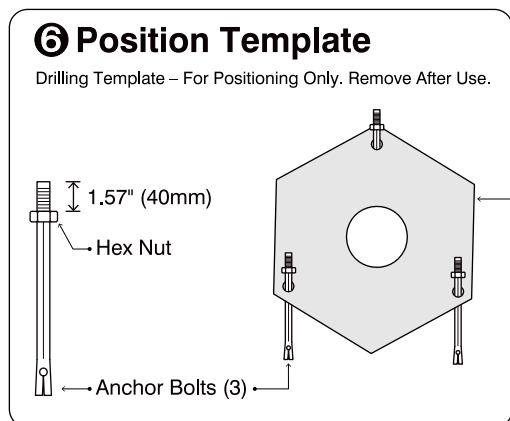


FIG.3

FIG.2A

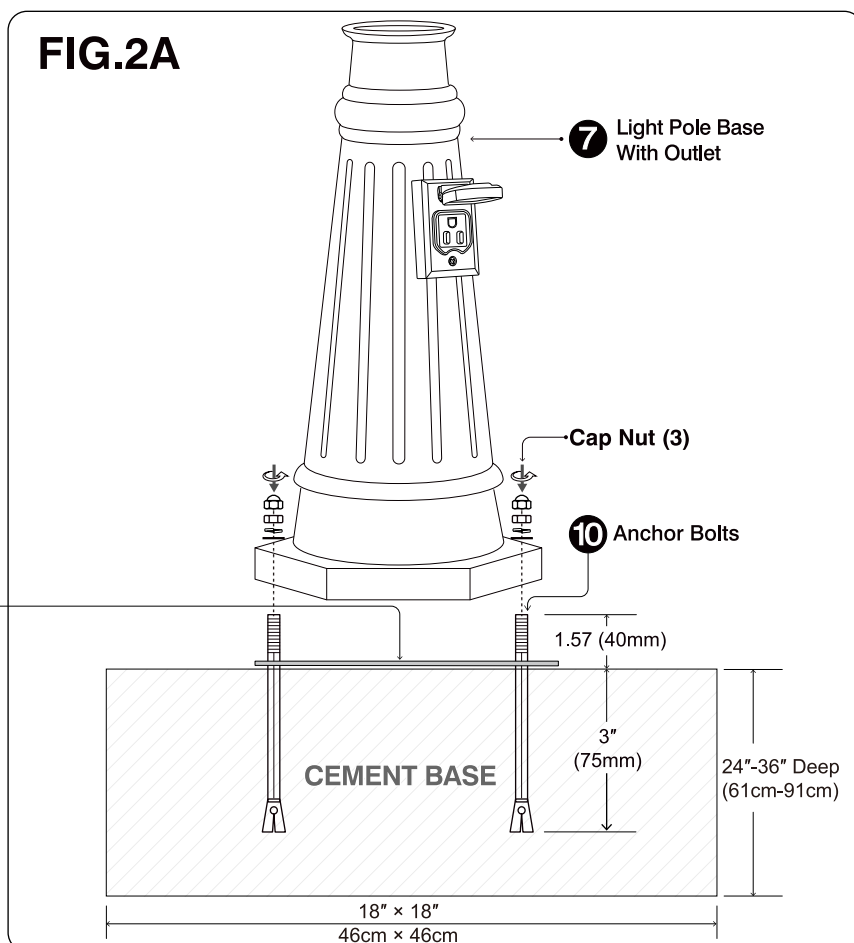


1. Drilling holes in the concrete floor using an electric drill (the specific position can be fixed with the ⑦ Position Template), the drill depth is about 3 inches. (FIG.1)
2. Install the expansion screws into the corresponding holes, leaving about 1.8 inches. (FIG.2)
3. Install the base in the corresponding hole of the expansion screw. (FIG.3)
4. Finished after the screw is tightened.

Installation Steps:

1. Attach all three (3) **Anchor Bolts** to the **Position Pemplate**. Place the **Hex Nuts** over the **Position Template** to secure it in place. The threaded portion of the **Anchor Bolts** should extend 1.57" (40mm) from the position template, as illustrated in FIG.3. After the **Anchor Bolts** and **Position Template** are embedded and fixed in the **CEMENT BASE**, remove the **Hex Nut**.
2. The **CEMENT BASE** should have a minimum width of 18" (46cm) and a depth of 24" -36" (61-91cm), depending on the frost line in your area. Ensure that the **Anchor Bolts** protrude 1.57" (40mm) from the cement surface. as illustrated in FIG.2A.
3. Once the cement has fully dried, position the **Light Pole Base** onto the **Anchor Bolts** and thread the electrical wire through the designated hole.
4. Secure the light pole base to the concrete by tightening three (3) **Cap nuts** onto the **Anchor Bolts**, as illustrated in FIG.2A.
5. Please note that after the **Light Pole Base** is placed in the **CEMENT BASE**, the height from the **Anchor Bolts** to the **Light Pole Base** should not exceed 0.25" (6.5mm) , as illustrated in FIG.2.

OUTDOOR POST LIGHT WITH OUTLET

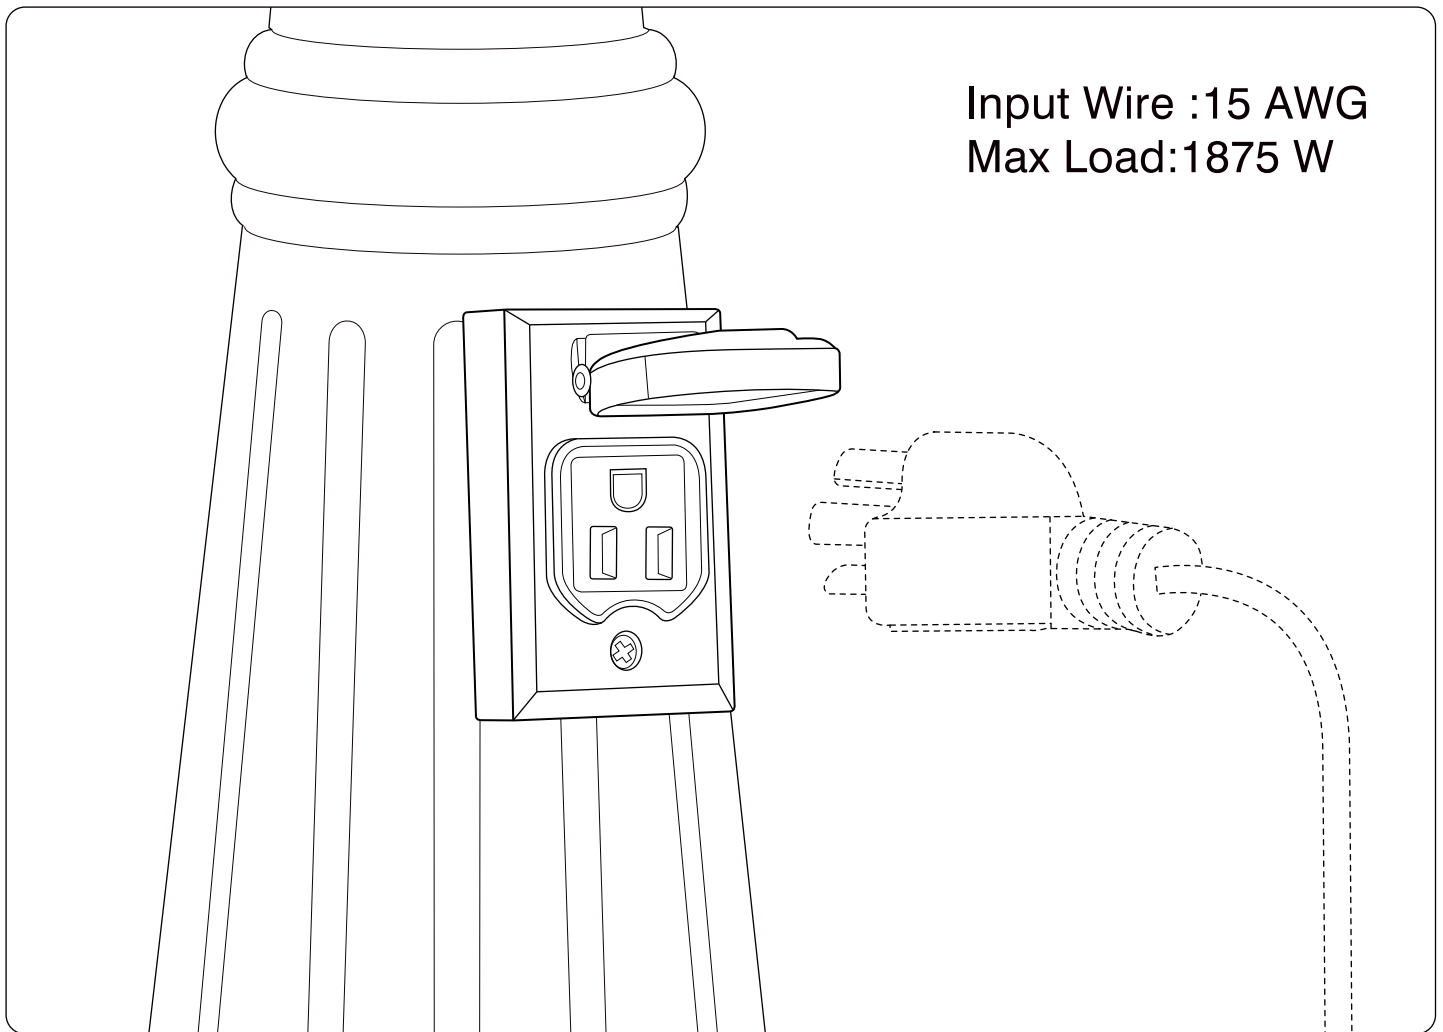

1. Before connecting the outlet, please check whether the connected equipment
2. The rated current of the outdoor post light with plug is 15A and the maximum load is 1875W.
3. Once the outlet is opened, it will immediately lose its waterproof function, please do not use it in a wet environment.
4. Can not be plugged into the outlet for a long time to use, only as a temporary use. If you need to use it for a long time, please use the supply wires.
5. After use, please close the cover of the outlet in time to prevent power leakage and the risk of electric shock.