



INSTRUCTION MANUAL

SPECIFICATIONS



Max Load
159KG/350 lbs



Three-year
Warranty



For Indoor
Use



Parts List / Liste des Pièces / Teilliste / Liste des Pièces / 部品一覧表 / Elenco dei Componibili

A x5



B x1



C x5



D x1



E x1



F x2



G x1



H x1



I x2



J x5



M6×15mm

K x6



M6×35mm

L x4




M8×20mm

Kindly Note

- **Recommended: 2-person assembly.**
- **Here are some guidelines to follow when assembling and using your product:**
 1. Carefully unpack the carton and check that all parts are complete according to the part list. If any parts are missing or damaged upon arrival, please contact the manufacturer via email to get the required parts.
 2. If any non-human damage occurs during the product warranty period, please reach out to the manufacturer with your order number or invoice. We will be responsible for repairing any defective products or providing free part replacements.
 3. Please use the included Allen wrench to install the chair. Placing the chair on its carton during installation will make the process more convenient.
 4. Use the chair only after all screws have been securely tightened. Keep the Allen wrench and check that all screws are tightened every 3 months.
 5. The chair is designed for use by one person at a time.
 6. Do not stand on the chair or use it as a step ladder.
 7. Keep children and pets away from plastic packaging to prevent suffocation.


STEP 1 Starbase Assembly

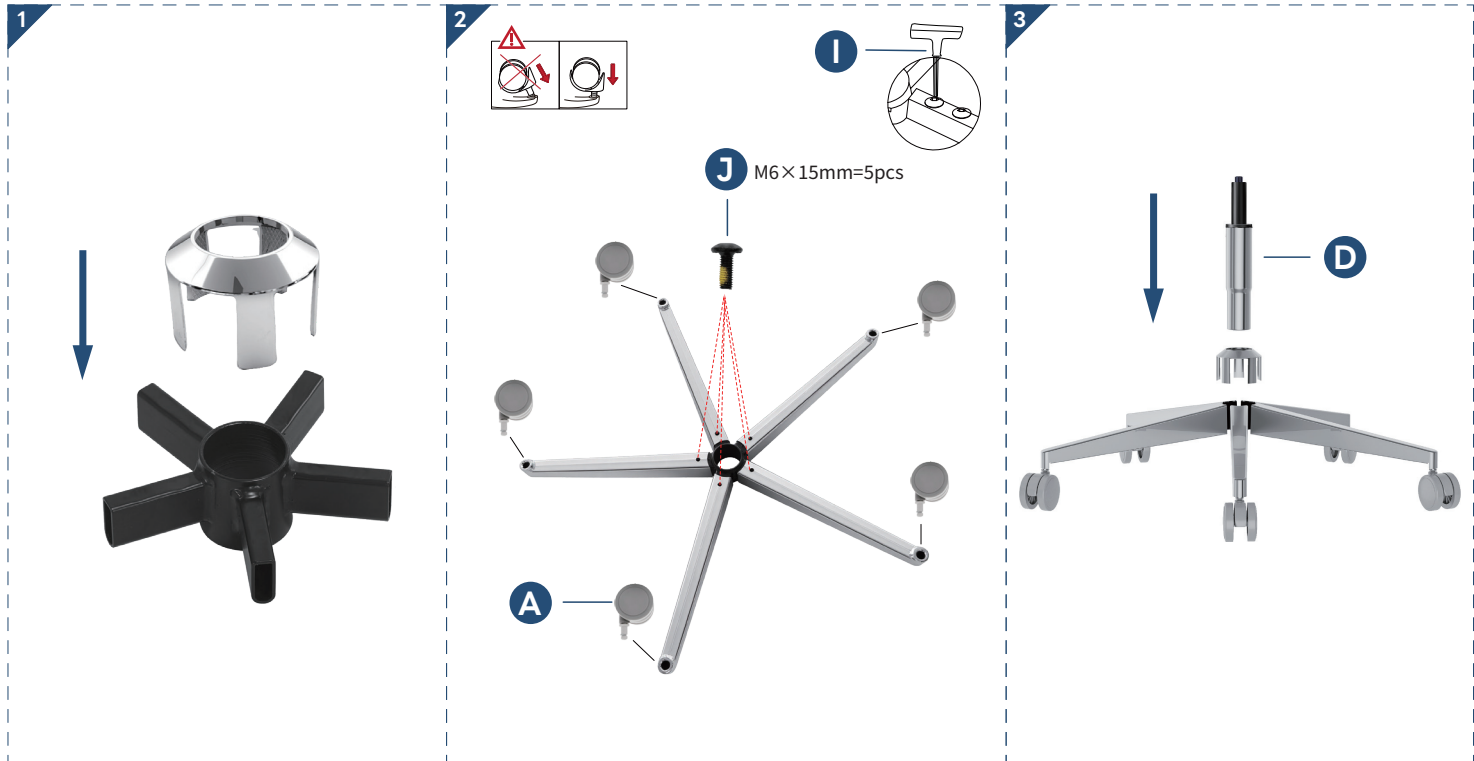

• **EN:** Please press the caster (A) **VERTICALLY** into the hole with force. Install it in place when you hear a "click".



STEP 2 Seat Assembly

4

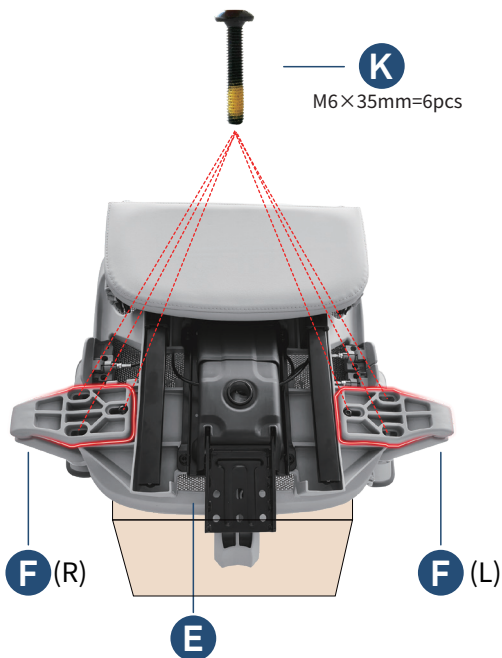

5

L
 $M8 \times 20mm = 4\text{ pcs}$

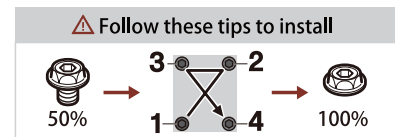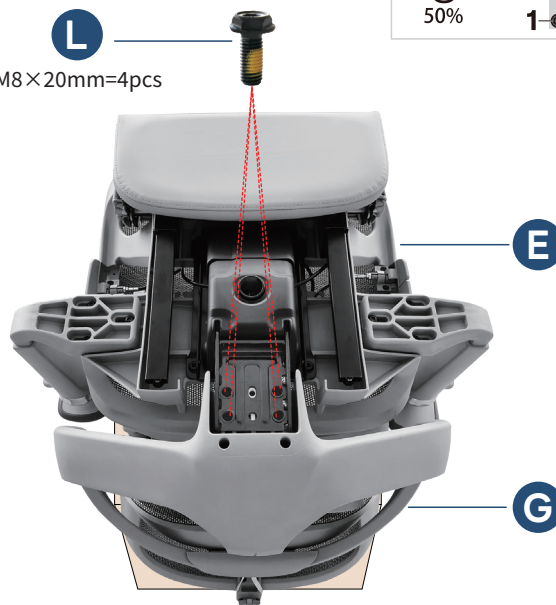



- **EN:** Placing the seat on the carton makes installation easier.
Figure 5 : first, tighten all screws to about 50% to secure the alignment, then fully tighten them to 100% in order.

STEP 3 Finish Display



- **EN:** Figure 7, engage the clips on the lumbar support with the protrusions on the seat frame by pressing down from above.

Function Display

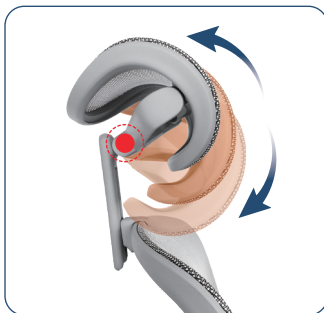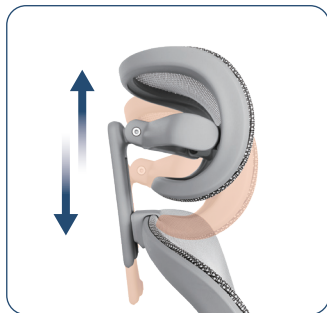

Function Display



- **EN:** Hold the frame as shown and lift gently, slowly. The backrest has 5 locking heights - you will hear a clear click with each lock. Lifting it all the way up unlocks it and drops it down.



Seat sliding:
Lift front lever to slide seat in/out. Release to lock.

Back tilting:
Lock: Flip rear lever up, press backrest to desired angle, hold, flip lever down to lock. (4 angles)

Unlock: Flip rear lever up, gently press backrest to release.

Function Display



10cm height adjustment



5cm slide adjustment



220° Rotate inward

