JAMIE YOUNG Co

LARGE ACRYLIC FOLLOWER PENDANT
5ZINN-CHLG
SAFETY, INSTALLATION & CARE INSTRUCTIONS

Important Safety Instructions:

We strongly recommend that all direct-wired lighting products be installed by a licensed electrician.

Two people may be required for installation. DO NOT EXCEED the rated bulb wattage. Keep flammable materials away from bulb. This light fixture is shipped with all internal wiring intact. Do not open the product or alter the wiring in any manner.

Installation requires an electrical junction box in the ceiling sufficient to support the weight of the light fixture. This fixture weighs: 31lb. / 14 Kg. **YOU MUST VERIFY WITH QULAIFIED ELECTRICIAN IF YOUR CEILING J-BOX AND SUPPORTS ARE SUFFICIENT TO HOLD THE WEIGHT OF THIS UNIT.**

WARNING: Be certain that the power to the electrical junction box is turned off at the circuit breaker before installation. Turning the power off at a light switch is not sufficient to prevent electrical shock.

CAUTION: Prior to installation, locate ALL PARTS INCLUDED before disposing of pack aging materials.

Tools Required for Installation (Not Included):

Electrical Tape	Pliers
Wire Cutters	Adjustable Wrench

Note: Additional wiring supplies may be required.

Parts Required (not included):

Part	Qty.	Description
(A)	1	Ceiling Outlet Junction Box
(B)	1	Ground Junction Box Wire
(C)	1	Hot Junction Box Wire
(D)	1	Neutral Junction Box Wire

Parts Included/Referenced (See Figure 1):

Part	Qty.	Description	Part	Qty.	Description
(F)	1	Mounting Bracket	(P)	2	Metal Tube (9.25")
(G)	2	Mounting Screw	(Q)	1	Metal Tube (6")
(H)	1	Ground Screw	(R)	1	Light Body
(I)	1	Ground Wire	(S)	3	E12 Socket
(J)	1	Hot Fixture Wire	(T)	3	B11 Light Bulb(Not Included)
(K)	1	Neutral Fixture Wire	(U)	1	Shade
(L)	3	Wire Connector	(V)	1	E26 Socket
(M)	1	Canopy	(W)	1	G25 Light Bulb (Not Included)
(N)	2	Screw			
(O)	2	Finial			

5ZINN-CHLG

Important Safety Instructions:

For your safety, use of a two-person installation team is strongly recommended.

This product must be installed in accordance with the applicable installation codes by a person familiar with the construction and operation of the product and the hazards involved.

This fixture has been rated for up to four (1) 20W-maximum Type G incandescent light bulbs (not included) AND four (3) 5W-maximum Type B LED light bulbs (not included). To avoid the risk of fire, do not exceed the recommended wattage.


This fixture is meant for indoor use in dry locations only.

Installation Procedure (See Figure 1):

1. SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER.
2. Carefully unpack all fixture parts and hardware and lay them out on a clean work surface.
3. Install the shade(U) onto the Light body(R) in the correct order.
4. Pull pendant cord through Metal Tube (Q), Metal Tube (P) and Canopy (M) until taught. Screw Metal Tube (Q) to the exposed threaded rods on Light Body (R) and tighten to secure. Screw Metal Tube (P) to Metal Tube (Q) and tighten until secure. (NOTE: Lighting fixture suspension length can be adjusted by adjusting the quantity of metal tubes used).
5. Screw Metal Tube (P) to Canopy (M) together and tighten until secure.
6. Attach the Mounting Bracket (F) to the Ceiling Outlet Junction Box (A) using the Mounting Screws (G) and Screw (N). Tighten screws with a Screwdriver until secure.
7. Gently pull existing Ground (B), Hot (C), and Neutral (D) Junction Box Wires down from the Ceiling Junction Box (A) and allow them to hang.
8. Carefully inspect the chandelier's fixture wires. The Neutral Fixture Wire (K) is White. The Hot Fixture Wire (J) is Black, and the Ground Wire (I) is Green.
9. Attach the Ground Wire (I) from the fixture to the Ground Junction Box Wire (B); it usually has green insulation around it or is bare wire. Fasten them together with a Wire Connector (L) and wrap the connection with electrical tape. Make sure that no wire strands are exposed. If your Ceiling Outlet Junction Box (A) does not have a Ground Junction Box Wire (B), insert the Ground Screw (H) into the Mounting Bracket (F) where it's marked "Ground", and wrap the fixture's bare ground wire around the Ground Screw (H). Tighten the screw to clamp the Ground Junction Box Wire (B) between the Ground Screw (H) head and the Mounting Bracket (F). It is imperative that the Ceiling Junction Box (A) in your home be properly grounded.
10. Connect the Neutral Fixture Wire (K) to the Neutral Junction Box Wire (D); it usually has white insulation around it. Fasten them together with a plastic Wire Connector (L) and wrap the connection with electrical tape. Make sure that no wire strands are exposed.
11. Connect the Hot Fixture Wire (J) to Hot Junction Box Wire (C); it usually has black insulation around it. Fasten them together with a plastic Wire Connector (L) and wrap the connection with electrical tape. Make sure that no wire strands are exposed. Do not reverse the hot and neutral connections or safety will be compromised.
12. Gently tuck the wire connections neatly into the Ceiling Outlet Junction Box (A).
13. Fix Canopy (M) to Mounting Bracket (F) with Finial (O).
14. Insert four (1) 10w--maximum Type G incandescent light bulbs (not included) and four (3) 5w--maximum Type B LED bulbs (not included). Do not exceed the specified wattage.
15. Restore power to Ceiling Outlet Junction Box (A) and test the fixture.

LARGE ORBIT CHANDELIER
5ORBI-LGAB

Installation Procedure (Figure 1):

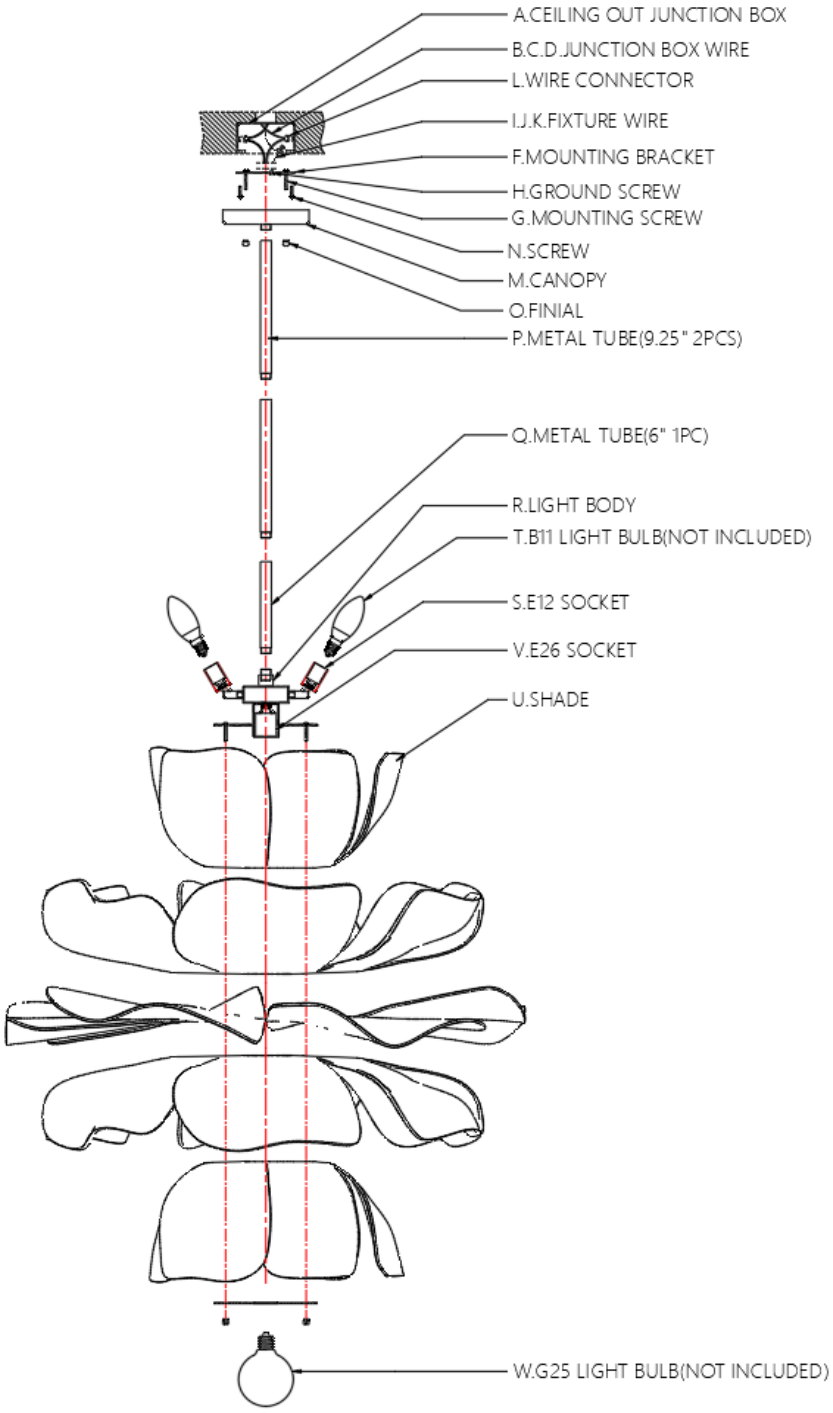

CARE & CLEANING:

To clean, wipe the fixture ONLY with a soft, dry cloth.

SAVE THESE INSTRUCTIONS