

**SMART BATHROOM
CORE TECHNOLOGY
SMART TOILET**

USER GUIDE

Thank you for using this product, To make it easier for you to use this product correctly. Please read the User's Guide carefully and keep all the information in a safe place.

Safety & Warnings

1. Indoor use only
2. Any quality or operation problem of the product can be dealt with after-sale by notifying the seller through the platform. If the power cord is damaged, notify the seller via the platform for specialised replacement by the manufacturer or professional to avoid danger.
3. Persons with reduced physical, sensory or mental capacity or lack of experience or knowledge should use the product under supervision and with knowledge of the dangers.
4. Keep the appliance and its cord out of the reach of children under 8 years of age. Do not allow children to operate the machine independently to avoid accidents.
5. Never leave the appliance unattended while it is connected to a power source.



Company name: E-CrossStu GmbH
Address: Mainzer Landstr.69 Frankfurt am Main 60329
Tel: +49 69332967674
Email: e-crossstu@outlook.com

CONTENTS

Safety Instructions/Precautions.....	02
Name of each part	03
Annex	04
Instructions	05
Notes on use	06
Cleaning and Maintenance	07
Installation instructions	08
Technical specifications	10
Apply for repair confirmation	11

- In order to allow you to use this product correctly, please read this manual carefully.
- If you have any questions, please contact your local dealer or agent.
【The rated voltage of this product is 220-240 \sim , be sure to confirm before use】

● SAFETY INSTRUCTIONS/PRECAUTIONS

For the safety of you and others, and to avoid unnecessary harm and loss, please strictly follow the following tips to use this product.














WARNING

Warns you how to avoid personal injury.


ATTENTION

Indicates that you must observe or avoid some operation to prevent damage to the equipment or other items.

The content symbols and descriptions to be observed are listed below:


MARK	DESCRIPTION
 Do not disassemble	 This picture means [forbidden].  The left picture means [forbidden to disassemble].
 Must be obeyed	 This picture means [compulsory] execution.  The left picture means [must comply with].
 WARNING	
	Do not disassemble, repair or modify the product yourself, otherwise it may cause malfunction.
	Do not pour water or detergent on the product body or power plug, as this may cause electric shock or malfunction.
	Do not insert or remove the power plug with wet hands, otherwise it may cause electric shock.
	Make sure the water used is clean. Water pressure in line with the requirements.
 Must be obeyed	<ol style="list-style-type: none"> 1. This product belongs to electrical products, do not place in places where it is easy to be wet or high humidity. 2. Please make sure that the power socket of the product is 220-240 ~ /50Hz/60Hz. 3. The power socket of the product must be grounded. 4. Please use a socket with a load capacity of 1350w or more. 5. Remote control battery using two 1.5V dry batteries
 ATTENTION	<ol style="list-style-type: none"> 1. Do not step on the body and seat cover. 2. Do not use banana water, gasoline, medicine and detergents or insecticides to wipe the product. 3. For a long time sitting only on the toilet, please adjust the temperature to low, to avoid the end of the temperature burns. 4. In the product is not water supply, do not reverse the product, will cause the heating tube dry failure. 5. Persons with physical, perceptual, mental deficiencies or lack of experience and common sense (including children) Guardians use the case, is strictly prohibited children play the device.

● NAME DER EINZELNEN TEILE

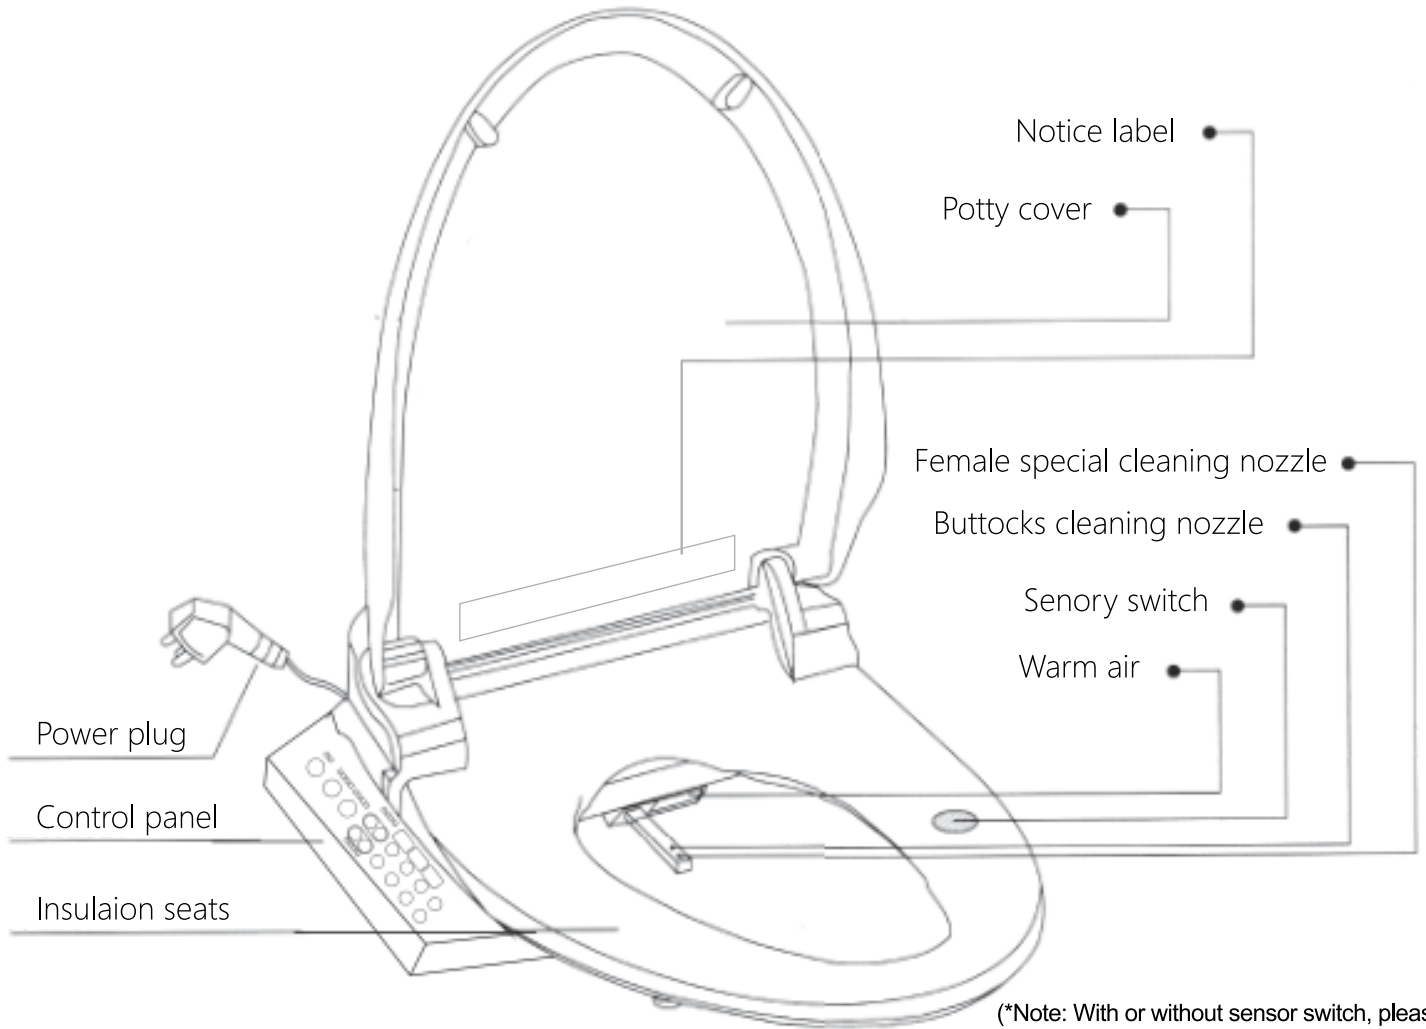

(*Note: With or without sensor switch, please see the specific style, plus labeling for the sensor switch models.)

PANEL DESCRIPTION:

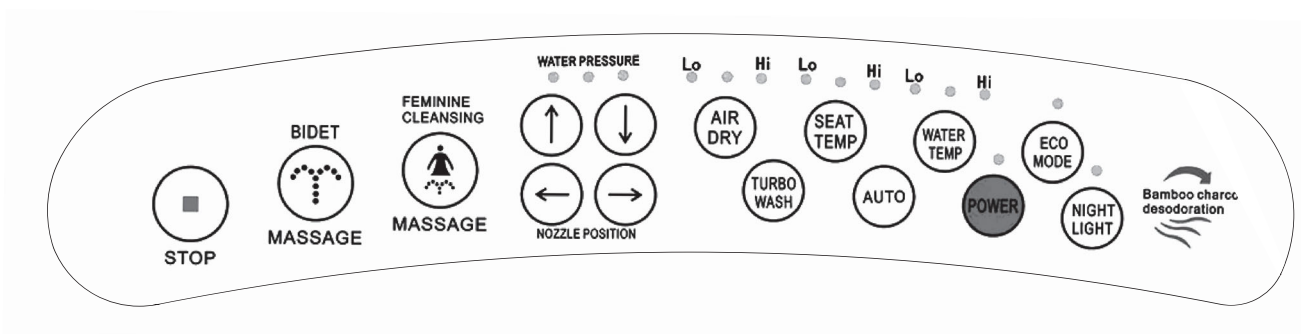

● ANNEX

**Three-way, Water supply pipe, 2 pieces of expansion,
2 pieces of expansion column, fixed base plate, user manual**
(If the customer has special requirements, configure according to the requirements).



Three-way




Water supply pipe



expansion



expansion column

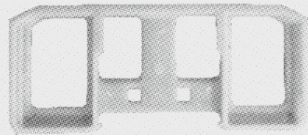

fixed base plate



user manual

● INSTRUCTIONS

Button operation panel instructions

• Stop

Press the stop button in the process of use, it will stop running.
When getting up from the heating toilet, it will also stop automatically.
(no induction switch is not included).

• Hip cleaning

Press this button to run for 1 minute and then stop automatically.
Press the button again during operation to move the nozzle for cleaning more areas.
Press the cleaning intensity button to adjust the strength of the water flow during operation.

• Female special cleaning

Press this button to run for 1 minute and then stop automatically.
Press the button again during operation to move the nozzle for cleaning more areas.
Press the cleaning intensity button to adjust the strength of the water flow during operation.

• Dry

Press this button to start the warm air drying function, it will stop automatically after 3 minutes.
Press the wind temperature button to gradually change the temperature from normal to low, medium, and high during operation.

• Full automatic

Press this button to activate the automatic cleaning function
(switch between hip wash in static and move mode, then dry for 3 minutes).

• Assistance

Press the assist button to enter the massage cleaning function.
Press the [stop] button to stop during the process.

• Cleaning strength

Water flows out from the cleaning outlet, and the strength can be seen on the control panel.
Press this button to adjust the water flow between strong, medium, and weak according to personal preference during cleaning.

• Cleaning position

This button adjusts the nozzle forward and backward. When extended, it is at the middle position of the original value.
Pressing the forward button during cleaning can extend the nozzle by 5mm based on the original value, and pressing the backward button can retract the nozzle by 5mm. There are 2 levels for forward and backward adjustment.

• Water temperature

This button adjusts the water temperature,
Which is divided into: normal temperature/low temperature/medium temperature/high temperature,
four gear cycle, which can be adjusted according to one's own preferences.

• Seat temperature

This button adjusts the seat temperature,
Which is divided into: normal temperature/low temperature/medium temperature/high temperature,
four gear cycle, which can be adjusted according to one's own preferences.

• Power saving

This button is the power-saving switch. When the power-saving indicator is on, it enters power-saving mode
(the seat temperature is intelligently adjusted by the system).

• Power supply

This key is the power supply on/off key.

Note: For models with a sensor switch, the toilet cleaning and drying functions cannot be activated if no one is sitting on the seat.

● NOTES ON USE

Water flows out around the nozzle

Just sitting on the toilet seat and cleaning process, there may be water around the nozzle, which is the need of the product in design, not a fault.

※ In addition to the above situation, if there is more than water flow, please close the water supply angle valve, pull the power plug from the socket, and contact the sales store or after-sales service department by telephone or fax.



Equipped with a seat sensor window

With a seat induction window When you are not sitting on the toilet seat, even if you press the on button by mistake, the cleaning water will not spray out. Because this product is equipped with a seat sensor window, so when you are not sitting on the toilet seat, the butt cleaning, female-specific cleaning, warm air drying and other functions will not work.

In addition, when covering the toilet seat with a cover or seat cover, using unsuitable covers may cause the seat sensor window to always operate or not operate.

※ When power failure occurs while sitting on the toilet seat, even if the power supply is restored immediately, the butt cleaning and other functions will not work. At this time, please get up from the toilet seat and sit down again after 1 to 2 seconds.

Slowly close the toilet seat and cover

To prevent the sudden closing of the toilet seat and cover, this product has a slow closing function, which allows them to close slowly.

※ Please note that forcing them to close may cause malfunctions.



Radio, TV feels noisy

This product may interfere with the signal reception of radios and TVs. In such cases, please move the radios and TVs to a location where they are not affected.

At the beginning of use, the warm air may be slightly smell

This product may feel a little peculiar smell when using the drying function when you first use it, and this peculiar smell will disappear soon.

Power-saving function

The following operations can effectively save energy:

- Do not set the seat and warm water temperature too high. Adjust them to a level that does not affect comfort.
- Adjust the temperature according to the seasonal temperature.
- Use the power-saving function whenever possible.
- Turn off the power when going out for a long time.

※ If there is a possibility of freezing, please take anti-freezing measures.

When condensed

Due to the temperature difference or humidity between the room temperature and the surface of the toilet seat and cover, water droplets (condensation) may appear on the surface of the toilet seat and cover.

To prevent condensation, please ensure sufficient ventilation. When condensation occurs, please wipe it with a dry cloth.

※ Condensation can mark or damage the floor.

Others

- When installing the toilet, please make sure to avoid the instrument from being sprayed.
- When the water flow of the wand slows down or decreases significantly under the same setting, please replace the filter in the water line in a timely manner to ensure the water flow.
- Please use the new hose attached to the instrument. The original components cannot be reused.

● CLEANING AND MAINTENANCE

Daily Cleaning and Maintenance

Cleaning and maintenance method for toilet seat, cover, and protective cover (plastic parts)

● Wipe with a soft, soft cloth

If you can not remove the dirt in time, it will become difficult to clean. You can often wipe the dirt with a soft wipe. In addition, scrubbing with water can prevent the generation of static electricity. Static electricity can cause dirt to stick and black.

ATTENTION Do not use chlorinated cleaning agents, acid cleaners, disinfectants when cleaning and maintenance. Doing so may cause the product to malfunction or damage. Please **do not** use a dry cloth or toilet paper to wipe. Otherwise prone to scratches.



About antibacterial parts

Nozzle, toilet seat, cover the use of antibacterial resin, the operation of the switch panel using antibacterial film.

⚠ WARNING

Do not splash water or cleaning agents onto the toilet seat and power plug.
*Otherwise, it may cause electric shock or fire.



PROHIBIT WATERING

⚠ ATTENTION

When cleaning and maintaining the plastic parts, do not use unsuitable cleaning agents (such as toilet cleaners, household water sprays, bleach, benzene, paint thinners, stain removers, cresols).



FORBIDDEN

*Otherwise, cracking of the plastic parts may cause personal injury, electric shock, or fire.

ATTENTION

When cleaning and maintaining, press the power button to make sure the power indicator is off.
When cleaning the wand, please do it with the power on.

1. Daily cleaning of the wand

In standby mode, extend the wand slightly to a position suitable for cleaning, and use a toothbrush to clean the rear wash and feminine wash water outlets. After cleaning, restart the power once to retract the wand into the main body.



2. Cleaning the toilet water line

It is recommended to do it once a month. Use a damp cloth to press the seat sensing area (except for models without a sensing switch) until you hear a beep, then use a basin or plastic plate to block the direction of the water outlet of the wand (to prevent water from splashing on the body) and press the seat to clean until it stops automatically and retracts.

INSTALLATION INSTRUCTIONS


Prepare before installation

Please be sure to follow the instructions in the correct installation, please check the parts before installation accessories as follows:

● Installation step 1. You will need:




- ① Remove the old toilet seat cover and wipe the toilet clean. After removing the screw of the expansion rubber column, insert the rubber into the fixed hole of the toilet.

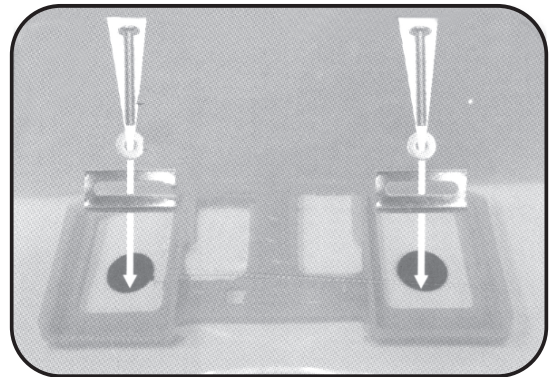


- ② Place the fixed bottom plate, stainless steel adjustment plate, and stainless steel washer in the corresponding holes of the expansion rubber column in order.



- ③ Tighten the stainless steel screw. Do not tighten it too tight at first. Position the fixed bottom plate in the center, and then tighten the stainless steel screw to prevent it from shaking.

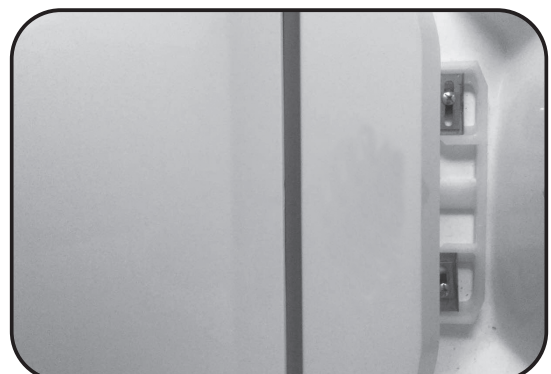

- ④ When installing the main cover on the toilet, hold one side of the main body with one hand, and slowly push it parallel until it is pushed in.

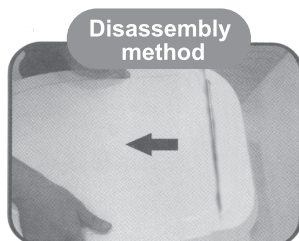

Disassembly method


When separating the main cover from the ceramic, hold the two sides of the main body with both hands and lift it up and pull it out. The disassembly method is shown in the figure.

TIPS

Be sure to turn off the power and water before disassembling.

● Installation step 2.

You will need:

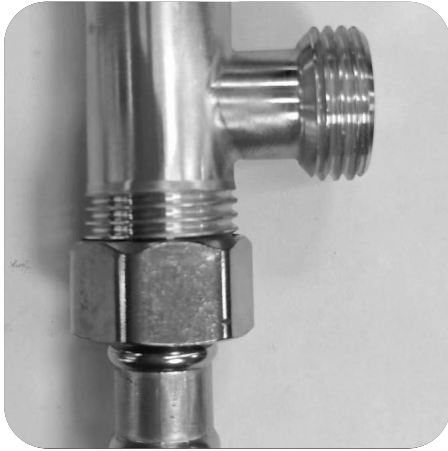

1. This is the water connection in the tee and the water pipe, the first tee and the water pipe tightening connection



2. Plug the other end of the tee into the sealing ring, press flat and then connect to the water source.



3. Connect the other end of the water supply pipe with the water supply hole on the toilet.

Explain:

This step is to prepare for connecting the toilet to the water source, just like giving half of the tap water to the smart toilet! This way, there will be clean water in the toilet seat cover.

Tips:

After connecting the water pipe, if the new product has water flowing from the wand, please plug in the power and it will automatically reset and stop the water flow.

Please pay attention when the main body and the water pipe are installed

1. After the water supply pipe is installed, remember to turn the angle valve back to the open state.
2. After the main body of the toilet seat cover and the water supply pipe are installed, please connect the water first and then turn on the power.
3. If you need to disassemble the main body, please close the angle valve first, then turn off the power, and then reverse the steps for connecting the water supply pipe.

WARNING

1. The accessories of the smart toilet seat cover have been adjusted at the factory, and it is strictly forbidden to disassemble them privately. If there is any problem, please contact the local dealer or our after-sales service department.
2. All the contents of this user manual are based on the latest information of the product at the time of printing. The company reserves the right to make changes without further notice.
3. If the power cord is damaged, for safety reasons, it must be replaced by a professional from the manufacturer, its repair department, or a similar department.

● TECHNICAL INDICATORS

specification		220-240 [~] 50Hz/60Hz 1350W
Water supply	Way	Connect directly to the water pipe
	Use pressure	0.08-0.75MPa (0.8-7.5kgf/cm ²)
Cleaning device	Butt wash water	0.75L/min
	Female cleaning water	0.9L/min
	Temperature adjustment	Normal/low temperature about 33 °C/medium temperature about 36 °C/high temperature about 40 °C
	Heating power	1350W
	Safety devices	Dual switch for temperature control and protection, water temperature sensor
Seat heating device	Temperature adjustment	Normal/low temperature about 33 °C/medium temperature about 36 °C/high temperature about 40 °C
	Heating power	45W
	Safety devices	Temperature Fuse
Heater drying heating device	Temperature adjustment	Wind temperature 32-48 °C
	Heating power	250W
	Safety devices	Thermosensitive device
Other safety devices		Leakage protector
Power cord length		1.5m

- WARMTH: IF YOU HAVE ANY CHANGES, YOU WILL NOT BE NOTIFIED.

● APPLY FOR PRE-MAINTENANCE CONFIRMATION

SYMPTOM	INSPECTION METHOD	COUNTERMEASURE
Do not start at all	Whether the power outage or the power outlet is not connected	Make sure to plug in the power plug
		Unplug the power plug and reinsert it
Flush no water or poor water	Whether the water is closed or the water supply valve is closed	Please check the water supply to open the water supply valve
	Whether the water supply filter is blocked	Please clean the filter
	Whether the water spray is blocked	Please use a toothbrush to clean the nozzle
Leakage	Is the water supply pipe connection tightened?	Please tighten the water supply pipe connection
Water temperature, seat ring cool	Water temperature, seat ring temperature is transferred to room temperature	Please re-adjust the temperature

WARRANTY MANUAL

Dear user :

Thank you for using our products. We offer the following services wholeheartedly for you.

1.Warranty period

Under the premise of normal installation and use, the main parts will be replaced free of charge within one year from the date of purchase. If the warranty period is exceeded, parts and labor costs will be charged as appropriate.

2.Free maintenance regulations

During the warranty period, if there is a malfunction within the normal range of use according to the user manual and normal conditions, the company will provide free repair.

3.The following circumstances do not belong to the free maintenance service and require paid maintenance

- ① Exceeding the warranty period.
- ② Malfunctions or damages caused by transportation, collision, etc. after purchase.
- ③ Malfunctions and damages caused by human factors or natural disasters during the warranty period, rather than abnormal use.
- ④ Product malfunctions or damages caused by the user's disassembly, modification, or repair.
- ⑤ Malfunctions or damages caused by failure to follow maintenance regulations during use.
- ⑥ Multiple relocations at the customer's request.

Customer information	name *	
	Phone number*	
	address	
	Wechat number*	
	QQ number	
	E-mail *	
Dealer information	name *	
	Phone number*	
Product type *		
Product serial number		
Date of purchase		Month Day Year
Defects Liability Period		The whole machine is guaranteed for One years from the day of purchase.
Date of Warranty		
Troubleshooting and treatment		
Warranty staff		
Note: "*" project is required		

**SMART BATHROOM
CORE TECHNOLOGY**