
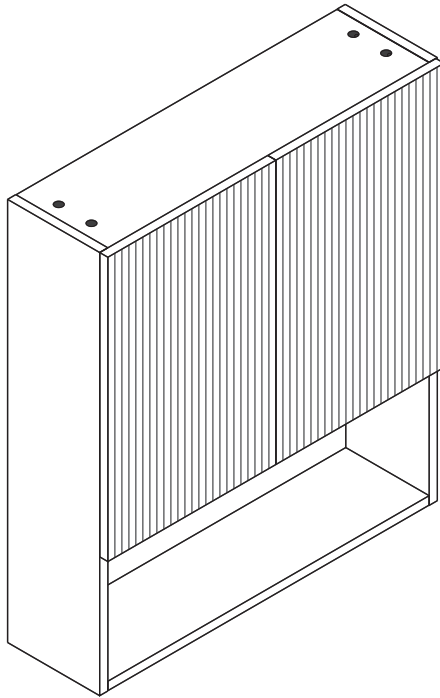
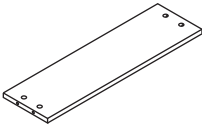
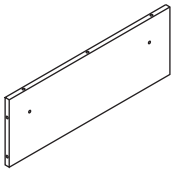
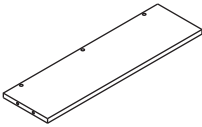
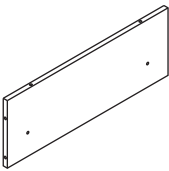
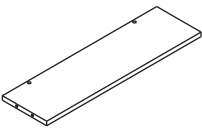
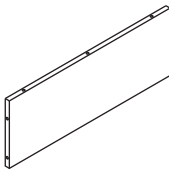





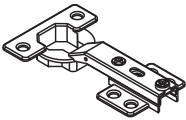

Bathroom Vanity


1		x1
2		x1
3		x2
4		x1
5		x1
6		x1
7		x1
8		x1
9		x1
10		x1

Ⓐ	 Ø6x26mm	x44			
Ⓑ	 Ø15x9mm	x44			
Ⓒ	 Ø3.5x14mm	x24			
Ⓓ	 Ø3.5x50mm	x4			
Ⓔ		x4			
Ⓕ		x4			
Ⓖ		x4			
Ⓗ		x4			


Use the Cam Lock and Eccentric Wheel

ECCENTRIC WHEEL


Tighten the bolt until the shoulder is aligned with the panel.
Be sure not to tighten too much or too little.

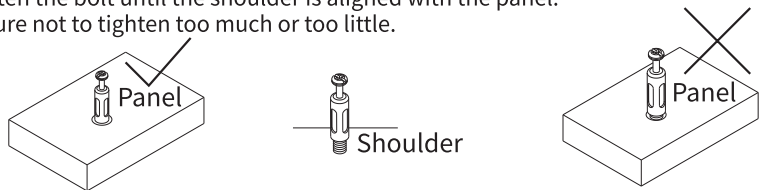

The pre-inserted nut should align with the center of the cam lock when joining two panels. The cam lock should be inserted before the eccentric wheel.

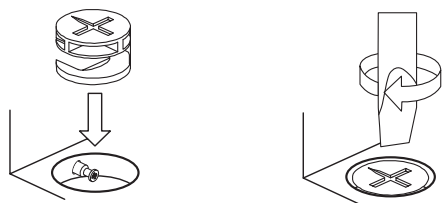

Turn the cam lock clockwise to tighten.

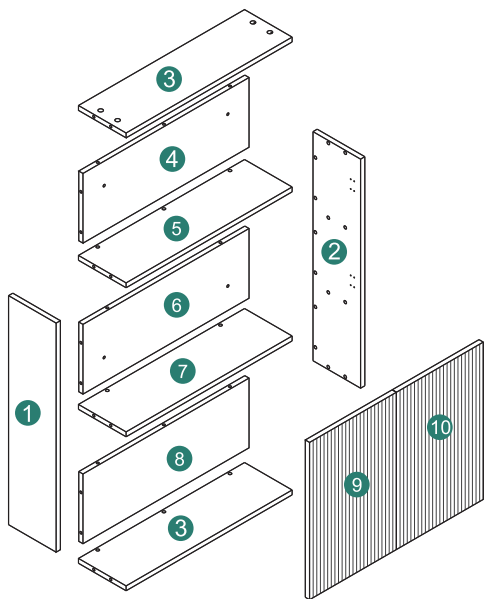

WARNING: To prevent tipping over, this product must be used with the included wall mounting device.
WARNING: Evaluate the suitability of the wall to ensure that the fixtures can withstand the forces that occur.


1



(A) 44pcs




The floor needs to be covered with paper or carpet protective material before installation!

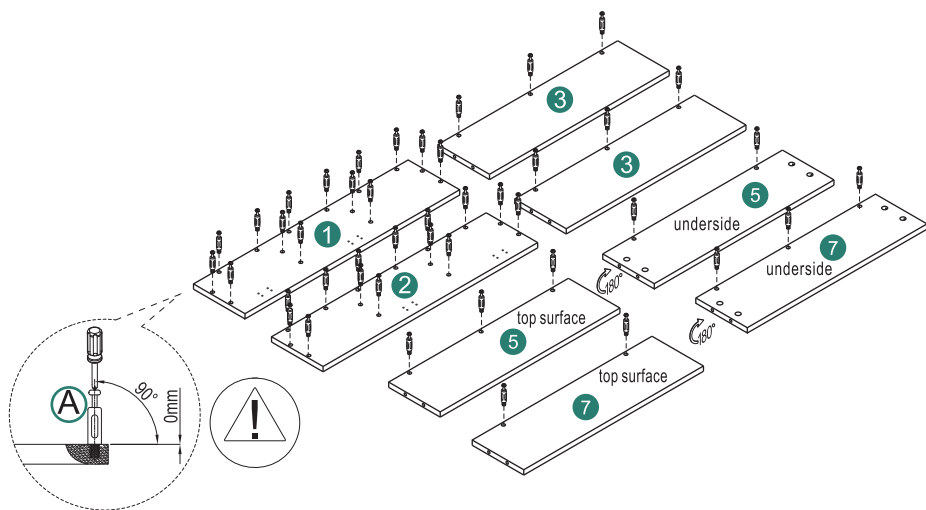


2






(B) 16pcs

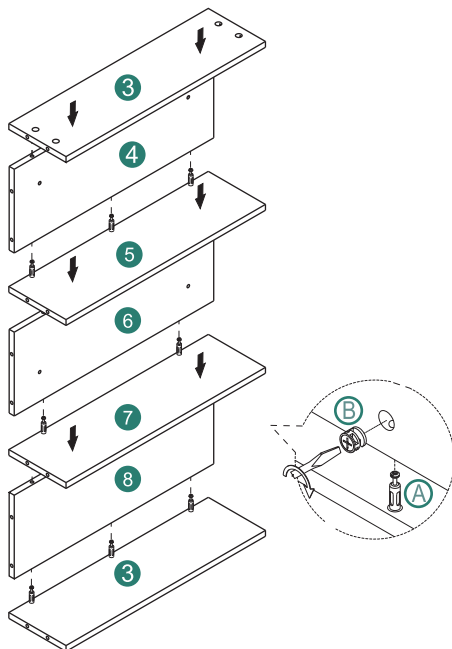




3

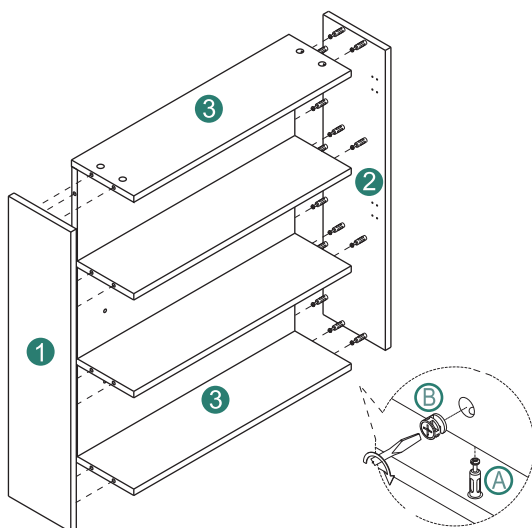

4

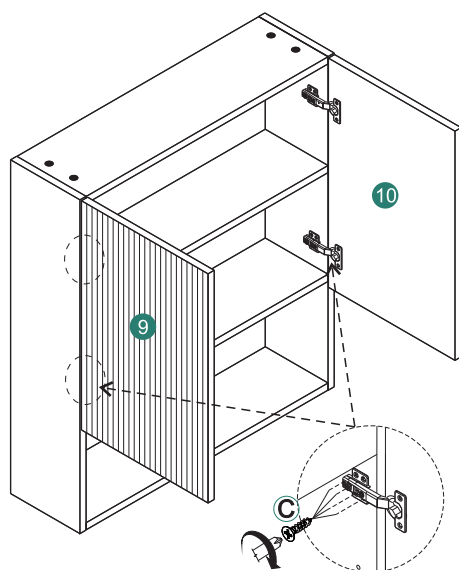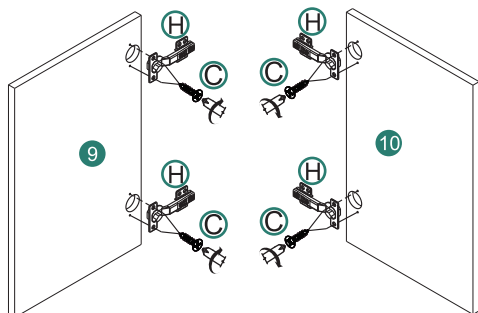


5

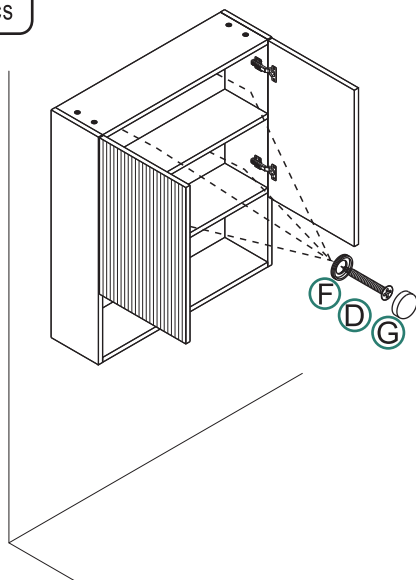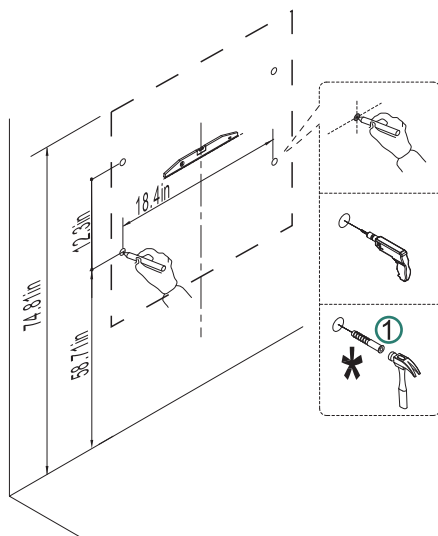


HINGE ADJUSTMENT AND REMOVAL INSTRUCTION




DOOR INSTALL

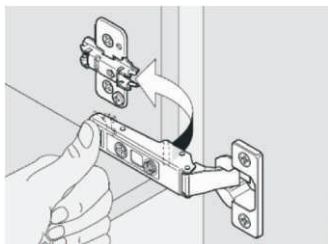

DOOR REMOVE

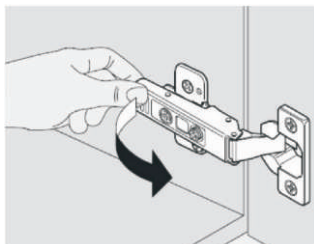

HOW TO ADJUST HINGES (if required)

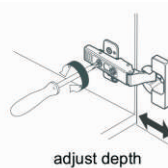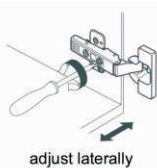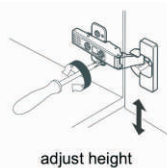

DRAWERS REMOVAL & RE-INSTALLATION (if required)


REMOVAL

7

RE-INSTALLATION


PIVOT-PRO side adjustment

Side adjustment of the door is made by using the indicated screw.

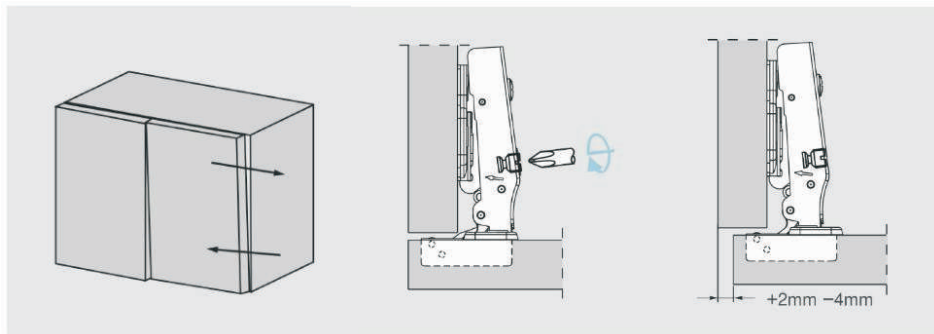

PIVOT-PRO Depth Adjustment

Depth adjustment is made without loosening any screw. The door can be moved in or out by rotating the cam adjuster on the hinge arm.

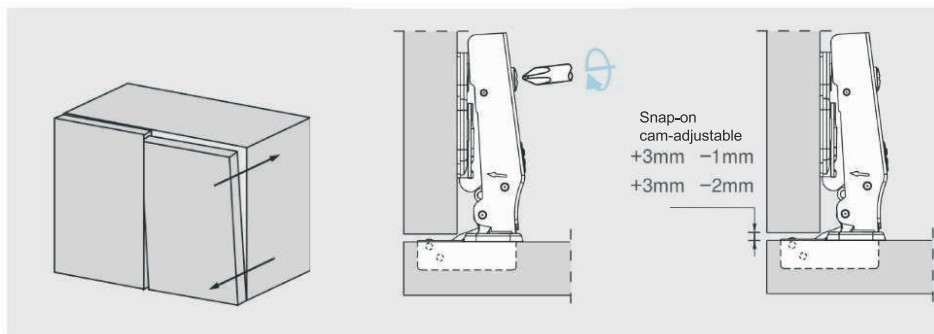

PIVOT-PRO Height Adjustment

By loosening the two fixing screws to allow the mounting plate to slide up or down, the door can be adjusted vertically by $\pm 2\text{mm}$. After retightening the screws, the Depth adjustment is done.

