

# MODEL # CSC-S / CSC-L 3 Shelf Service Cart

## 1. Durable construction

The service cart loading capacity maximum is 120 kgs per shelf, and total loading capacity is 250 kgs only.  
Only the best raw materials have been used in the production of service carts.

## 2. Ergonomic design handle

Easy to push and manoeuvre the cart.

## 3. Creative KD (knock down parts) designed

Easy to assemble each part and by convenience tools finished.

## 4. Heavy-duty wheels










100 mm diameter casters with 2 brakes and 2 swivels.

## \* Assembly Instructions \*

Noted :

1. Please use Rubber-hammer for assembling.
2. INSTALL Casters at the final step.
  - A. Push handle ①+Plastic Hose ②+Upper Shelf ③+Washer ④+Screw ⑤ show as Picture 1 (Note: Hit the flat part of the handle pointed in the Picture 1).
  - B. Bottom shelf ⑦+Aluminum Post ⑥ shows as Picture 2.
  - C. Upper shelf ③+Aluminum Post ⑥ +B. shows as Picture 3.
  - D. A.+C. shows as Picture 4.
  - E. Turn the cart up-side-down and then install the washer ⑧ and caster ⑨ shows as Picture 5.

Parts List :

No.	1	2	3	4	5	6	7	8	9
Model	Push handle	Plastic hose	Upper shelf	Washer	Screw	Aluminum Post	Bottom shelf	Washer	Caster
image									
Q'ty	2	4	2	4	4	8	1	4	4


## CAUTION:

1. Don't use STEEL-hammer when assembling.
2. Set the shelf which has short anti-spill lip side on the front.
3. Warning! When installing shelves onto tubes, DON'T OVER HIT THE SHELVES OR APPLY TO MUCH FORCE DURING THE HAMMERING PROCESS.

## \* IMPORTANT NOTE:


Place the Plastic hose into the stem underneath the handle while assembling the handle and top shelf. Let the screw go through the plastic hose from the underside of the shelf and screw them tight and firmly.

Once you have secured handle to the top shelf, you then place the top shelf onto the top 4 aluminum tubes, sitting on top of the second shelf and hammer down, until firmly in place. The top 4 aluminum tubes, sitting on top of the second shelf and hammer down, until firmly in place.

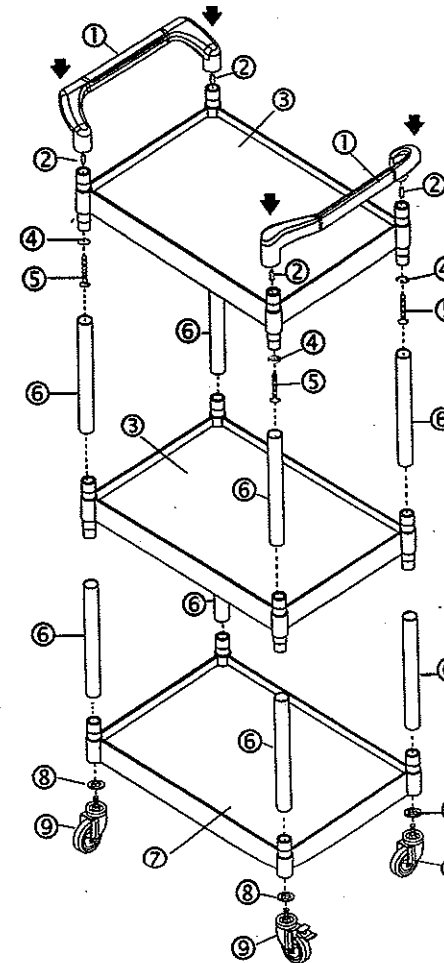

# MODEL # CSC-S / CSC-L 3 Shelf Service Cart

★Caution: Please use RUBBER hammer only to assemble cart.

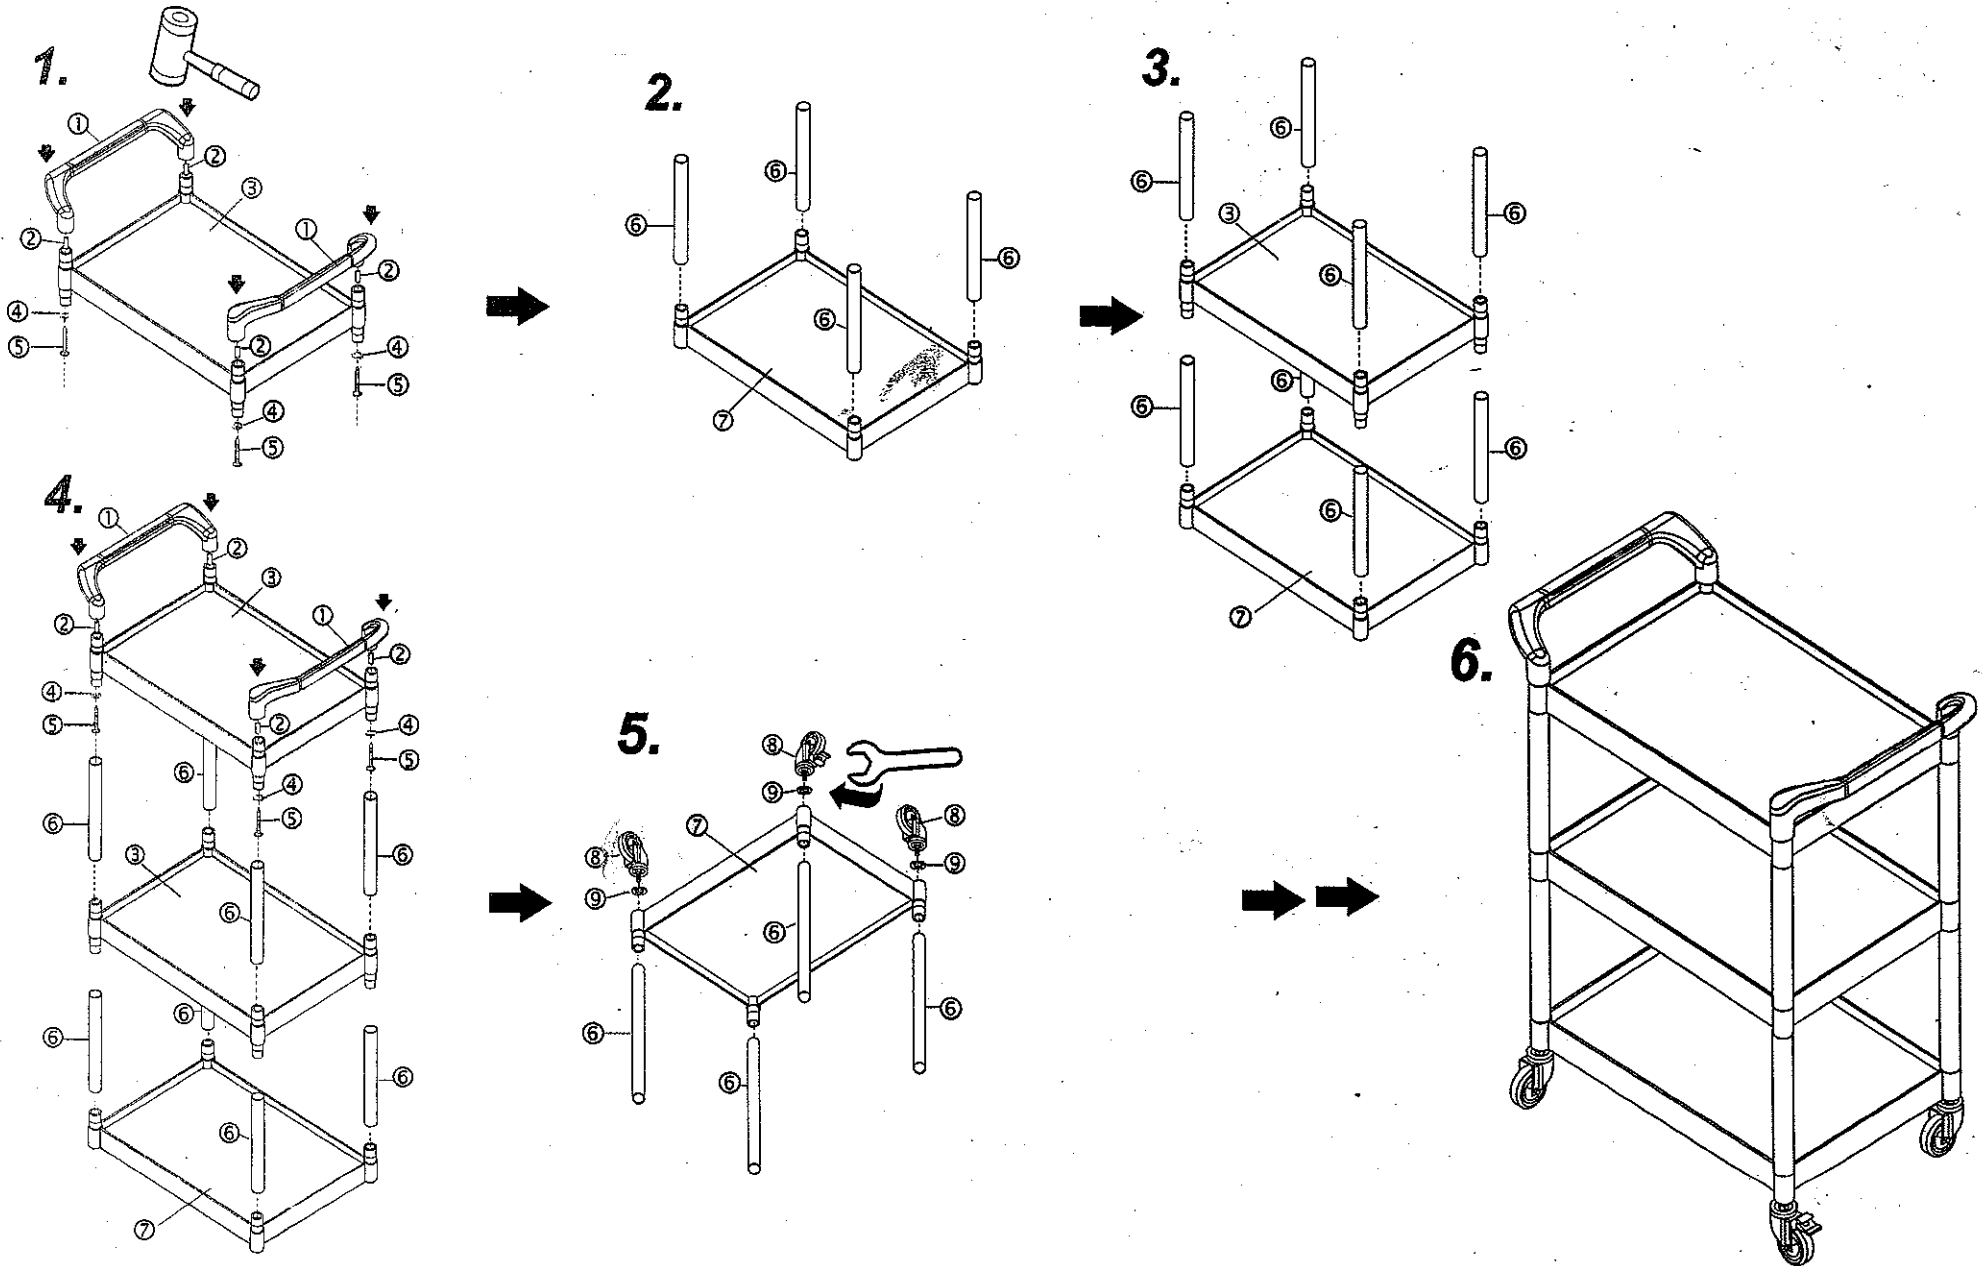

## LIMITED WARRANTY

Vestil Manufacturing Corporation (“Vestil”) warrants this product to be free of defects in material and workmanship during the warranty period. *Our warranty obligation is to provide a replacement for a defective original part if the part is covered by the warranty, after we receive a proper request from the warrantee (you) for warranty service.*

### Who may request service?

Only a warrantee may request service. *You are a warrantee if* you purchased the product from Vestil or from an authorized distributor AND Vestil has been fully paid.

### What is an “original part”?

An original part is a part used to make the product as shipped to the warrantee.

### What is a “proper request”?

A request for warranty service is proper if Vestil receives: 1) a photocopy of the Customer Invoice that displays the shipping date; AND 2) a written request for warranty service including your name and phone number. Send requests by any of the following methods:

Mail  
Vestil Manufacturing Corporation  
2999 North Wayne Street, PO Box 507  
Angola, IN 46703

Fax  
(260) 665-1339  
Phone  
(260) 665-7586

Email  
sales@vestil.com

In the written request, list the parts believed to be defective and include the address where replacements should be delivered.

### What is covered under the warranty?

After Vestil receives your request for warranty service, an authorized representative will contact you to determine whether your claim is covered by the warranty. Before providing warranty service, Vestil may require you to send the entire product, or just the defective part or parts, to its facility in Angola, IN. The warranty covers defects in the following *original* dynamic components: motors, hydraulic pumps, electronic controllers, switches and cylinders. It also covers defects in *original* parts that wear under normal usage conditions (“wearing parts”): bearings, hoses, wheels, seals, brushes, batteries, and the battery charger.

### How long is the warranty period?

The warranty period for original components is 90 days. The warranty period begins on the date when Vestil ships the product to the warrantee. If the product was purchased from an authorized distributor, the period begins when the distributor ships the product. Vestil may extend the warranty period for products shipped from authorized distributors by *up to* 30 days to account for shipping time.

### If a defective part is covered by the warranty, what will Vestil do to correct the problem?

Vestil will provide an appropriate replacement for any *covered* part. An authorized representative of Vestil will contact you to discuss your claim.

### What is not covered by the warranty?

1. Labor;
2. Freight;
3. Occurrence of any of the following, which automatically voids the warranty:
  - Product misuse;
  - Negligent operation or repair;
  - Corrosion or use in corrosive environments;
  - Inadequate or improper maintenance;
  - Damage sustained during shipping;
  - Collisions or other incidental contacts causing damage to the product;
  - Unauthorized modifications: DO NOT modify the product IN ANY WAY without first receiving written authorization from Vestil. Modification(s) might make the product unsafe to use or might cause excessive and/or abnormal wear.

### Do any other warranties apply to the product?

Vestil Manufacturing Corp. makes no other express warranties. All implied warranties are disclaimed to the extent allowed by law. Any implied warranty not disclaimed is limited in scope to the terms of this Limited Warranty.

