PALERMO

COLLECTION



THE PALERMO

QUICK START GUIDE · THE PALERMO · PALERMO COLLECTION

Your first evening.

Una sera a Palermo — six steps, one evening.

19:30	20:15	20:30	21:00	21:15	23:30
Arrivo	*Il Gas*	*La Prova*	*Accensione*	*Il Calore*	*Buonanotte*

About 60 minutes to assemble · two people · Phillips screwdriver, wrench provided.
You'll need one AAA battery and a 20 lb propane cylinder, or a natural-gas supply.


READ YOUR OWNER'S MANUAL FIRST

19:30

Arrivo

STEP 1

Assemble and place your Palermo

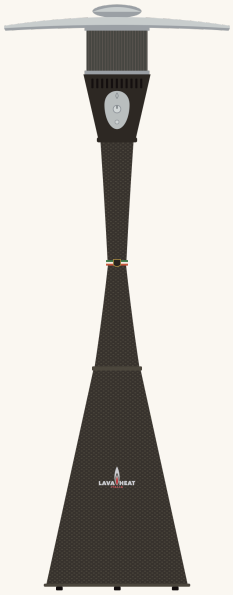


- **Inspect before you assemble.** Dented panels, cracked parts or anything missing? Call us before you start.
- Assemble it from the base up with the **Assembly section of your Owner's Manual**: about 60 minutes, two people, a Phillips screwdriver and the wrench provided. Peel the film off the reflector first.
- Stand it outdoors on firm, level ground: **3 ft clear on every side and 3 ft above the hood**. Never under an awning, umbrella or branches.

20:15

Il Gas

STEP 2

Battery and fuel

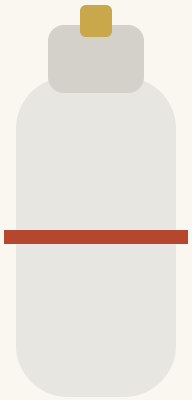

20 lb · strap · LH thread

- The spark runs on **one AAA battery** inside the control head. A fresh alkaline battery lasts one to two seasons.
- Open the cylinder housing door, stand a standard **20 lb propane cylinder** on the base and secure it with the **strap**.
- Thread the regulator onto the cylinder valve. **It's a left-hand thread: turn counter-clockwise to tighten.** Close the door. Natural gas: a licensed technician connects the supply line.

20:30

La Prova


STEP 3

Test every connection

- Mix **1 part dish soap to 3 parts water**. Knob at OFF, then brush it on the hose-to-regulator and regulator-to-cylinder joints.
- Slowly open the cylinder valve. **Bubbles mean a leak:** close the valve, tighten, test again. Still bubbling? Don't light it; call us.
- No bubbles? You're ready. Wipe off the solution. Never test with a flame, and test again after every cylinder change.

21:00
Accensione
STEP 4


Light the Palermo

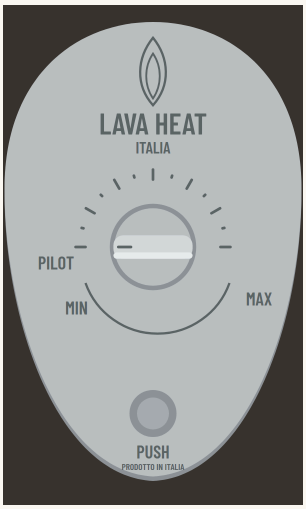

- The knob pointing **straight up is OFF**. Open the cylinder valve fully.
- **Push the knob down and turn it left to PILOT.** Keep holding it, and **press PUSH** until you see a **steady blue pilot**.
- Release the button, but **keep holding the knob down 10–15 seconds more**.
- Never hold the knob down more than 10 seconds before it lights. No pilot after 30 seconds? Knob to OFF, close the valve, wait 5 minutes, try again.

21:15
Il Calore
STEP 5

Set the warmth

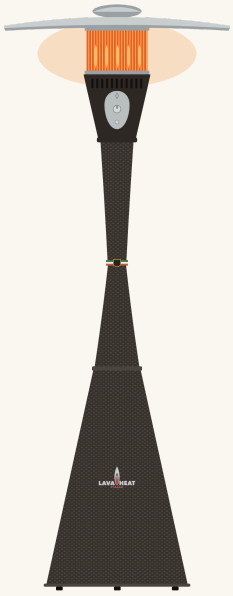

- Let go of the knob and **turn it left, from MIN to MAX**. The screen glows red.
- Noisy at first? Turn to MIN to settle the flame, then up again. A clean flame is blue at the base with soft yellow tips; heavy yellow or thick black smoke means a problem.
- First use: a little smoke and smell for **about 30 minutes** is normal. Below 40°F it runs at reduced power; a frosted cylinder means it's nearly empty.

23:30
Buonanotte
STEP 6

Shut down

- **Push the knob in and turn it back to OFF**, pointing straight up. A slight pop is normal.
- **Close the cylinder valve**, or your natural-gas shutoff.
- Let it cool fully, about **45 minutes**, before covering or moving. Relighting a warm heater? Wait 5 minutes first.

SAFETY FIRST, ALWAYS

If you smell gas

1. Shut off the gas at the cylinder valve.
2. Extinguish any open flame.
3. If the odor continues, move away and call your gas supplier or fire department from a safe place.

OUTDOOR USE ONLY

Never use inside a home, garage, tent, vehicle or any enclosed space. Carbon monoxide can kill.

La Cura *care through the seasons*

WICKER & FINISH

Wipe the painted surfaces and wicker columns with a soft, damp cloth, and let them dry fully before covering. Car wax from the pole down protects the finish.

DOME & SCREEN

If carbon builds up, clean the dome and burner screen with warm soapy water once cool. Never wax the emitter screen, hood or burner.

BURNER & HOSE

Before each use, check the hose for wear and the burner for webs. Clear the orifices with a pipe cleaner and compressed air.

COVER & STORE

Once cool, cover with a fitted Lava Heat cover. Near the sea, check often for rust. For storage, keep the cylinder outdoors in the shade.

LIFETIME FRAME · 5 YEARS PARTS · 5 YEARS FINISH · 1 YEAR BURNER

Parts only; labor and freight not included. Full terms at lavaheat.com/warranty-and-product-care

WE'RE HERE TO HELP

customerservice@lavaheat.com · 310-559-1700

lavaheat.com/troubleshooting

Lava Heat Italia · 940 W. Washington Blvd., Los Angeles, CA 90015 · Est. 2001

Buona serata.