

OPERATION

INTRODUCTION:

Congratulations on the purchase of your security lantern with infrared motion detector. At dusk, motion detector turns on your light automatically after sensing moving heat sources (such as a walking person or a moving vehicle) in its coverage area, and stays on as long as motion is detected. When motion stops, light will remain on for the predetermined time you set (2 or 6 minutes), and then turn off automatically. The state of art design not only enhances the beauty of your property,

But also welcomes your guests by turning on the light automatically when they approach.

Note:

There is no serviceable part inside the motion sensor. DO NOT try to repair or disassemble the unit. Doing so could damage the unit, or possible electrical shock. Consult a qualified electrician if needed.

OPERATION MODES:

Modes	Sensitivity Switch Position	Timer Switch Position	Description
Stand-by	L, M, H	Test, 2, or 6	STATE WHEN POWER IS TURNED ON: If you have turned off the power for a long period of time and upon restoring power to the fixture, the light will turn on in 2 seconds and remain on for approximately 40 seconds regardless of motion. Then the light will turn off to indicate the unit has entered to the Auto Detection Mode or Test Mode. (Depending on how Timer Switch is set.)
Auto Detection	L, M, H	2 or 6	NORMAL MOTION DETECTION MODE: Motion detector turns your light on automatically after sensing moving heat sources in its coverage area at dusk, and stays on as long as motion is detected. When motion stops, light will remain on for the pre-determined time that you set (2 or 6 minutes), and then turn off automatically.
Test Mode	L, M, H	Test	SENSITIVITY ADJUSTMENT: Allows you to adjust the sensitivity of motion detector to a desired level at dusk or dawn. Operates When motion stops, the light will turn off in about 4 seconds.
Manual Override	L, M, H	Test, 2, or 6	MANUAL ON AND OFF WITH AUTO RESET: Allows you to turn on and off your fixture by using the existing wall switch, regardless of the presence of motion. The unit will reset itself back to Auto Detection Mode or Test Mode (depending on your switch setting) after 8 hours. It is also possible for you to deactivate the feature manually by the existing wall switch.
Dusk-To-Dawn	L, M, H	Dusk-To-Dawn	DUSK-TO-DAWN OPERATION ONLY: Light turns on at dusk and off at dawn automatically, regardless the presence of motion

SENSITIVITY SWITCH:

The sensitivity switch adjusts the amount of heat that is required to activate the unit. Set the switch to "H" position for maximum sensitivity, "M" for medium and L for least sensitivity. To set to a desired level of sensitivity,


1. Set the Timer switch to the "TEST" position and the Sensitivity switch to "M" position.
2. Walk through the coverage area and note the location where you are when light turns on. The light will turn off in about 4 seconds. Keep in mind that a better sensitivity is achieved by walking across the coverage area, not walking towards or away from the motion sensor.
3. Set the sensitivity to "H" position for higher sensitivity and "L" for lesser sensitivity. You will reach a range of approximately 30-foot if set to "H" position.

TIMER SWITCH:

At Auto Detection Mode, light turns on automatically after sensing a motion at its coverage area and stays on as long as motion is detected. When motion stops, the light will remain on until the selected period of time is over. The timer switch selects the amount of time the light remains on after motion has stopped. Switch to "2" for 2 minutes and "6" for 6 minutes.

MANUAL OVERRIDE MODE WITH AUTO RESET:

This feature allows you to turn on and off your light by using the existing wall switch, regardless of the presence of motion. To activate the feature, turn your wall switch OFF-ON within 3 seconds. The light will stay on continuously. The unit will turn off and reset itself to Auto Detection Mode after 8 hours. You can also manually de-activate the feature. To do so, turn the wall switch OFF-ON within 3 seconds. The light will return to Auto Detection Mode or Test Mode (depending on your switch setting).

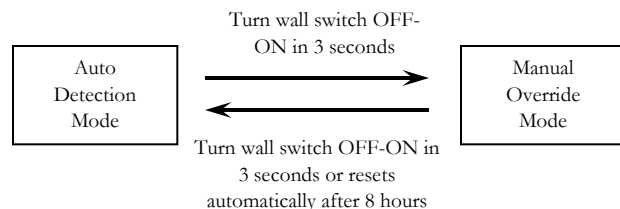

DUSK-TO-DAWN:

This mode is designed for special occasion when you want your light to turn on at dusk and off at dawn automatically, regardless the presence of motion. To activate the mode, set the TIMER switch to "Dusk-To-Dawn" position, now your unit will act as a Dusk-To-Dawn fixture that it will turn on at dusk and off at dawn automatically regardless of presence of motion.