


Owner Manual Massage Recliner

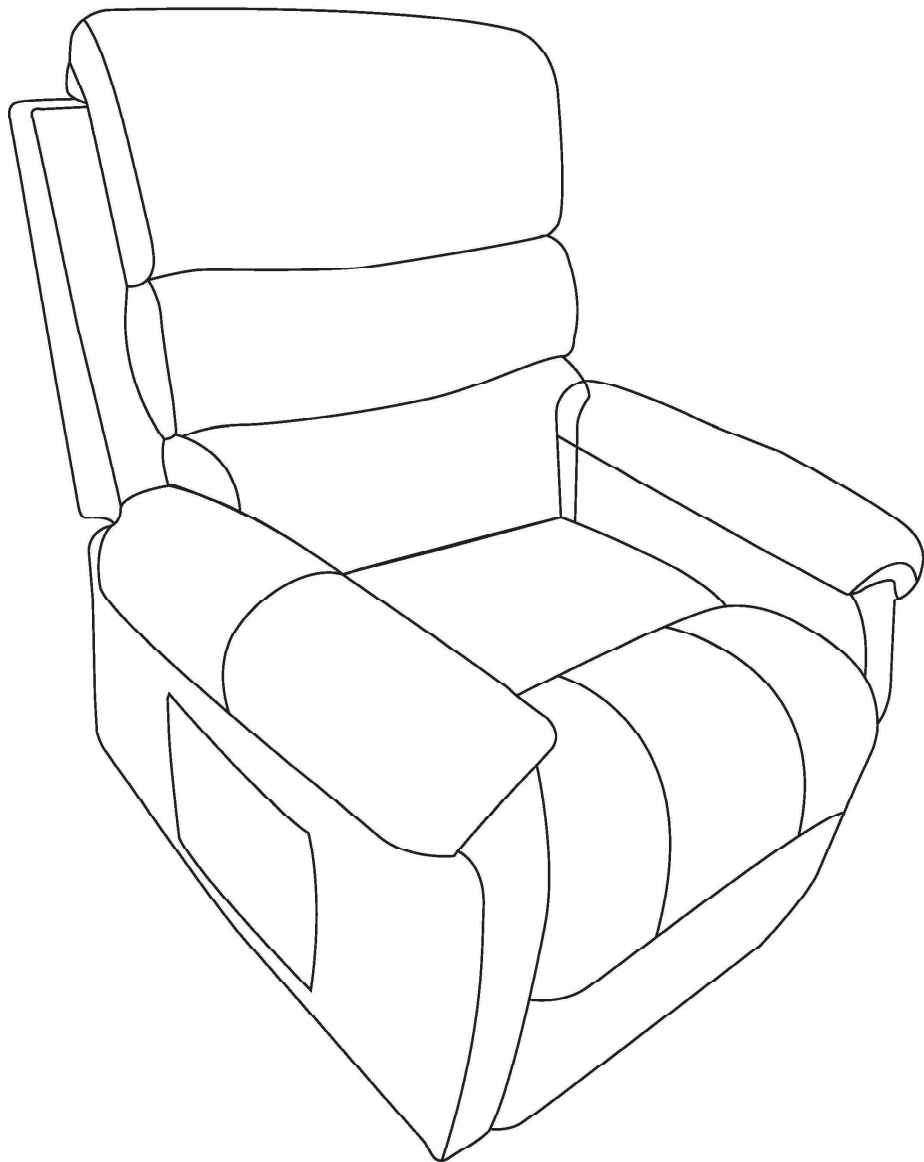




ATTENTION

Thanks for choosing our product.



- 1. Please check the manual carefully and make sure you have received all the parts.**
- 2. If there is any missing parts, please let us know the letter of the parts you need.**
- 3. If there is any damage parts, please send clear photos to us, we will check and offer you best solution soon.**
- 4. There will be 2 boxes in total for this whole product.**

Assembly Instruction

Parts List Box A

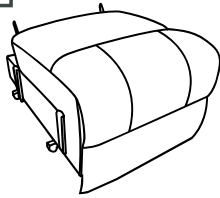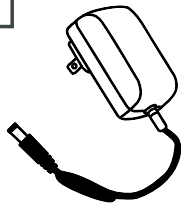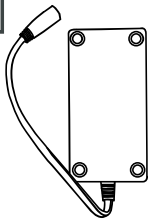A		B		C		D	
	Chair Base		Lift ear		Right ear		Power Cord
	1 pc		1 pc		1 pc		1 pc
E		F		G		H	
	Massage Control		Power Source		Connection Wire		Remote Control
	1 pc		1 pcs		1 pcs		1 pc

Parts List Box B

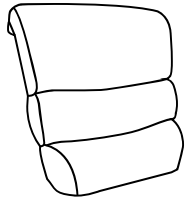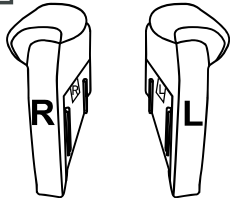
I		J			
	Backrest		Armrest		
	1 pc		1 pc		

You will receive totally 2 boxes, please make sure you get 1x A box and 1x B box before assembly. Just feel free to chat us if you have any problems, we will try our best to help you solve the issue.

Assembly Instruction

Step 1


Turn over the base part, you will find the power wire and remote wire being binded by three cable ties. Please cut off the #1 & #2 & #3 cable ties.

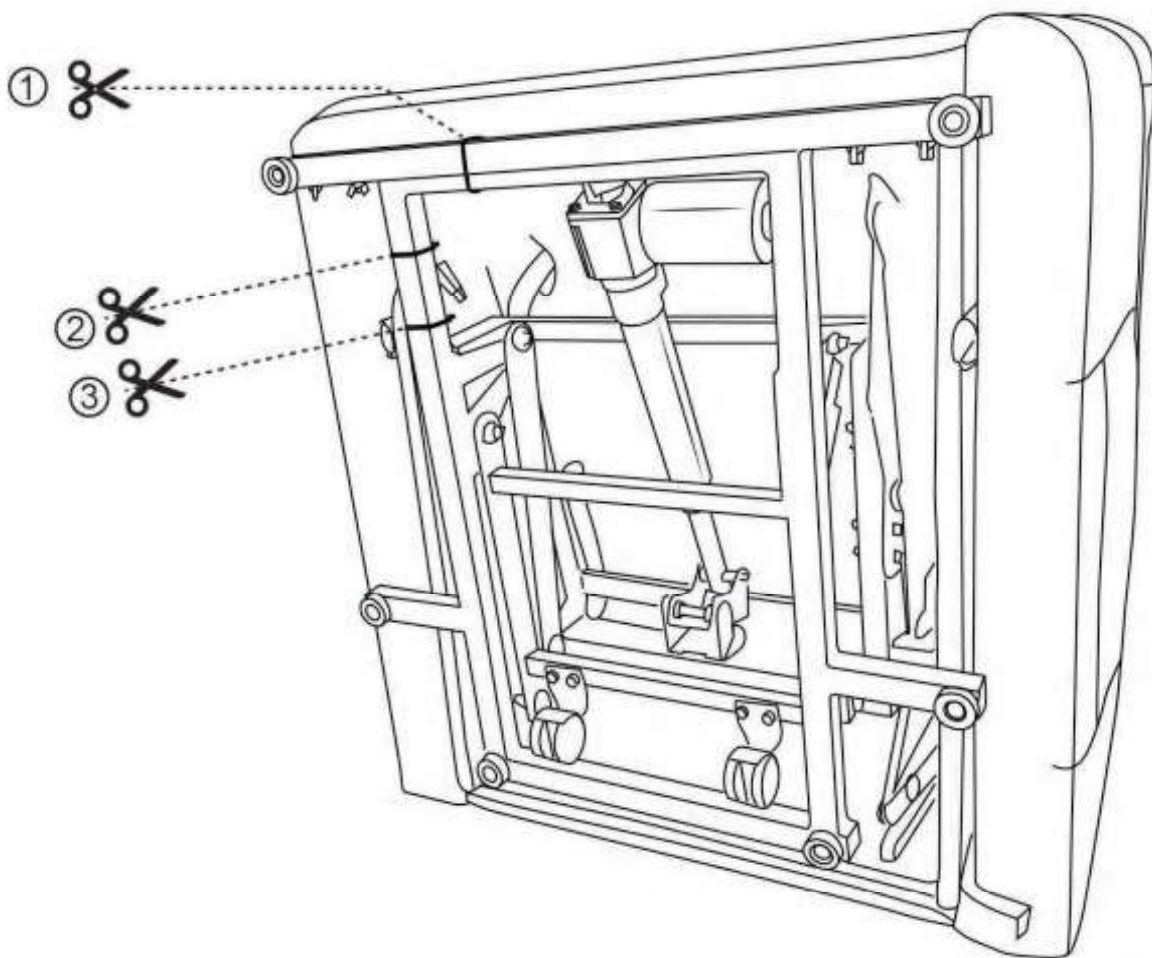

Assembly Instruction


Step 2

There are "L" and "R" marks on the side of the armrests, be careful not to install it in the opposite direction.

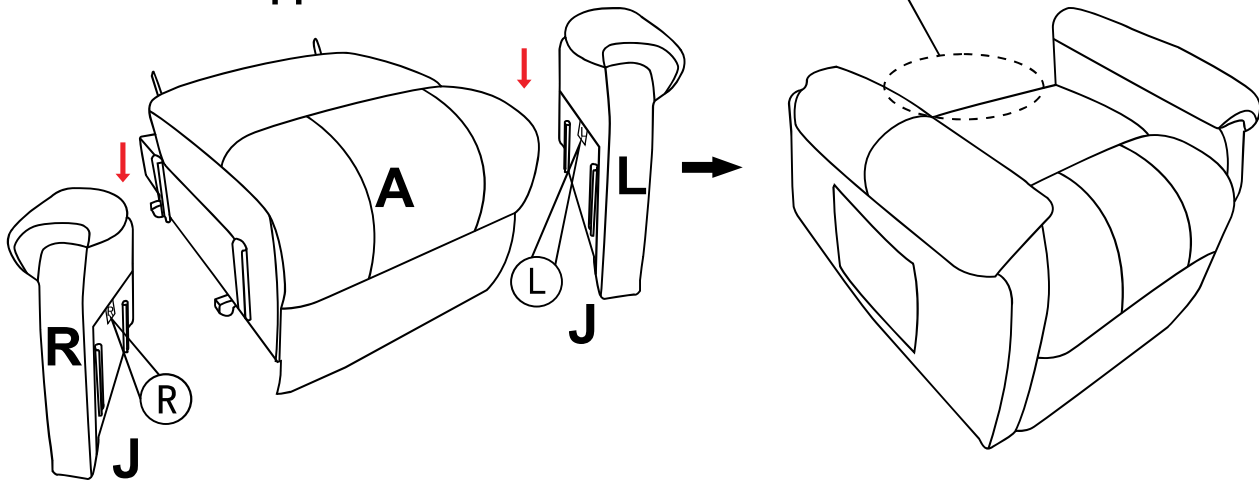

Assemble left and right armrests into the slots on the chair base.

Step 3

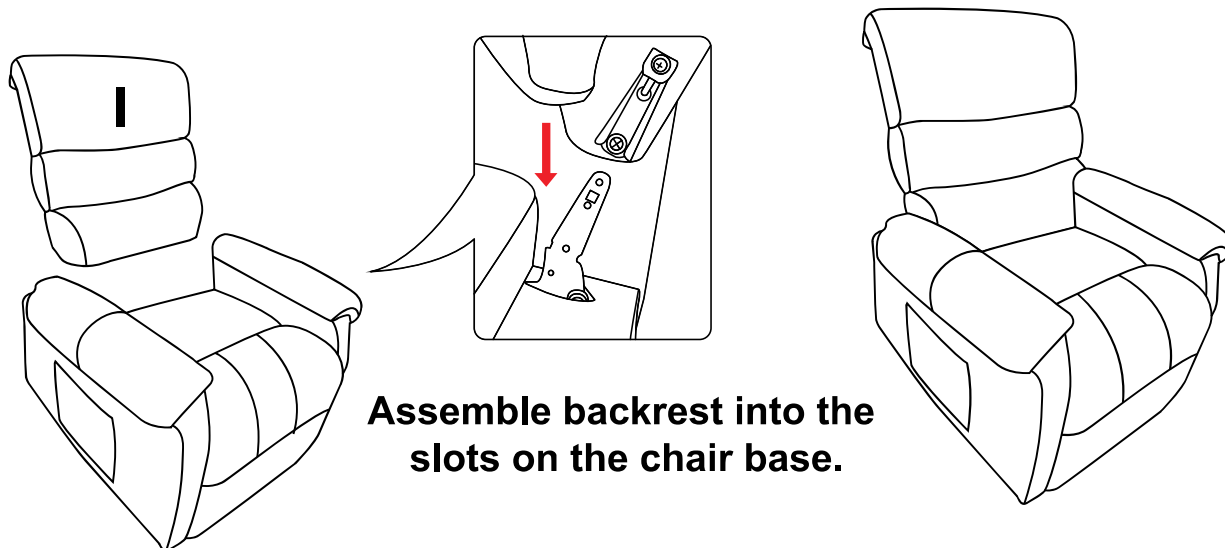


Assemble backrest into the slots on the chair base.


Note: If the armrest or back shakes after assembly, please knock down and assemble again, and make sure that all the slots are properly aligned.

Assembly Instruction

Step 4

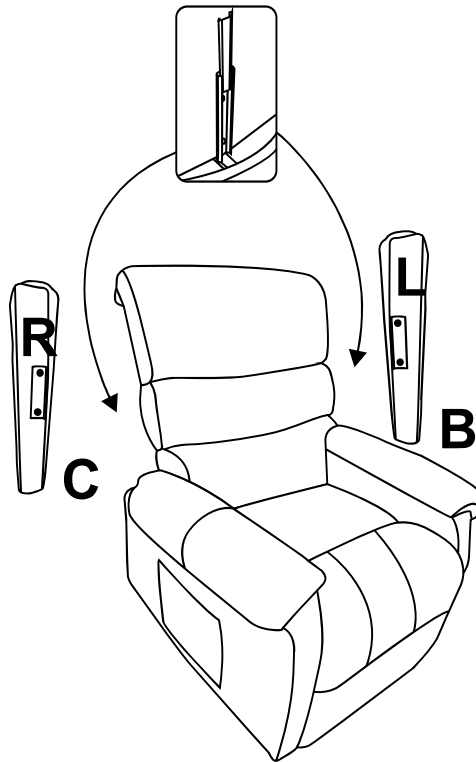

Step 5

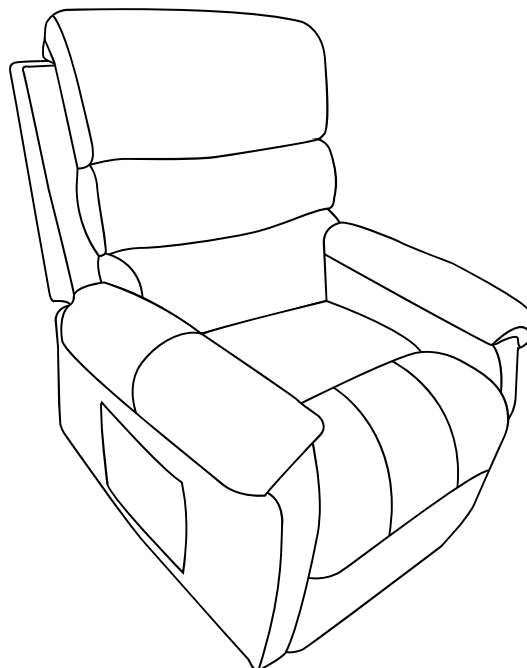


Assembly Instruction

Step 6

No.1 and No.2 wire connect with the backrest and chair base.

No.3 wire connects with backrest and power cord(H).

No.4 wire connects with backrest and massage control(I).

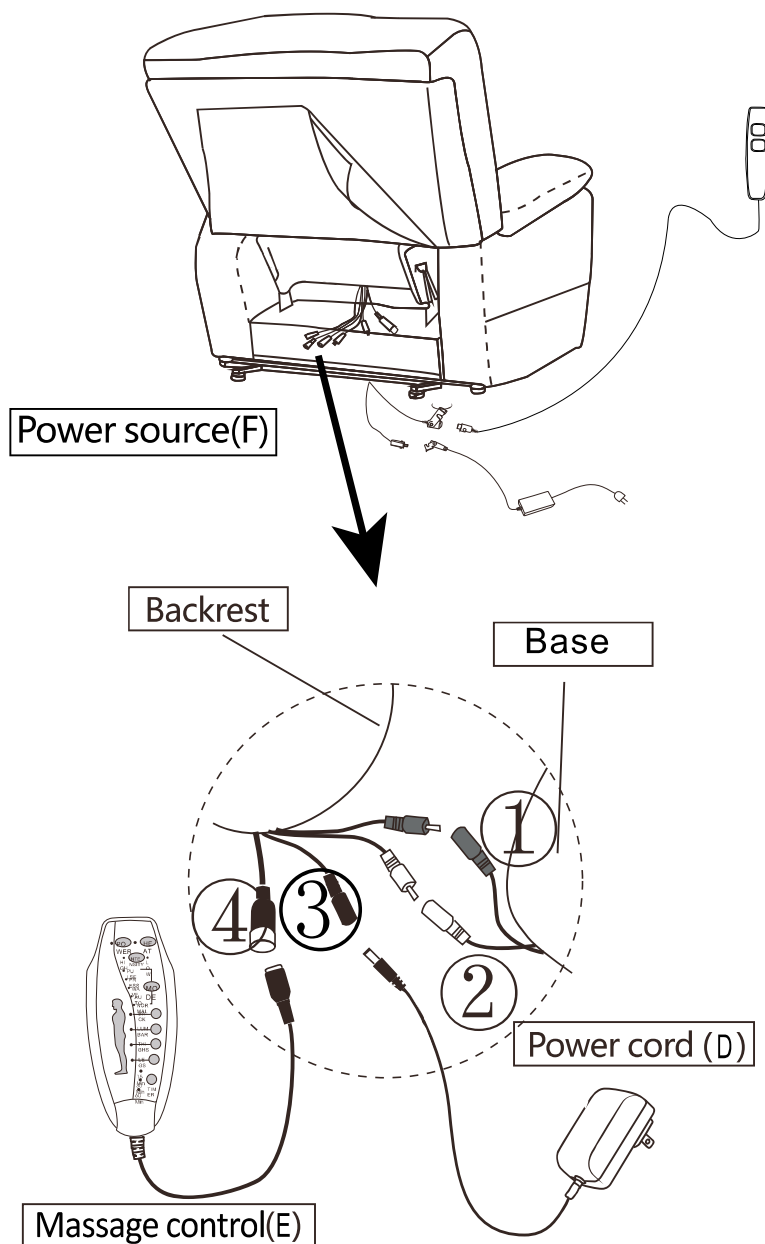

Note:

1: Two same color wires connect.

2: Need arrows be aligned for NO.4 wire connects.



Assembly Instruction

Step 7

No.5 wire connect the motor and armrest with control panel.

No.6 wire connect the motor and power source (F).

Note: Plug power cord and power source into outlet, then you can use all functions.

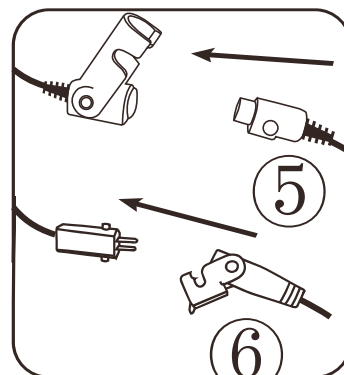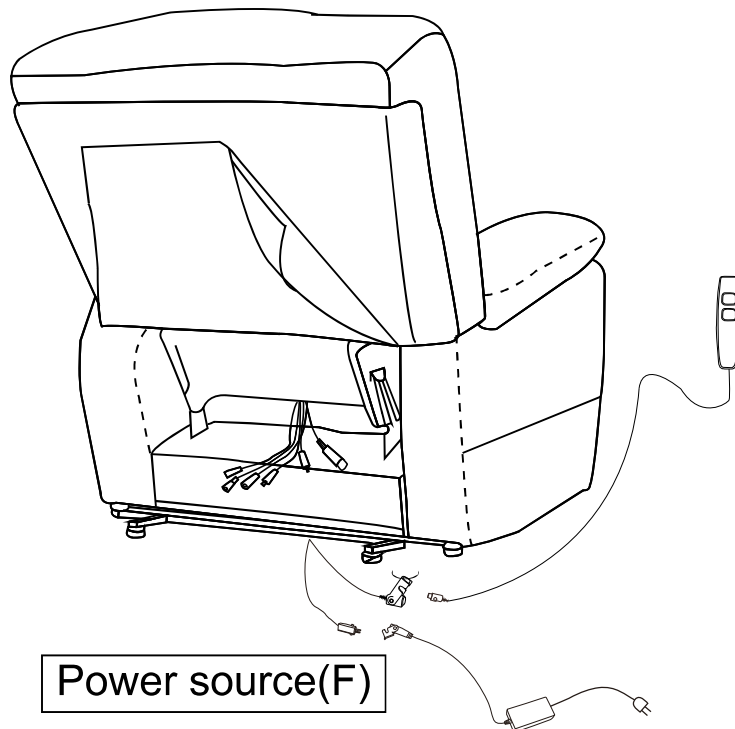

Note: All wires cannot put under feet.


Assembly Instruction

How to recline

Warning: Do not sit or hit the footrest after lift up


Assembly Instruction

How to use remote control

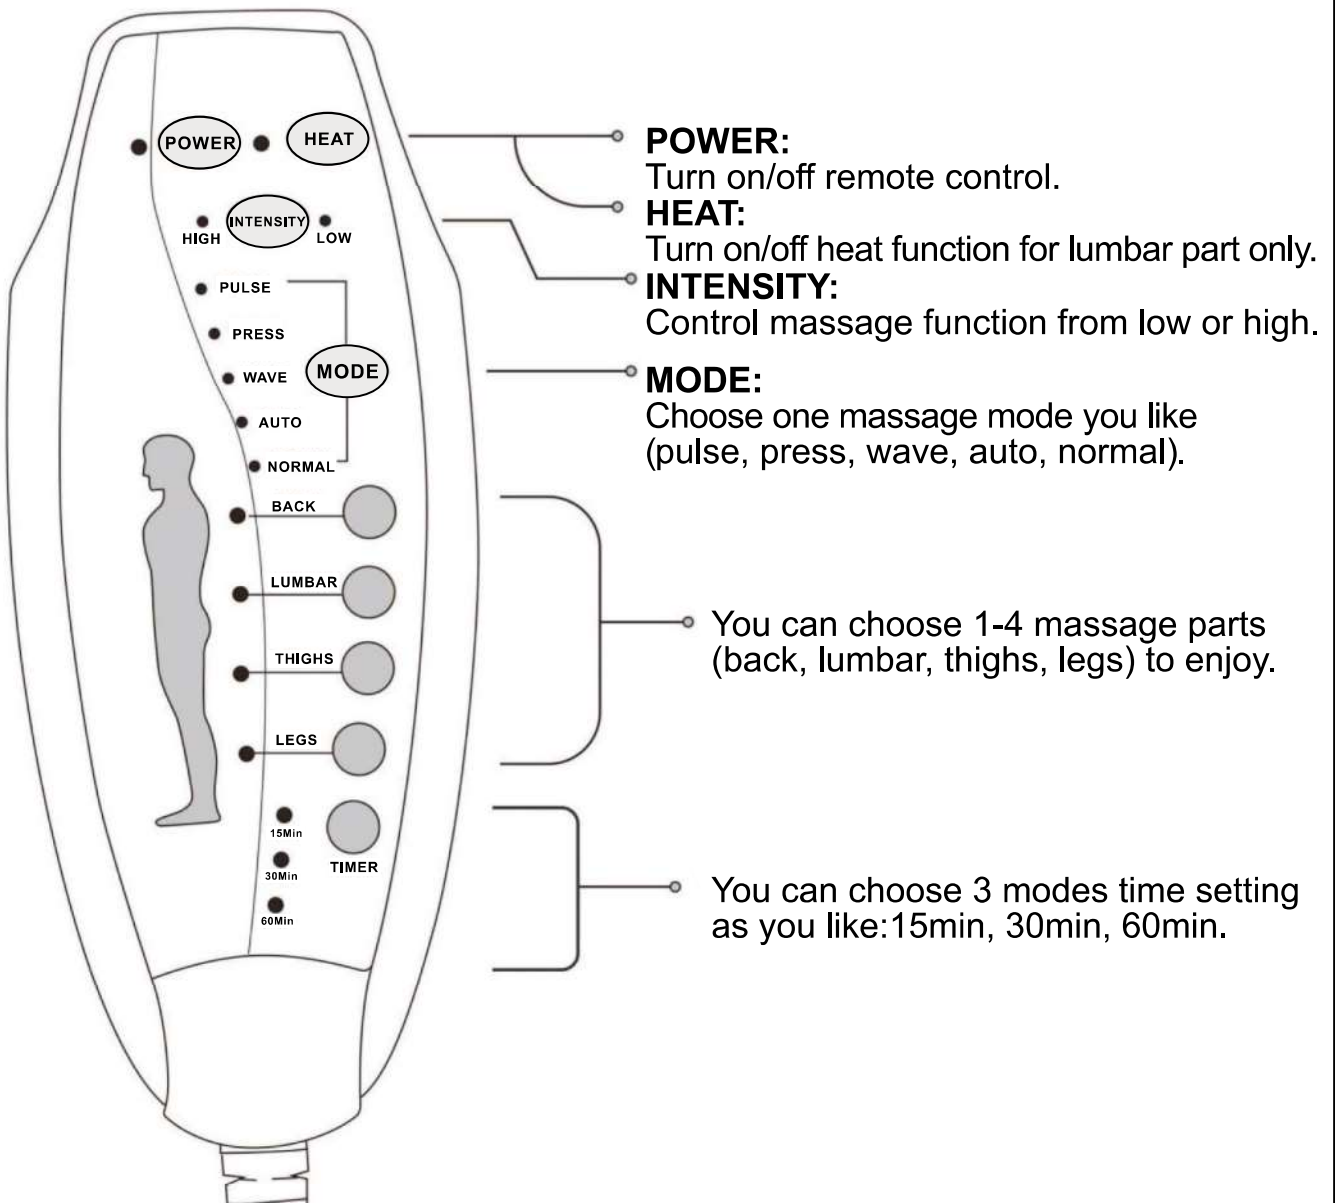


Warning

Do not sit on or press armrest

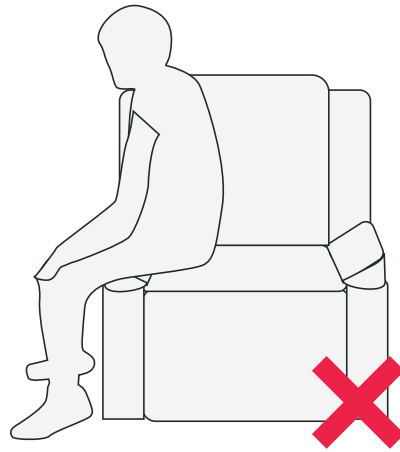



Do not press backrest after reclining

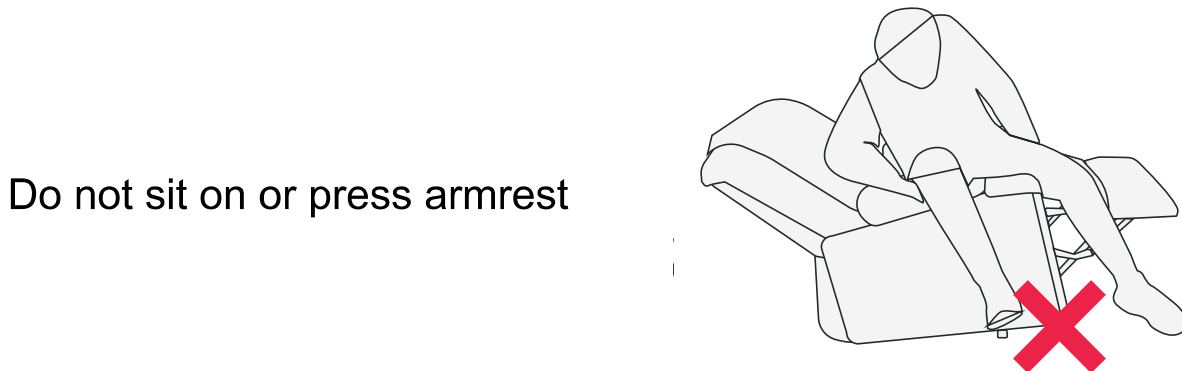


Do not sit on or press armrest

Warning

Do not sit/kick/stand on the footrest after lift up

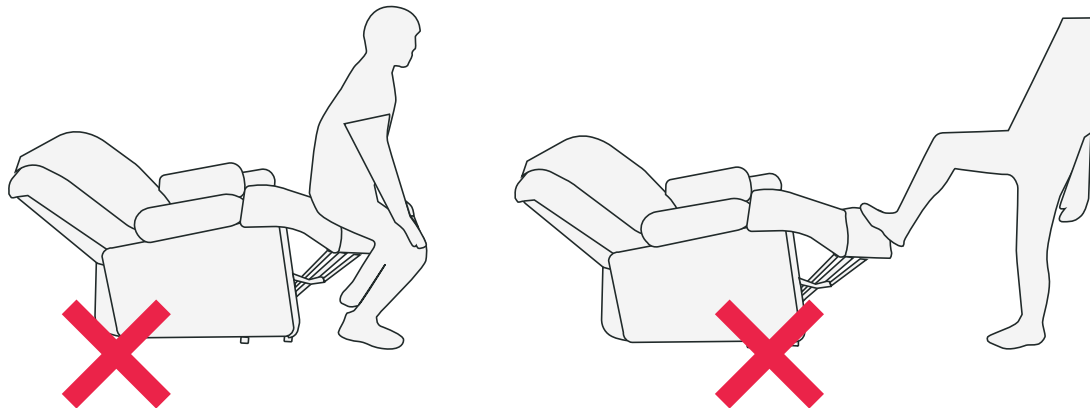
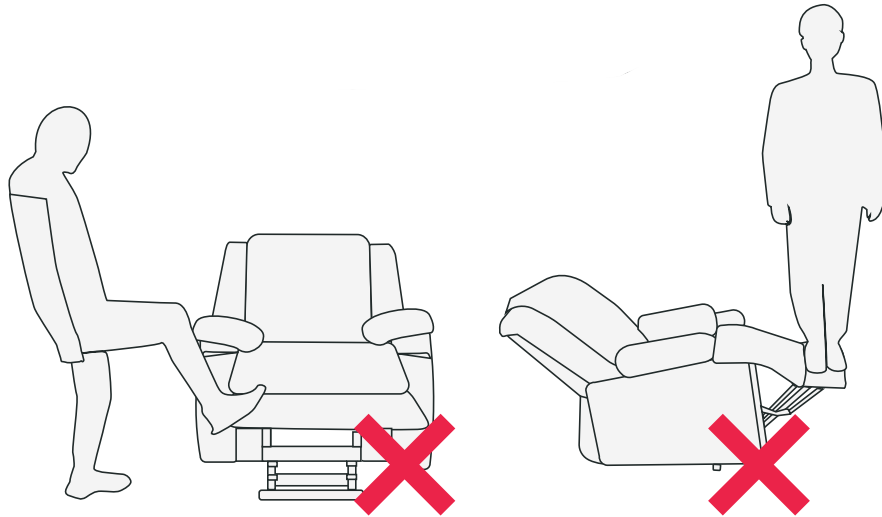


Leave enough space between chair back and wall before reclining


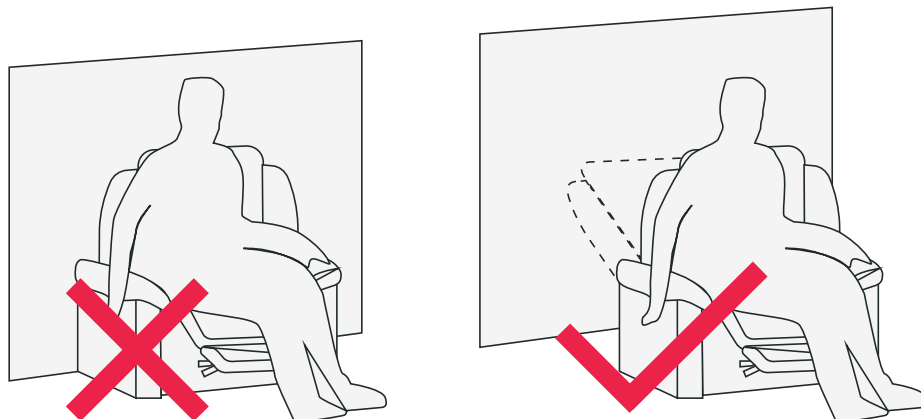


Warning

2-Person lift

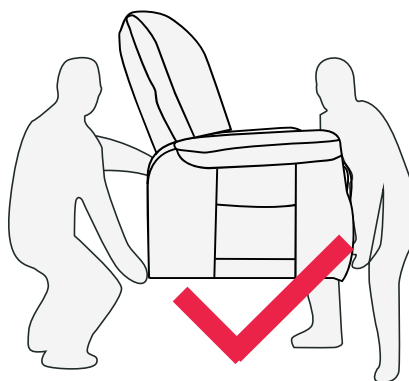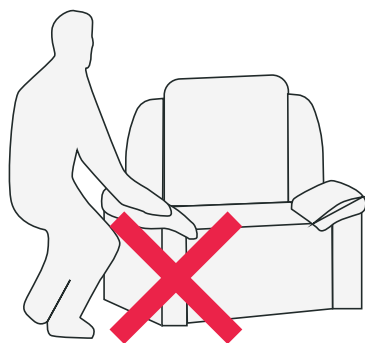

Do not move chair when it's reclining

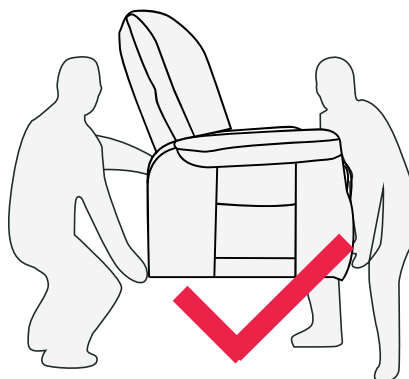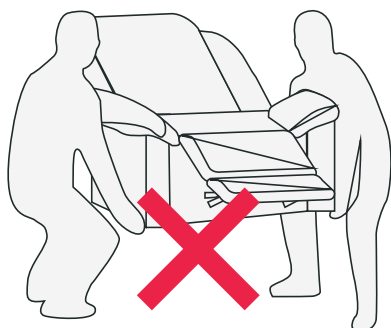

Unplug all power source from socket, then
unplug all wires connection before move chair



FAQ

1.Q: Missing parts.

A: Please check all necessary parts if you have already received two boxes. If not, kindly send messages to let us know missing part name regarding to this instruction, we will send the replacement to you asap.

2.Q: Some parts damaged when arrived.

A: Please send damaged parts photos to us as message attachment, we will check and offer good solution soon.

3.Q:The lift and reclining function does not work, e.g.The chair is stuck on lifting or reclining position, and there is no response when you press the lifting or reclining button.

A: Please help to unplug and plug all the wires as per Step 5&6, when all the wires are connected well, first, please check if the indicator light on power source(F) is ON or NOT, if the light on power source does not turn on, the power source is defective. If the light on power source is ON but the control panel at left arm has no blue light, that's the problem with the control panel. When the power source and control panel both have light, that's the problem of the lift motor. When you have this problem, please don't worry, you just need to contact us thru Amazon message and describe the problem, then we will send the needed replacement to you immediately.

FAQ

4.Q: The vibration massage functions are not working.

A: Please check if all wires at the back of recliner chair are connected correctly. The power cord also be plugged into the wall outlet. Then please check the lights on when you press "POWER" button on the remote. If not, the remote is defective and you can contact us for new one to replace.

5.Q: The heat function doesn't work or can't feel.

A: Please check all wires connection as same as question 4 first. If the remote also works well, you will need wait for 5-10 mins after you press the "HEAT" button. The heating function only works at lumbar position and the heat temperature isn't very hot.

WARRANTY

So glad you have completed the assembly and can enjoy it. If you are satisfied with our products, thank you for showing your favored massage recliner to your around.

Our products come with a 12-month warranty, you can feel free to contact us at any time.

Methods:

You going to your order detail page, Order>sold by>contact seller

(guaranteed response within 24 hours)

AFTER-SALE POLICY

1. For return reason:

Wrong purchase, bought by mistake, no longer needed, doesn't meet expectation, a size smaller than expectation, customer need to cover the return shipping fee.

2. For cancel order:

Customer needs to pay for shipping fee and carrier handle fee if the item has been shipped out.

For change address: customer needs to pay for extra shipping fee and carrier handle fee if the item has been shipped out.

3. Customer Service:

Any problem with the product or shipping issue, please feel free to contact us, we will try our best to serve and help.