


Assembly Instructions

Read before assembly. Keep for future reference.

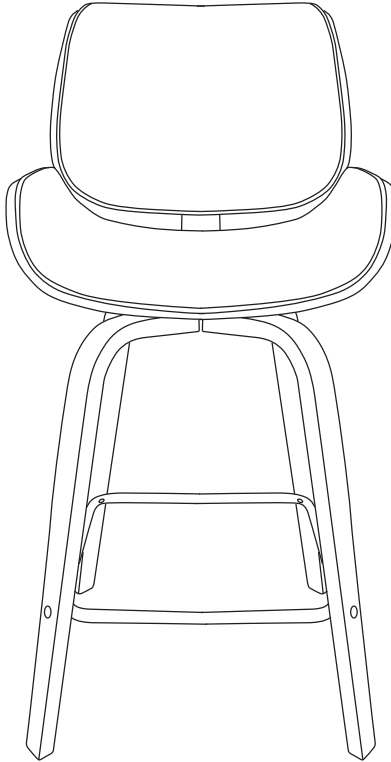

Before you begin

Check all parts and hardware. Work on a soft, clean surface to protect the upholstery and frame. Use the supplied Allen key; start every screw by hand.

Do not use the stool until all connections are secure and the stool is stable.

Check your components

Quantities below are for one stool. Repeat the assembly for each stool in your set.

A x 1



Backrest

B x 1



Seat

C x 1



Backrest bracket

D x 1



Swivel mechanism

E x 4



Leg

F x 1



Connector plate

G x 1



Footrest frame

H x 19



Screw: M6 x 25 mm

I x 4



Screw: M6 x 30 mm

J x 1



Allen key

K x 10




Felt pad

Build the leg base

E x 4 | F x 1 | H x 4 | Allen key J

Arrange the four legs (E) around the connector plate (F) as shown. Align the holes and start all four H screws by hand.

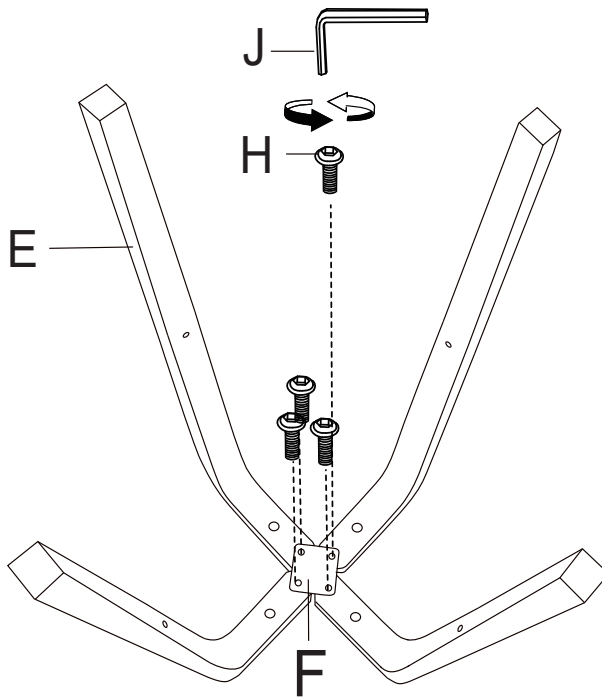


LEAVE THESE SCREWS LOOSE

Keep the legs adjustable. Fully tighten these four H screws in Step 7.

Attach the footrest

G x 1 | I x 4 | Allen key J

Position the footrest frame (G) inside the legs. Align all four connections and insert one I screw at each leg.

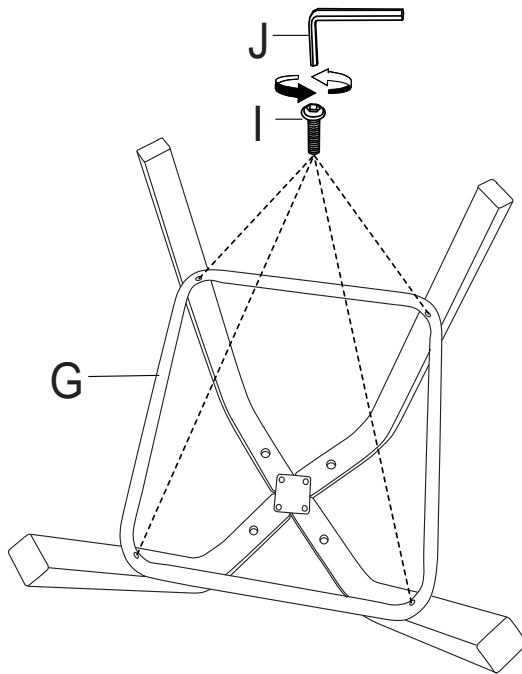


USE THE LONGER SCREWS

Use I (M6 x 30 mm). Leave all four screws loose until Step 7.

Install the swivel

D x 1 | H x 4 | Allen key J

Stand the base upright. Place the swivel mechanism (D) on top with the UP mark facing upward. Rotate the plates to expose the mounting holes as shown.

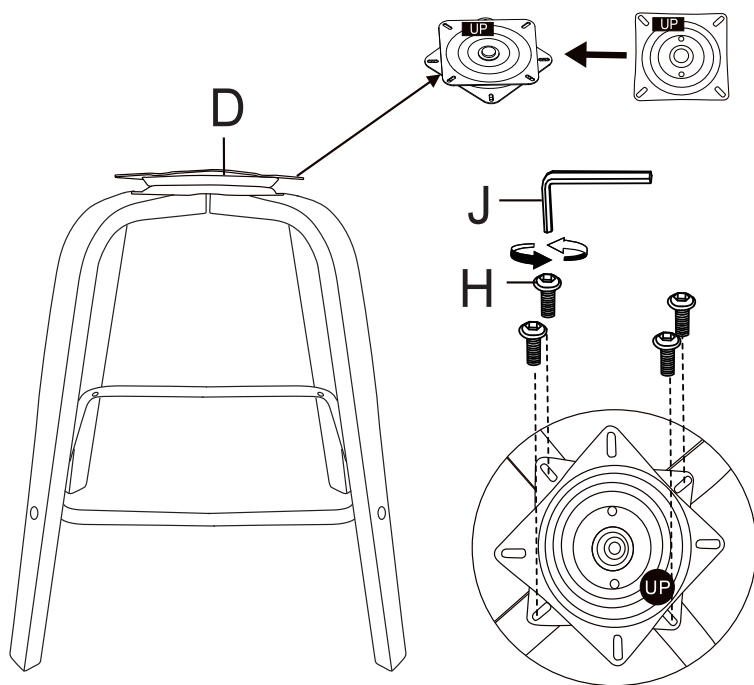


TIGHTEN THIS CONNECTION

Start all four H screws, then tighten them evenly. Keep fingers clear of the moving plates.

Attach the backrest bracket

A x 1 | C x 1 | H x 3 | Allen key J

Lay the backrest (A) face down on a soft, clean surface. Position bracket C exactly as shown, with its free end extending below the backrest toward the seat.

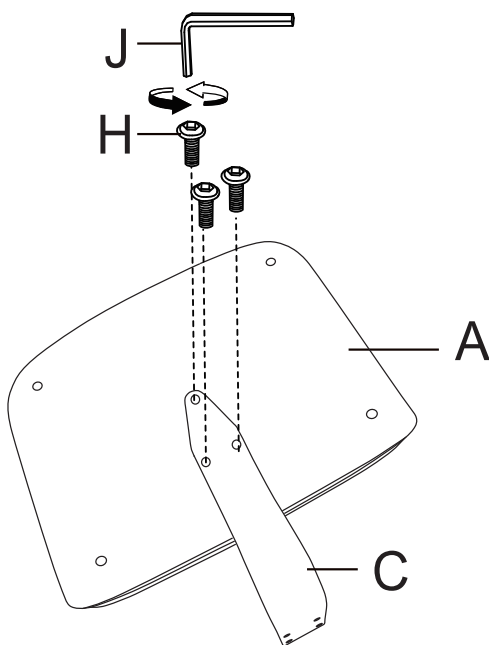


CHECK THE BRACKET DIRECTION

Match the bend to the drawing. Start all three H screws before tightening them evenly.

Connect the seat

B x 1 | H x 4 | Allen key J

Place the seat (B) upside down on a protected surface. Position the backrest at the rear of the seat and align bracket C with the mounting holes underneath.

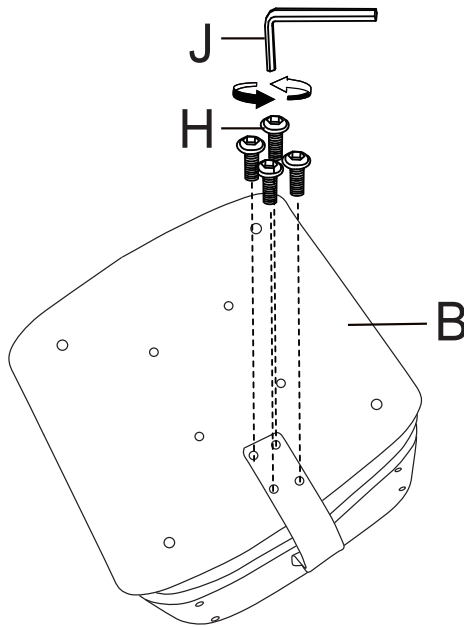


TIGHTEN THIS CONNECTION

Start all four H screws, then tighten them evenly. Confirm the backrest and seat are securely connected.

Join the seat and base

H x 4 | Allen key J

Keep the seat upside down on a protected surface. Align the swivel plate with the four mounting holes under the seat. Rotate the plate as needed to reach the holes.

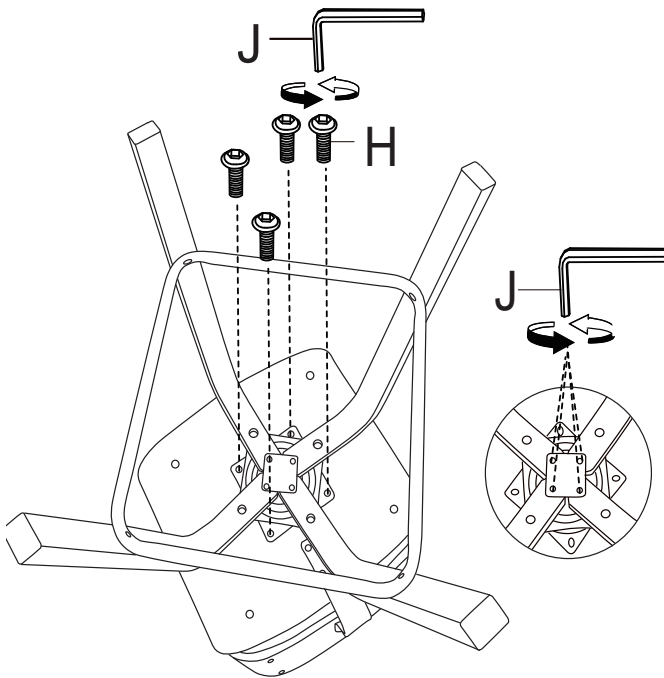


TIGHTEN THE SEAT CONNECTION

Start all four H screws, then tighten them evenly. The leg-base and footrest screws still require final tightening in Step 7.

Level & fully tighten

K x 4 for initial fitting | Allen key J

Attach one felt pad (K) to each clean, dry foot. Keep the remaining pads for replacement or minor leveling adjustments.

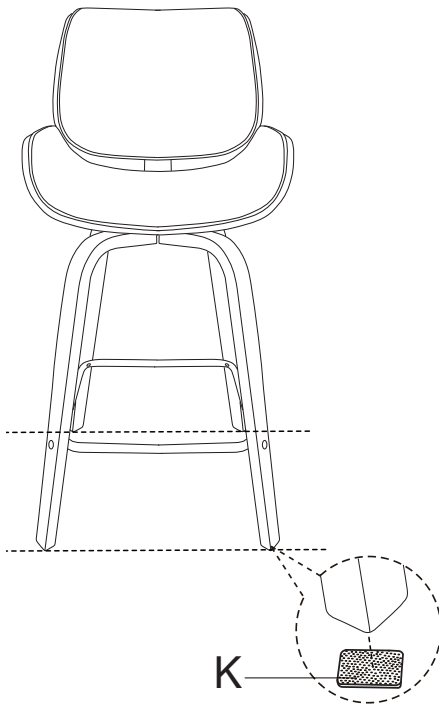

1. Settle the base

Stand the stool on a flat, level surface. Gently settle it so all four feet contact the floor.

2. Tighten all 8 base screws

Fully tighten the 4 H screws at the center connector plate AND the 4 I screws joining the footrest to the legs.

3. Check again

Alternate between connections as you tighten. Support the stool safely when reaching underneath; then recheck stability.

DO NOT SKIP THE FOOTREST

All four footrest-to-leg connections must be fully tightened before use. Do not overtighten or strip the screw threads.

Final check & care

Secure connections

Check the backrest, seat, swivel plate, center connector plate and all four footrest connections. No screw should be loose.

Stable on the floor

All four feet should contact the floor without obvious rocking. Check assembly alignment and screw tightness before adding any extra felt pads.

Smooth swivel

Turn the seat gently. It should move freely without binding. Keep fingers away from the moving swivel plates.

If the stool still rocks

Try a different flat, level surface. If needed, adjust the base alignment and retighten it. Use an extra felt pad only for a small remaining floor-related gap. Do not use stacked pads to mask a loose or misaligned frame.

Ongoing care

Periodically check and retighten connections as needed. Replace worn felt pads. Do not stand on the stool or use it as a step ladder.

NEED HELP?

If parts are missing, damaged, or will not align, stop assembly and contact the retailer with your order details and photos.