

HUANUO

Electric Standing Desk Frame


Elektrischer Stehtischgestell

Instruction Manual

Bedienungsanleitung

HNESD123

Rev01

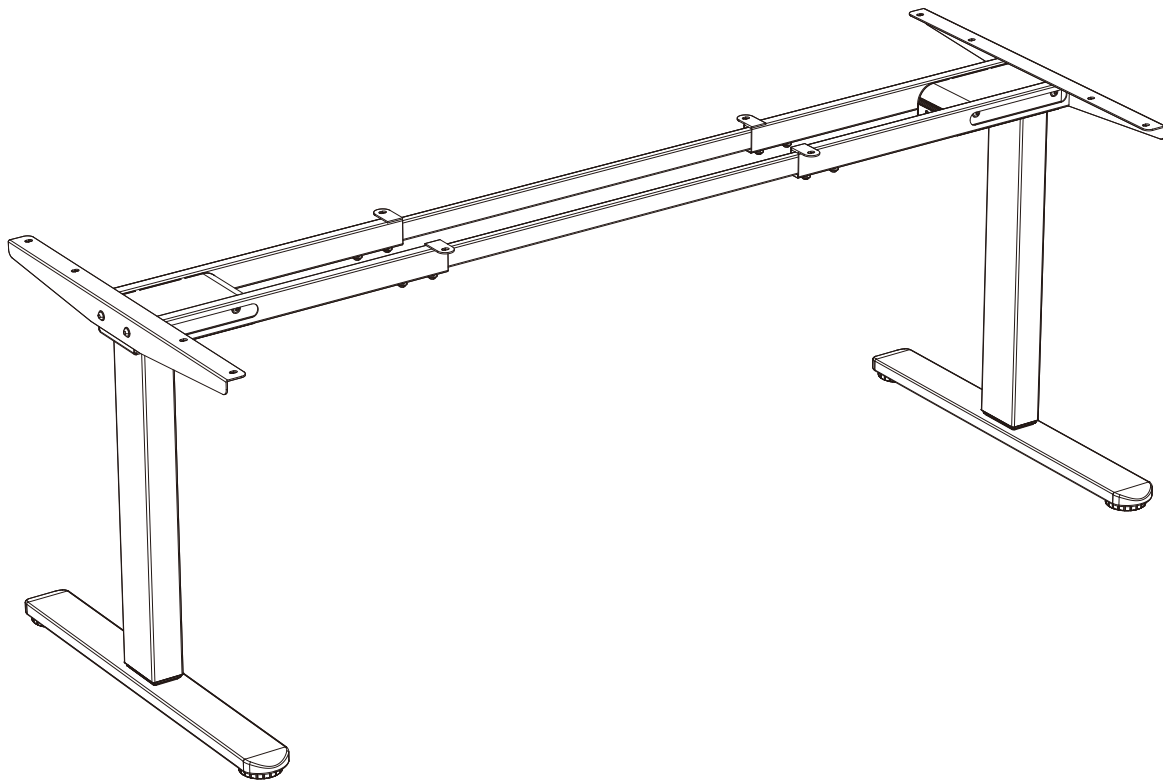

English	-----	03-18
Deutsch	-----	19-34



1-800-556-0533 (US/CA) Mon-Fri, 8am-8pm (CST)
44-808-196-3874 (UK) Mon-Fri, 2pm-10pm (UTC)



support@huanuo.com



www.huanuo.com

UK Declaration of Conformity

Declaration Number: 20241028

We, hereby declare that the essential requirements set out in the **Electromagnetic Compatibility Regulations 2016/1091 (EMC) , Electrical Equipment(Safety) Regulations 2016:(LVD)** have been fully fulfilled on our product with indication as below:

Product Name	Electric Standing Desk Frame
Product Description	Height Adjustable Desk Frame for Home Office
Brand Name / Model	HNESD123

The following standards have been applied for the investigation of compliance:

	Testing Standard	Test Report	Testing Lab
☒ Safety	EN 60335-1: 2012+A11:2014+A13:2017+A1:2019 +A14:2019 +A2:2019+A15:2021 EN 62233:2008	S24051405001001	Shenzhen NTEK Testing Technology Co., Ltd.
☒ Safety (Adaptor)	EN IEC 61558-1:2019, EN 61558-2-16:2009+A1:2013 EK1 527-12 Rev.2, EK1 557-13	CN24JP44 001	TÜV Rheinland (Guangdong) Ltd.
☒ EMC	EN IEC 55014-1:2021 EN IEC 55014-2:2021 EN IEC 61000-3-2:2019+A1:2021 EN 61000-3-3:2013+A2:2021	S24051405002001	Shenzhen NTEK Testing Technology Co., Ltd.

Furthermore, the ISO requirement for the in-process quality control procedure as well as the manufacturing process has been reached. The technical document as well as the test reports will be kept for a period at least 10 years after the last product has been manufactured at the disposal of the relevant national authorities of any Member State for inspection.

Detail contact information for this declaration has been listed below as the window of any issues relevant for this declaration.

Manufacturer Information:

Company	BESTQI INNOVATION (HONGKONG) TECHNOLOGY CO., LIMITED		
Address	Rm 4, Unit G 4/F, BLK 1 KOON WAH MIRROR FTY. (6th) IND., BLDG. 7-9 Ho Tin St., TUEN MUN, N.T., HONG KONG		
Name/Title	Ivy Chen / Certification Specialist		
Tel. No.	00852-30697751	Fax No.	/

Authorised Representative

Company	ERGEAR TECHNOLOGIES LIMITED
Address	SOUTH GYLE WESTPOINT 4 REDHEUGHS RIGG EDINBURGH Scotland EH12 9DQ GB

Ivy Chen

Signature / stamp Date: 2024-10-28

EU Declaration of Conformity

Declaration Number:20241028

We, hereby declare that the essential requirements set out in the **Directive 2014/30/EU Electromagnetic Compatibility (EMC) , 2014/35/EU (Low Voltage Directive)** have been fully fulfilled on our product with indication as below:

Product Name Electric Standing Desk Frame
Product Description Height Adjustable Desk Frame for Home Office
Brand Name / Model HNESD123

The following standards have been applied for the investigation of compliance:

	Testing Standard	Test Report	Testing Lab
☒ Safety	EN 60335-1: 2012+A11:2014+A13:2017+A1:2019 +A14:2019 +A2:2019+A15:2021 EN 62233:2008	S24051405001001	Shenzhen NTEK Testing Technology Co., Ltd.
☒ Safety (Adaptor)	EN IEC 61558-1:2019, EN 61558-2-16:2009+A1:2013 EK1 527-12 Rev.2, EK1 557-13	CN24JP44 001	TÜV Rheinland (Guangdong) Ltd.
☒ EMC	EN IEC 55014-1:2021 EN IEC 55014-2:2021 EN IEC 61000-3-2:2019+A1:2021 EN 61000-3-3:2013+A2:2021	S24051405002001	Shenzhen NTEK Testing Technology Co., Ltd.

Furthermore, the ISO requirement for the in-process quality control procedure as well as the manufacturing process has been reached. The technical document as well as the test reports will be kept for a period at least 10 years after the last product has been manufactured at the disposal of the relevant national authorities of any Member State for inspection.

Detail contact information for this declaration has been listed below as the window of any issues relevant for this declaration.

Manufacturer Information:

Company BESTQI INNOVATION (HONGKONG) TECHNOLOGY CO., LIMITED
Address Rm 4, Unit G 4/F, BLK 1 KOON WAH MIRROR FTY.(6th) IND., BLDG.7-9 Ho
Tin St., TUEN MUN, N.T., HONG KONG
Name/Title Ivy Chen / Certification Specialist
Tel. No. 00852-30697751 **Fax No.** /

Authorised Representative

Company BSQ Technology GmbH
Address Feringastr. 6, Unterföhring, 85774 ,DE

Ivy Chen

Signature / stamp Date: 2024-10-28

IMPORTANT SAFETY INFORMATION

- With proper supervision and instruction, this desk can be used by children 8 years and above and by persons with reduced physical, sensory, or mental capabilities. Users must understand safe operation and the potential hazards involved.
- Cleaning and user maintenance shall not be performed by children.
- The desk is only to be used with the power supply unit provided.
- Disconnect the power supply when performing maintenance and cleaning.
- Examine the desk frequently for signs of wear or damage. If the desk has been misused, does not work properly, or shows signs of wear or damage, contact the supplier for further information.
- When operating a switch that initiates and maintains the movement of the furniture, terminates the movement of the furniture, or causes a change of the direction of the furniture, make sure that all persons are kept clear of movement.
- Properly place the desk to avoid creating collision hazards with other furniture.
- Dust off regularly to keep your desktop clean. Power off the desk, then use a damp piece of cloth to gently rub the surface.



For indoor use only

Specifications



Height Adjustment Range
23.6–49.2" (60–125cm)



Power Input
100V–240V




Max. Speed
30mm/s




Operating Noise
<55dB

Recommended Desktop Sizes

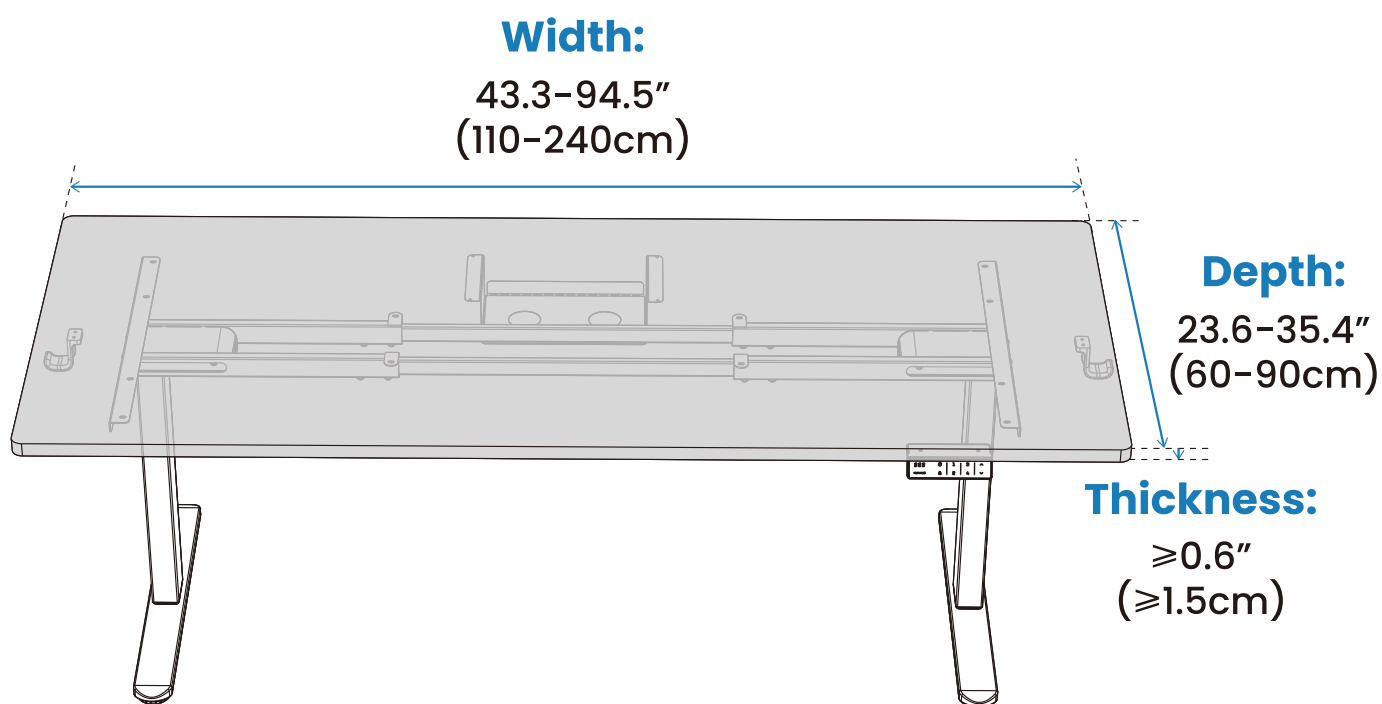

Tools Needed (Not Included)

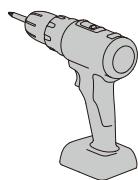

Drill

OR




Phillips Screwdriver

Step 1


Supplied Parts and Hardware

A x 12



Screw
M5 x 15mm

B x 20



Bolt
M6 x 11mm

D x 1



Allen Key
3/16" (5mm)

01 x 2




Crossbar

02 x 2



Crossbar

03 x 2



Side Plate

04 x 2



Desk Leg

05 x 2




Connecting Bar

Step 2

Supplied Parts and Hardware

A x 6



Screw
M5 x 15mm

C x 4




Screw
M5 x 12mm

F x 2




Storage Hook

06 x 1



Cable
Management Tray


07 x 1



Controller

Step 3 Supplied Parts and Hardware

B x 8



Bolt
M6 × 11mm

D x 1



Allen Key
3/16" (5mm)


08 x 2



Leg Base

Step 4 Supplied Parts and Hardware

A x 2




Screw
M5 × 15mm

E x 6



Cable Clip

09 x 1

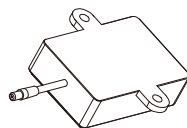

Control Box

10 x 1



Motor
Connection Cable

11 x 1



Motor Connection Cable

Not all hardware included in this package will be used.

Contact Us

If you receive parts that are damaged, defective, or are missing parts, please contact us.





1-800-556-0533 (US/CA) Mon-Fri, 8am-8pm (CST)
44-808-196-3874 (UK) Mon-Fri, 2pm-10pm (UTC)




support@huanuo.com

Step 1 Assembling the Leg Sections



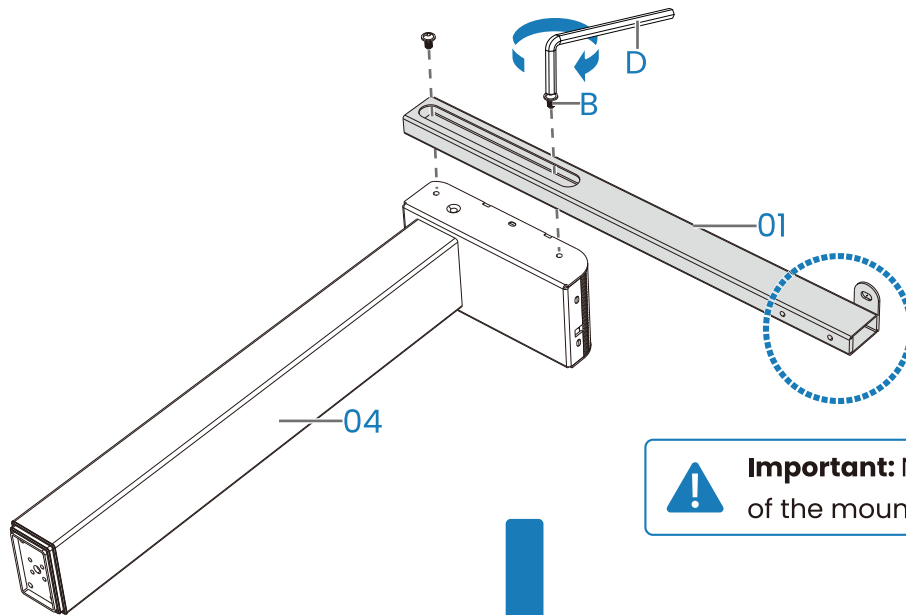



Important: Note the position of the mounting tabs.



Flip

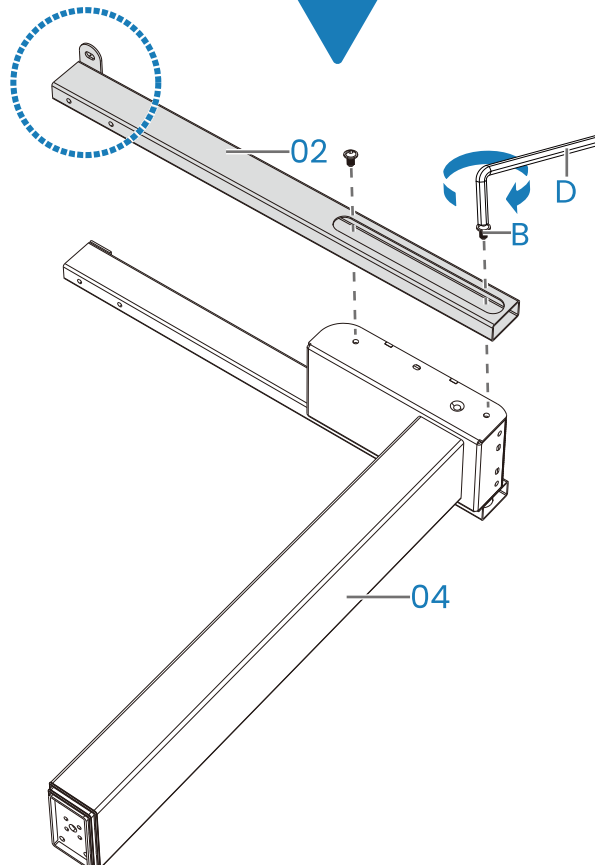


2x

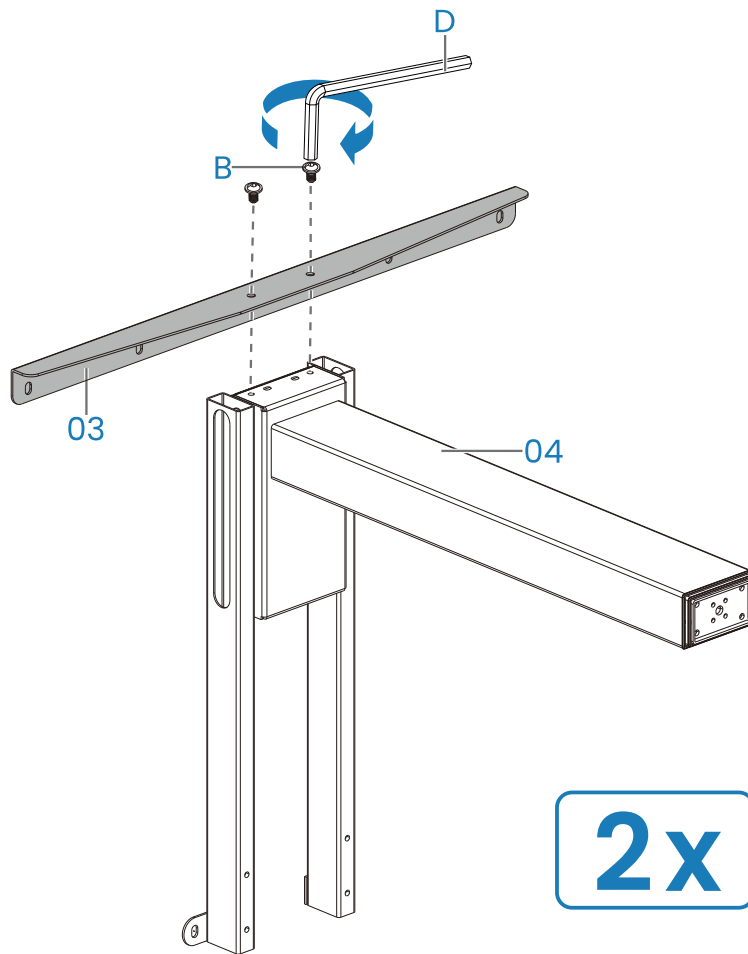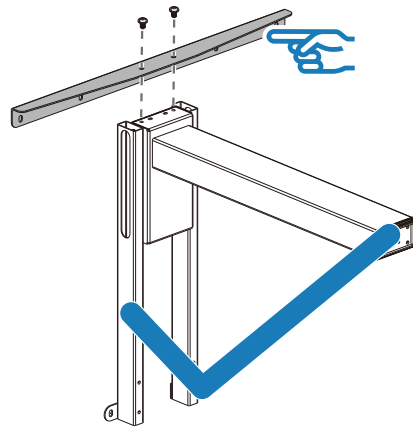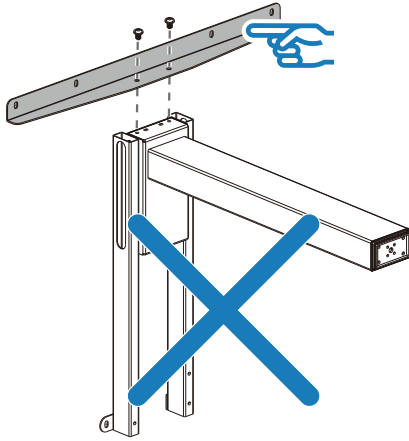


Place one leg section on the desktop, then insert the connecting bars into the crossbar end. Slide the other leg section onto the connecting bars.




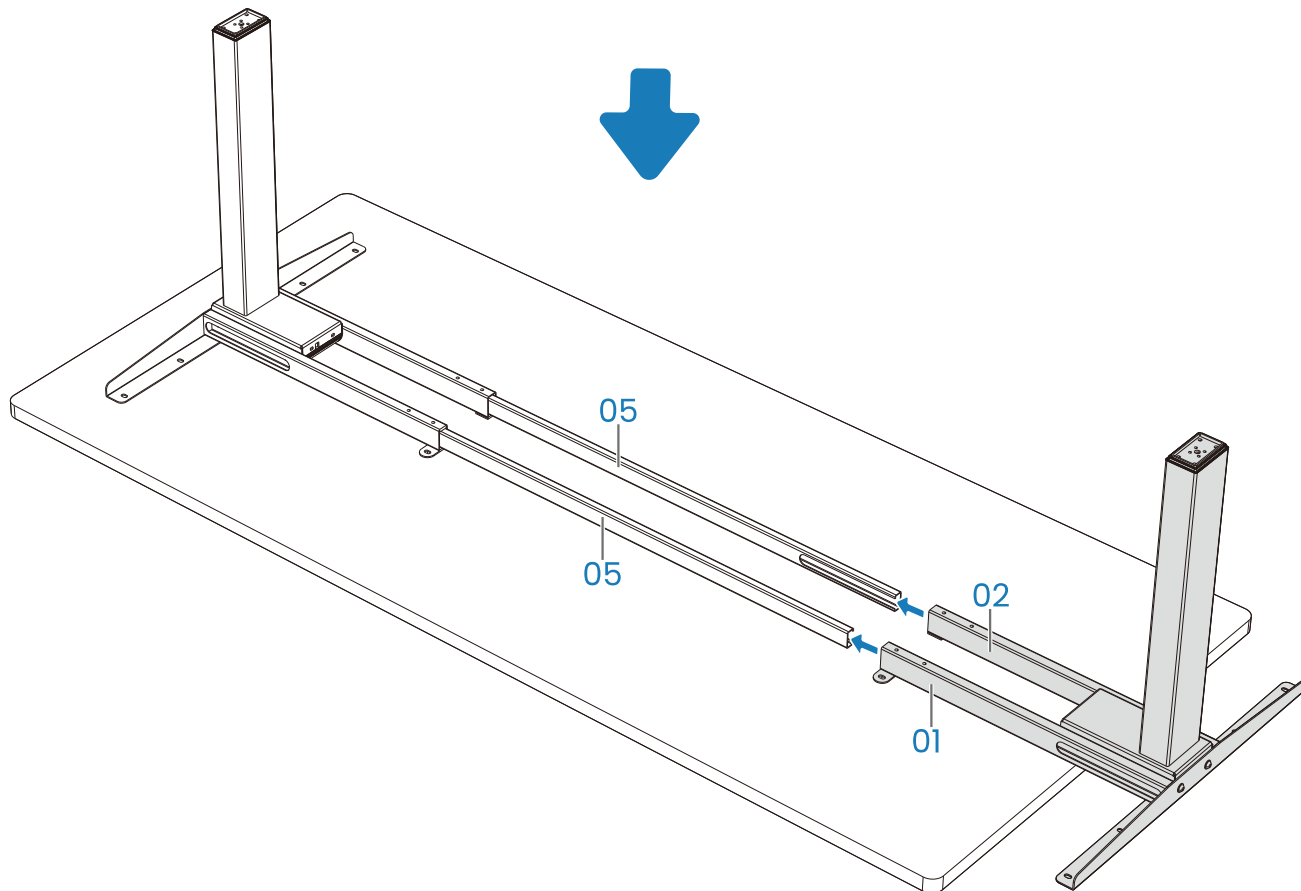
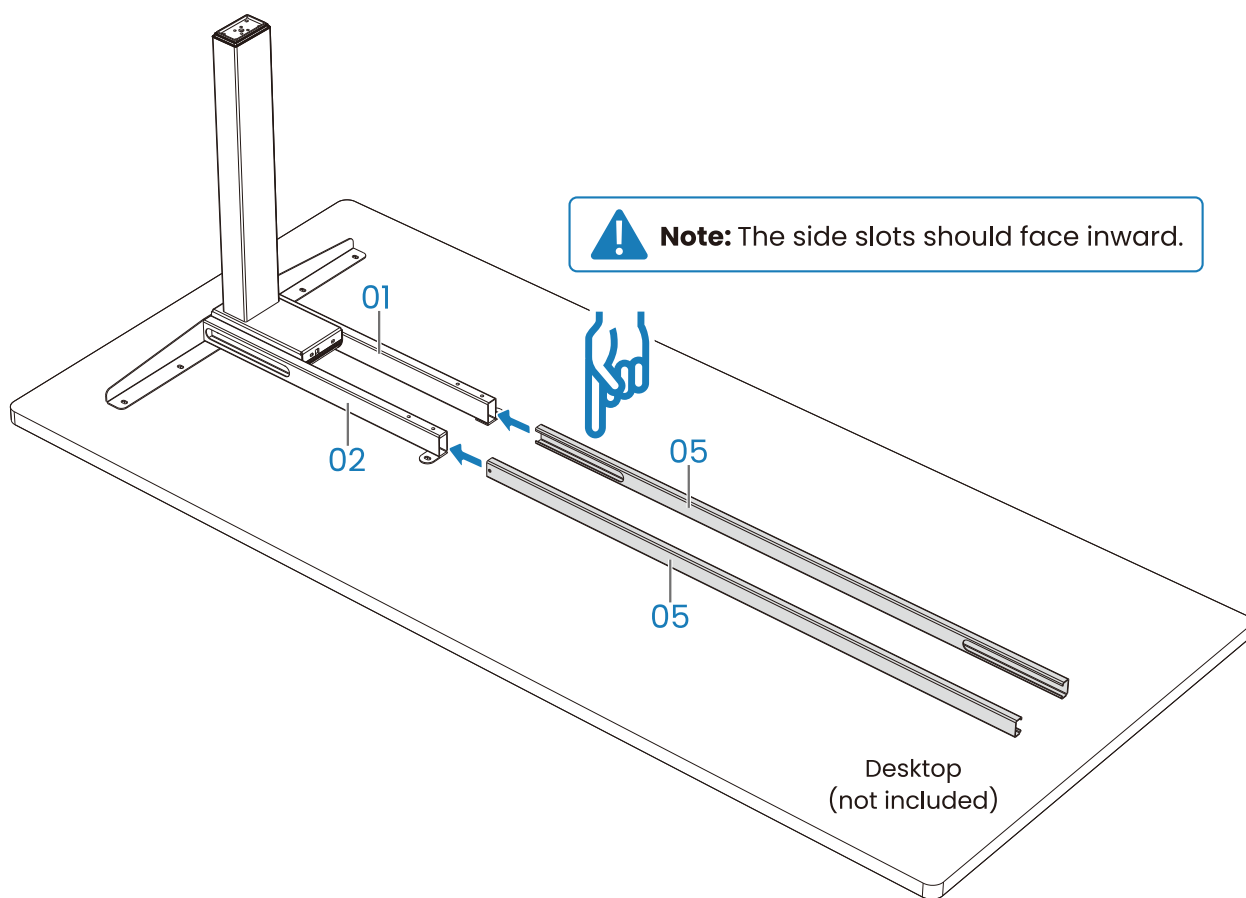


Adjust the frame's length according to the desktop size.

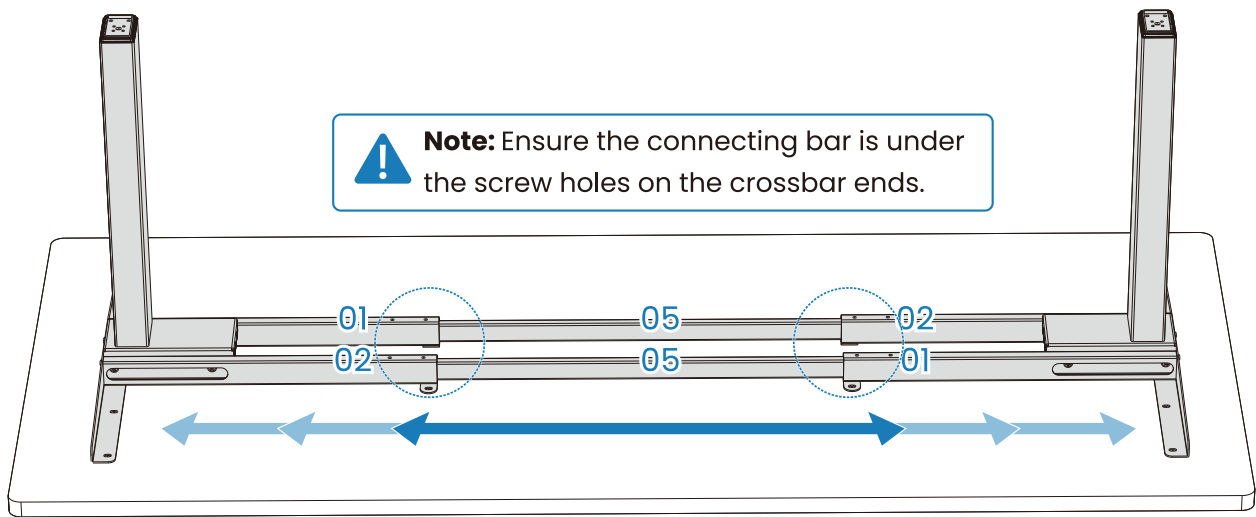

Center the frame on the desktop.

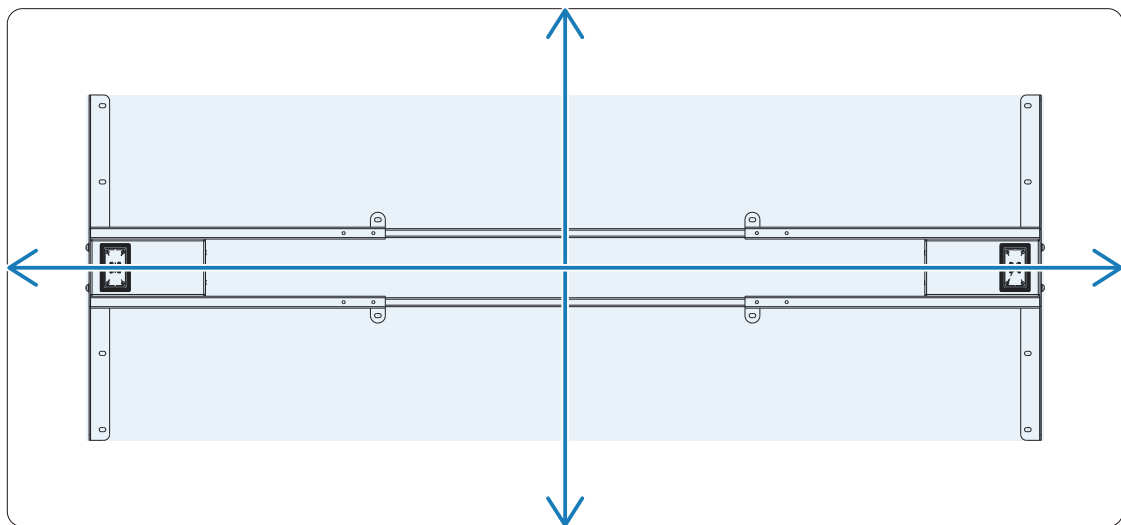

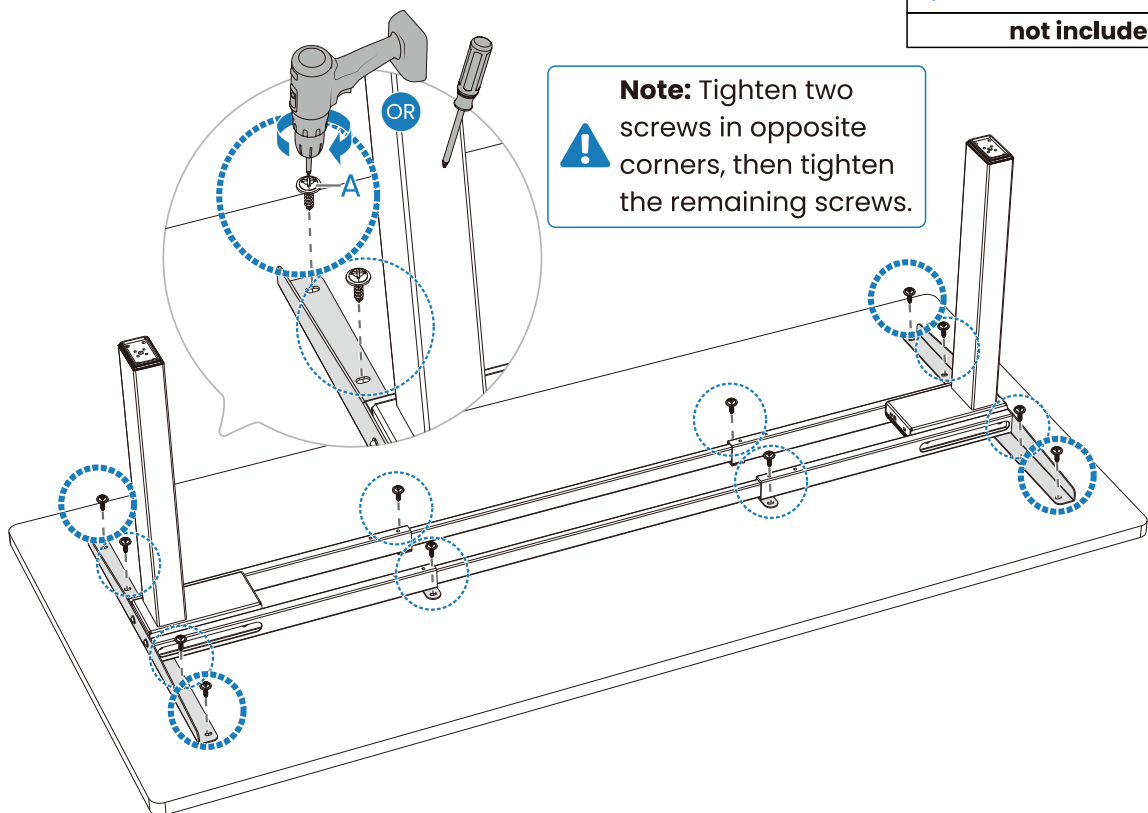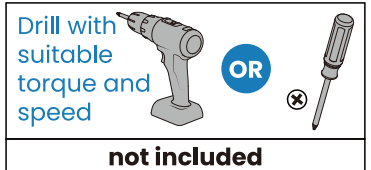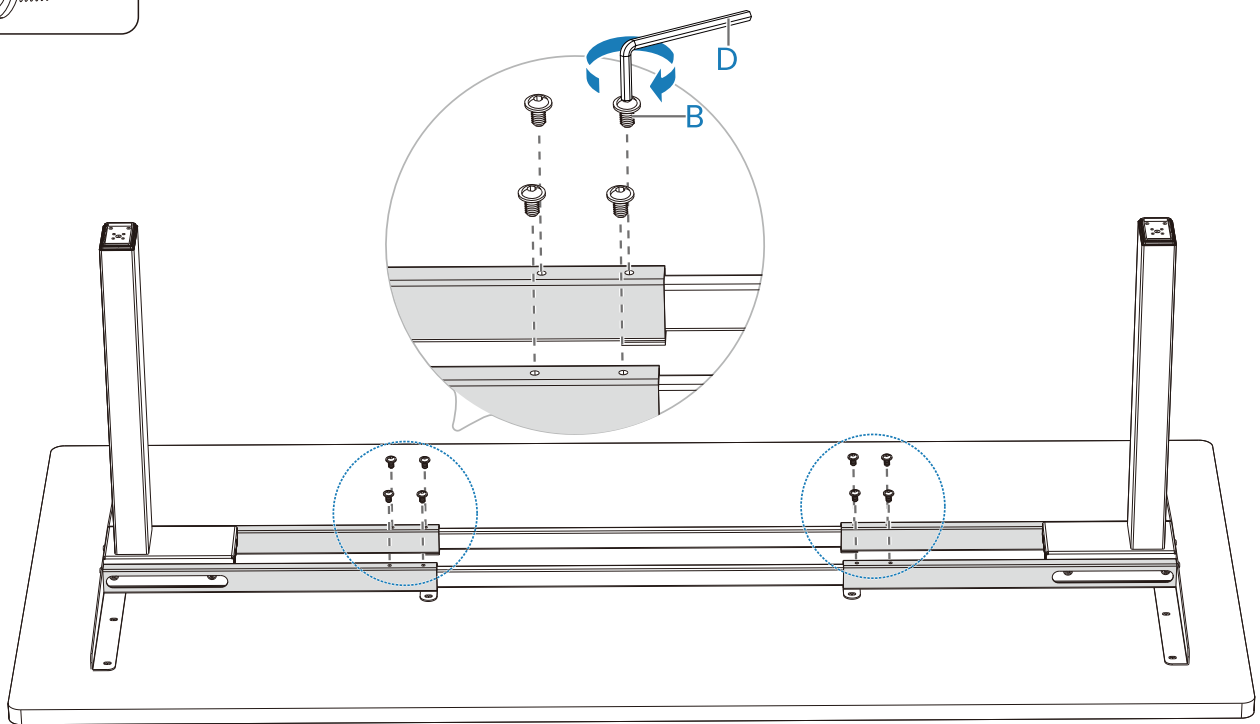

Note: Ensure all bolts and screws are fully tightened.

Step 2 Attaching Other Parts to the Desktop


Fold the cable management tray into shape.




Note:

Be careful not to cut your fingers.


01

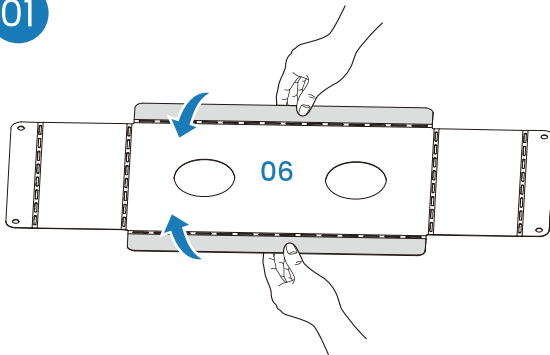

02

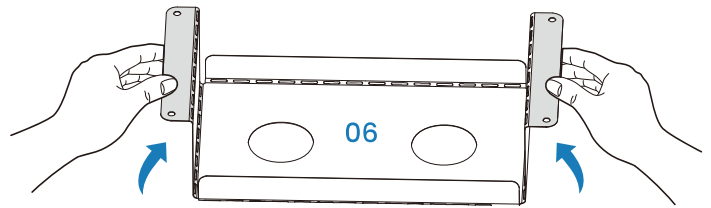

 x4

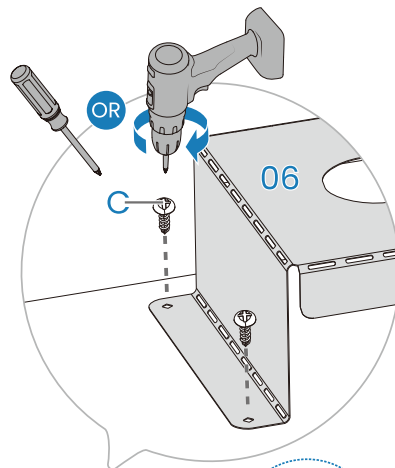




Drill with
suitable
torque and
speed

OR





not included

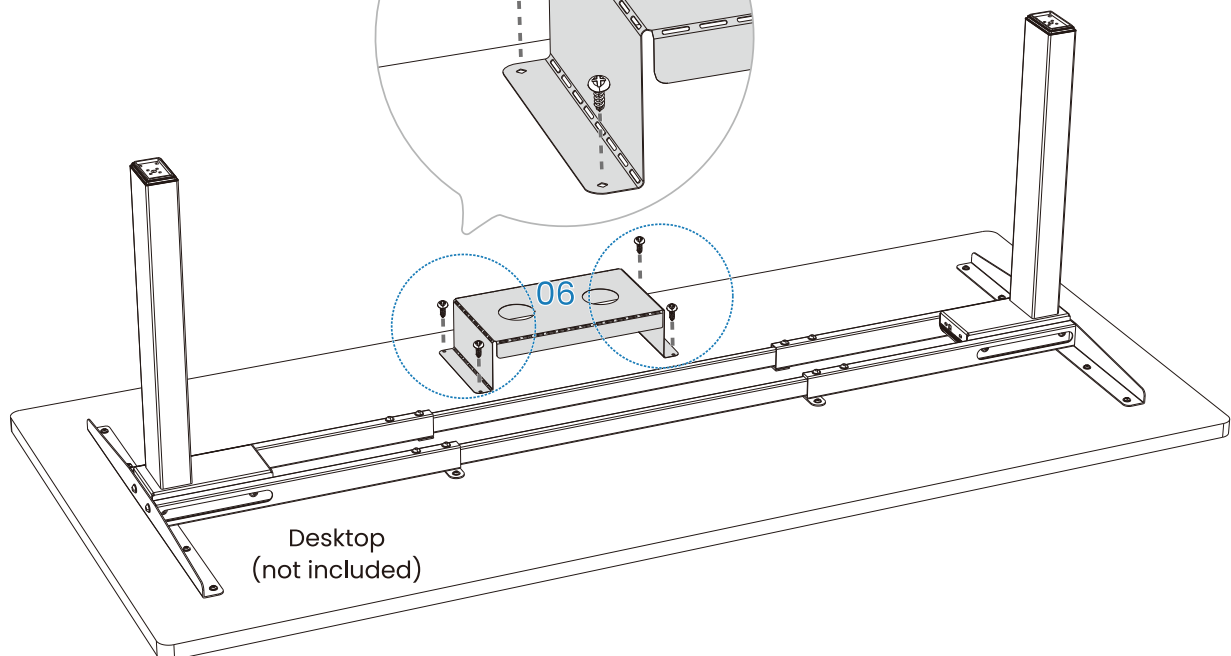

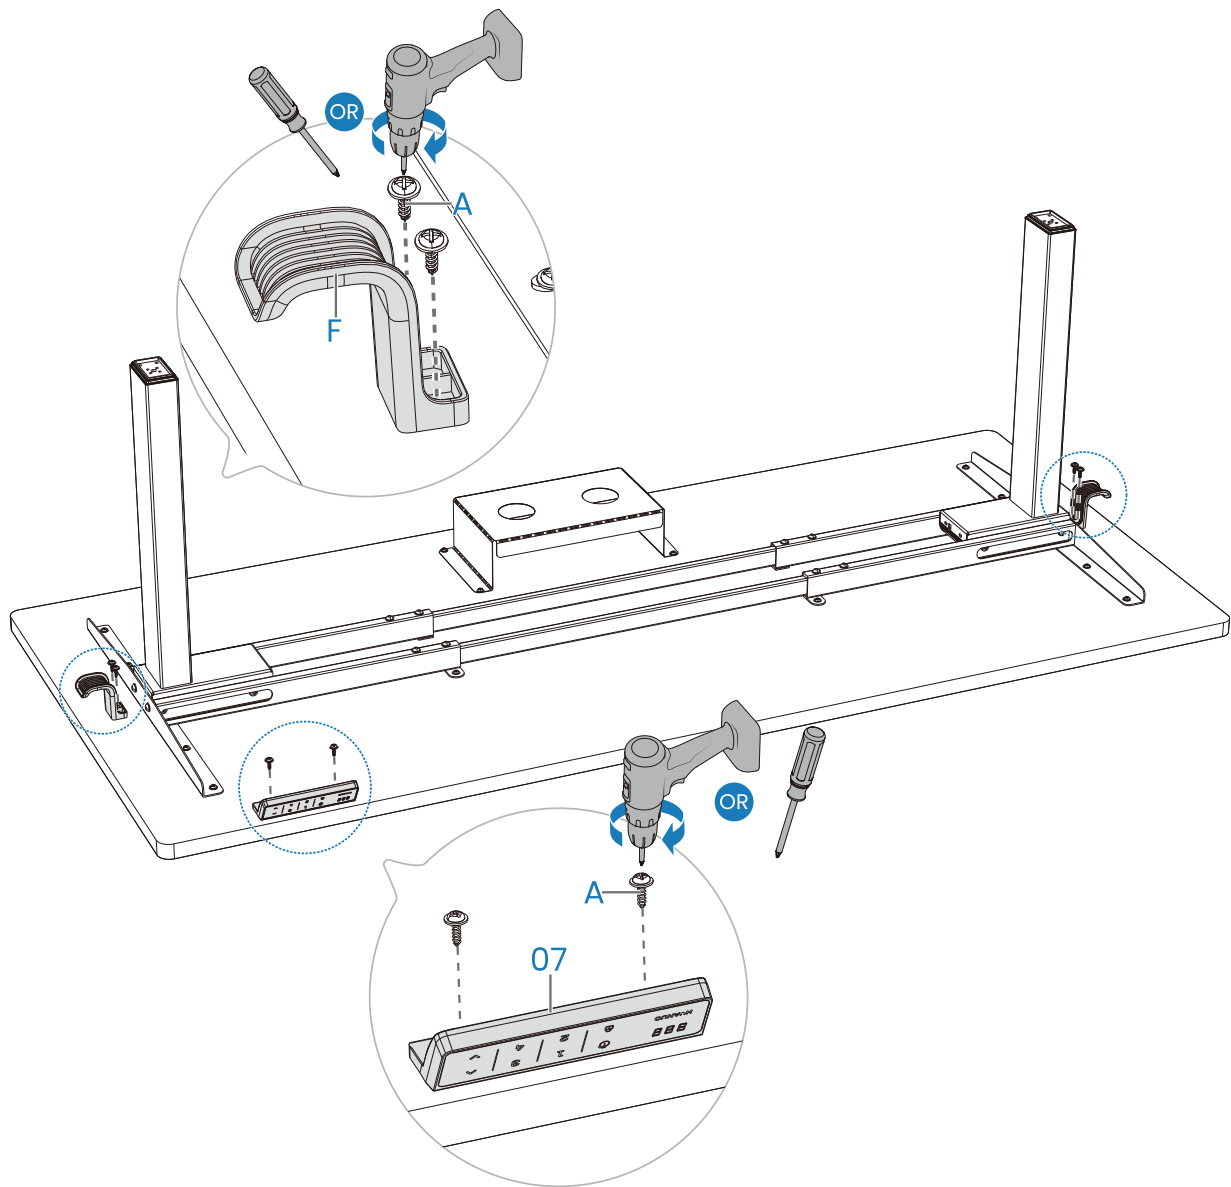

Note: Position the controller toward the side with the motor.




Step 3 Attaching the Leg Bases

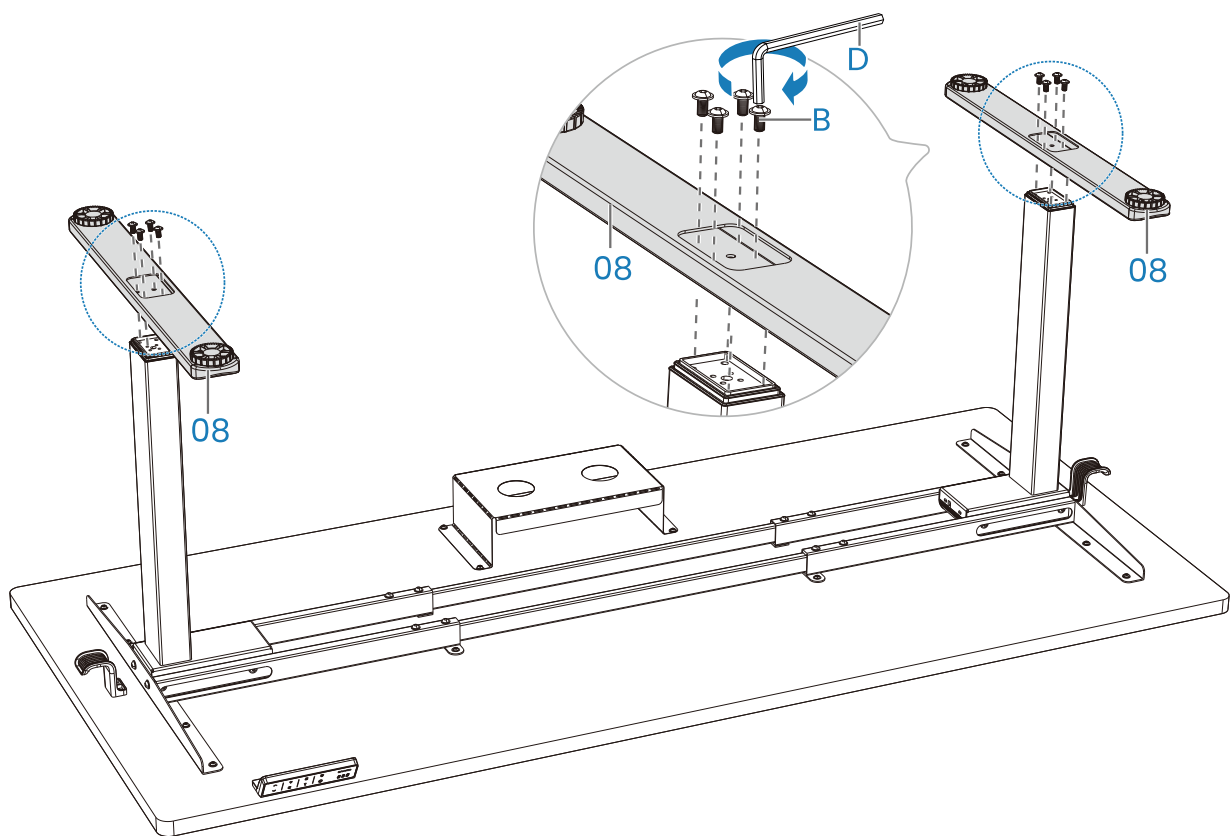

Step 4 Connecting the Cables




Tip: An example of a cable clip layout is indicated below. However, the cable clips can be arranged according to your needs.

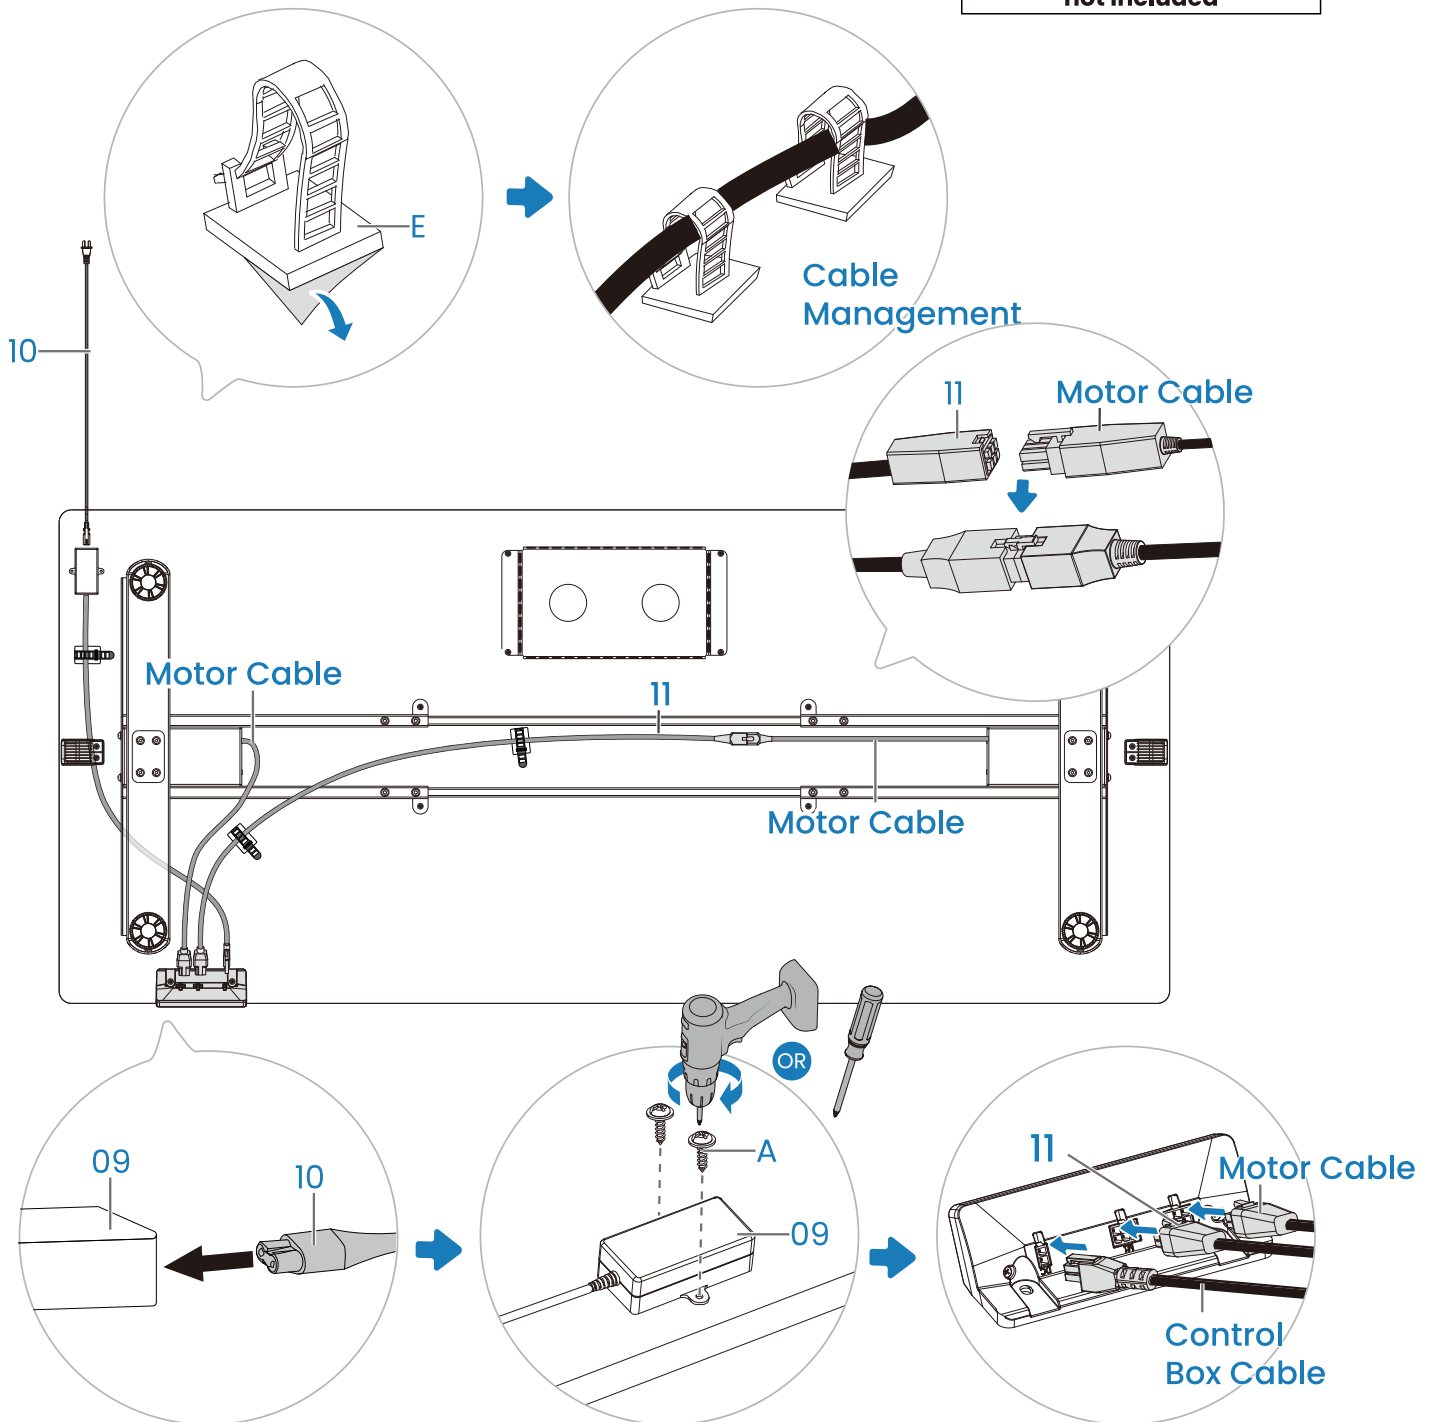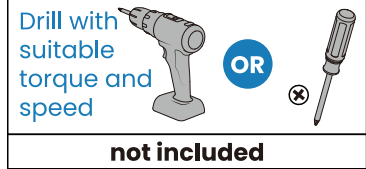

Note: When flipping the desk over, do not allow the controller to collide with the ground, which could cause damage.

Using the Controller

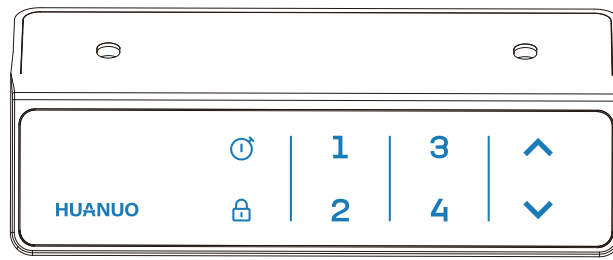

Tip: Reset before first use.

Note: Ensure that there are no obstacles when using the desk, that the desktop is not too close to the wall, and that all cables are long enough for the desk to move up and down freely. When the controller screen is off (power-saving mode), press any button to wake it before operation.

Suggestion: Set the most comfortable height when you sit down to **1** and the most comfortable height when you stand up to **2**. The other two presets can be set for another user or for other heights you want to use.

• Sedentary Reminder

Press the  button. '0.5h' will flash on the screen. Press the  or  button to switch between OFF, 0.5h, 1.0h, 1.5h, 2.0h, 2.5h, and 3.0h. Wait for 3 seconds until the timer duration disappears, then setting is complete. When the timer is over, 9 beeps will sound to notify you.

Tip:

1. During the setting procedure, a press on the  button will turn the sedentary reminder off.
2. If the sedentary reminder is on, setting a new timer or changing the desk height will restart the timer.
3. If the sedentary reminder is on, the screen will display '.' when in power-saving mode.

• Lock

Press and hold the  button for 3 seconds. The screen will display 'LoC,' and the buttons will be disabled. Repeat to turn the lock off.

Tip:

1. The sedentary reminder should still work even with the lock on.
2. The lock setting remains after a power loss.

• Save Current Height Setting

Four heights can be saved. Press and hold the **1**, **2**, **3**, or **4** button for 5 seconds until 'H1,' 'H2,' 'H3,' or 'H4' displays and flashes. The screen will display the current height, which will be saved to that button.

- **Select Height Setting 1**

Press the  button. The desk will move to the height that was previously set for that button.

- **Select Height Setting 2**

Press the  button. The desk will move to the height that was previously set for that button.

- **Select Height Setting 3**

Press the  button. The desk will move to the height that was previously set for that button.

- **Select Height Setting 4**

Press the  button. The desk will move to the height that was previously set for that button.

- **Raise the Desk**

Press the  button to raise the desk continuously until it reaches the highest position of 49.2" (125cm) or the button is released.

- **Lower the Desk**

Press the  button to lower the desk continuously until it reaches the lowest position of 23.6" (60cm) or the button is released.

Settings	
Reset	1. Press and hold the  button until the desk goes down to its lowest level, then release the button. 2. Press and hold the  button for 5 seconds, and the screen will display 'RES.' Continue holding until the desk comes back up slightly. Reset is complete.
'RES' displays as  on the screen.	
Protection Mode Error Codes	
Hot	Overheating Protection: When the motor has been working continuously for 5 minutes, it will stop operating to prevent damage from overheating. Wait for at least 15-18 minutes before making any further height adjustment.
E10	Sensor Malfunction Warning: Motor safety sensor cannot be detected. Power off, check the connection between both motors and the controller, then power back on again. If error code persists, follow the reset procedure detailed above.

E20	Overload Warning: Max load exceeded. If raising the desk, remove all items from the desk and try again. If lowering the desk, power off, remove all items from the desk, power back on, then try again. If error code persists, follow the reset procedure detailed above.
E02	Operation Status Warning: The desk stops moving if vibration, impact, or incline are detected. If this detection is incorrect, follow the reset procedure detailed above before continuing use.
E32	Overvoltage Protection: Input voltage too high. If the correct AC adapter is being used, power off the desk, check the connection between power and the controller, then power on again.
E31	Undervoltage Protection: Input voltage too low. If the correct AC adapter is being used, power off the desk, check the connection between power and the controller, then power on again.
E60	Step Loss Protection: Power off the desk, check the connection between both motors and the controller, then power on again. If error code persists, follow the reset procedure detailed above.
—	Cable Disconnection Warning: Check motor and controller cable connections. Normal operation should return once all connectors are properly connected.

Wichtige Sicherheitsinformationen

- Bei entsprechender Aufsicht und Einweisung kann dieser Schreibtisch von Kindern ab 8 Jahren und Personen mit eingeschränkten körperlichen, sensorischen oder geistigen Fähigkeiten verwendet werden. Benutzer müssen den sicheren Betrieb und die damit verbundenen potenziellen Gefahren verstehen.
- Reinigung und Wartung dürfen nicht von Kindern durchgeführt werden.
- Der Schreibtisch darf nur mit dem mitgelieferten Netzteil betrieben werden.
- Trennen Sie die Stromversorgung, wenn Sie Wartungs- und Reinigungsarbeiten durchführen.
- Prüfen Sie den Schreibtisch regelmäßig auf Verschleiß- oder Schadensanzeichen. Bei solchen Anzeichen oder bei Missbrauch oder Nichtfunktion des Schreibtisches kontaktieren Sie den Lieferanten für weitere Informationen.
- Wenn Sie einen Schalter betätigen, der die Bewegung des Möbels einleitet und aufrechterhält, die Bewegung des Möbels beendet oder eine Richtungsänderung des Möbels bewirkt, stellen Sie sicher, dass sich keine Personen in der Bewegung befinden.
- Stellen Sie den Schreibtisch richtig auf, um eine Gefahr durch Einklemmen mit anderen Möbeln zu vermeiden.
- Entfernen Sie regelmäßig Staub, um Ihren Schreibtisch sauber zu halten. Schalten Sie den Schreibtisch aus und reiben Sie ihn dann vorsichtig mit einem feuchten Tuch ab.



nur für die Verwendung in Innenräumen

Spezifikationen



Höhenverstell-Bereich
60-125cm (23.6-49.2 Zoll)



Eingangsstrom
100V bis 240V




Max. Geschwindigkeit
30mm/s



Betriebsgeräusch
<55dB

Empfohlene Desktop-Größen


Breite:
110-240cm
(43.3-94.5 Zoll)

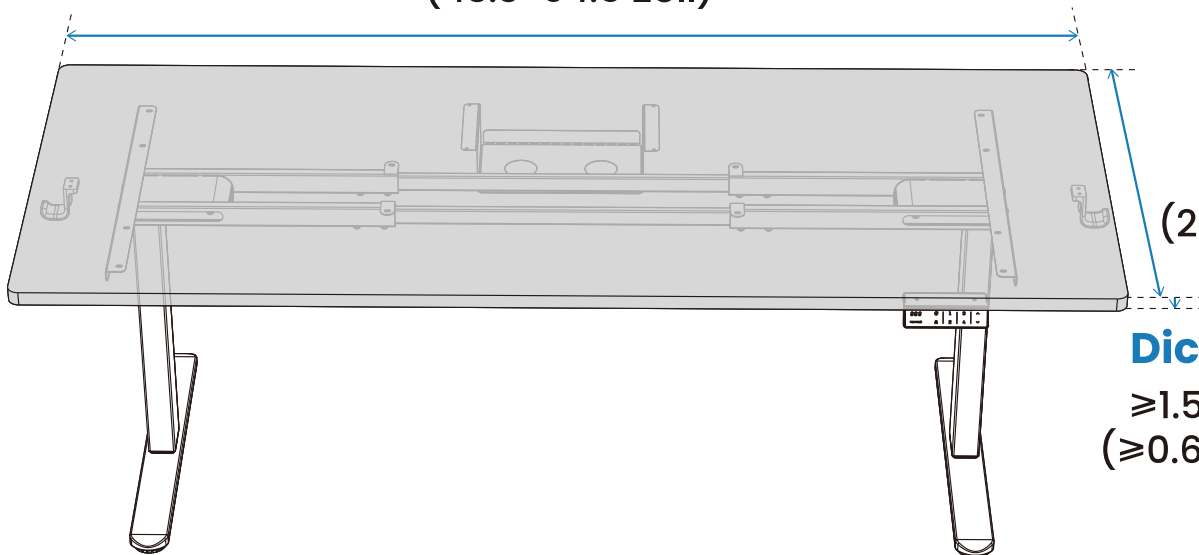

Tiefe:
60-90cm
(23.6-35.4 Zoll)


Dicke:
≥1.5cm
(≥0.6 Zoll)

Werkzeuge benötigt (nicht enthalten)

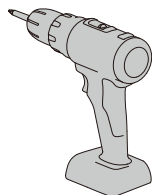

Bohrer

ODER

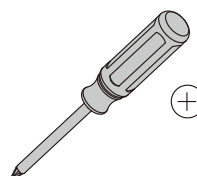


Kreuzschlitzschraubendreher

Schritt 1


Mitgelieferte Teile und Beschläge

A x 12



Schraube
M5 × 15mm

B x 20



Bolzen
M6 × 11mm

D x 1



Inbusschlüssel
5mm (3/16 Zoll)

01 x 2




Querstange

02 x 2



Querstange

03 x 2



Seitenplatte

04 x 2



Schreibtischbein

05 x 2




Verbindungsleiste

Schritt 2


Mitgelieferte Teile und Beschläge

A x 6



Schraube
M5 × 15mm

C x 4




Schraube
M5 × 12mm

F x 2




Ablagehaken

06 x 1



Kabelmanagement
-Schale

07 x 1




Steuergerät

Schritt 3

Mitgelieferte Teile und Beschläge

B x 8



Bolzen
M6 × 11mm

D x 1



Inbusschlüssel
5mm (3/16 Zoll)

08 x 2




Bein-Unterteil

Schritt 4

Mitgelieferte Teile und Beschläge

A x 2




Schraube
M5 × 15mm

E x 6



Kabelklemme

09 x 1

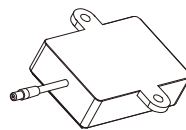

Steuerbox

10 x 1



Netzkabel

11 x 1



Motor Anschlusskabel

Nicht sämtliche Hardware, die in diesem Paket enthalten ist, wird verwendet.

Kontaktiere uns

Wenn Sie beschädigte, defekte oder fehlende Teile erhalten, kontaktieren Sie uns bitte.



1-800-556-0533 (US/CA)
44-808-196-3874 (UK)



Mon-Fri, 8am-8pm (CST)
Mon-Fri, 2pm-10pm (UTC)




support@huanuo.com

Schritt 1





Zusammenbau der Beinabschnitte

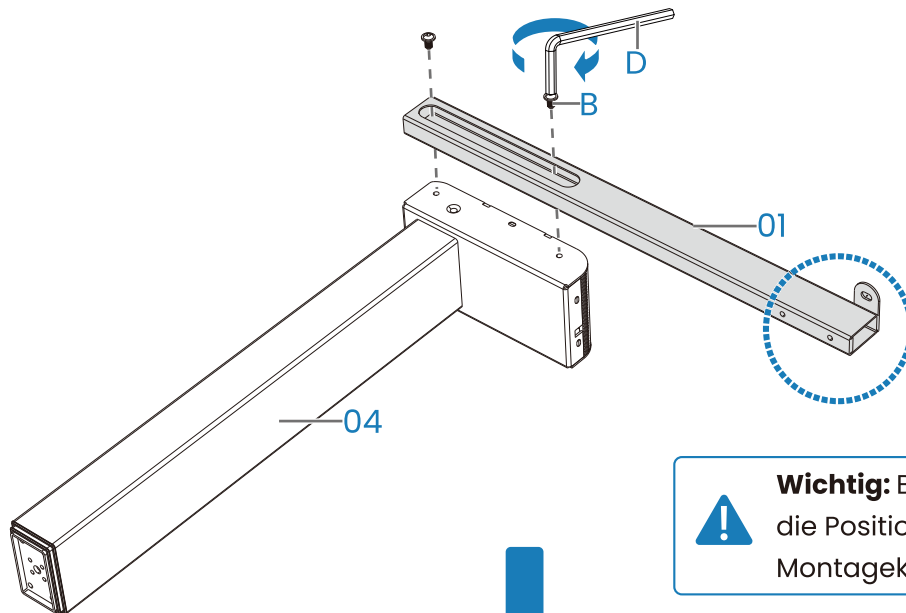

Umdrehen

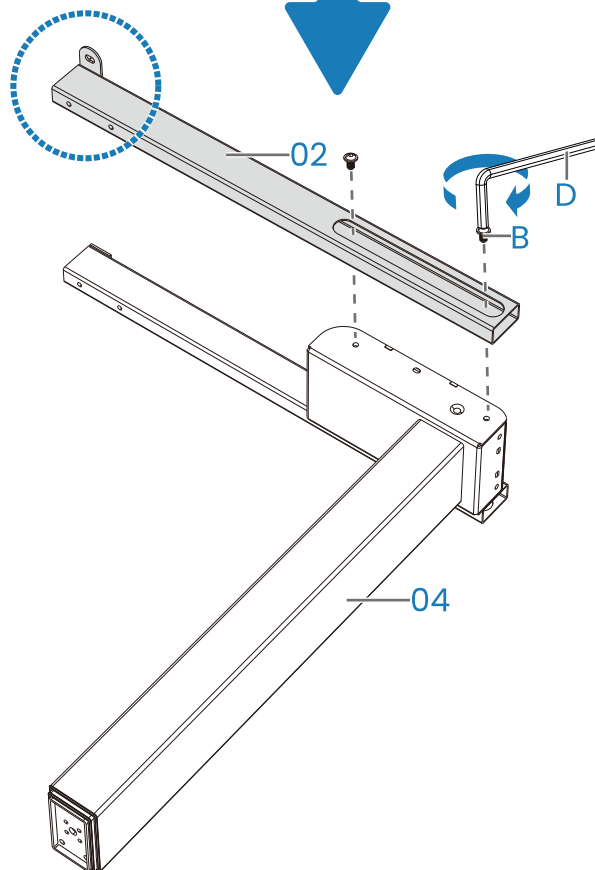


2x

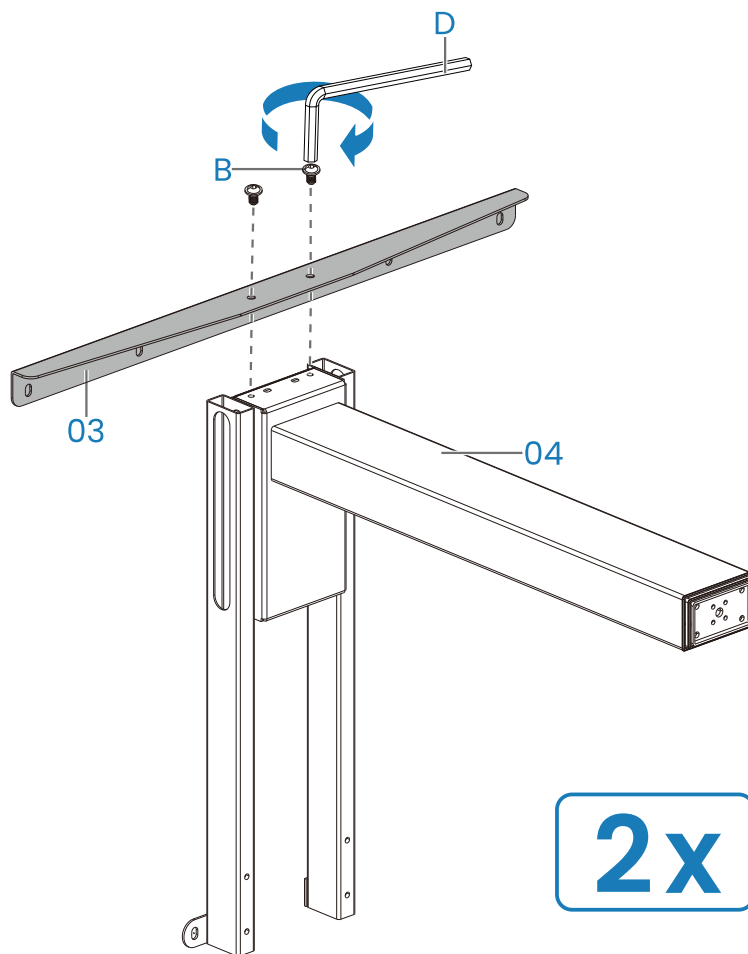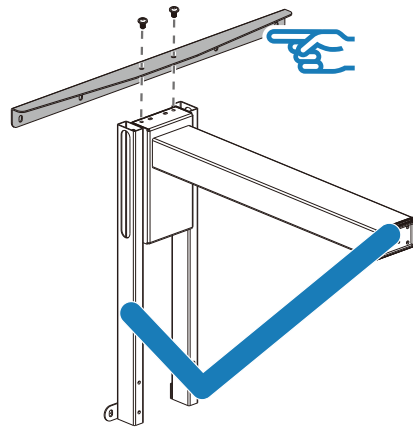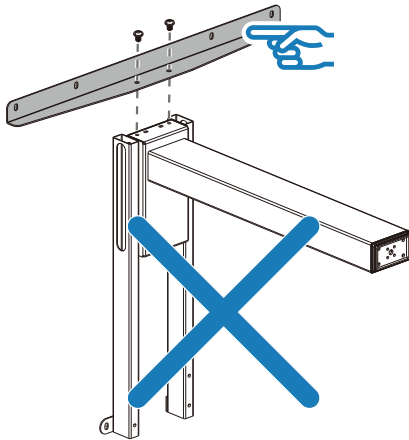


2x


Legen Sie ein Beinteil auf die Tischplatte und stecken Sie die Verbindungsstangen in die Querstreben Ende des Fußteils ein. Schieben Sie das andere Beinteil auf die Verbindungsstangen.


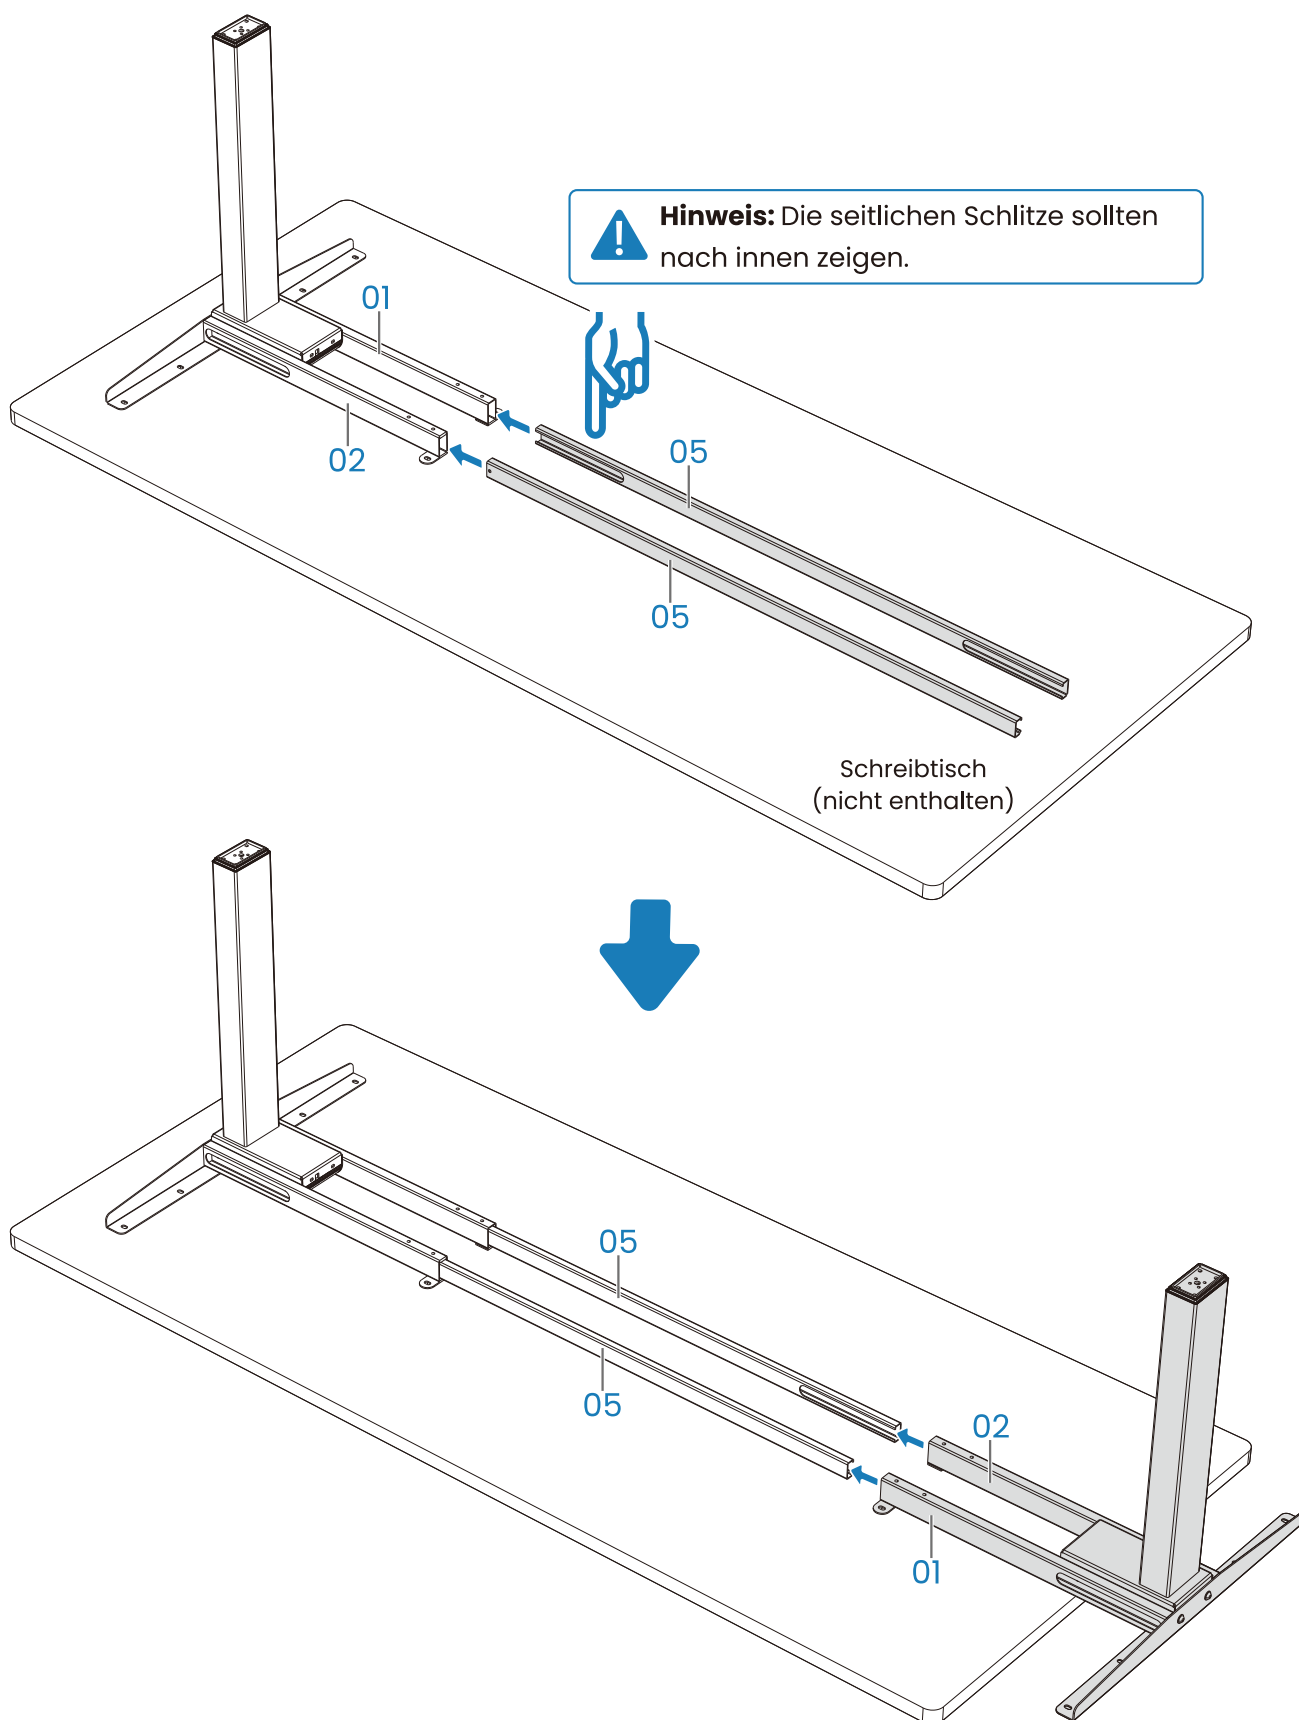


Passen Sie die Länge des Rahmens entsprechend der Größe des Schreibtischs an.

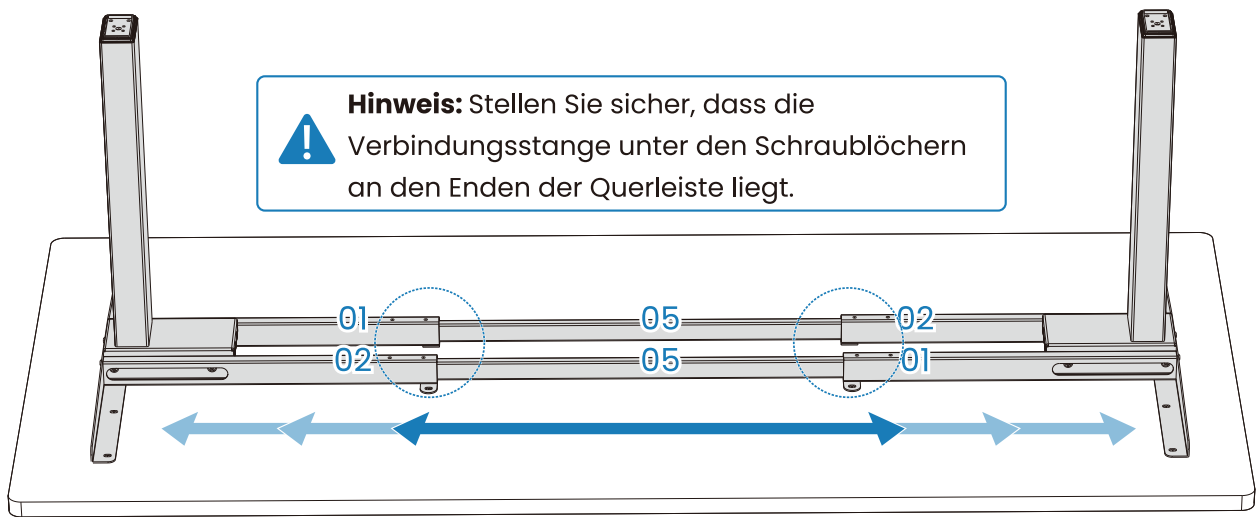

Zentrieren Sie den Rahmen auf dem Desktop.

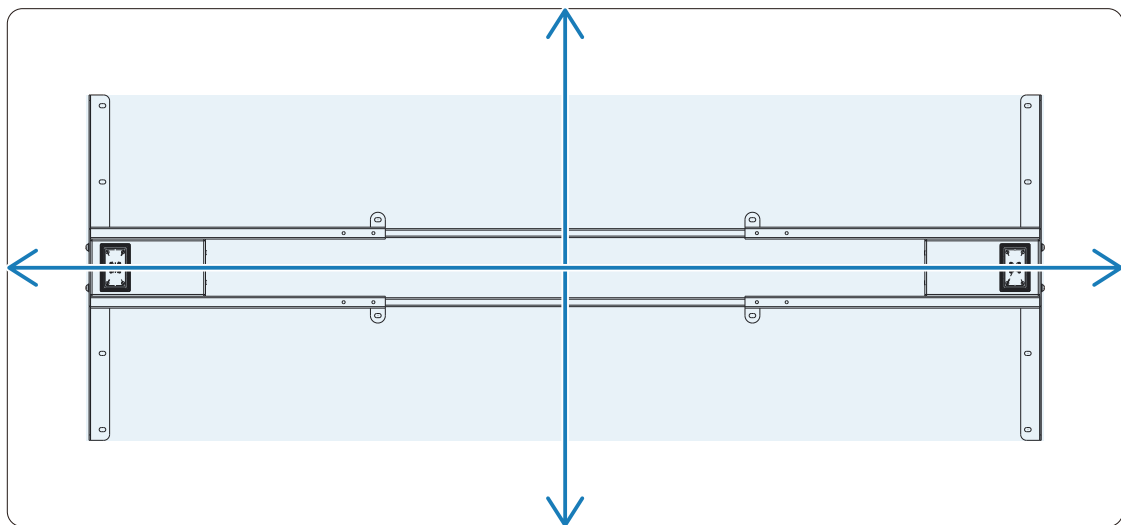

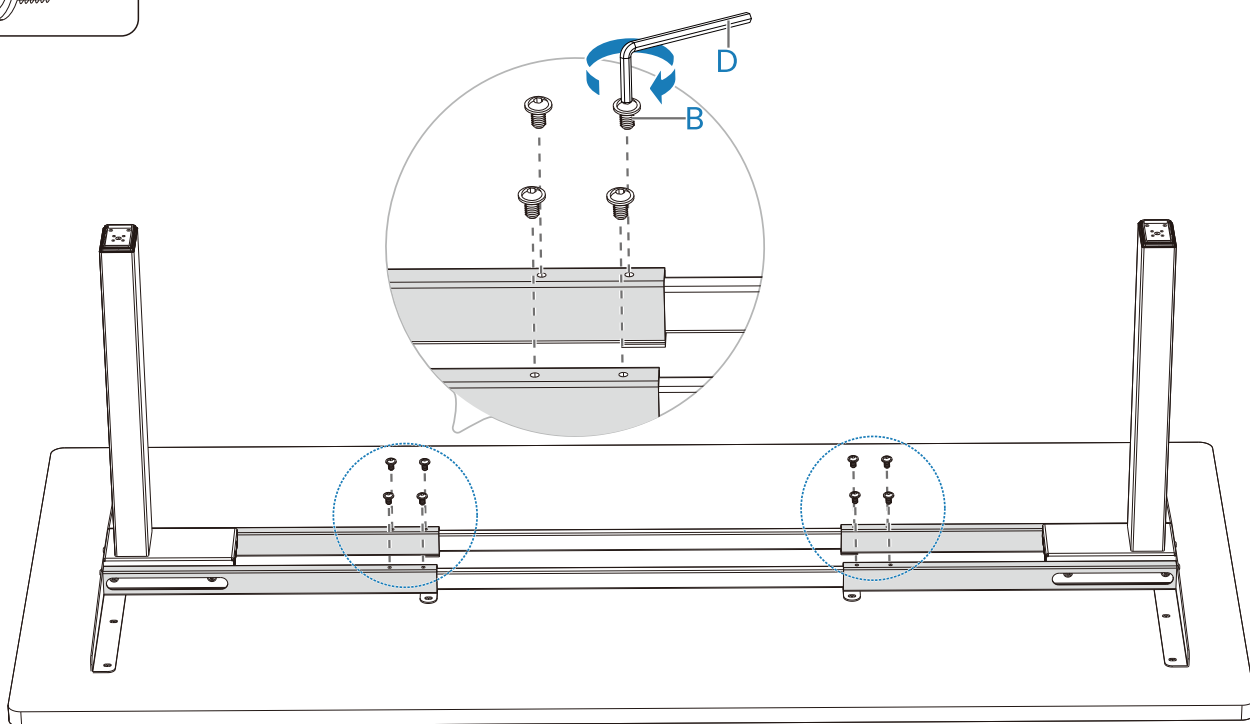

Bohren mit
geeignetem
Drehmoment und
Geschwindigkeit




ODER



Nicht enthalten

Hinweis:

Ziehen Sie zwei Schrauben in
! gegenüberliegenden Ecken an
und ziehen Sie dann die restlichen
Schrauben fest.

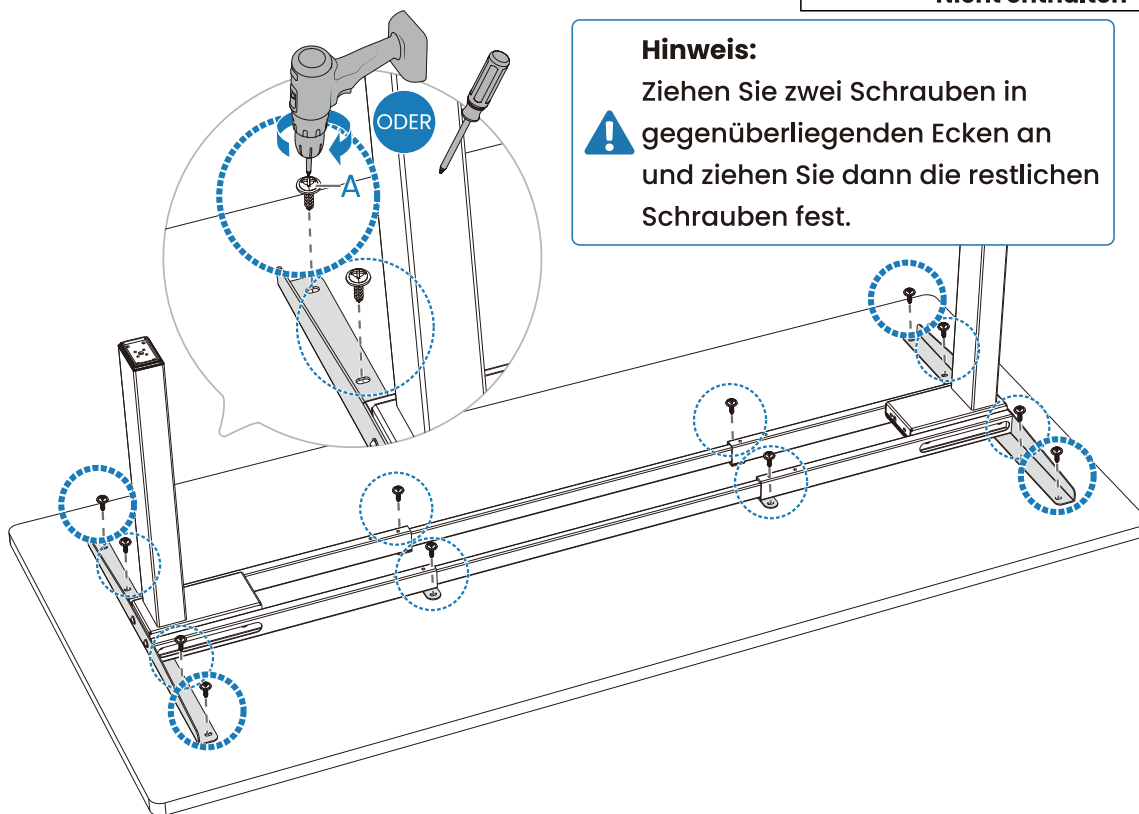

Hinweis: Achten Sie darauf, dass alle Bolzen
und Schrauben fest angezogen sind.

Schritt 2


Befestigen weiterer Teile an der Schreibtischplatte

Formen Sie die Kabelmanagement-Ablage in die gewünschte Form.





Hinweis: Achten Sie darauf, dass Sie sich nicht in die Finger schneiden.


01

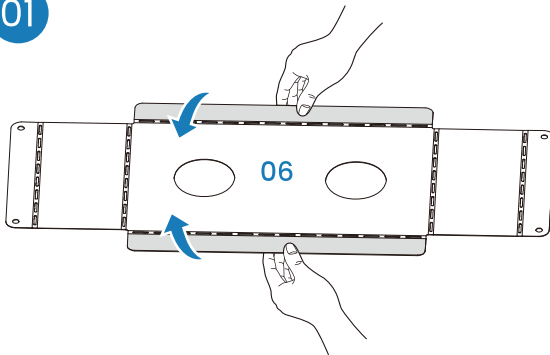

02

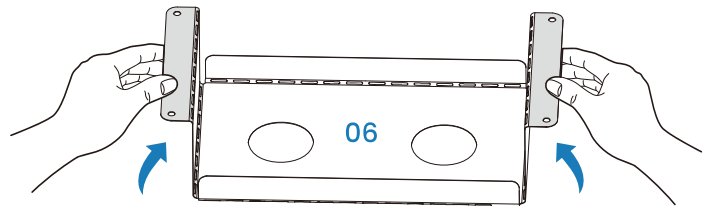


 x4

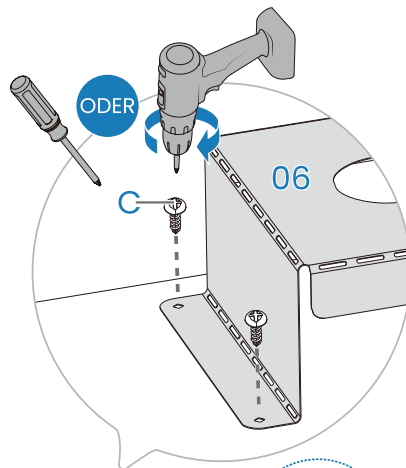


Bohren mit
geeignetem
Drehmoment und
Geschwindigkeit





ODER



Nicht enthalten


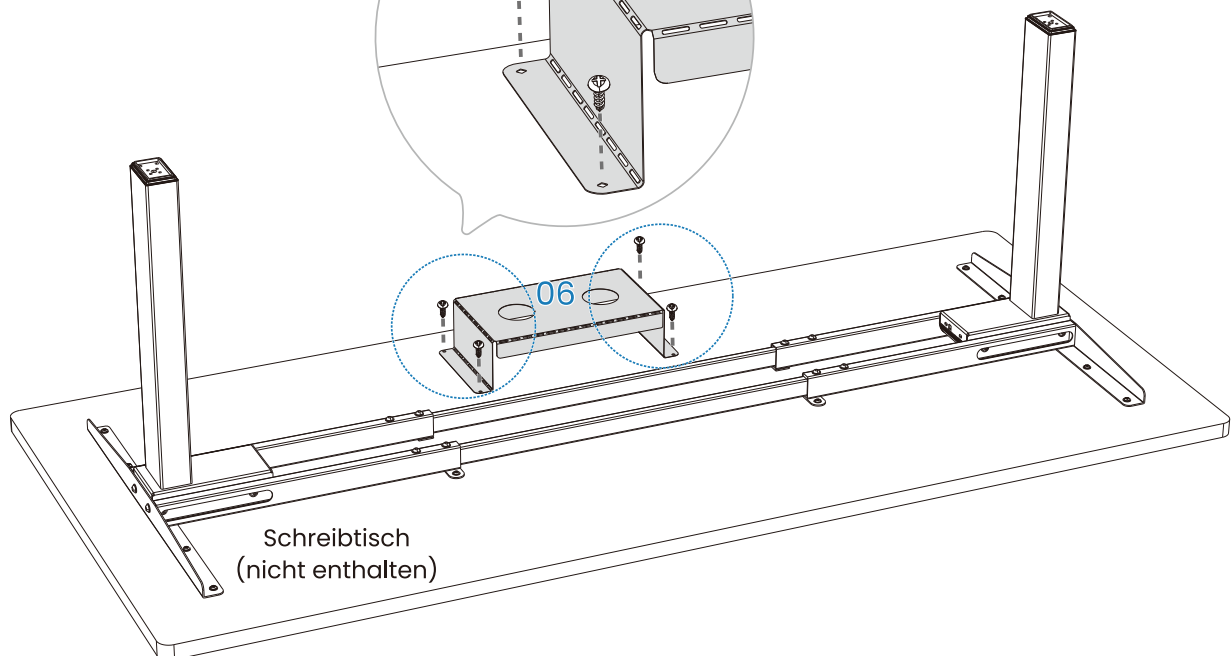


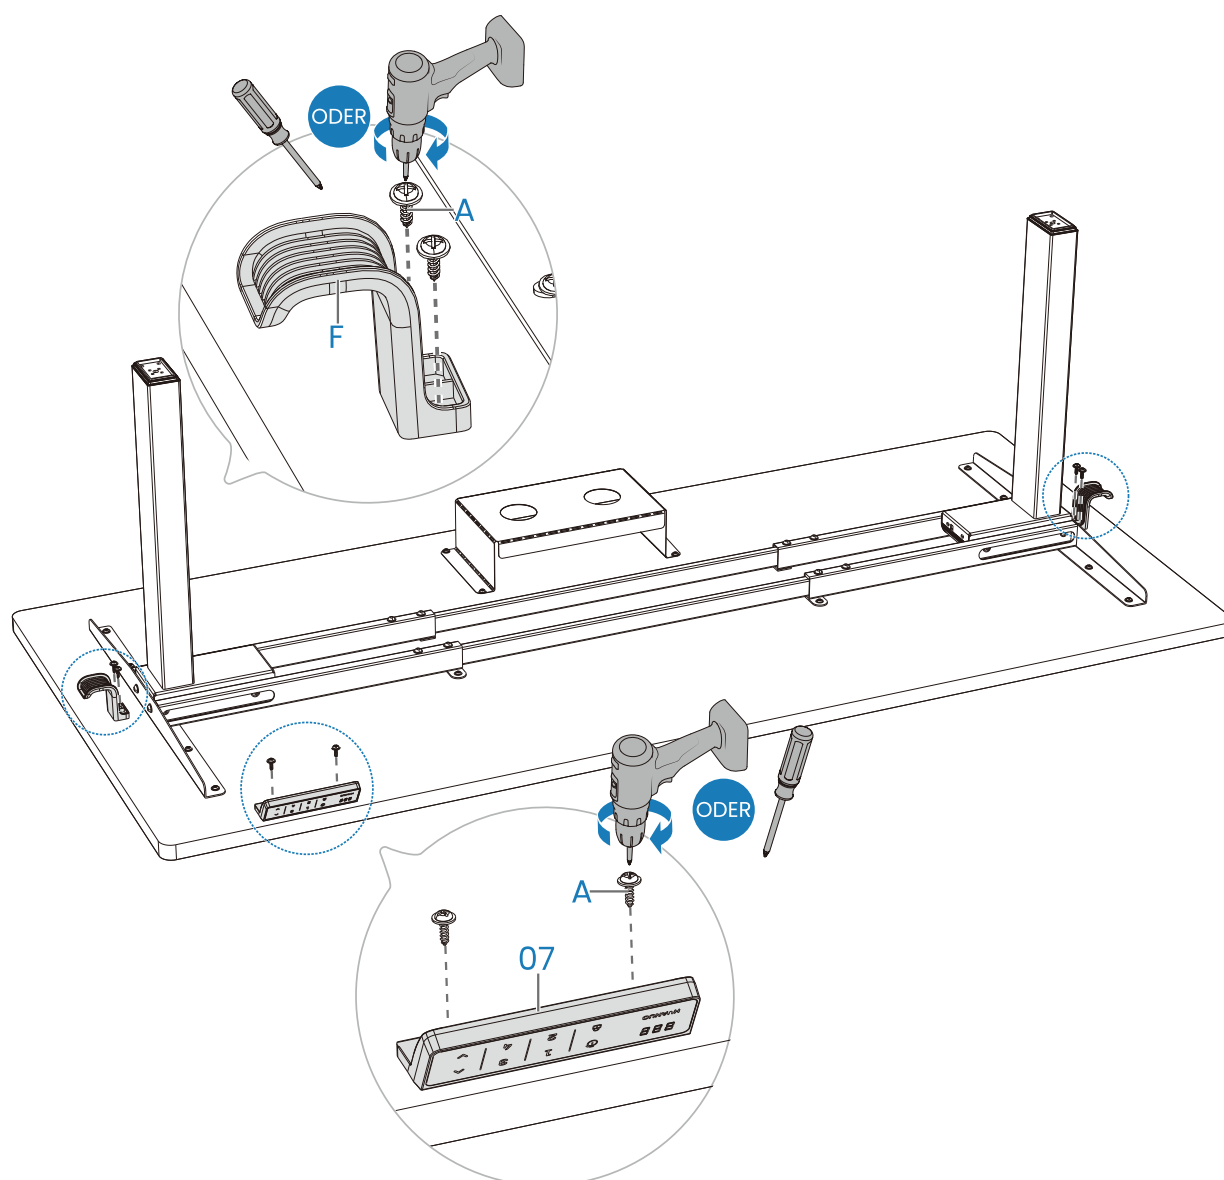

HINWEIS: Positionieren Sie den Controller zur Seite mit dem Motor.

Schritt 3

Anbringen der Beinsockel

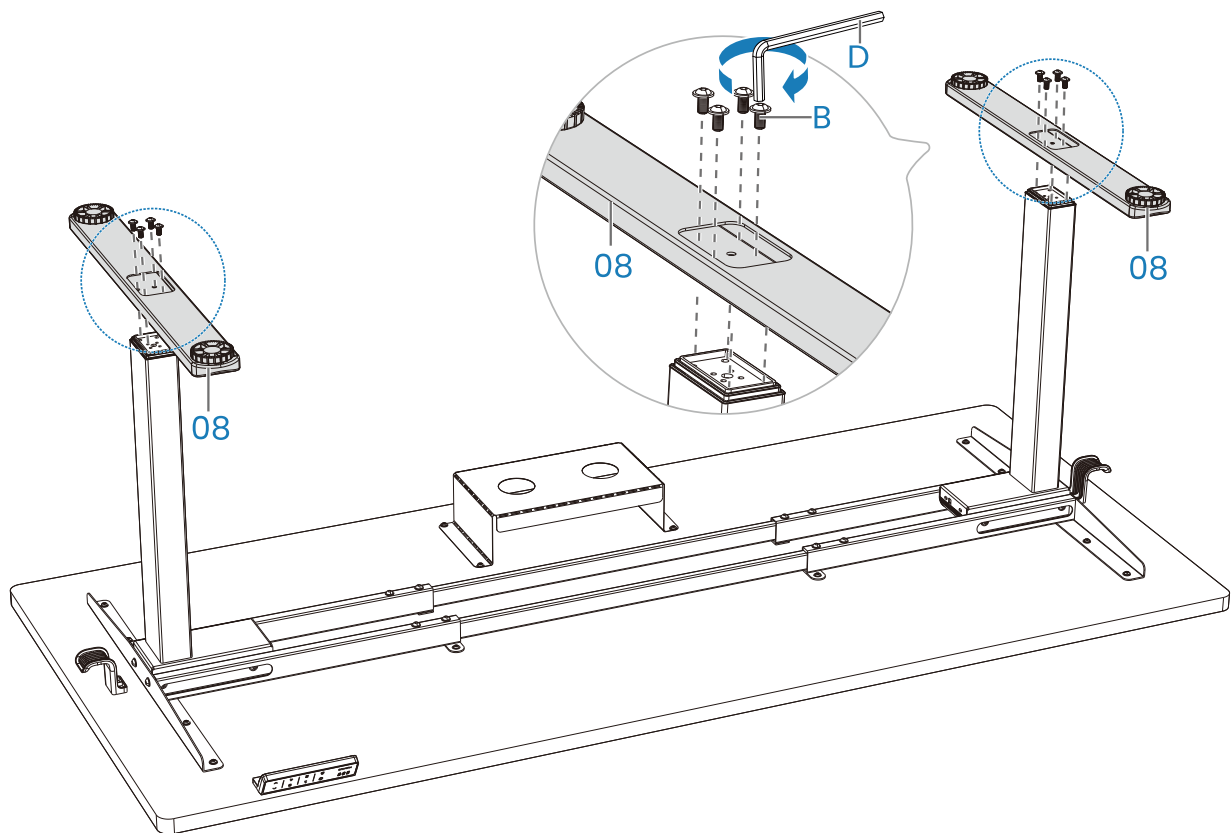

Schritt 4 Anschließen der Kabel



Tipp: Nachfolgend finden Sie ein Beispiel für die Anordnung einer Kabelklemme. Die Kabelklemmen können jedoch nach Ihren Bedürfnissen angeordnet werden.




Bohren mit
geeignetem
Drehmoment und
Geschwindigkeit



ODER




Nicht enthalten

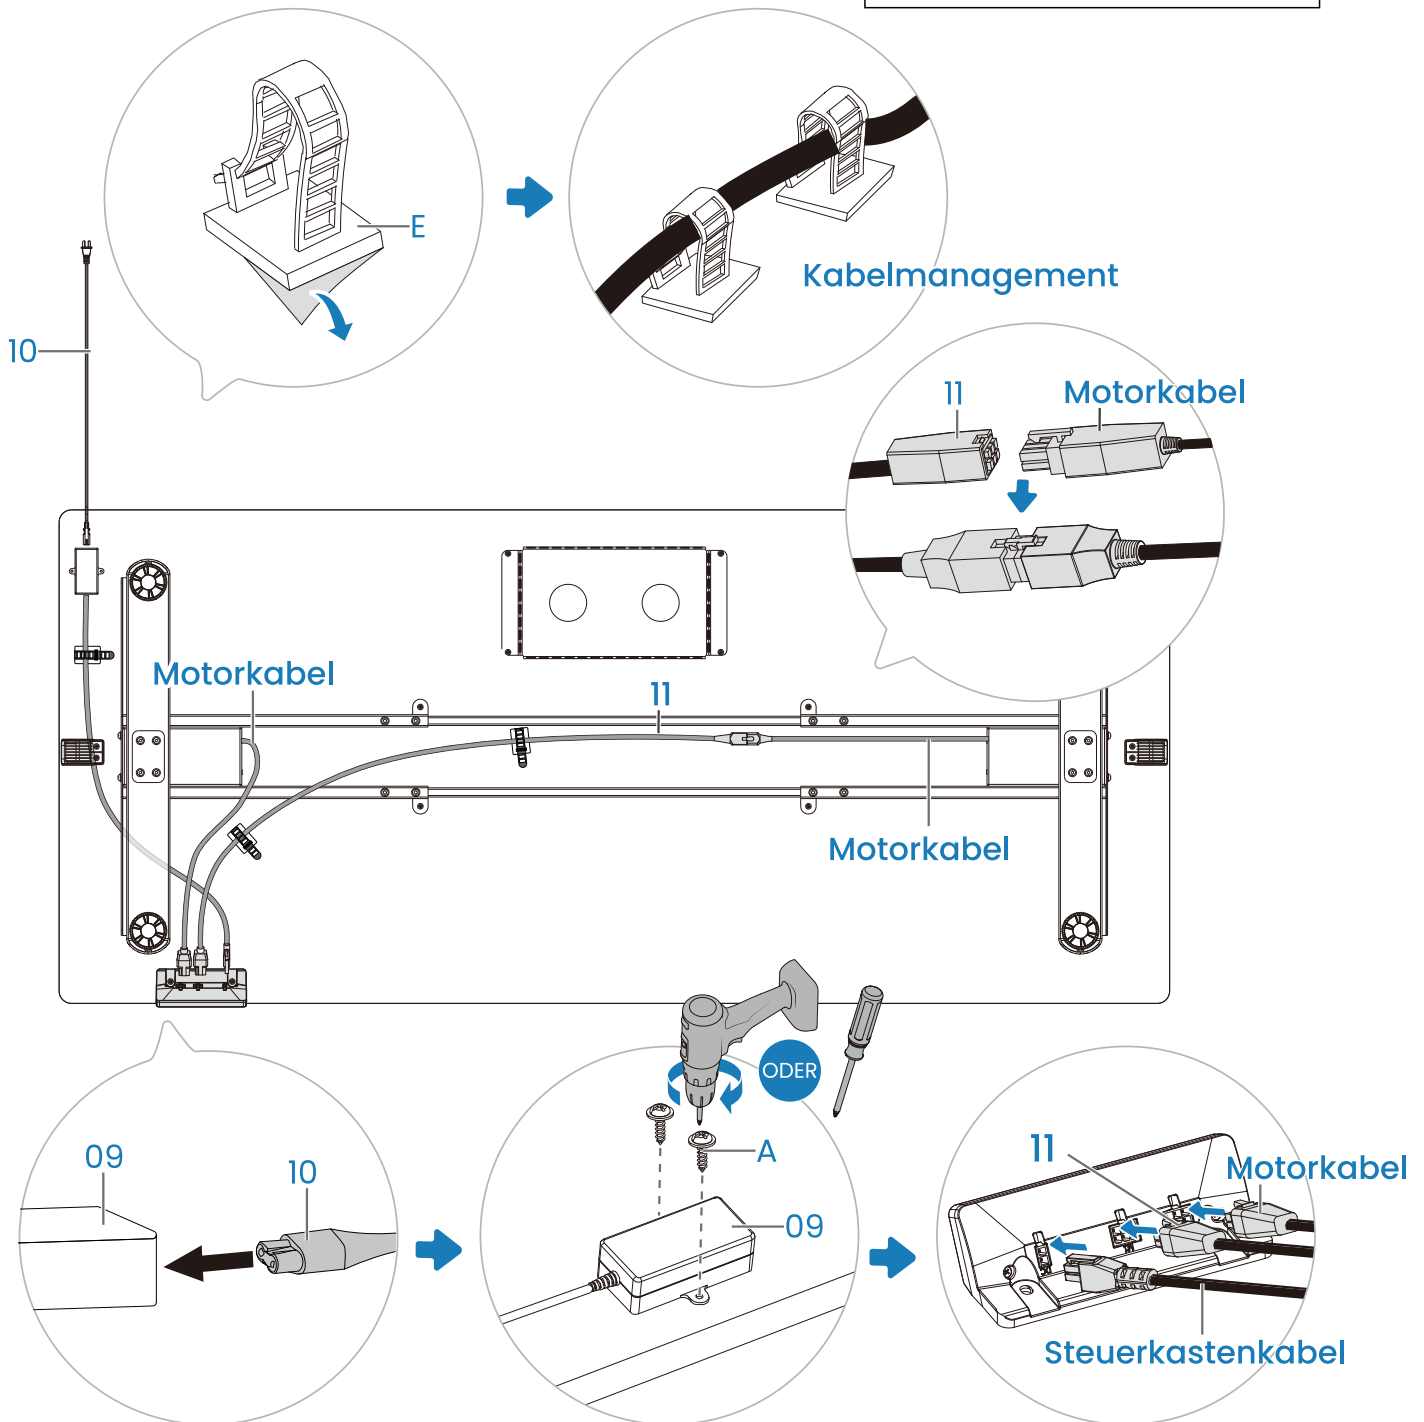

Hinweis: Achten Sie beim Umdrehen des Schreibtisches darauf, dass der Controller nicht mit dem Boden kollidiert, da dies zu Schäden führen kann.

Verwendung der Steuerung

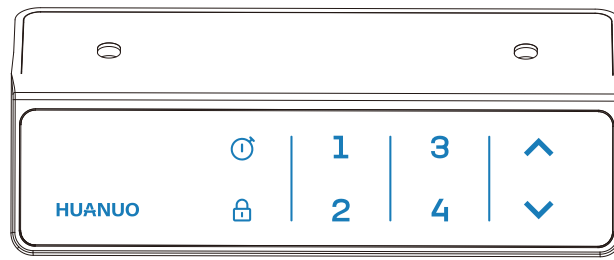

Tipp: Vor der ersten Verwendung zurücksetzen.

Hinweis: Stellen Sie sicher, dass sich keine Hindernisse in der Nähe des Schreibtisches befinden, dass die Tischplatte nicht zu nah an der Wand ist und dass alle Kabel lang genug sind, damit sich der Schreibtisch frei auf- und abbewegen kann. Wenn der Controller-Bildschirm ausgeschaltet ist (Energiesparmodus), drücken Sie eine beliebige Taste, um ihn vor dem Betrieb zu aktivieren.

Anregung: Stellen Sie die bequemste Sitzhöhe auf **1** und die bequemste Stehhöhe auf **2** ein. Die anderen beiden Voreinstellungen können für einen anderen Benutzer oder für andere Höhen, die Sie verwenden möchten, eingestellt werden.

• Sitzende Erinnerung

Drücken Sie die  -Taste. '0.5h' wird auf dem Bildschirm blinken. Drücken Sie die  - oder  -Taste, um zwischen AUS, 0.5h, 1.0h, 1.5h, 2.0h, 2.5h und 3.0h umzuschalten. Warten Sie 3 Sekunden, bis die Timer-Dauer verschwindet, dann ist die Einstellung abgeschlossen. Nach Ablauf des Timers ertönen 9 Pieptöne als Benachrichtigung.

Tipp:

1. Während des Einstellvorgangs schaltet ein Druck auf die  -Taste die Erinnerungsfunktion aus.
2. Wenn die Erinnerungsfunktion aktiviert ist, wird das Einstellen eines neuen Timers oder das Ändern der Schreibtischhöhe den Timer zurücksetzen.
3. Wenn die Erinnerungsfunktion aktiviert ist, wird auf dem Bildschirm '.' im Energiesparmodus angezeigt.

• Sperren

Drücken und halten Sie die  -Taste für 3 Sekunden. Der Bildschirm zeigt 'LoC' an, und die Tasten werden deaktiviert. Wiederholen Sie den Vorgang, um die Sperre zu deaktivieren.

Tipp:

1. Die Erinnerungsfunktion sollte auch bei aktivierter Sperre weiterhin funktionieren.
2. Die Sperre bleibt auch nach einem Stromausfall aktiv.

- **Aktuelle Höheneinstellung speichern**

Vier Höhen können gespeichert werden. Halten Sie die Taste **1**, **2**, **3** oder **4** für 5 Sekunden gedrückt, bis 'H1,' 'H2,' 'H3,' oder 'H4' angezeigt und blinkt. Der Bildschirm zeigt die aktuelle Höhe an, die auf dieser Taste gespeichert wird.

- **Wählen Sie die Einstellung der Höhe 1**

Drücken Sie die Taste **1**. Der Schreibtisch wird auf die zuvor für diese Taste eingestellte Höhe fahren.

- **Wählen Sie die Einstellung der Höhe 2**

Drücken Sie die Taste **2**. Der Schreibtisch wird auf die zuvor für diese Taste eingestellte Höhe fahren.

- **Wählen Sie die Einstellung der Höhe 3**

Drücken Sie die Taste **3**. Der Schreibtisch wird auf die zuvor für diese Taste eingestellte Höhe fahren.

- **Wählen Sie die Einstellung der Höhe 4**

Drücken Sie die Taste **4**. Der Schreibtisch wird auf die zuvor für diese Taste eingestellte Höhe fahren.

- **Den Schreibtisch anheben**

Drücken Sie die **▲**-Taste, um den Schreibtisch kontinuierlich anzuheben, bis er die höchste Position von 125cm (49.2 Zoll) erreicht oder die Taste losgelassen wird.

- **Den Schreibtisch absenken**

Drücken Sie die **▼**-Taste, um den Schreibtisch kontinuierlich abzusenken, bis er die niedrigste Position von 60cm (23.6 Zoll) erreicht oder die Taste losgelassen wird.

Einstellungen	
Zurücksetzen "RES" wird auf dem Bildschirm als RES angezeigt.	1. Drücken und halten Sie die Taste ▼ , bis der Schreibtisch seine niedrigste Position erreicht hat, und lassen Sie dann die Taste los. 2. Drücken und halten Sie die Taste ▼ für 5 Sekunden, und der Bildschirm zeigt 'RES' an. Halten Sie weiterhin fest, bis der Schreibtisch leicht wieder hochkommt. Die Rücksetzung ist abgeschlossen.
Schutzmodus-Fehlercodes	
Hot	Überhitzungsschutz: Wenn der Motor 5 Minuten lang ununterbrochen gearbeitet hat, schaltet er sich ab, um Schäden durch Überhitzung zu vermeiden. Warten Sie mindestens 15-18 Minuten, bevor Sie eine weitere Höhenverstellung vornehmen.

E10	Sensorfehlerwarnung: Der Sicherheitssensor des Motors kann nicht erkannt werden. Schalten Sie das Gerät aus, überprüfen Sie die Verbindung zwischen den beiden Motoren und dem Controller, und schalten Sie es dann wieder ein. Wenn der Fehlercode weiterhin besteht, befolgen Sie das oben beschriebene Rücksetzverfahren.
E20	Überlast-Warnung: Maximallast überschritten. Wenn Sie den Tisch anheben, nehmen Sie alle Gegenstände vom Tisch und versuchen Sie es erneut. Wenn Sie das Pult absenken, schalten Sie es aus, nehmen Sie alle Gegenstände vom Pult, schalten Sie es wieder ein und versuchen Sie es dann erneut. Wenn der Fehlercode weiterhin besteht, befolgen Sie das oben beschriebene Rücksetzverfahren.
E02	Betriebsstatuswarnung: Der Tisch stoppt die Bewegung, wenn Vibrationen, Stöße oder Neigungen erkannt werden. Wenn diese Erkennung fehlerhaft ist, befolgen Sie bitte das oben beschriebene Rücksetzverfahren, bevor Sie die Nutzung fortsetzen.
E32	Überspannungsschutz: Eingangsspannung zu hoch. Wenn das richtige AC-Netzteil verwendet wird, schalten Sie den Tisch aus, überprüfen Sie die Verbindung zwischen Stromversorgung und Steuerung und schalten Sie ihn dann wieder ein.
E31	Unterspannungsschutz: Eingangsspannung zu niedrig. Wenn das richtige AC-Netzteil verwendet wird, schalten Sie den Tisch aus, überprüfen Sie die Verbindung zwischen Stromversorgung und Steuerung und schalten Sie ihn dann wieder ein.
E60	Schrittverlustschutz: Schalten Sie den Tisch aus, überprüfen Sie die Verbindung zwischen beiden Motoren und der Steuerung, und schalten Sie ihn dann wieder ein. Wenn der Fehlercode weiterhin angezeigt wird, folgen Sie dem oben beschriebenen Rücksetzverfahren.
—	Warnung bei Kabeltrennung: Überprüfen Sie die Kabelverbindungen zwischen Motor und Controller. Die normale Funktion sollte wiederhergestellt sein, sobald alle Steckverbindungen ordnungsgemäß angeschlossen sind.

Exceeding Expectations in Office Comfort & Productivity

Die Erwartungen in Bezug auf Bürokomfort und
Produktivität übertreffen

Thank you for choosing this HUANUO product. At HUANUO, we strive to provide you with the best quality products and services in the industry. Should you have any issues, please don't hesitate to contact us.

Tielen Dank, dass Sie sich für dieses Produkt von HUANUO entschieden haben. Wir bei HUANUO sind bestrebt, Ihnen die besten Produkte und den besten Service der Branche zu bieten. Sollten Sie irgendwelche Probleme haben, zögern Sie bitte nicht, uns zu kontaktieren.



1-800-556-0533 (US/CA)
44-808-196-3874 (UK)

Mon-Fri, 8am-8pm (CST)
Mon-Fri, 2pm-10pm (UTC)



support@huanuo.com



www.huanuo.com

860-02962-00 Rev01