

Bazyths

ENJOY YOUR NEW BAZYTHS SMART TOILET


Please contact Bazyths Support if you have any questions.

Bazyths

INSTRUCTION

BAZYTHS SMART TOILET

Concealed cistern series

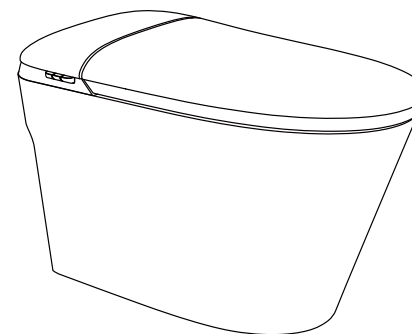


- Thank you for purchasing our product.
Before using, please read the instruction carefully.
Please keep the instruction properly for further reference.
- Our company reserves the right of final interpretation for this manual. The manual is subject to change without notice.

Catalogue


Packing List	02
Installation of the Battery Box	04
How to Use the Foam Shield Function	05
Components	06
Technical Drawing	07
Features	07
Attentions	10
Installation Instruction	17
Preparation before Use	22
Panel Instruction	23
How to Use	26
Function Setting and Adjustment	27
Cleaning and Maintenance	32
Troubleshooting	36
Warranty	37
Function List	38
Product Specification	39
Acceptance Record	40

Packing List


Dear user,
Please count the following items after opening the package:

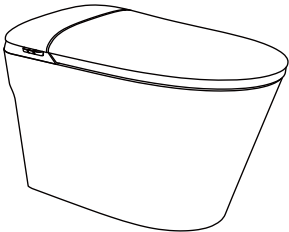

Smart Toilet

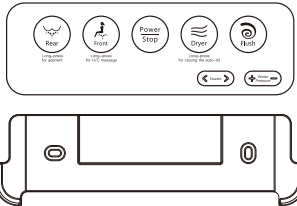

Remote Control & Mounting Bracket
Requires 2 AAA alkaline batteries
(batteries not included).




Wax Ring Gasket




X2 Locking Screw Kit

Flange, Sealing Wax Rings,
Mounting Accessory Kit

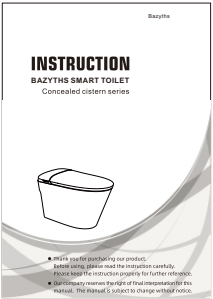

Instruction Manual

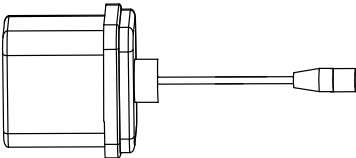


Backup Battery Box
for Power Outage Flush
Requires 10 AA alkaline batteries to enable flushing
during a power outage(batteries not included, please
purchase separately).

Packing List

Dear user,

Please count the following items after opening the package:

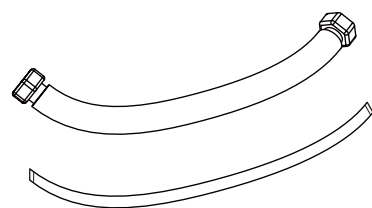


1 Braided Hose (for Flushing Water)
1 Plastic Hose (for Cleansing Water)
(Pre-installed)



Spare Part: 3/8" Female
to 1/2" Male Adapter

If your existing shut-off valve has a 3/8" outlet, you can use this spare part to connect it to our smart toilet without the need for replacing the valve.

Shut-off Valve & T-Valve

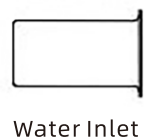


Water Inlet

1/2" Nom Outlet



1/2" Nom/Comp Inlet

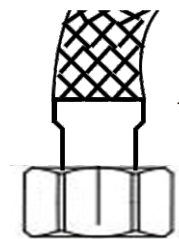


Braided Hose
for Flushing Water




T-Valve
with Filter



Plastic Hose
for Cleansing Water



Shut-off Valve



Battery Box for Power Outage Flush

Installation of the Battery Box for Power Outage

1. This battery box is for use as backup during power outages. **The battery box must not be used simultaneously with a plugged-in power source when the toilet is in operation.** It is recommended to connect it to the main unit only during power outages. We accept no responsibility for the consequences of using dual power sources at the same time, and such usage is not covered by the warranty.

2. Before activating the power outage flushing function, install 10 AA alkaline batteries (batteries not included, please purchase separately) into the battery box in advance (open the battery box with a screwdriver). Do not mix new and old batteries, batteries of different models, or batteries from different brands. When replacing the batteries, ensure that all are replaced at the same time.


3. Please follow the "+" and "-" signs on the battery box when installing batteries. This battery box is a series battery group, and no single cell can be reversed. Failing to do so may cause battery damage, and in severe cases, may pose safety hazards such as explosion and combustion.

4. Take out the battery connection cable from the rear side of seat cover and connect it to the battery box, ensuring that it is plugged in place.

5. Do not disassemble the battery box unnecessarily. After replacing the battery, make sure to seal the battery box tightly. If moisture from the bathroom gets into the box, it could cause the batteries to rust and become damaged.

6. When replacing batteries, disconnect the battery box from the main unit.

7. To avoid potential hazards, this battery box cannot be recharged.

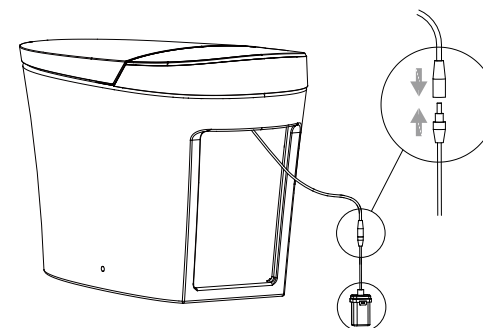

How to Use the Foam Shield Function


■ Introduction to the Foam Shield Function

The Foam Shield creates a soft foam layer inside the toilet bowl that prevents splashing, blocks odors, and keeps the bowl cleaner. It is an innovative feature designed to enhance hygiene and provide a more comfortable and pleasant bathroom experience.

■ How to Get Your Free Foam Shield Liquid


For transportation safety, the foam liquid is not pre-filled in the foam shield bottle. . Your first bottle is completely free, and we will ship it to you separately.

■ Replace the Foam Shield Bottle

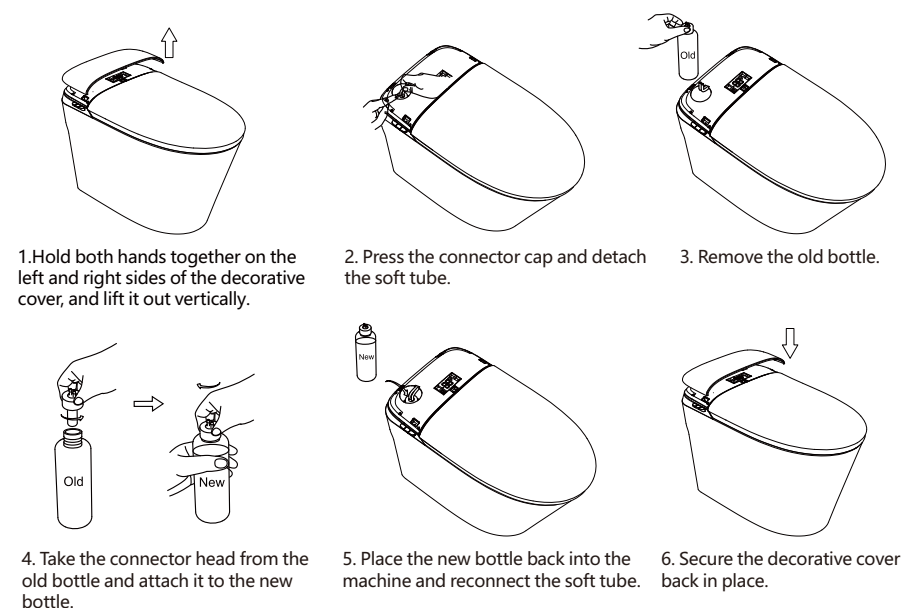


Note: Regardless of whether you use the Foam Shield function, please ensure that a foam liquid bottle is placed here and that the soft tube is connected to the bottle. Without a bottle, water leakage may occur.

Components

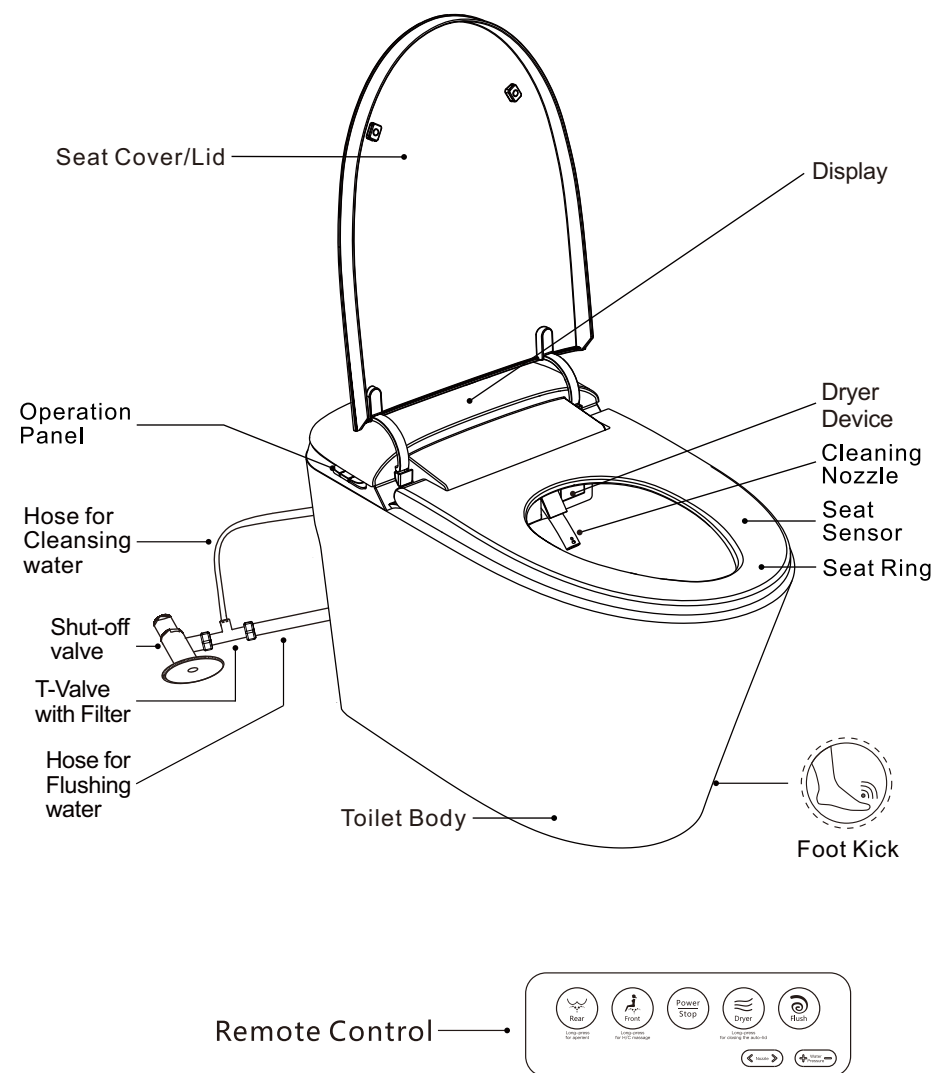

Technical Drawing

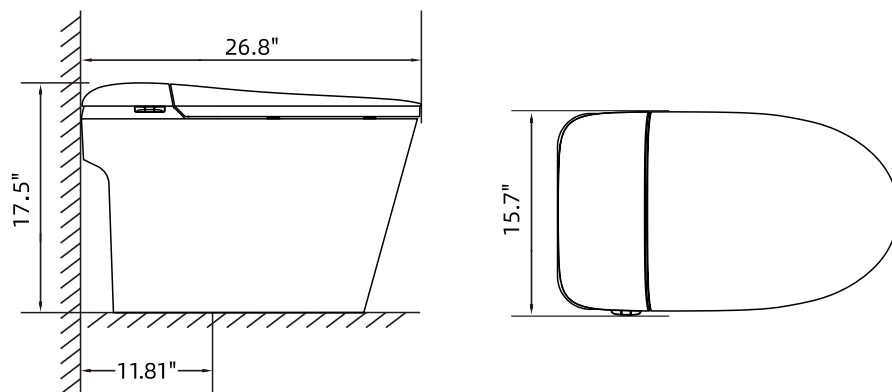

Features

Automatic Opening of the Toilet Lid / Automatic Closing of the Lid & Toilet Seat

The toilet lid automatically opens when the user approaches the toilet. The seat and lid automatically close 2 minutes after the user leaves the toilet's sensor range. Press the Dryer button on the remote control to turn this function on or off.

Foot Kick to Open/Close the Lid or Seat

The foot kick feature allows users to conveniently open or close the toilet lid or seat by pressing the button with their foot. This hands-free operation is hygienic, simple, and intuitive to use.

Rear Wash

Water is released from the single nozzle for a powerful cleaning effect. The cleaning cycle lasts for 90 seconds. You can stop it anytime by pressing and holding the side button on the toilet for 2 seconds (while seated) or by pressing the "Stop" button on the remote control.

Feminine Wash / Front Wash

Designed for gentle cleaning specifically for female use.

Warm Air Dryer

The warm air dryer has 4 temperature settings (room temperature, high, medium, low) for drying after cleansing.

Features

360° Foam Shield

Automatically activates when you sit, creating a foam layer that prevents splashing, blocks odors, and resists bacteria for a cleaner, more hygienic experience.

One-Twist Quick Mode (Wash + Flush + Dry)

When you activate a cleaning mode using the button (rear wash or feminine wash), the system will automatically follow a one-press sequence: wash, flush, and dry. Each cleaning cycle lasts 90 seconds, followed by automatic flushing and a 3-minute drying cycle.

If the full 90-second wash cycle is not needed, you can skip directly to the flushing and drying phases. For example, if the rear wash is currently active, simply press the rear wash button again to skip the remaining wash time and proceed to flushing and drying.

Remote Control

All functions can be accessed via the wireless remote control.

Rear Wash with Moving Nozzle

The nozzle moves back and forth to provide a thorough cleaning over a wider area. To toggle between moving and non-moving cleaning, simply press the current wash button again on the remote control (for example, if rear wash is active, briefly press the rear wash button again to toggle). Please note that only the remote control can be used to switch between moving and non-moving cleaning modes.

Feminine Wash with Moving Nozzle

The nozzle moves back and forth to provide gentle cleaning over a wider area.

Cleansing Strength Adjustment

Adjust the cleansing strength/water pressure according to your preference.

Cleansing Position Adjustment

Adjust the cleansing position by moving the nozzle back and forth.

Cleansing Water Temperature Adjustment

4 levels of cleansing water temperature adjustment: normal (room temperature), high, medium, and low.

Seat Sensor

All corresponding functions will be activated and ready after the user is seated.

Toilet Seat Temperature Adjustment

Heated seat with 4 levels of temperature adjustment: normal (room temperature), high, medium, and low.

Auto Off-Seat Flush

Automatically flushes after use when the user stands up from the toilet seat.

Foot Kick to Flush

Flush by pressing the button with your foot.

Flush by Remote Control

Flush by pressing the flush button on the remote control.

Press the button to flush water

Press the side button on the smart toilet to flush.

Night Light

The night light is designed to be gentle on the eyes. It provides enough illumination to navigate the bathroom without turning on harsh overhead lights.

Nozzle Cleaning

Press and hold the corresponding button on the remote control when the seat is unoccupied. The nozzle will enter self-cleaning mode, making daily maintenance easy.

Nozzle Auto Cleaning

The nozzle will automatically clean itself before and after use.


Power Outage Flush

Equipped with a backup battery box, the backup battery can be activated for flushing during a power outage.

Attentions




Do not pull the plug with wet hand.

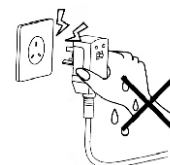

▲Otherwise, it may cause electric shock.



Do not pour water, detergent or deodorant on the smart toilet main unit and power plug. Otherwise:

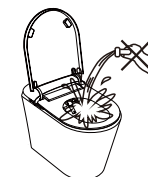

▲It may cause fire, electric shock, short circuit or damage.

▲Injury or indoor water seepage may occur due to product damage.



When there is thunder, do not touch the power plug.

▲Otherwise, it may cause electric shock.



Do not touch the water inlet hose to the power plug or outlet.

▲Otherwise, it may cause fire, electric shock, heating, or short circuit due to condensation.



Do not damage the power cord or plug. Do not forcefully drop, pull, twist, bend, scratch, process, heat, place heavy objects on, tie, or clamp the power cord or plug.

▲Otherwise, it may cause product damage. Continuing to use the product in a damaged state may cause fire, electric shock, heating, or short circuit.



PROHIBIT

Do not use power outlets that are loose or malfunctioning.

▲ Otherwise, it may cause fire or short circuit.



PROHIBIT


Please use power outlets and wiring tools within the specified range.

▲ When the wiring exceeds the specified range of the outlet, it may cause fire due to overheating.



PROHIBIT

Do not use a power source other than the specified one (AC 120V, 60Hz). Please do not plug in until the inlet valve opens.

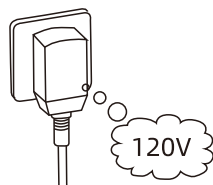

▲ Otherwise, it may cause fire.



NO
DISASSEMBLE

Do not disassemble, repair, or modify this product on your own.

▲ Otherwise, it may cause fire, electric shock, heating, short circuit or damage.



PROHIBIT

Do not install on a moving vehicle, ship, or other mobile structure. Otherwise:

▲ It may cause fire, electric shock, short circuit, or malfunction.

▲ The seat ring, seat cover, and smart toilet main unit may be damaged due to detachment and falling.



PROHIBIT

When the smart toilet malfunctions, do not continue to use it. In the following situations, turn off the power and close the water inlet valve to stop the water supply.

*Water leaks from the hose or product inside to the outside.

*The product has cracks or damage.

*Abnormal sound or odor.

*Product smoking.

*Product abnormal heating.

*The cushion of the seat ring falls off.

▲ Continuing to use the product in a malfunctioning state may cause fire, electric shock, heating, short circuit, injury, or indoor water seepage.



PROHIBIT

Do not use water sources other than tap water or potable well water (groundwater). Otherwise:

▲ It may cause corrosion in components or machine malfunctions.

▲ It may cause skin inflammation or burns due to unclean water.



PROHIBIT

Do not put your fingers or other objects into or block the warm air outlet, and do not place or cover objects or clothing on the warm air outlet.

▲ Otherwise, it may cause burn, electric shock, or burning of accessories.



MANDATORY

Beware of low-temperature burns.

▲ Improper use of the warm seat ring may result in low-temperature burns.

▲ If sitting on the seat ring for a long time, please set the temperature of the seat ring to normal/unheated (room temperature).

▲ When using the warm seat ring or warm air drying function, please set the temperature of the seat ring to normal/unheated (room temperature) and the temperature of the warm air dryer to the lowest setting for the following groups of people.

* Children, the elderly, and those who are unable to adjust the temperature to a suitable level themselves.

* Individuals with behavioral impairments such as patients or people with disabilities.

* Individuals who have taken hypnotic drugs (such as sleeping pills, cold medicine, etc.), heavy drinkers, and those who are excessively fatigued must use this product under the supervision of a responsible person.



MANDATORY

Please confirm that the power outlet has been waterproofed.

▲ Make sure of the position of the outlet before installation and keep it away from the bathtub as much as possible.

▲ If it is not waterproofed, it may cause fire or electric shock.

▲ For the installation and waterproofing of the outlet, please consult qualified professionals.



MANDATORY

Please confirm that the outlet being used is correctly grounded.

▲ Otherwise, it may cause electric shock due to malfunction or short circuit.

▲ When installing the ground wire, please entrust a professional installation company.



MANDATORY

Do not pull out the power plug by holding the power cord. When unplugging the power plug, do not hold the power cord, but hold the power plug.

▲Otherwise, it may cause fire or heating due to damage to the power cord.



MANDATORY

Please make sure to firmly insert the power plug into the outlet.

▲Otherwise, it may cause fire, heating, or short circuit.



MANDATORY

If the power cord is damaged, it must be replaced by the manufacturer, maintenance department, or other professionals to avoid potential hazards.



MANDATORY


When performing maintenance (not include the nozzle cleaning function), be sure to turn off the power.

▲Otherwise, it may cause electric shock.



MANDATORY

This is an electrical product. Do not install it in places where it is easy to be splashed with water or where the humidity is high. When using it in the bathroom, please install an exhaust fan or ventilation opening to keep the bathroom well ventilated.

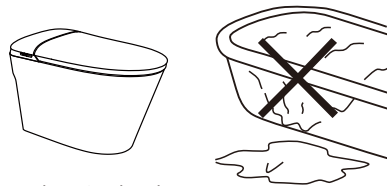

▲Otherwise, it may cause fire or electric shock.



MANDATORY

When removing the smart toilet main unit, be sure to disconnect the power.

▲Otherwise, it may cause fire or electric shock.



MANDATORY

Individuals with physical, sensory, or cognitive disabilities, or those lacking experience and knowledge of this product (including children), must use this product under the supervision of a responsible person. Children should not play with this product.

▲Otherwise, it may cause burn, electric shock, fire, or injury.



NO BURNING

Do not let cigarettes or other sources of fire get close to the product.

▲Otherwise, it may cause fire.



PROHIBIT

When maintaining plastic parts (seat ring, seat cover, etc.) and water inlet hoses, please use kitchen detergent (neutral). Do not use the following items: toilet cleaner, household detergent, gasoline, benzene, washing powder, or nylon brushes. Otherwise:

▲It may damage plastic parts, causing cracks and resulting in personal injury or malfunction.

▲It may damage the water inlet hose and cause water leakage.



PROHIBIT

Do not forcibly impact the product. Do not place heavy objects on or stand on the seat ring, seat cover, or smart toilet main unit. Otherwise:

▲The product may crack, and the smart toilet main unit may detach and fall, causing personal injury.

▲Injury or indoor water seepage may occur due to product damage.



PROHIBIT

Do not use the smart toilet when its main unit is loose.

▲Otherwise, the smart toilet main unit may detach and fall, causing personal injury.



PROHIBIT

Do not use your hands to lift the smart toilet main unit by holding the seat ring or seat cover. Do not open the seat ring or seat cover when there are items on them.

▲Otherwise, the smart toilet main unit may detach and fall, causing personal injury.



PROHIBIT

Do not violently open or close the seat cover or seat ring, or swing the seat cover and seat ring quickly. Otherwise:

▲The flipping device may fail due to the powerful external force.

▲The main unit may break or detach from the toilet body due to powerful external force, causing personal injury.



PROHIBIT

Do not bend or damage the water inlet hose.

▲Otherwise, it may cause water leakage.



PROHIBIT

To prevent sudden water leakage, do not remove the filter in the t-valve when the shut-off valve is open.

▲ Otherwise, water may spray out.

▲ Please refer to the cleaning method for the water inlet filter described on page 33.



PROHIBIT

Please use the new hose component provided with the product. The old hose cannot be reused.

▲ Using the old hose component may result in water leakage or hose rupture.



MANDATORY

When water leaks, be sure to turn off the shut-off valve.



MANDATORY

In order to prevent pipes or hoses from being damaged due to freezing, anti-freezing measures should be taken.

▲ When the water inlet hose is frozen, it may damage the main unit of the smart toilet or the pipe and cause water leakage.

▲ If the room temperature is below 32°F/0°C, it is recommended to empty the water inside the product to prevent internal cracking due to freezing.



MANDATORY

When the smart toilet is not used for a long time, be sure to drain the water from the smart toilet main unit and water inlet hose, and disconnect the power supply. When using it again, please first let the water flow through, and then use it. Otherwise:

▲ It may cause skin inflammation due to water deterioration.

▲ If the power is always turned on, it may cause fire or heating.



MANDATORY

When installing the water inlet filter, make sure to tighten it firmly to the correct position.

▲ Otherwise, it may cause water leakage.



MANDATORY


Do not use any paper other than toilet paper, and do not drop objects that may clog the drain into the toilet bowl.

▲ Otherwise, it may cause blockages in the ceramic pipes of the toilet.



PROHIBIT

Do not operate the remote control with wet hands, and do not spill water on the remote control.

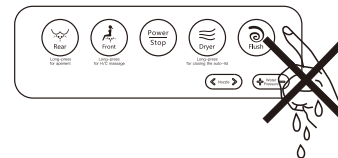

▲ Otherwise, it may cause remote control malfunctions.



PROHIBIT


Do not put any solid substances or corrosive liquids into the water tank.

▲ Otherwise, it may cause blockages or corrosion of the flushing water pipe.

■ Installation of the Smart Toilet

1. Confirmation of installation environment


Before installation, please confirm that the bathroom wall and floor tiles have been completed, and that the sewage pipes, water pipes, and electrical circuits have been reserved as shown in the figure below. This toilet rough-in is 300mm (11.81in); Water inlet pressure range: 0.15Mpa (dynamic) - 0.75Mpa (static); water inlet temperature: 4°C-35°C (39.2°F-95°F).

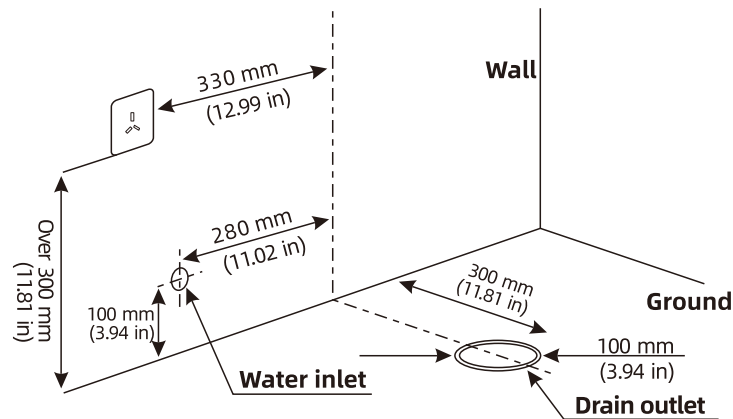

2. Assembly of dedicated shut-off valve

Install the shut-off valve provided with the product.


- Note: If your existing shut-off valve has a 3/8" outlet, you can use our Spare Adapter (Refer to page 3) to connect it to our smart toilet without the need to replace the valve.

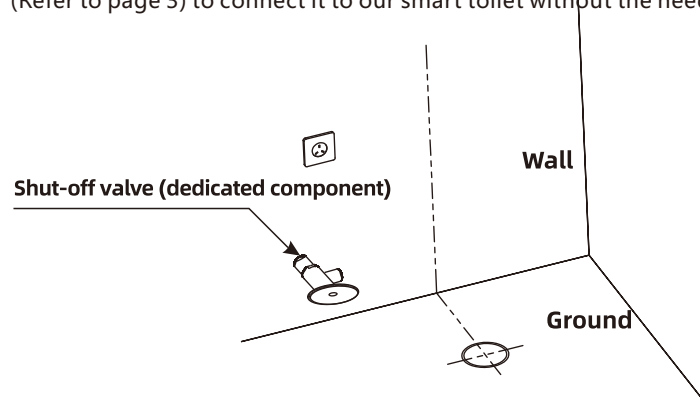

3. Installation and mounting of the toilet

(1.1) Assemble the mounting bracket with bolts and then secure them to the flange on the ground and tighten with nuts. **Please refer to Figure 1.0 on the next page for details.**


(1.2) Install the toilet on the corresponding position.

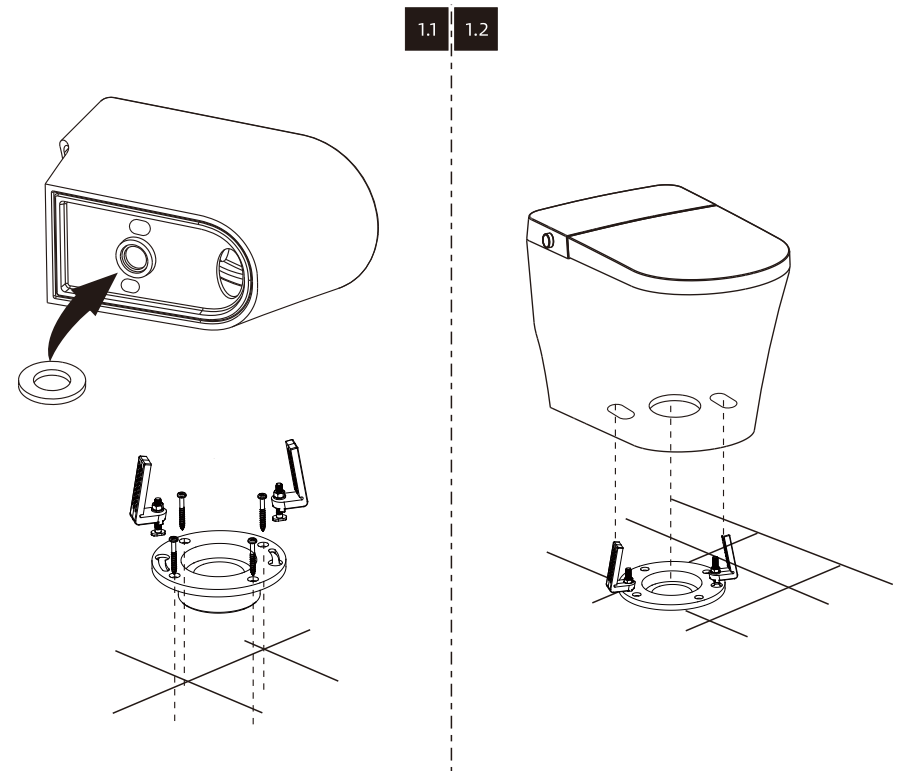


(2.1) Put the screw through the T-shaped pad and then install it through the holes (on both sides of the toilet ceramic) to the mounting bracket (L-shaped plastic fixed block) on the ground, and tighten it securely with a tool.

(2.2) Put the decorative cap on the T-shaped pad.

(2.3) Connect the water inlet hose and water pump with the water tank and tighten them with an adjustable wrench.

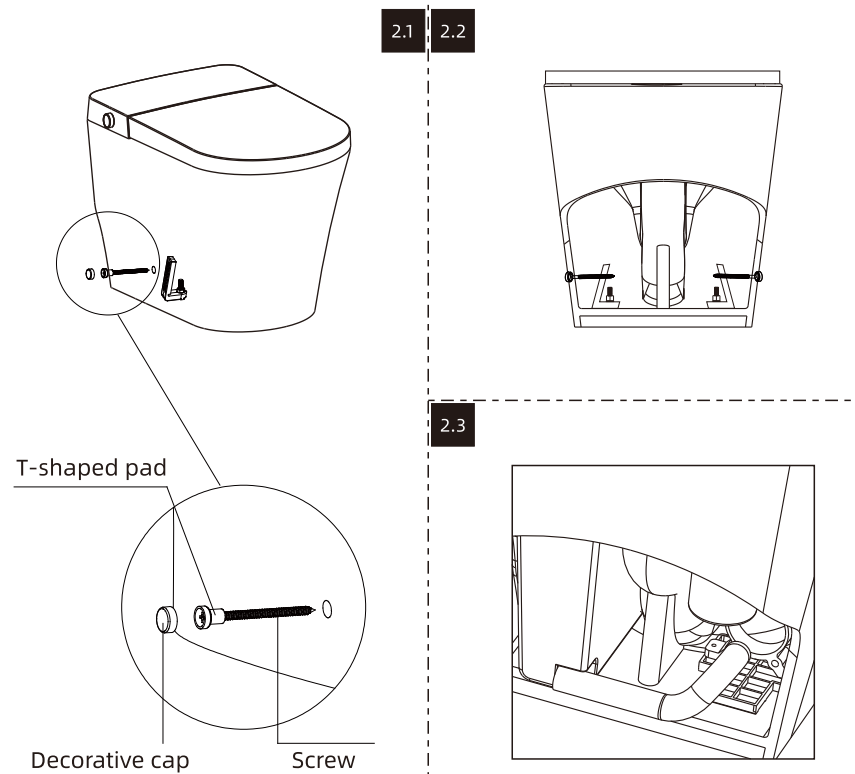


(3) Caulk the bottom of the toilet with silicone sealant.

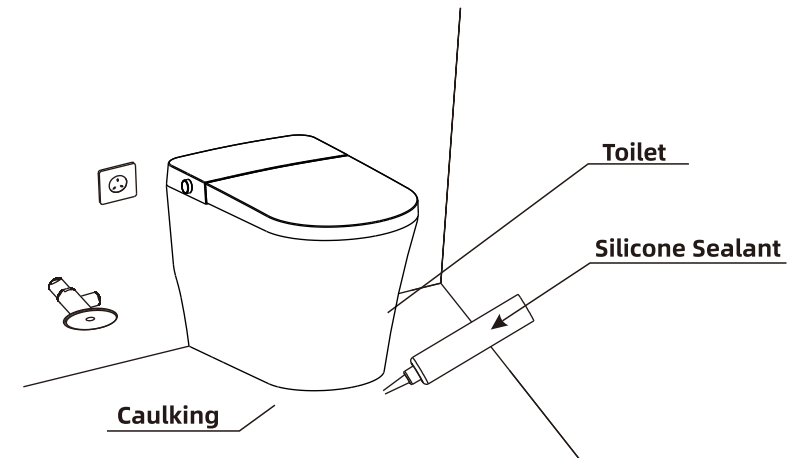

4. Connection of the water inlet hose

Connect the inlet hose with the shut-off valve & t-valve by using tools like wrench. (Valve Installation - Refer to Page 3 for Details)

● Notice: After installation, turn on the shut-off valve to check whether it leaks.

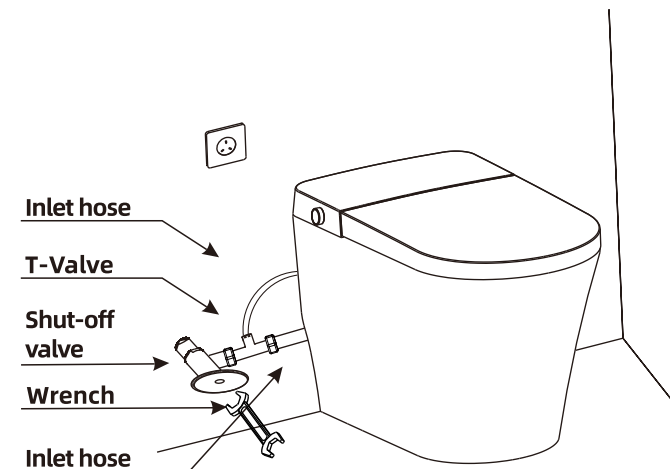

■ Installation of the Remote Control

1. Installation of remote control batteries.

Open the battery cover of the remote control and put two AAA alkaline batteries (batteries not included) into the remote control one by one.

- When installing the batteries, do not reverse the positive and negative sides of the batteries.
- Do not use different or different types of batteries at the same time.
- Remove the batteries when it is not in use for a long time.

2. Confirm the installation location of the remote control.



Install the remote control in a suitable area where it is easy to get or operate when user sit on the smart toilet.

3. Install the remote control bracket on the wall.

Peel off the protective tape of 3M adhesive on the back of the bracket and apply to the selected dry tile surface.

4. Install the remote control.


Align the remote control with the bracket, insert it from top to bottom, and the installation is completed.

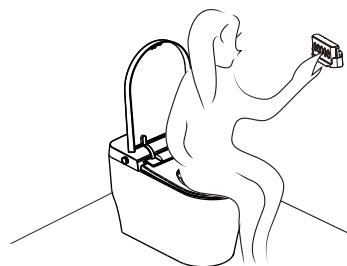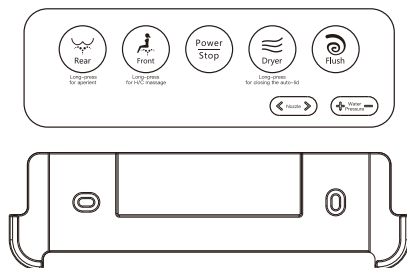


Preparation before Use

1. Open the shut-off valve

Turn the valve counterclockwise to fully open the water supply valve.

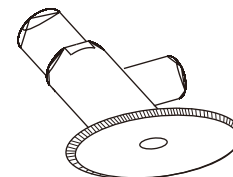

2. Plug the power plug into the outlet.

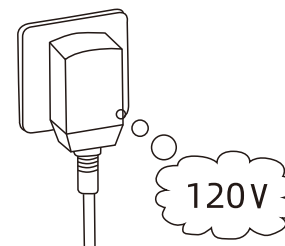

Plug the power plug into a 120V power outlet. The smart toilet will perform a self-check run once, and the main unit will be in standby mode.

- When performing a self-check, the toilet will automatically open and close the lid/ seat ring, and reset itself. It is forbidden to block it manually.
- Do not use wiring that exceeds the power supply specifications, such as an extension cord.
- The outlet must be reliably and safely grounded.


3. Adjust the cleansing water temperature and the seat temperature to the appropriate level.

4. Refer to Function Setting and Adjustment on Page 27 and use the remote control to operate various functions.

Panel Instruction

This product is designed primarily for remote control operation, with main unit panel operation as a supplement.

◆ Remote control panel

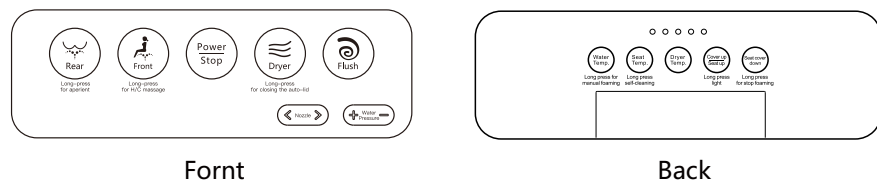


Applicable model: Automatic version

● Remote control code matching operation instructions:

Within 30 seconds after the host is powered on again, in the off-seat state, long press the side button "Front cleansing" for 3 seconds, the display blinks once and makes a buzzer sound, and then press the "Rear cleansing" button, the display blinks and buzzes, indicating that the display enters the alignment mode (it will automatically exit the alignment mode after 15 seconds without operation).

After entering the code alignment mode, press the Stop button on the remote control. The display stops blinking immediately and the buzzer stops ringing immediately, indicating that the code alignment is successful.

◆ Host operation panel

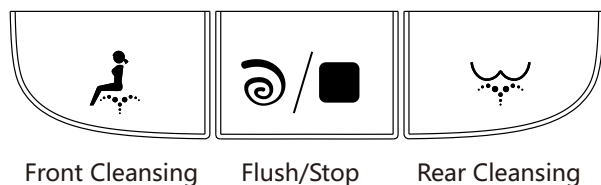


- In the unseated state, press the "Flush/Stop" button to manually flush.
- In the seated state, press the "Rear cleansing" button to carry out one-key

When seated on the toilet seat:

● After sitting down, press the front or rear cleansing button to activate the corresponding one-touch cleansing mode (90 seconds of cleansing + one flush + 3 minutes of drying). For example, pressing the "Rear Cleansing" button starts the 90-second rear cleansing mode, followed by one flush, and then automatically transitions to a 3-minute drying cycle.

● If you do not wish to complete the full 90-second cleansing cycle—for example, if 30 seconds of cleansing feels sufficient—you can press the corresponding button again to stop cleansing and proceed directly to flushing and drying. For instance, during rear cleansing, pressing the rear cleansing button on the side again will automatically skip to flushing and drying.


◆ Display Screen

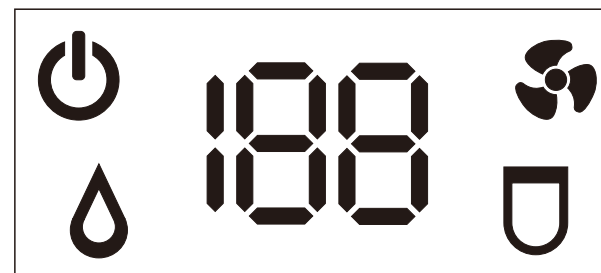

- Power indicator: Light up when the host is powered on.
- 88 Temperature level: Show the set temperature when the host is powered on.
- Wind temperature icon : it is shown the setting warm air temperature when icon lights on.
- Seat temperature icon: it is shown the setting seat temperature when icon lights on.
- Water temperature icon: it is shown the setting water temperature when icon lights on.
- The temperature displayed by the digital tube is the set temperature; Interval of 30 seconds, cyclic display of water temperature, seat temperature, wind temperature.

● When the people leaves the toilet sensor area, the display screen will be automatically turned off after seat cover closes down about 30 seconds.

◆ Ambient light

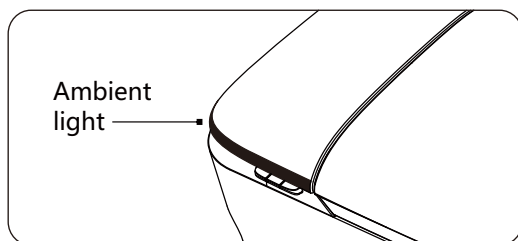


● Long press the drying button to turn on/turn off the ambient light function; The light will be on when human body near the sensor area and the light will be automatically off after leaving the sensor area for about 30 seconds.

How to Use

■ When seated on the seat

- ◆ When you hear the "beep" sound, all functions begin to start.
- ◆ Auto clean the nozzle once.

■ Start rear cleaning or front cleansing function

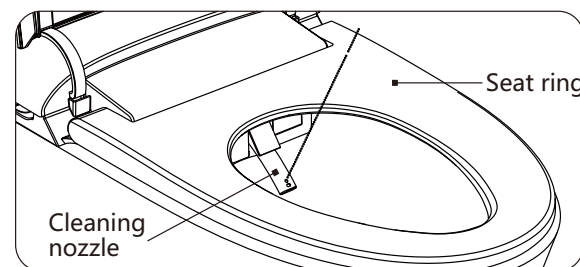

- ◆ Start the rear cleaning or front cleaning function by remote control.
- ◆ Adjust the cleaning position and water pressure by remote control.
- ◆ Start drying function by remote control.
- ◆ Press "stop" button, rear cleaning, front cleaning or drying stops working.

■ When unseated on the seat

- ◆ Auto flush the toilet once.

Function Setting and Adjustment

■ How to Turn On/Off the Radar Sensor Function

To turn this function on or off, press and hold the Dryer button on the remote control for 5 seconds.

Note: When the radar sensor function is turned off, you can still use the foot kick to open the toilet lid and seat.

■ How to Adjust the Radar Sensor Distance

The radar sensor sensitivity on the ZY695A Mini can be adjusted to control the detection range. By default, the sensor is set to level 7. You can reduce the sensitivity by lowering the level, which will decrease the detection range.

Adjustment Steps:

1. Turn off the power, then restart the smart toilet.
2. Within 30 seconds, press and hold the Feminine Wash button for 5 seconds to enter radar adjustment mode.
3. Press the Rear or Front button to adjust the radar sensitivity level.
4. Press the Stop button to confirm your selection.

■ Lid/Toilet Seat Open/Close

● The product has a foot sensing function for opening the toilet lid/seat ring. When user lifts their foot around the sensor, they can perform the lid/seat ring flipping operation.

In the unseated state:

- When the seat cover and seat ring are closed, lift your foot once around the sensor on the side of the toilet to flip the seat cover;
- When the seat cover is open and the seat ring is closed, lift your foot once around the sensor to flip the seat ring.
- When both the seat cover and seat ring are open, lift your foot once to close the seat cover and seat ring, and flush once (if the last operation performed was a flush, then it will not flush again this time).

● Press the button "Cover up/Seat up"  "Seat cover down"  on the remote control to open/close the lid and seat ring.

In the unseated state:

- Press the button "Cover up/Seat up"  to achieve the "seat cover up-seat ring up-seat ring down-seat ring up" function via the remote control.
- Press the button "Seat cover down" , and the seat ring and seat cover will close, and flush once (if the last operation performed was a flush, then it will not flush again this time).
- If both the seat ring and seat cover are in the closed state, pressing the "Seat cover down" button will not perform any operation.

● When the toilet is in rear cleansing, front cleansing, or drying mode, the lid/seat ring open/close function cannot be used.

■ Aperient

● The product has aperient function where cleansing water comes from the single-hole of the nozzle to assist with bowel movements. Enjoy this feature by long pressing the button

 or  on remote control.

- In the seated state, press the button on the remote control with a following "beep" sound to start the aperient function. You can end it by pressing the "Stop" button on the remote control or pressing the side knob down vertically.
- In this mode, the water pressure is fixed and unadjustable, but the nozzle position and water temperature can be adjusted.

■ Rear Cleansing

● This product has a rear cleansing bidet function by using a single-hole high-pressure cleaning nozzle.

- Press the button  on the remote control to enter the rear cleansing mode.
- In rear cleansing mode, press the button again to activate the oscillating cleansing function (the nozzle moves back and forth). Press the button again to deactivate the oscillating cleansing function (the nozzle stops moving). You can switch between these functions circularly.
- Rear cleansing will automatically turn off after approximately 90 seconds. You can switch to other functions or simply press the  button to deactivate it before the 90 seconds are up.
- The nozzle will automatically clean itself before and after rear cleansing.

■ Front Cleansing/Female Cleansing

● This product has a female cleansing function, with a dedicated nozzle hole for gentle cleansing.

- Press the button  on the remote control to activate the front cleansing mode.
- In front cleansing mode, press the button again to activate the oscillating cleansing function (the nozzle moves back and forth). Press the button again to deactivate the oscillating cleansing function (the nozzle stops moving). You can switch between these functions circularly.
- Front cleansing will automatically turn off after approximately 90 seconds. You can switch to other functions or simply press the  button to deactivate it before the 90 seconds are up.
- The nozzle will automatically clean itself before and after front cleansing.

■ Water Pressure Adjustment

- In rear cleansing or front cleansing mode, press the button  to adjust the water pressure strength according to your preference.
- 4 levels of water pressure are available. Press the button  to enter the adjustment mode and adjust it to your desired intensity.

■ Nozzle Position Adjustment

- In rear cleansing or front cleansing mode, press the button  to move the nozzle back and forth and adjust the cleansing position to your liking.
- 5 levels of nozzle position are available. Press the button  to enter the adjustment mode and adjust it to your desired position.

■ Cleansing Water Temperature Adjustment

- Press the remote control button , and the main unit will respond with a "beep" sound prompt, entering the water temperature setting mode. Adjust the cleansing water temperature to the appropriate level.
- The water temperature can be adjusted to 4 different levels, including room temperature, high, medium, and low levels. Press the water temperature button  once to switch to another level.

■ H/C Massage

- Pressing the remote control button  or long pressing the button  will activate the nozzle to alternate between hot and cold water to massage, with the water temperature switching back and forth between normal/room temperature and the user's setting temperature level. If the user's setting temperature level is normal/room temperature, then the water temperature will alternate between the normal level and the low level.

■ Drying Function

- Press the remote control button  to activate the air dryer. By activating this function, the device will blow warm air onto the wet areas to dry them.
- Drying function will automatically turn off after approximately 3 minutes. You can switch to other functions or simply press the  button to deactivate it before the 3 minutes are up.

■ Air Dryer Temperature Adjustment

- Press the remote control button , and the main unit will respond with a "beep" sound prompt, entering the dryer temperature setting mode. Adjust the air dryer temperature to the appropriate level.
- The dryer temperature can be adjusted to 4 different levels, including room temperature, high, medium, and low levels. Press the button  once to switch to another level.

■ Seat Ring Temperature Adjustment

- Press the remote control button , and the main unit will respond with a "beep" sound prompt, entering the seat ring temperature setting mode. Adjust the seat ring temperature to your liking.
- The seat ring temperature can be adjusted to 4 different levels, including room temperature, high, medium, and low levels. Press the button  once to switch to another level.

■ Night Light

- This product is equipped with lighting function for convenient use at night.
- Long-pressing the remote control button  or  will turn on or turn off the night light function.

■ Nozzle Cleaning

- Press the remote control button  or long press  to activate the nozzle cleaning function, and the water flow continuously from the inside of the nozzle to clean it.
- This function can only be activated when the user is not seated.
- The nozzle cleaning process takes approximately 60 seconds and can be stopped by pressing the stop button .

■ Power Button

- The power button  on the remote control can be used to turn the smart toilet system on or off.

■ Flush by the Remote Control

- To flush the toilet once, press the flush button . If you want to flush continuously, there needs to be a 30-second interval between each flush.
- When the cleansing mode is activated, flushing the toilet will stop the cleansing function.

■ Flush by Foot Sensor

- Designed specifically for men's urination, no need to bend down to find the button or look for the remote control to flush, just place your foot in the sensing area to achieve flushing.
- To activate the flush, stretch your foot slightly against the sensor sign on the ceramic surface, and the water will start flowing once you remove your foot.

■ Flush by the side button

- Press the "Flush/Stop" button to manually flush

■ Foam Shield

Manual foaming: Long press the Water Temp button on the remote control to trigger the foam function once.


Auto-foaming: It will auto-foam once after sitting.

- Long pressing the remote control  for 3 seconds to turn on/off the automatic foaming function.

Cleaning and Maintenance

■ Clean and Maintain the Power Plug

Please clean the power plug regularly. When cleaning, remove the power plug from the outlet and wipe it with a dry cloth.

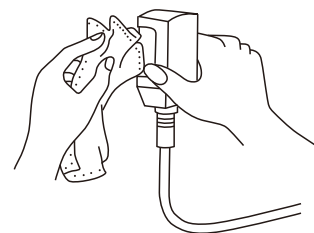

- Dust accumulation on the power plug may cause fire.

■ Clean and Maintain the Main Unit of the Smart Toilet


When cleaning the surface of the main unit, please wipe it with a soft, wet cloth.

- When cleaning and maintaining the smart toilet main unit, please pull the power plug out of the outlet to avoid any contact with water.
- If the surface has stubborn stains, you can use a soft, wet cloth with neutral kitchen detergent to clean it.

■ Clean and Maintain the Ceramic Part of the Smart Toilet


You can pour a neutral toilet cleaner onto a soft brush or sponge and use it to clean the ceramic part of the smart toilet. Rinse the area with tap water after cleaning.

- Do not use detergents or disinfectants that contain chlorine or are acidic.
- Do not use brushes that contain abrasive materials.

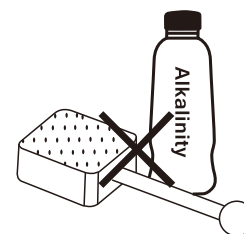


■ Clean and Maintain the Nozzle


When the smart toilet is turned on, press the remote control button  to activate the nozzle cleaning function. The nozzle will extend and clean itself with water, and you can use a toothbrush to clean it at the same time. Please do not forcefully stretch the nozzle. When the nozzle moves forward, the nozzle can be removed and cleaned separately.

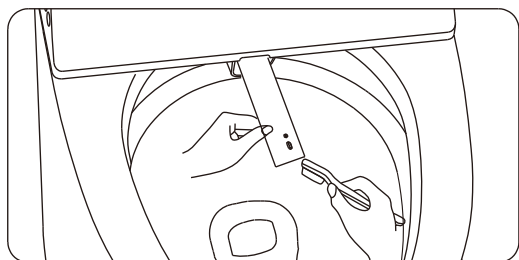


◆ Detachable nozzle model cleaning method

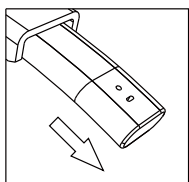

1. Press the button of self-cleaning on remote control to extend out the nozzle.

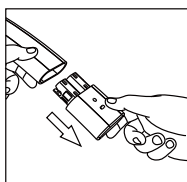

2. After the nozzle is extended, pull out the front nozzle with hand.

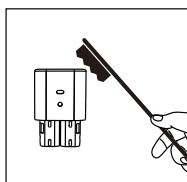


3. Use a toothbrush to clean the nozzle.

■ Clean and Maintain the Water Inlet Filter in the T-Valve

- Turn off the shut-off valve first to stop water supply.
- Remove the lock and the filter from the t-valve.
- Clean the filter with a brush or running water.
- Reinstall the filter. Make sure to screw it back in securely and not to leave behind the lock.

- Once the filter is cleaned and reinstalled, turn on the supply valve and check for any leaks. If there are any leaks, please double-check and reinstall the filter as needed.

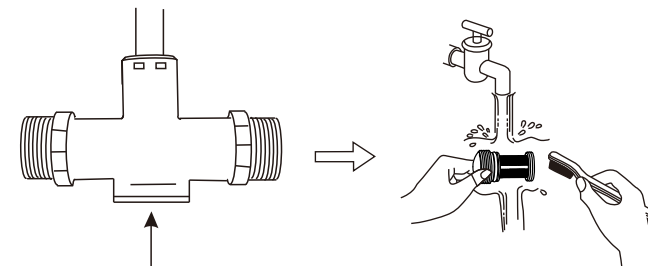

Remove the Lock and the Filter



■ When not in use for a long time

When not using this product for a long time, please be sure to drain all the water from the smart toilet and use a dry towel to absorb any remaining water to prevent water deterioration and freezing. Also, turn off the power and remove the battery from the remote control.

(1) Close the shut-off valve and stop the water supply.

(2) Unplug the power plug from the outlet.

(3) Remove the water hose from the shut-off valve, drain the water from the hose, and then reinstall it.

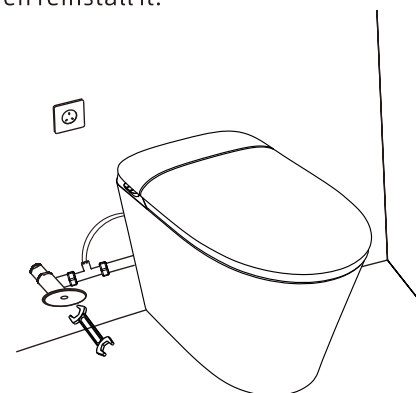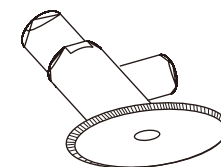

- When using again, open the shut-off valve, plug the power plug back into the outlet, turn on the power to use.

■ When Freezing Occurs

In cold seasons, the smart toilet may be damaged due to internal freezing. To prevent freezing, keep the power connected and perform the following operations:

(1) Set the seat temperature and water temperature to the highest setting.

(2) If the water hose inside freezes and causes the spray water to be blocked and unable to be ejected, please use a cloth soaked in warm water to warm up the water hose and slowly thaw it. You can also turn on the heater to warm up the room and let it thaw on its own.

■ When Condensation Appears

Due to the difference in temperature and humidity between bathroom and the ceramic parts/surface of the smart toilet, water droplets (condensation) may appear on the ceramic parts and surface of the main unit. Please ventilate the bathroom sufficiently to avoid condensation.

- When condensation appears, wipe it with a dry cloth.

■ Replacing the Remote Control Battery

When the remote control becomes unresponsive or the indicator light does not light up, please replace the battery with a new one.

- When installing the battery, do not reverse the positive and negative poles.
- Do not use batteries of different ages or different types at the same time.
- When not in use for a long time, be sure to remove the battery.

Troubleshooting

Some malfunctions can be resolved by simple operations. Please confirm the following items before authorizing a professional to repair the product.

Problem		Possible Reason	Solution
Press the power button and it does not work (the ambient light is not on).		Is the power outlet powered on?	Please confirm whether there is a power failure or whether the circuit breaker has tripped.
		Is the power plug switch in the off position? (Is the power plug indicator light off?)	Press the reset button on the power plug to light up the indicator light.
		Is the power plug plugged in properly?	Reconnect the power plug and insert it completely.
The remote control is insensitive or unresponsive.		Is the remote control battery dead?	Replace with a new battery.
The seat temperature, water temperature, and drying temperature are not hot enough.		Are the temperature settings appropriate?	Use the remote control to set the corresponding temperature.
The button does not respond.		During normal operation, some buttons may not respond.	Some operations cannot be performed simultaneously (such as flushing during cleansing). Please read this manual carefully.
The nozzle does not spray water or the water pressure is weak.	Alarm sound occurs.	Is the tap water turned off?	Wait for the tap water supply to be restored.
		Is the water supply valve open?	Turn on the water supply valve.
		Is the filter clogged?	Clean the filter.
	No alarm sound.	Is the water pressure too low? Is the water pressure setting on the remote control at the lowest level?	Press the button  to increase the water force.
		After sitting down, did you hear the prompt tone "beep"? Are you sitting within the effective range of the sensor?	Please sit on the seat and adjust to an appropriate sitting position.
Radar sensing doesn't work or doesn't work as expected.		Is the rader sensing too sensitive?	It is recommended to restart or turn off the radar sensing function. (Refer to page 29 for instructions.)

Warranty

Warranty Period: One year from the date of purchase.

What's Covered:

This product is warranted to be free of defects in materials and workmanship for one year. During the warranty period, if any defects or malfunctions occur, we will provide free replacement parts to ensure your satisfaction.

Note: This warranty is limited and does not cover damage caused by improper use, or maintenance.

Caution

• Prohibited Cleaners:

Do not use cleaners containing abrasive materials, ammonia, bleach, acids, waxes, alcohol, solvents, or any other products not recommended for chrome finishes. Doing so may damage the product and void the warranty.

• Proper Use and Maintenance:

Ensure the product is used and maintained according to the user manual. Failure to follow these instructions may result in damage not covered under warranty.

CONFIGURATION FUNCTION	Auto version
Rear cleaning	●
Front cleansing	●
Moving cleaning	●
Warm air drying	●
Seat ring heating	●
Nozzle auto cleaning	●
Auto flushing	●
Waterpressure adjustment	●
Water temp. adjustment	●
Seat temp. adjustment	●
Drying temp. adjustment	●
Night light	●
Foot kick flushing	●
Black-out flushing	●
Digital screen	●
Remote control flushing	●
Seat induction	●
Wireless remote control	●
Mute soft-closing	●
Self-cleaning glaze	●
Auto lid	●
Foot kick to open the seat	●
Intelligent ambient light	●
Foam Shield	●
Built in tank	●

● Indicates this product contains the function.

Product Specification

Nominal voltage		120V 60Hz
Rated power		1200W
Length of power line		1.2M
Water pressure range		0.15MPa-0.75MPa(still)
Flushing water consumption		Below 4.0L
Cleaning water consumption		Below 0.4L/min
Unit cycle energy consumption		Below 0.03kW.h
Size of product		LWH:684*407*462mm
Weight of product		42 KGS
Cleaning machine	Water heating method	Thermal type
	Water-temp. control	4-level adjustable, Normal level, 1st-95°F, 2nd-100°F, 3rd-104°F, room temperature
	Max heating voltage	1600W
	Safety device	Temperature sensor, temperature switch
Seat heating	Heating power	40W
	Seat temp.	4-level adjustable, Normal level, 1st-95°F, 2nd-100°F, 3rd-104°F, room temperature
	Safety device	Temperature sensor, temperature fuse
Drying device	Heating power	270W
	Air temp. adjustment	4-level adjustable, Normal level, 1st-95°F, 2nd-113°F, 3rd-131°F, room temperature
	Safety device	Resettable thermal protector, temperature fuse
Executive standard		IEC 60335-1 IEC 60335-2-84

* Rated power : When this product works under the condition of circumstance temp. 23°C(±2°C), water-input pressure 0.24MPa(±0.02MPa), water-input temp. 15°C(±0.5°C), max cleaning flow (front cleansing at highest level), seat temp. highest level and water temp. highest level, test the average power of cleaning in a minute.

After the installation is complete, please test run the toilet and fill out the record sheet with the results:

Acceptance Item		Acceptance Result
Is the power outlet AC 120V±10%, load ≥1200W?		
Is the power outlet loose, or is the power connection in bad contact?		
Is each accessory securely connected without water leakage?		
Is the toilet's ambient light on?		
Is the bidet nozzle leaking?		
Is the "flip" function of the lid/seat working properly?		
Is the "rear cleansing" function working properly (including levels adjustment)?		
Is the "front cleansing" function working properly (including levels adjustment)?		
Is the "oscillating cleansing" function working properly (including levels adjustment)?		
Is the "water temperature" working properly (including temperature adjustment)?		
Is the "seat ring temperature" working properly (including temperature adjustment)?		
Is the "nozzle cleaning" function working properly?		
Is the remote control working properly?		
Is the manual and automatic flushing function working properly?		
Is the "drying" function working properly (including levels adjustment)?		
Remark:		
Retailer:	Installation personnel:	Acceptance tester:
		Date: