



Swivel Gaming Chair

ASSEMBLY INSTRUCTIONS

Before You Begin:

Please identify all component parts and hardware pieces required before you begin. Carefully remove all of the components from the packaging and set aside for assembly. Assemble on a soft surface to prevent scratching during assembly.

Caution:

Tighten all components securely before use. Failure to do so may result in personal injury. DO NOT use any sharp objects to open plastic wrapped components as damage to product or components may result.

Warning:

CHOKING HAZARD - Small Parts. Adult Assembly Required.

DO NOT ALLOW CHILDREN TO CLIMB ON FURNITURE

Serious or fatal injuries can occur from furniture tipping over. You must install Tipping Restraint Hardware (where included) to help prevent the unit from tipping and causing accidental injury, instability, death or damage. The tipping restraint is intended only as a safety measure, it is not a substitute for proper adult supervision.

To help prevent furniture from tipping over it must be permanently attached to the wall. Anti-Tip Safety Wall Straps suitable for the unit weight and wall materials (if not included) should be purchased and installed.

Our Warranty Statement

This warranty covers manufacturing defects associated with your new product. The product is warranted from the original purchase date and to the original purchaser for normal usage, according to the below-referenced specifications and limitations.
















- Non-moving metal parts are warranted for 5 years.
- Component parts including pneumatic cylinder, control mechanism, base and casters are warranted for 2 years.
- All other items are warranted for 1 year.

Normal usage means use in compliance with the restrictions and weight limits specified for the product. In the absence of product-specific restrictions and weight limits, normal usage means use for no more than forty hours per week by persons weighing 250 lbs. or less.

Coverage terminates if the product is sold or otherwise transferred. Repairs made by parties other than Belnick also void this warranty.


This warranty will not cover: (1) labor, freight, or damage from misuse, abuse, negligence, alteration, assembly, installation, attachments, accident, vandalism, acts of nature or any other event beyond the control of Belnick; (2) tearing, scratching, scuffing, or blemishing of leather or fabric; (3) cosmetic damage that may result from normal usage; (4) damage attributable to use by persons exceeding specified weight limits or commercial use exceeding forty hours per week; or (5) rust or other damage caused by exposure to moisture. The user assumes all risk of injury resulting from use of this product. Liability for incidental or consequential damage is excluded. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

PARTS

PART 1 QTY: 1  Backrest	PART 2 QTY: 1  Seat	PART 3A Base Center QTY: 1  PART 3B BASE ARMS QTY: 5 	PART 4 QTY: 2  Armrests	PART 5 QTY: 1  Gas lift	PART 6 QTY: 1  Control unit		
PART 7 QTY: 1  Gas lift cover	PART 8 QTY: 5  Casters x 5	PART 9 QTY: 8  M6x25mm	PART 10 QTY: 4  M6x20mm	PART 11 QTY: 10  M6x10mm	PART 12 QTY: 4  M6x18mm	PART 13 QTY: 8  Screw Caps	PART 14 QTY: 1  Allen Wrench


STEP 1

STEP 1: Turn Base Center (Part 3) upside down and insert (5) Base Arms (Part 3B) into the base center. Attach arms to the center using (10) M6x10mm screws. Tighten with Allen Wrench (Part 14).

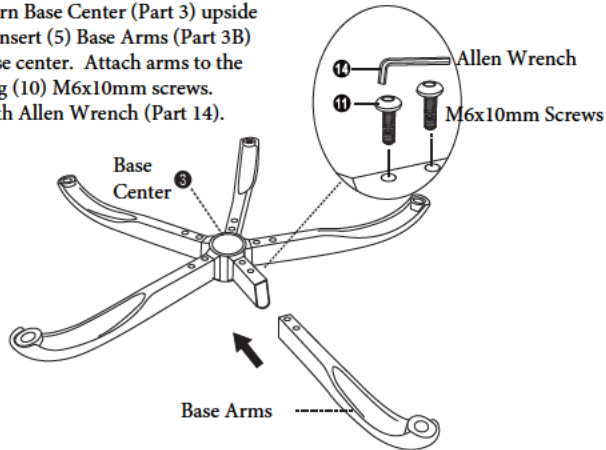


STEP 2

STEP 2: Insert (5) Casters (Part 8) into the base arms and return assembled base to the upright position. Insert the wide end of the Gas Lift (Part 5) into the base center. Slide the Gas Lift Cover (Part 7) downwards over the Gas Lift.

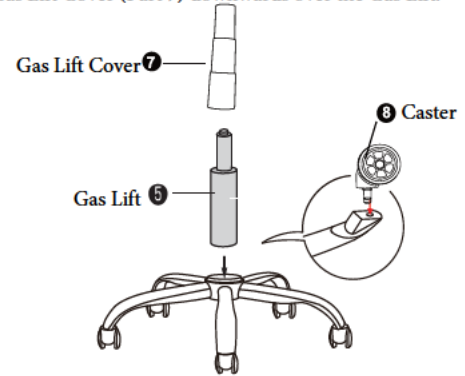

STEP 3

STEP 3: Lay the Seat (Part 2) face down on a smooth clean surface. Attach the Control Unit (Part 6) to the underside of the Seat using (4) M6x18mm Washers and (4) M6x20mm Screws. Tighten with Allen Wrench (Part 14).

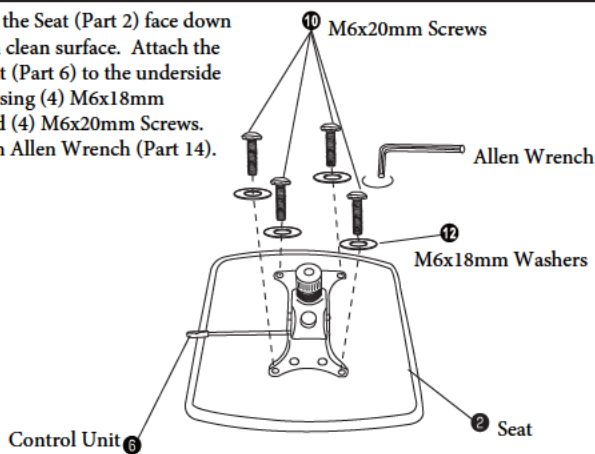


STEP 4


STEP 4A: Place the Control Unit onto the Gas Lift and press down to seat.

NOTE: DO NOT TIGHTEN SCREWS COMPLETELY


STEP 4B: Attach the lower Armrests (Part 4) to the Seat using (4) M6x25mm Screws. Tighten loosely with Allen Wrench (Part 14).

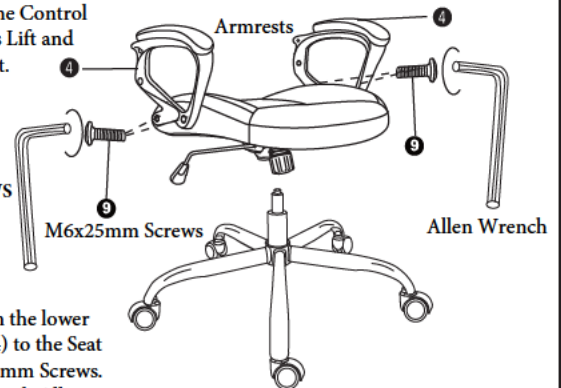

STEP 5

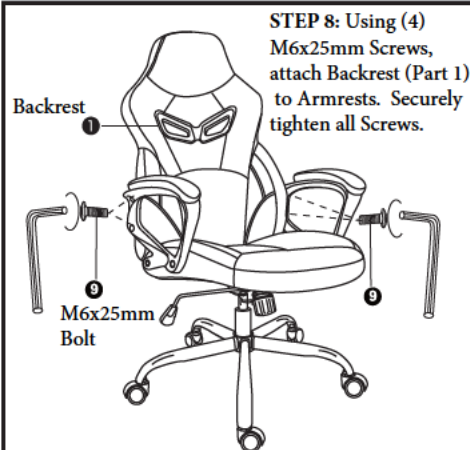

STEP 6

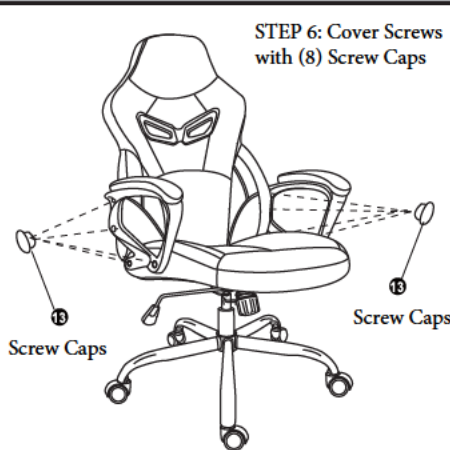

STEP 7

