


ASSEMBLY INSTRUCTIONS



Cross Creek









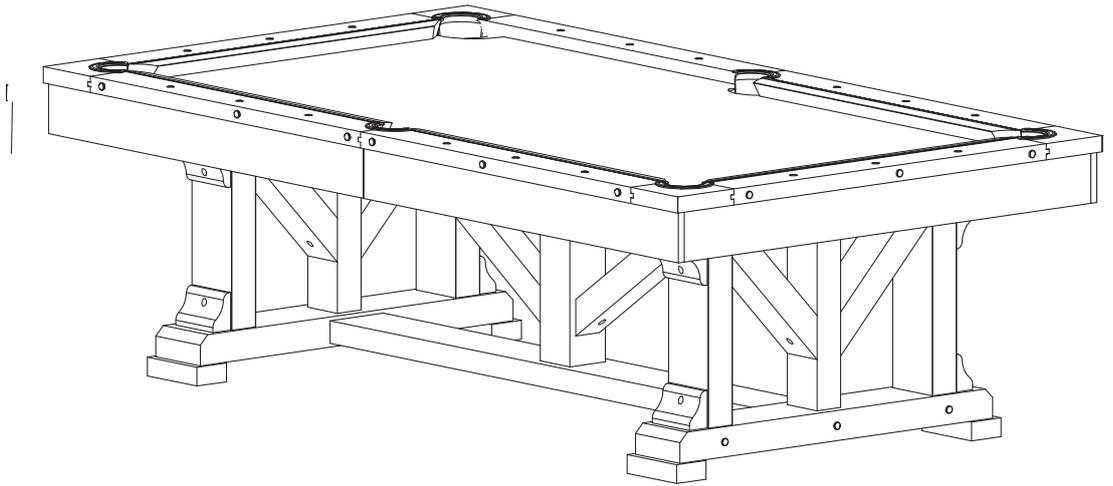


Congratulations on selecting a Cross Creek slate pool table - part of the Fairfield Collection by Playcraft. Please contact us via email at support@playcraft.com should you require any assistance.

Please carefully read all safety instructions and directions before proceeding

- 1) Your table is designed for use indoors in a climate controlled environment only. Damage can occur if the table is exposed to water, dampness, high humidity, freezing temperatures, etc.
- 2) Professional assembly is strongly recommended. This assembly manual is intended to guide an experienced slate pool table installer with the assembly process of this specific cabinet. It does not guide on setting the slate or attaching the billiard cloth for which the process is the same regardless of the cabinet type.
- 2) The pool table cabinet and slate are extremely heavy. Two or more people are required for assembly.
- 3) The table must be assembled in the final location where the table will be played. Attempting to move the table once assembled could result in damage to the table or serious injury.
- 5) Only use the table for its intended purpose.
- 6) Damaged or worn parts may be dangerous for users and the integrity of the table. Replace worn or damaged components immediately and do not use the table until any issues have been resolved. For best results, use only spare parts supplied by Playcraft.
- 7) Unauthorized repairs or altering the table's design or functions may be dangerous and will void the warranty.
- 8) Check all screws, bolts, etc. on a regular basis to ensure that they are in good working condition and have not loosened over time.
- 9) Over time, pool tables may require releveling. This is considered normal maintenance as required with owning a slate pool table

PART LIST

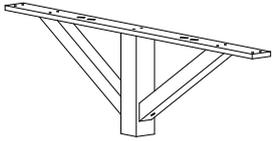
NO.	IMAGE	DESCRIPTION	SPECIFICATION	QTY	UNIT
H1		LEG	1100*200*660	2	PCS
		ASSEMBLY POSITION	FRAME		
H2		BOTTOM SUPPORT BEAM	1746*180*60	1	PCS
		ASSEMBLY POSITION	FRAME		
H3		CENTER SUPPORT BEAM	1936*120*565	1	PCS
		ASSEMBLY POSITION	FRAME		
H4		CROSS BEAM	1173*180*40	2	PCS
		ASSEMBLY POSITION	GRADE A BEAM		
H5		LONGITUDINAL BEAM	1936*180*40	2	PCS
		ASSEMBLY POSITION	GRADE A BEAM		
H6		MIDDLE BEAM	893*120*40	2	PCS
		ASSEMBLY POSITION	GRADE A BEAM		
H7		SIDE SLATE1	805*1295*40	1	
		ASSEMBLY POSITION	TOP RAIL		
H8		MIDDLE SLATE	805*1295*40	1	PCS
		ASSEMBLY POSITION	TOP RAIL		
H9		SIDE SLATE 2	805*1295*40	1	
		ASSEMBLY POSITION	TOP RAIL		
H10		CLOTH		1	
		ASSEMBLY POSITION	TOP RAIL		
H11		1、4# TOP RAIL	1083*164*43	2	PCS
		ASSEMBLY POSITION	TOP RAIL		
H12		2、5# TOP RAIL	1111*164*43	2	PCS
		ASSEMBLY POSITION	TOP RAIL		
H13		3、6# TOP RAIL	1101*164*43	2	PCS
		ASSEMBLY POSITION	TOP RAIL		
H14		CORNER	190*190*43	4	PCS
		ASSEMBLY POSITION	TOP RAIL		
H15		SHORT APRON	1189*140*50	2	PCS
		ASSEMBLY POSITION	TOP RAIL		
H16		LONG APRON	2307*140*50	2	PCS
		ASSEMBLY POSITION	TOP RAIL		
H17		MITRE	170*170*135	4	PCS
		ASSEMBLY POSITION	TOP RAIL		

HARDWARE LIST


NO.	IMAGE	DESCRIPTION	SPECIFICATION	QTY	UNIT
A		DOBULE-HEAD BOLT	ø10*100	4	PCS
		USED TO FIX THE BOTTOM SUPPORT BEAM AND LEGS			
B		SEMICIRCLE WASHER	M10	4	PCS
		USED TO FIX THE BOTTOM SUPPORT BEAM AND LEGS			
C		BOLT NUT	M10	4	PCS
		USED TO FIX THE BOTTOM SUPPORT BEAM AND LEGS			
D		FLAT HEAD SCREW	4.2*40	4	PCS
		USED TO FIX THE TOP SUPPORT BEAM AND LEGS			
E		HEX BOLT	ø10*70	10	PCS
		2 PCS ARE USED TO FIX THE BOTTOM SUPPORT BEAM AND CENTER SUPPORT BEAM , 8 PCS ARE USED TO FIX CROSS BEAM AND LEGS			
F		FLAT WASHER	M10*30*2		PCS
		2 PCS ARE USED TO FIX THE BOTTOM SUPPORT BEAM AND CENTER SUPPORT BEAM , 8 PCS ARE USED TO FIX CROSS BEAM AND LEGS			
G		HEX BOLT	ø12*180	4	PCS
		USED TO FIX THE CROSS BEAM			
H		FLAT WASHER	M12*30*2	4	PCS
		USED TO FIX THE CROSS BEAM			
I		ACRON NUT	M12	4	PCS
		USED TO FIX THE CROSS BEAM			
J		FLAT HEAD SCREW	4.2*60	8	PCS
		USED TO FIX THE MIDDLE BEAM			
K		ADJUSTABLE SCREW	ø10*50	4	PCS
L			ø10*100	12	PCS
USED TO ADJUST AND LEVEL THE SLATE					ASSEMBLY POSITION

M		FLAT HEAD SCREW	6*60	12	PCS
		USED TO FIX THE SLATE AND FRAME			
N		WOODEN PLUG	ø10*50	2	PCS
		USED TO CONNECT #2 AND #5 TOP RAIL ,#3 AND #6 TOP RAIL			
O		BARREL NUT	ø8*30	8	PCS
		USED TO FIX THE TOP RAIL AND CORNER			
P		SEMICIRCLE WASHER	M8	8	PCS
		USED TO FIX THE TOP RAIL AND CORNER			
Q		FLAT WASHER	M8	36	PCS
		8PCS ARE USED IIN FIXING TOP RAIL AND CORNER,16PCS ARE USED IN FIXING APRONS, 12PCS ARE USED IN FIXING APRONS AND TOP			
R		HEX BOLT	ø8*80	8	PCS
		USED TO FIX THE TOP RAIL AND CORNER			
S		HEX BOLT	ø8*25	16	PCS
		USED TO CONNECT THE APRONS			
T		HEX BOLT	ø8*35	12	PCS
		USED TO FIX THE TOP RAILS AND APRONS			
U		HEX BOLT	ø10*60	18	PCS
		USED TO FIX THE TOP RAILS AND SLATE			
V		DOME WASHER	M10*30*5	18	PCS
		USED TO FIX THE TOP RAILS AND SLATE			
W		SIDE POCKET		4	PCS
X		MIDDLE POCKET		2	PCS
Y		FLAT HEAD SCREW	4.2*16	12	PCS
		USED TO FIX THE LEATHER POCKET			


Step 1

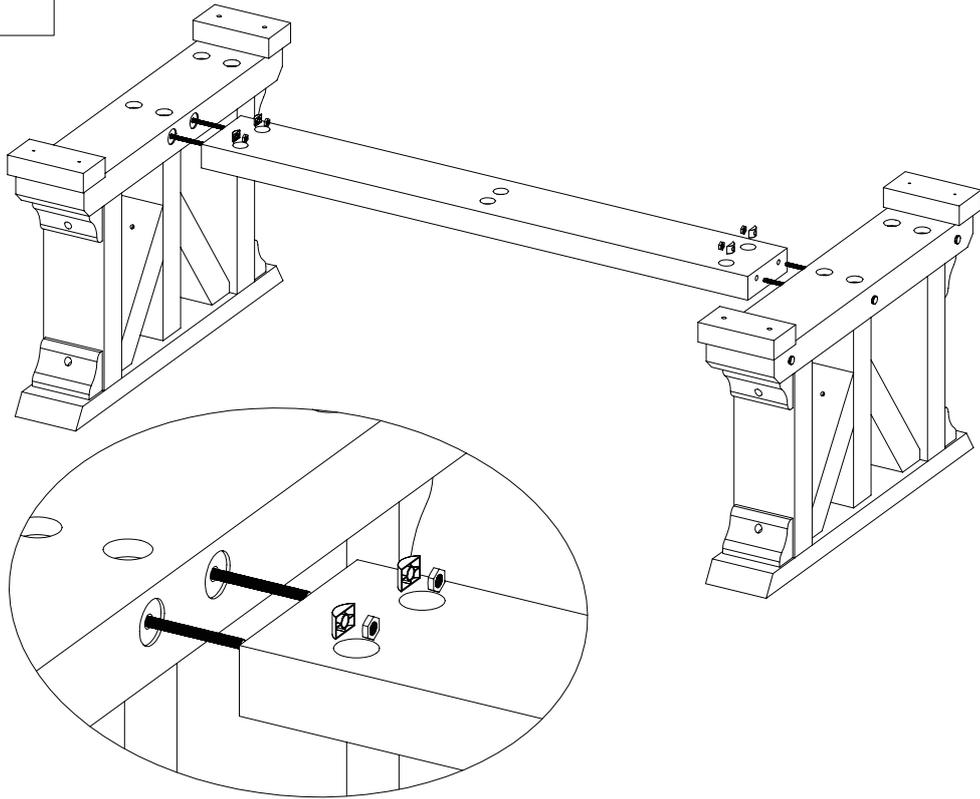


Step 2

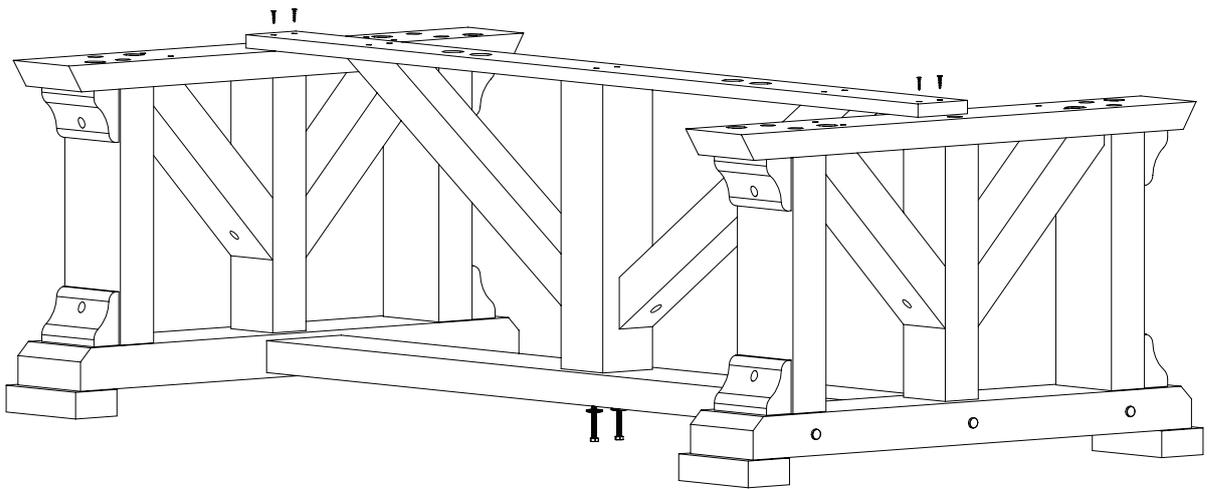


Step 3

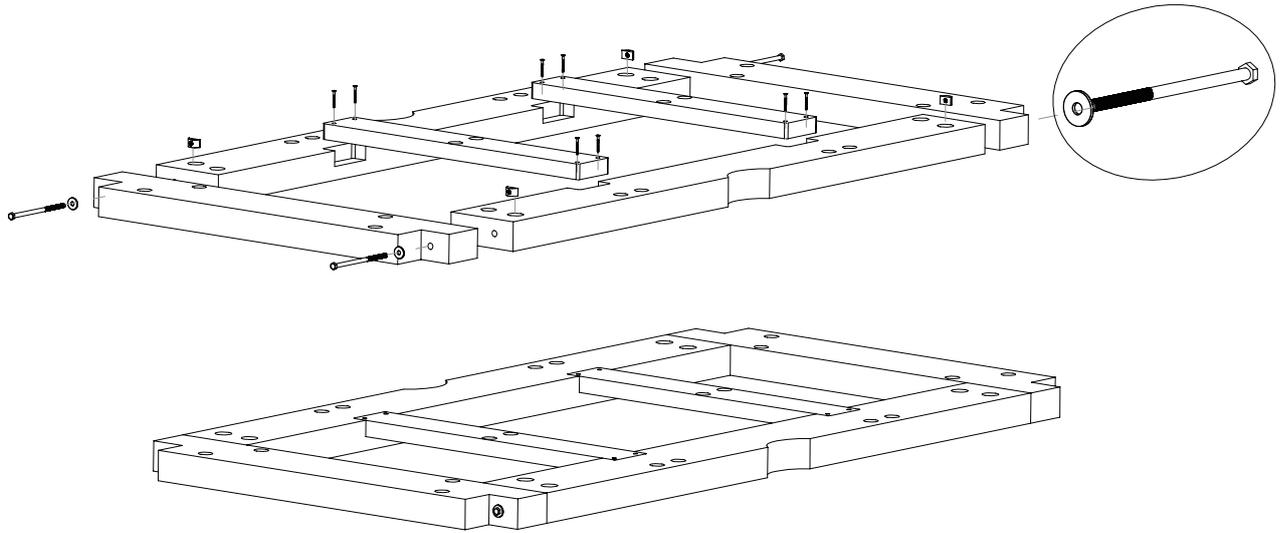


Step 4

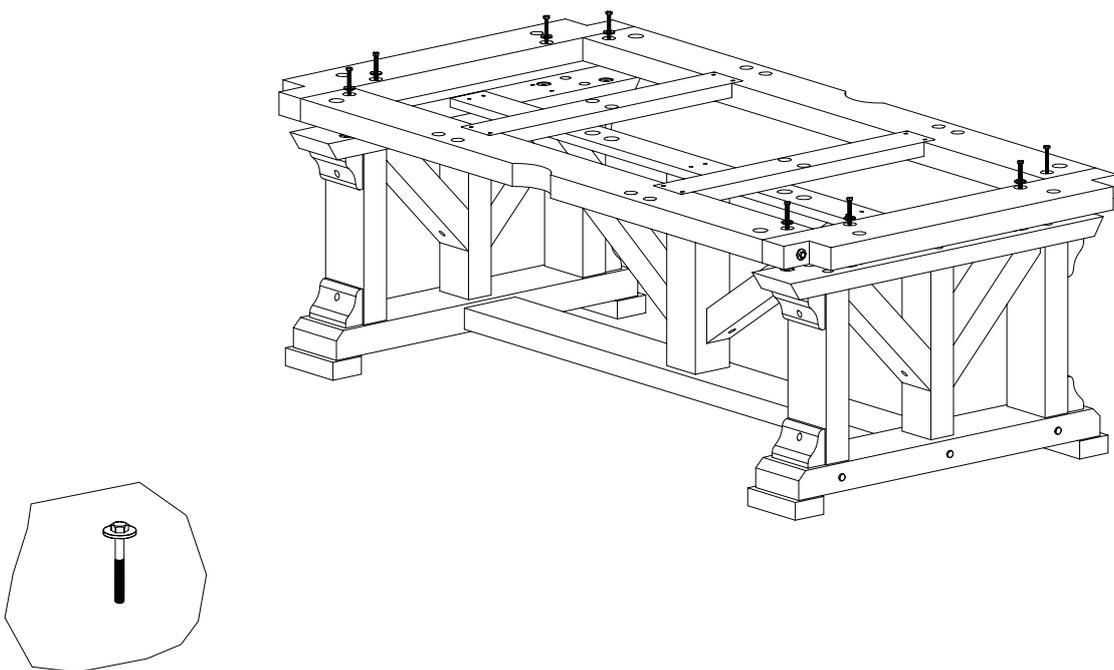


Step 5

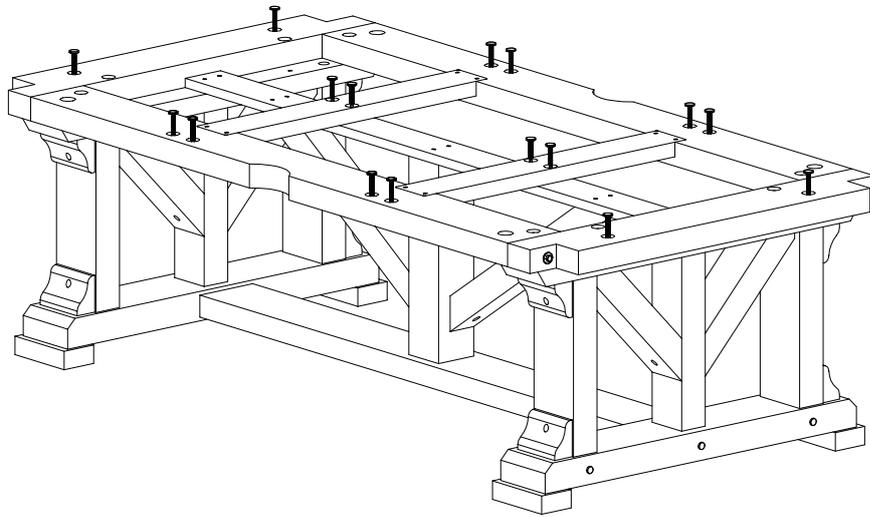


Step 6

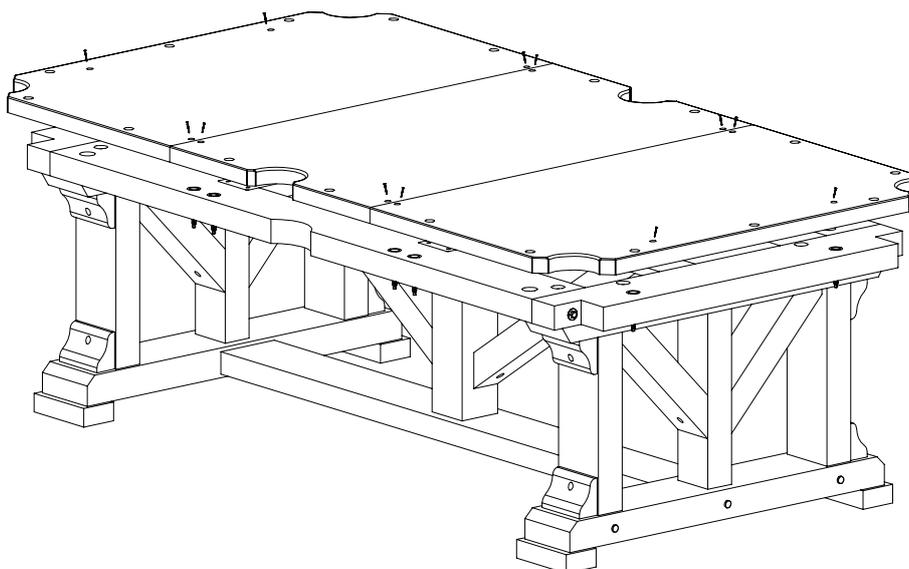



Step 7

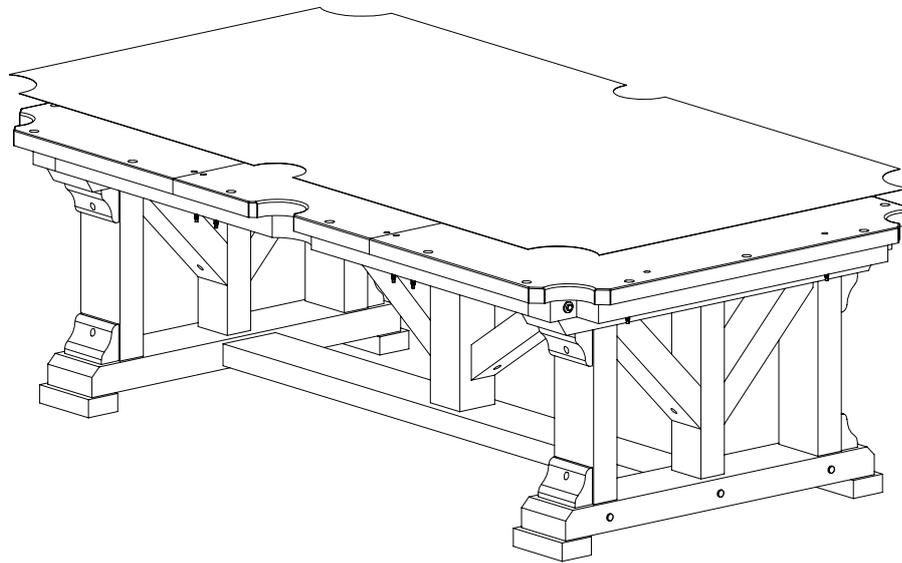


Step 8

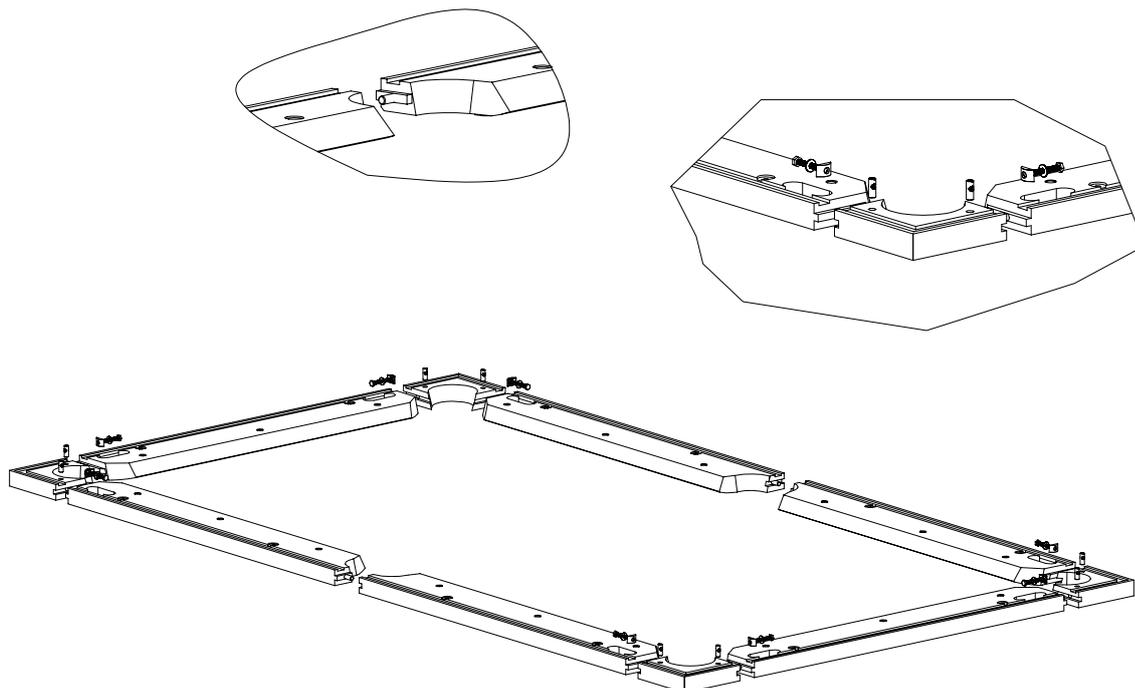


Step 9

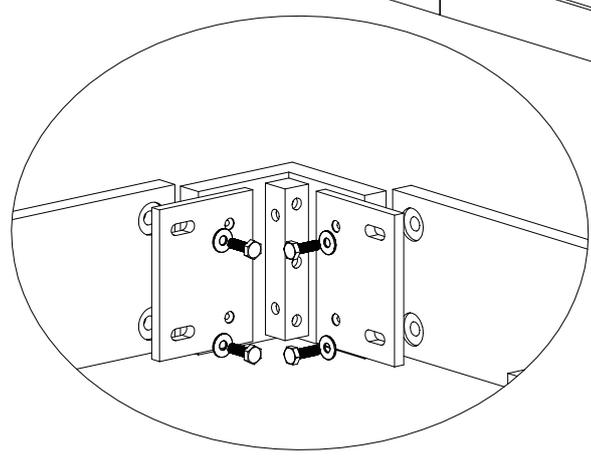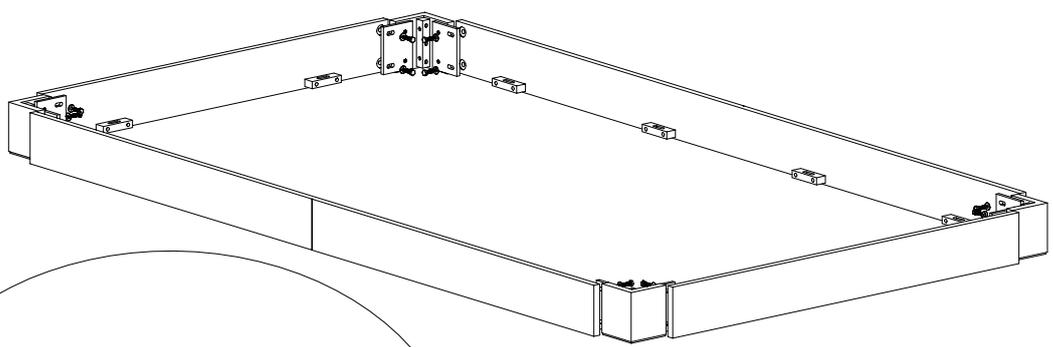


Step 10

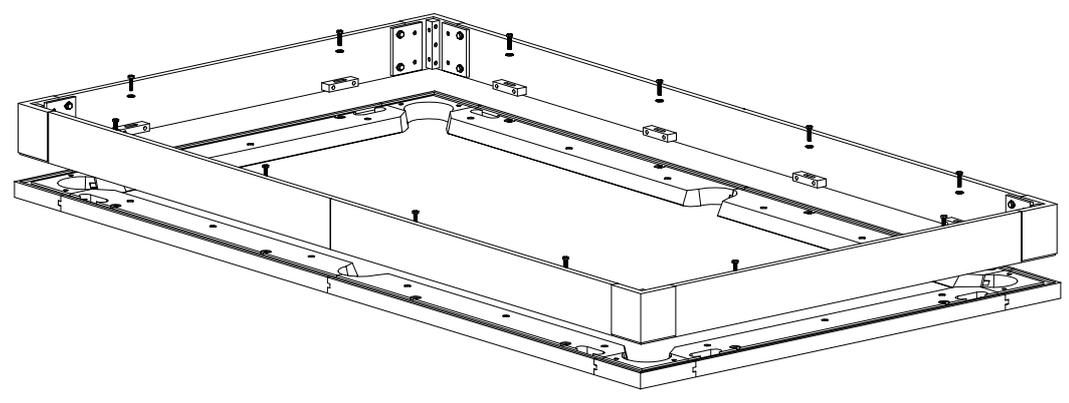


Step 11

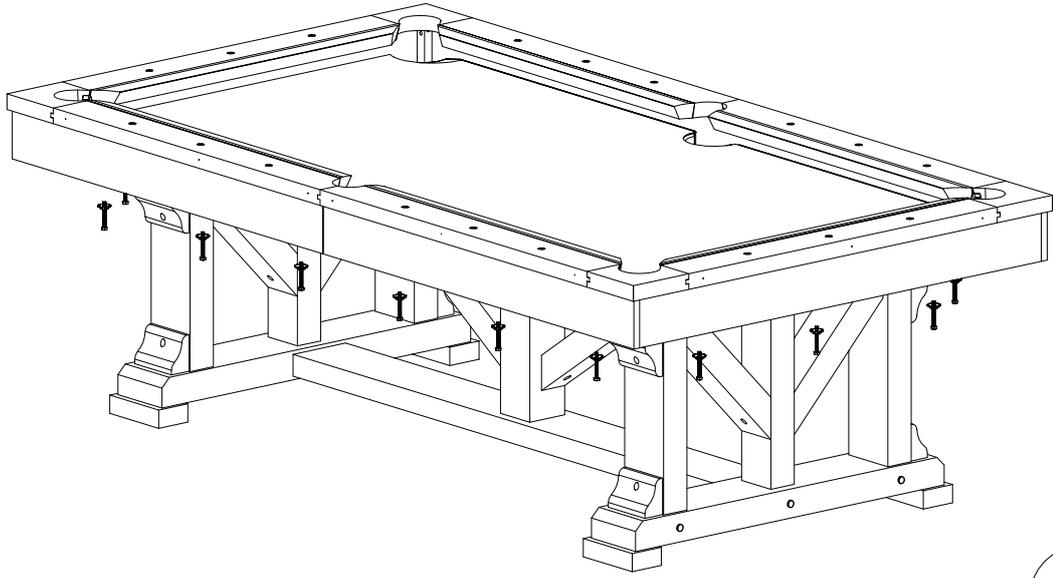

Step 12

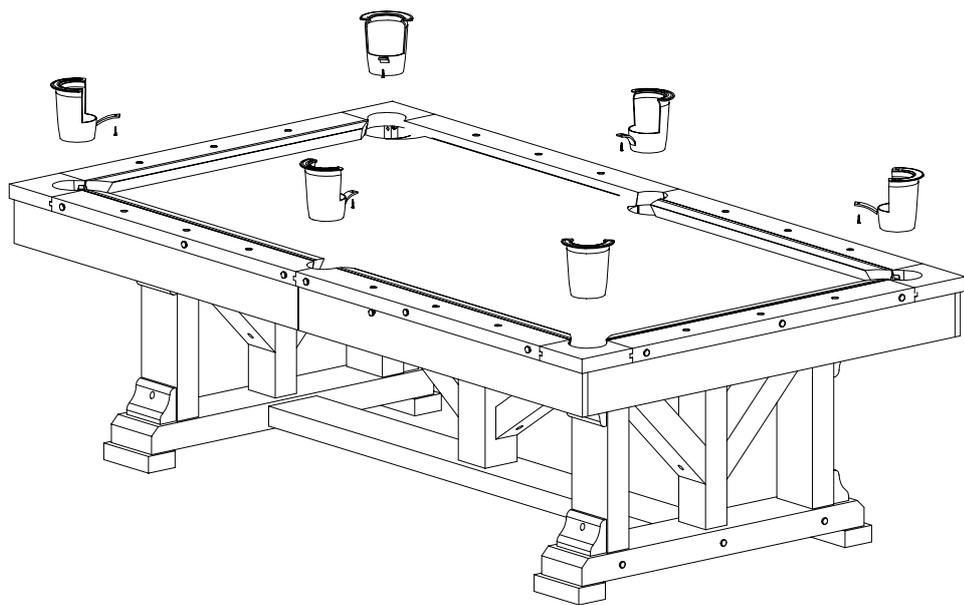

Step 13

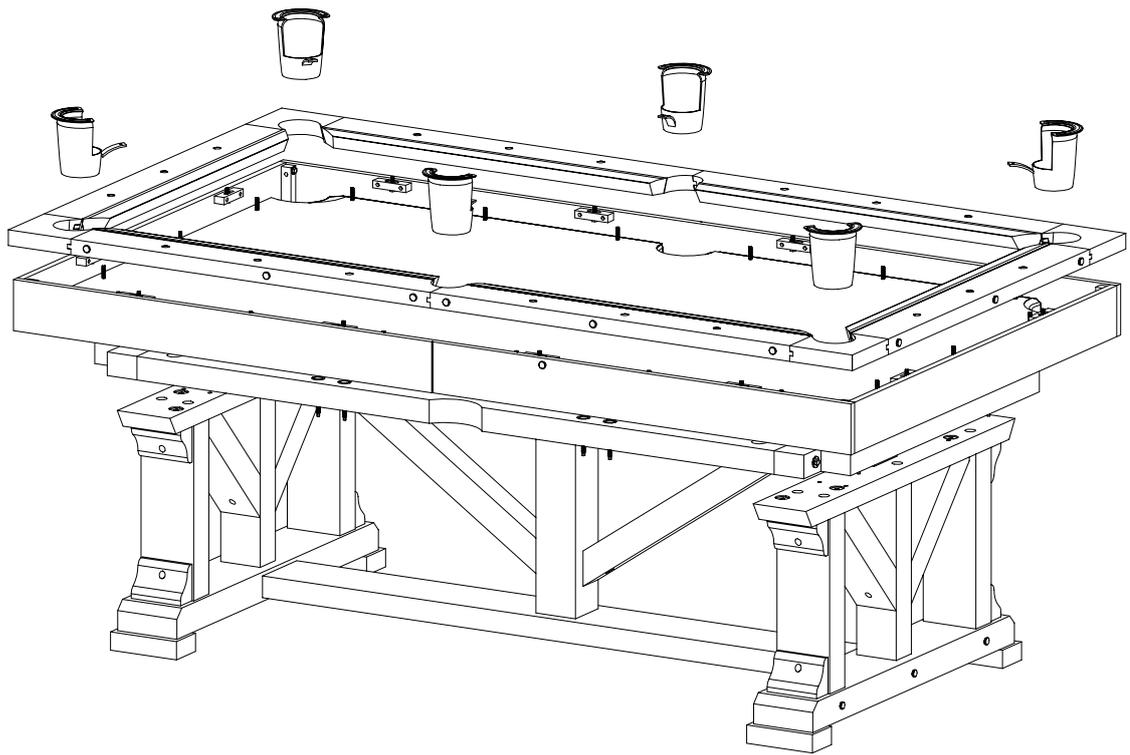



Customer Service

For questions on assembly or for missing or damaged parts, please contact us via email at support@playcraft.com. Please visit our website at www.playcraft.com to see more industry leading Playcraft and Playcraft Sport game tables.

Thank you for choosing Playcraft!

Global Merchants, Inc.
12 Lunar Drive
Woodbridge, CT 06525