

ASSEMBLY INSTRUCTIONS

Thank you for purchasing one of our products. Please read carefully the assembly instructions before the installation. Do not discard this manual or any of the packaging material until the unit has been completely assembled.














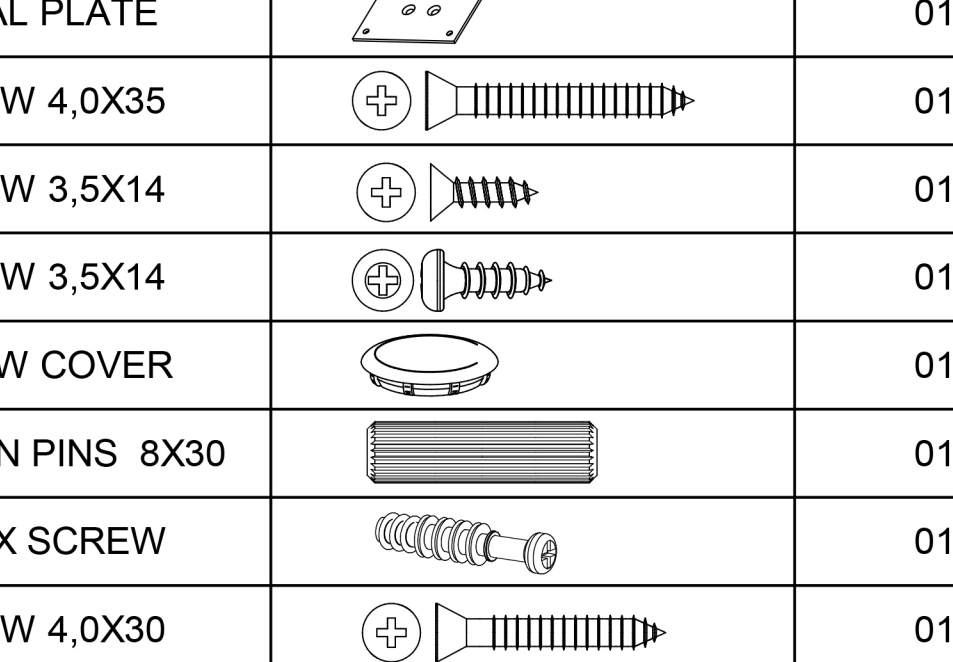

WOODEN TV STAND WITH 1 DRAWER

2 PEOPLE
REQUIRED

P.2

PARTS LIST















To assemble the product, follow the number references indicated on the adhesive label only, any other marking/stamp on the part may correspond to the production process control.

1x  614 - BASE	1x  615 - LEFT SIDE	1x  616 - RIGHT SIDE	1x  617 - LOWER DIVISION
1x  618 - SHELF	1x  619 - TOP	1x  620 - UPPER DIVISION	1x  621 - SMALLER DOOR
1x  622 - LARGER DOOR	2x  623 - BOTTLE PANEL	1x  624 - DRAWER FRONT	1x  625 - LARGER BACK PANEL
1x  626 - SMALLER BACK PANEL	2x  627 - DRAWER SIDE	1x  628 - DRAWER BACK	1x  629 - DRAWER BOTTOM
1x  630 - ADJUSTABLE SHELF	4x  01 - RIGHT / LEFT LEGS	1x  02 - CENTRAL LEG	3x  03 - GLASS HOLDER
1x  04 - ANTI TIPPING KIT	MAIN PARTS LAYOUT FOR REFERENCE: 		
2x  05 - SLIDE			

P.3

SCREWS:

NOTE: Assembly tools you will need (not included):
1 - Phillips screwdriver.
2 - Mallet or hammer.
3 - Screwdriver
4 - Drill ø6mm
5 - Square

PART	QTY.	ITEM		EX HARWARE
A	07	SCREW 4,5X60		01
AA	05	HINGE		01
AE	12	BACK PANEL SUPPORT		01
AG	05	PIN 6X30		01
AT	05	ANGLE BRACKET		01
B	03	SCREW 4,5X50		01
BX	02	GLUE		01
CC	21	SCREW 3,5X12		01
CH	06	METAL PLATE		01
D	05	SCREW 4,0X35		01
E	17	SCREW 3,5X14		01
F	21	SCREW 3,5X14		01
G	05	SCREW COVER		01
H	29	WOODEN PINS 8X30		01
N	13	BIGFIX SCREW		01
NN	11	SCREW 4,0X30		01
O	13	MINIFIX DRUM		01
P	04	MINIFIX COVER		01
SU	05	SHELF SUPPORT		01
Y	52	NAIL 10X10		01

P.4

ATTENTION:

This unit uses Bigfix Screw and Drum Minifix. The following explains how to use them. This is not an assembly step; it is a guide for when you are actually doing the assembly using this kind of hardware.

1. Put the Bigfix screw in the corresponding places.

2. Then join the panels where the Bigfix screw is installed.

3. Turn the Drum Minifix clockwise to lock the parts together and the gap will also close.

PRE-ASSEMBLY

Insert the wooden pins (H) into the innermost holes on panels. Put glue in the holes. Place the Bigfix screw into the corresponding holes on the surface.

Leave the hinge blocks (AA) aligned with the door.

PRE-ASSEMBLY

Insert the wooden pins (H) into the innermost holes on panels. Put glue in the holes. Fix the slides (05) to the markings on the part. Place the Bigfix screw into the corresponding holes on the surface.

Put glue and insert wooden pins (H) into the corresponding holes. Place the Bigfix screw into the corresponding holes on the surface. Attach the hinge blocks (AA) to the markings on the panels. On the sides of the drawer, fix the L (AT) angles, paying attention to the edge, one must be to the right and the other to the left, according to the drawing below.

STEP 1

Attach the side drawer (627) on the drawer back (628) with screw (D).

Attach the drawer front on the drawer sides, with the angle bracket (AT). Apply glue to the dowels, as detailed below.

STEP 3

Fix the slides (05) with the screws (CC). Nail the bottom of the drawer bottom (629) with the nail (Y), be sure that the drawer is completely aligned.

Fix the divisions (617 and 620) on the shelf (618). After that, fix the sides (615 and 616) on the shelf (618). Attention, the cap for minifix (P) is only used when drilling the front of the room (617). Glue the wooden pins (H). Assemble the bigfix as shown on page 4.

STEP 5

Fit the panels (623) to the shelf (618). Glue the wooden pins (H).

Fix the top (619) and the base (614). Put glues on the wooden pins (H). Attention, on the sides, a 15mm diameter hole cover (G) is used to cover the minifix drums, and in the division (620) a plastic cover (P) is used. Assemble the bigfix according to the details on page 4.

STEP 7

Fix the glass holders (03) according to the measures in the drawing below.

First fix the plates (CH) to the feet (01) and (02). Then, the feet (01) and (02) must be fixed to the base (614), according to the measures in the drawing below.

STEP 9

Nail the back according to the drawing below. To fix the back on the shelf (618) use the back fixer (AE) + nail (Y).

Anti-tipping system: Fix the angle bracket (CT) with the screw (P) on the top. Then lay the dresser on the wall and use the screw (K) to drill the bottom and fix it to the wall with the plastic sleeve (X). Use a ø6 drill to pierce the wall and place the wall anchor in the hole made.

STEP 11

Place the shelf supports (SU) on the side (615) and in the upper division (620). After that, put the adjustable shelf (630). Fit the drawer according to the drawing below.

In this step, you must fix the shim with the hinge (AA), as shown in detail n° 1. Then, if necessary, make the adjustments to the doors, according to details 2, 3 and 4.

ALL DONE!

Before you start using the unit, make sure that all the screws, bolts, cam locks, etc. are properly tightened, and read the following warnings.

11,02 lbs. 33,07 lbs. 11,02 lbs. 6,61 lbs.

WARNING

Serious or fatal crushing injuries can occur from furniture tipping over. To help prevent tipover:

- Install tipover restraint provided.
- Place heaviest items in the lower drawers.
- Unless specifically designed to accommodate, do not set TVs or other objects on top of this product.
- Never allow children to climb on hang on drawers, doors or shelves.
- Never open more than one drawer at a time. (OR)
- Do not defeat or remove the drawer interlock system.

Use of tipover restraints may only reduce, but not eliminate, the risk of tipover. This is a permanent label. Do not remove.

This product can expose you to chemical including Formaldehyde know to cause both cancer and birth defects or other reproductive harm, which is known to the state of California to cause cancer or birth defects or other reproductive harm. For more information go to www.p65warnings.ca.gov/furniture.