


MODEL:IG10600165



OWNER'S MANUAL

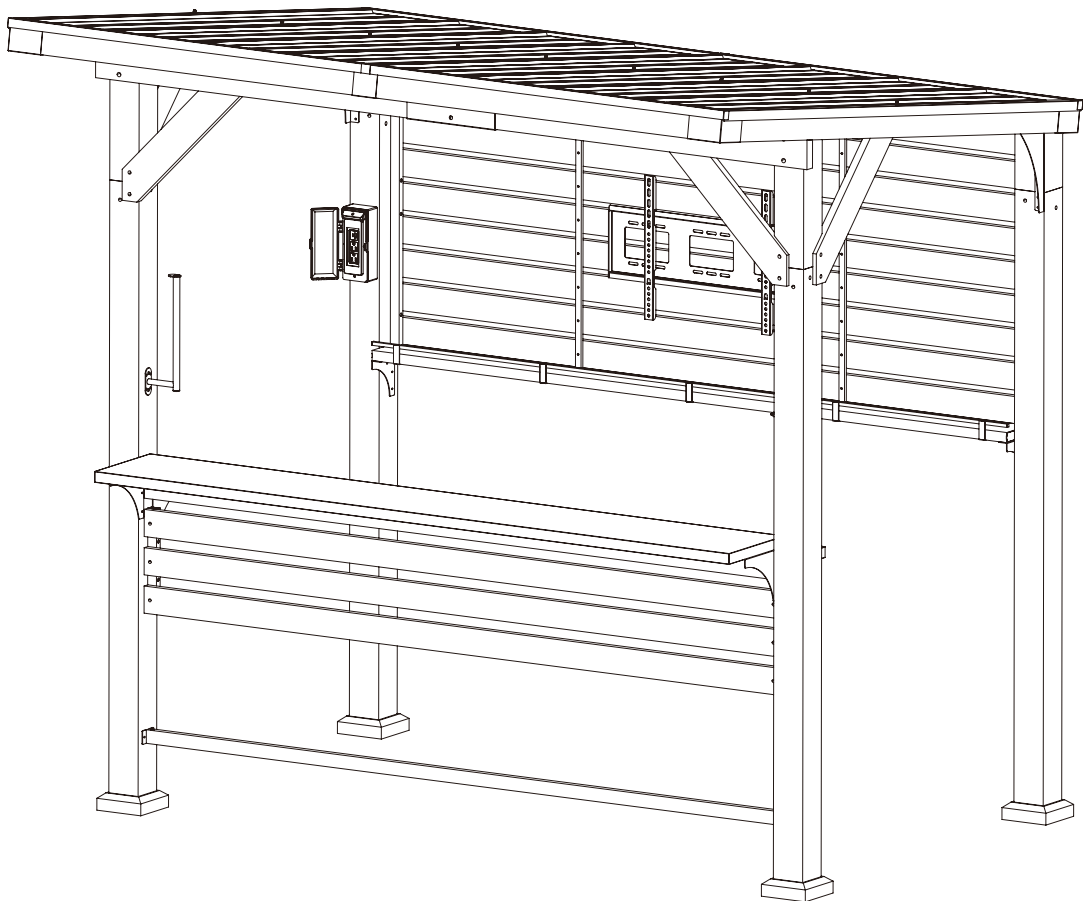


The Aura 6.5'x8' Outdoor Entertainment Bar

TABLE OF CONTENTS

ASSEMBLY GUIDE.....02
USING YOUR PRODUCT.....05











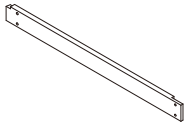
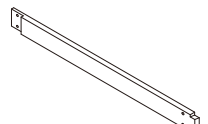







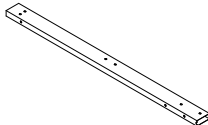
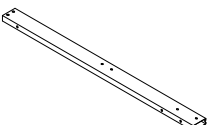
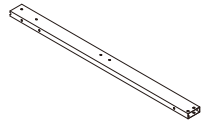
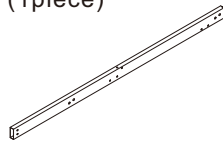
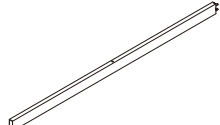
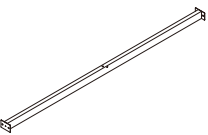
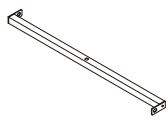
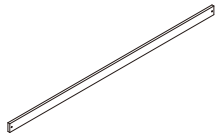
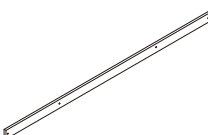
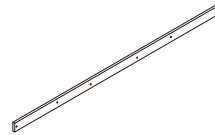


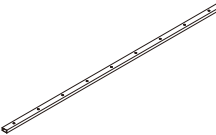
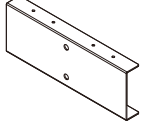



January 17, 2025









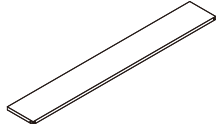
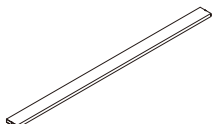
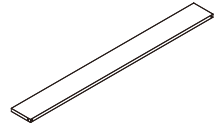

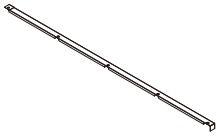

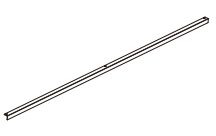
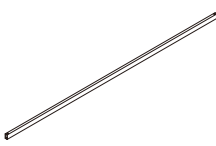
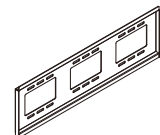



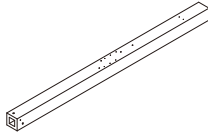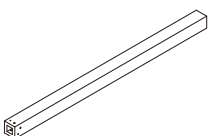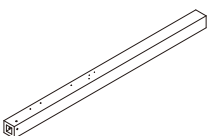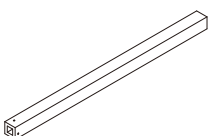



QUESTIONS?

-  **E-mail:** support@modernshade.org
-  **Toll Free:** 1-888-666-3070
-  **Mon-Fri:** 9am--- 5pm PST.














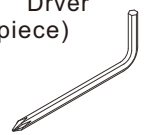

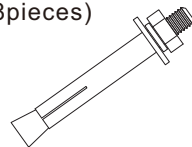

ASSEMBLY GUIDE

PARTS LIST

A1 Post 1 (1piece) 	A2 Post 2 (1piece) 	A3 Post 3 (1piece) 	A4 Post 4 (1piece) 	A5 Post 5 (1piece) 	A6 Post 6 (1piece) 
P0010003101	P0010003301	P0010003501	P0010003701	P0010003201	P0010003401
A7 Post 7 (1piece) 	A8 Post 8 (1piece) 	B Foot Base (4pieces) 	C Foot Cover (4pieces) 	D1 Front Cross Beam 1 (1piece) 	D2 Front Cross Beam 2 (1piece) 
P0010003601	P0010003801	P0030000401	P0020000202	P0040007001	P0040007101
E1 Support Bracket 1 (1piece) 	E2 Support Bracket 2 (1piece) 	E3 Support Bracket 3 (1piece) 	E4 Support Bracket 4 (1piece) 	E5 Support Bracket 5 (1piece) 	E6 Support Bracket 6 (1piece) 
P0050002901	P0050003001	P0050003101	P0050003201	P0050003301	P0050003401
F1 Upper Cross Beam 1 (1piece) 	F2 Upper Cross Beam 2 (1piece) 	F3 Upper Cross Beam 3 (1piece) 	F4 Upper Cross Beam 4 (1piece) 	F5 Upper Cross Beam 5 (1piece) 	F6 Upper Cross Beam 6 (1piece) 
P0040007201	P0040007301	P0040007401	P0040007501	P0040007601	P0040007701
G Roof Rib (3pieces) 	H Roof Support 1 (4pieces) 	J1 Screen Beam 1 (4pieces) 	J2 Screen Beam 2 (7pieces) 	J3 Screen Beam 3 (2 pieces) 	K1 Connector 1 (2pieces) 
P0090008001	P0090008101	P0150000101	P0150000201	P0150000301	P0060005301
K2 Connector 2 (2pieces) 	K3 Connector 3 (2pieces) 	K4 Connector 4 (1piece) 	K5 Connector 5 (2pieces) 	K6 Connector 6 (1piece) 	K7 Connector 7 (1piece) 
P0060005401	P0060005501	P0060005601	P0110002501	P0110002601	P0110002701

K8 Connector 8 (2pieces) 	K9 Connector 9 (2pieces) 	K10 Connector 10 (2pieces) 	K11 Connector 11 (2pieces) 	L1 Shelf Support Bracket 1 (2pieces) 	L2 Shelf Support Bracket 2 (2piece) 
P0060005701	P0110002801	P0060005801	P0060005901	P0050003501	P0050003601
L3 Shelf Support Bracket 3 (1piece) 	L4 Shelf Support Bracket 4 (1piece) 	M1 Shelf 1 (1piece) 	M2 Shelf 2 (1piece) 	M3 Shelf 3 (1piece) 	N Fence (1piece) 
P0050003701	P0050003801	P0140000401	P0140000501	P0140000601	P0150000401
P1 Roof Plate Border 1 (2pieces) 	P2 Roof Plate Border 2 (2pieces) 	P3 Roof Plate Border 3 (2pieces) 	Q Bottom support (1piece) 	R1 TV stand 1 (1piece) 	R2 TV stand 2 (1piece) 
P0120002501	P0120002601	P0120002701	P0110002901	P1000001301	P1000001401
S Roof Plates (8pieces) 	T Power Strip (1piece) 	U Power Strip Cover (1piece) 	V Paper Tower Rack (1piece) 	W Bottle opener (1piece) 	X Power Strip Case (1piece) 
P0130003601	P0240000201	P0260000101	P1000000901	P1000001201	P0260000201

HARDWARE PACK

AA Bolt M5*25 (84+4pieces) 	BB Bolt M6*45 (4+1pieces) 	CC Bolt M8*35 (12+1pieces) 	DD Bolt M10*65 (18+1pieces) 	EE Bolt M3*9 (8+1pieces) 	FF Bolt M10*115 (8+1pieces) 
H0008008098	H0008008137	H0008008099	H0008008100	H0008008092	H0008008149
GG Bolt M6*45 (4+1pieces) 	HH Bolt M6*35 (34+2pieces) 	JJ Bolt M5*25 (20+1pieces) 	KK Bolt M6*20 (75+5pieces) 	LL Bolt M8*30 (2+1pieces) 	MM Bolt M10*150 (2+1pieces) 
H0008008016	H0008008116	H0008008138	H0008008036	H0008008139	H0008008165
NN Anti-slip Screw Nut (2+1pieces) 	PP Four-claw Screw Nut M8*8 (2+1pieces) 	QQ M5x39 Double head screw (9+1pieces) 	RR M5 Ball nut (9+1pieces) 	SS M5 Flat Washer (27+2pieces) 	TT M6 Flat washer (133+7pieces) 
H0008008126	H0008008127	H0008008163	H0008008164	H0008008056	H0008008057
UU M8 Flat washer (14+1pieces) 	VV M10 Flat washer (30+2pieces) 	WW M5 Sealant Washer (27+2pieces) 	XX Double Open End Wrench M6/M8 (2pieces) 	YY Wrench M10 (2pieces) 	ZZ M6 Allen Key with Screw Driver (1piece) 
H0008008058	H0008008141	H0008008059	H0008008062	H0008008142	H0008008132
ZY M6 Allen Key (1piece) 	ZX M8 Allen Key (2pieces) 	ZW Concrete Anchor M6*60 (8pieces) 	ZV Screw Nut M6 (4+1pieces) 	ZU Bolt M6*60 (12+1pieces) 	
H0008008133	H0008008143	H0008008095	H0008008112	H0008008169	

IMPORTANT:

This instruction manual contains important information necessary for the proper assembly and safe use of the product.

Read and follow all warnings and instructions before assembling and using the product.

Follow all warnings and instructions when using the product.

Keep this manual for future reference.

Installer/Assembler: leave these instructions with the consumer.

SAFETY ALERT KEY

DANGER

Indicates a hazardous situation that, if not avoided, will result in death or serious injury.

WARNING

Indicates a hazardous situation that, if not avoided, could result in death or serious injury.

CAUTION

Indicates a hazardous situation that, if not avoided, could result in minor or moderate injury.

NOTICE

Indicates information considered important, but not hazard-related (e.g. messages related to property damage).

ASSEMBLY INSTRUCTIONS

•Please carefully unpack each of the components and hardware. check the components against the parts list and make sure there are no missing parts. lay pieces on cardboard or a soft mat to help protect the pieces from scratches.

CAUTION


Watch for sharp edges when handling the pieces, wear gloves to avoid injury.

- For ease of assembly, it is recommended to have 3 or more people and allow enough time to completely finish the assembly. assembly can take 6-8 hours. a step-ladder is required for assembly (not included).
- Follow step by step instructions, and follow all safety warnings provided with your tools.
- DO NOT tighten screws until all the screws and washers are properly installed. Tighten screws securely, do not over tighten.
- Gazebo should not be used in inclement weather and high winds.

STEP 01#


Slide foot base **B** and foot cover **C** onto post **A1**. Use four (4) **[AA]** bolts to attach foot base **B** to post **A1**. Repeat with the post **A2**, **A3** and **A4**.

[AA] x16

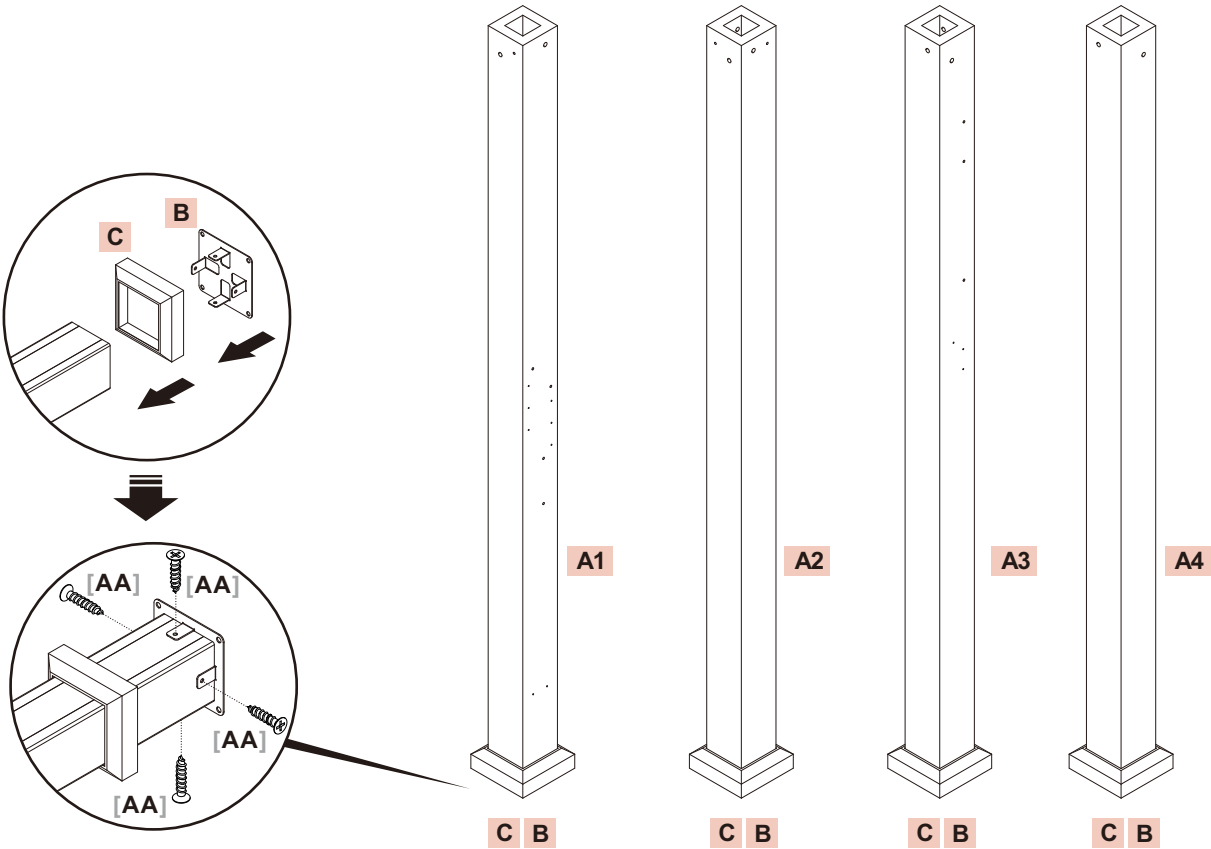


STEP 02#


Insert post **A5**, **A6**, **A7** and **A8** into post **A1**, **A2**, **A3** and **A4** accordingly, securing with four (4) **[DD]** bolts and four (4) **[VV]** flat washers.

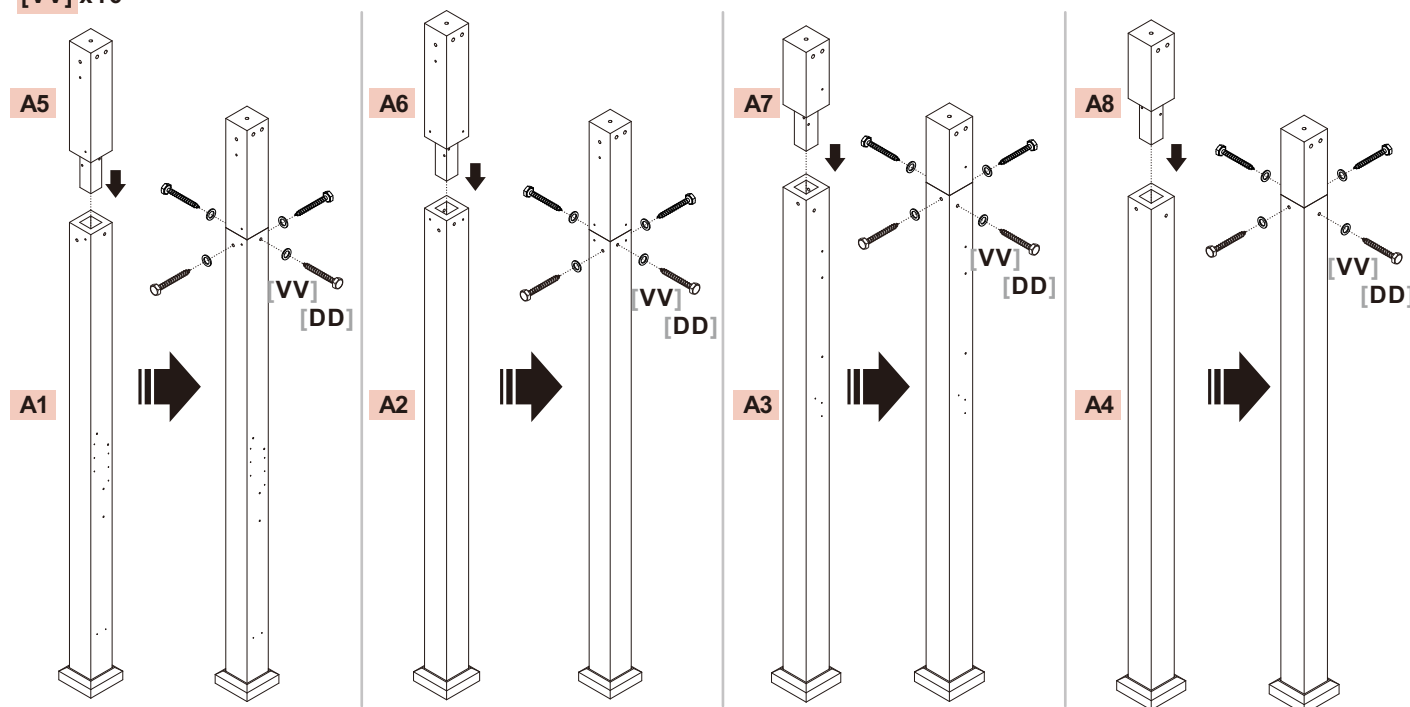[DD] x16**[VV]** x16**STEP 03#**

Attach two (2) **[PP]** screw nuts to front cross beam **D2**. Use two (2) **[LL]** bolts and two (2) **[UU]** flat washers to attach the front of connector **K4** to front cross beam **D1** and **D2**.

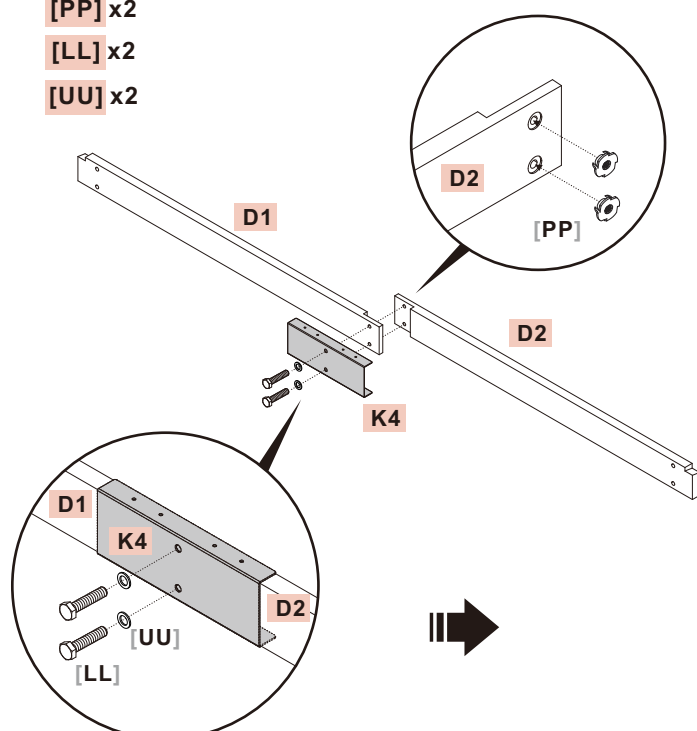[PP] x2**[LL]** x2**[UU]** x2**STEP 04#**

Cover the connection with connector **K4**, using four (4) **[AA]** bolts on the top and four (4) bolts on the bottom.

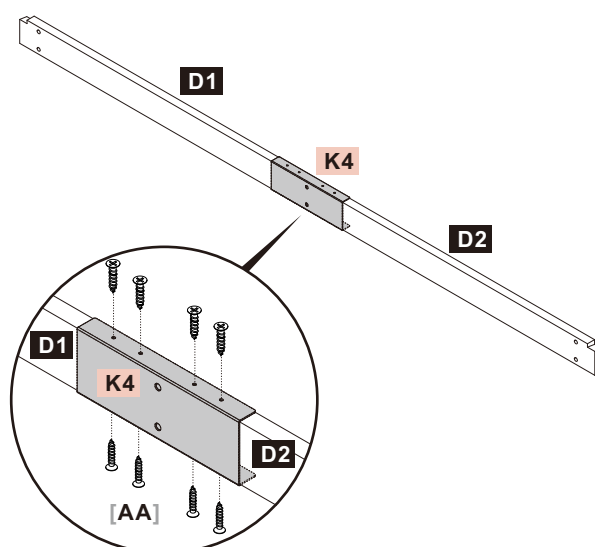[AA] x8

STEP 5#


Attach the front cross beam assembly **D1 D2** to left **A5** and right **A6** using one (1) **[MM]** bolt, two (2) **[VV]** washers, and one (1) **[NN]** nut in the top hole, and one (1) **[DD]** bolt and **[VV]** washer in the bottom hole.

[MM] x2

[DD] x2

[VV] x6


[NN] x2

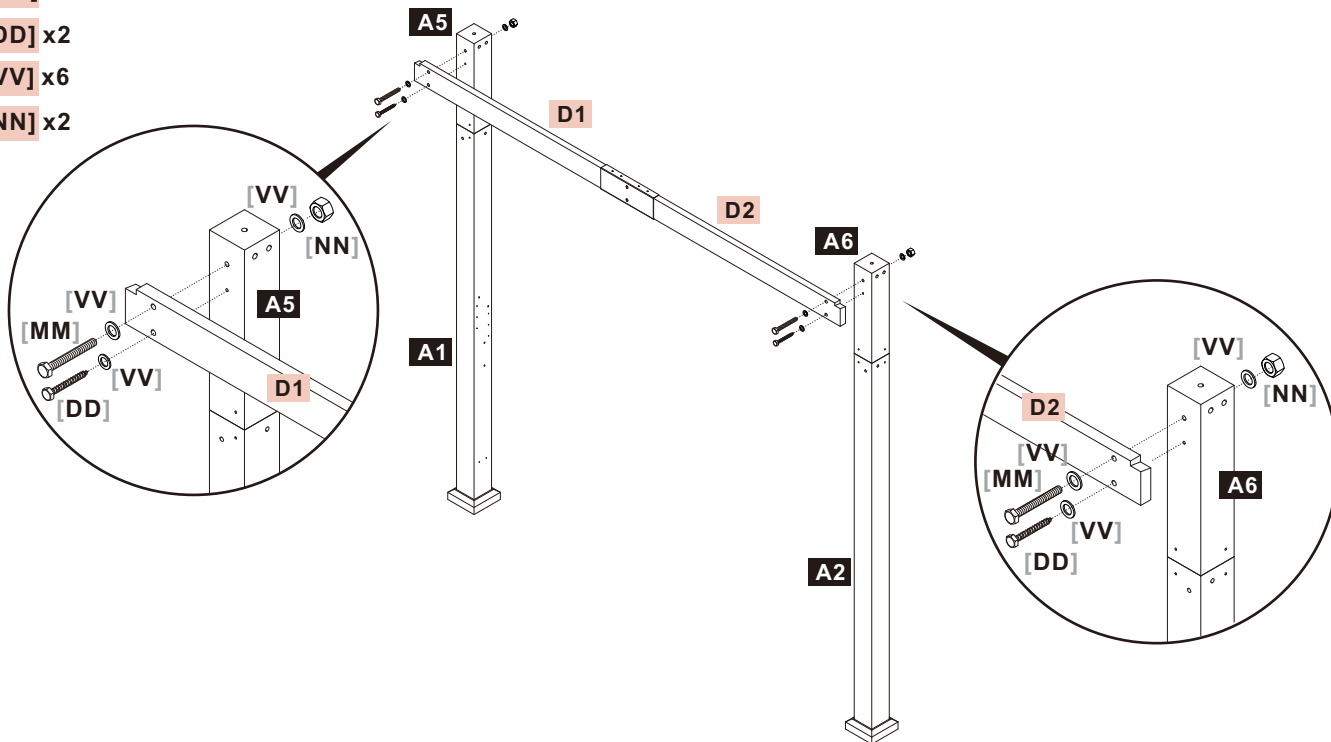**STEP 6#**

Slide upper cross beam **F1** and **F2** onto connector **K10**. Use six (6) **[KK]** bolts and six (6) **[TT]** flat washers to attach connector **K10** to **F1 F2**. Use one (1) **[KK]** bolt and one (1) **[TT]** flat washer to attach one (1) connector **K9** to upper cross beam assembly **F1 F2**.

[KK] x7

[TT] x7

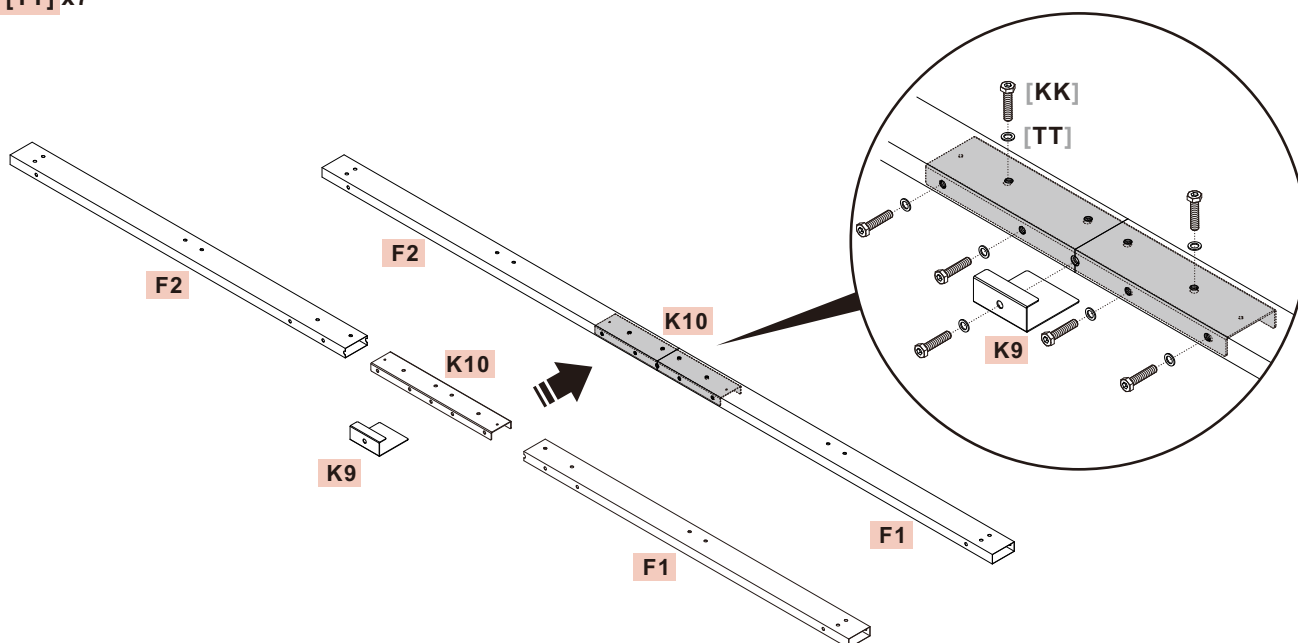


STEP 07#

Use two (2) [KK] bolts and two (2) [TT] flat washers to attach each connector **K8** to each end of the assembly.

[KK] x4


[TT] x4

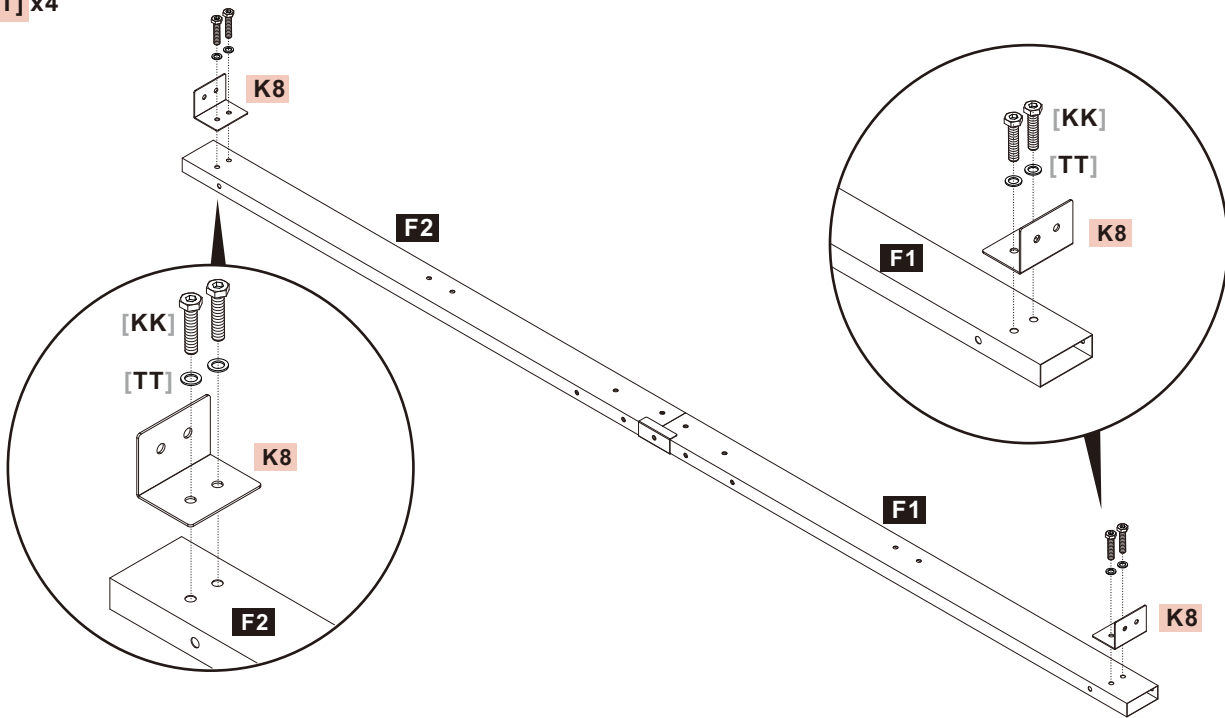**STEP 08#**

Slide upper cross beam **F3** and **F4** onto connector **K10**. Use six (6) [KK] bolts and six (6) [TT] flat washers to attach connector **K10** to **F3** **F4**. Use one (1) [KK] bolt and one (1) [TT] flat washer to attach one (1) connector **K9** to upper cross beam assembly **F3** **F4**.

[KK] x7

[TT] x7

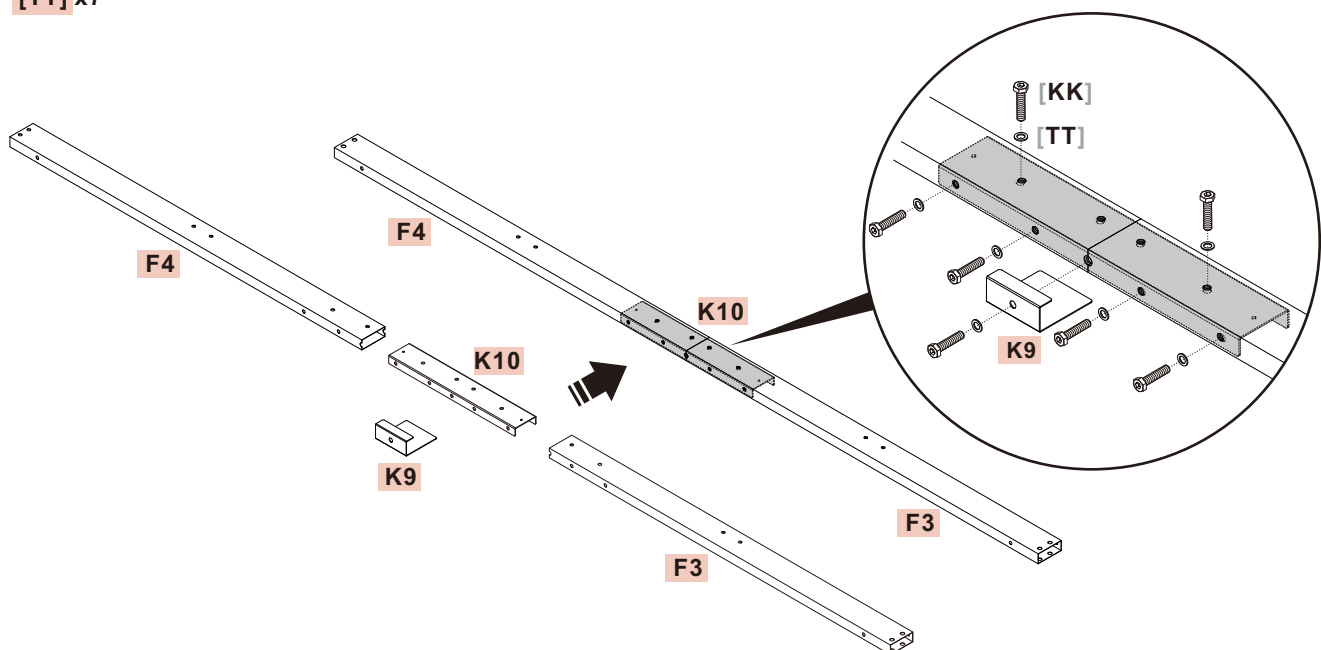


STEP 9#

Use two (2) [FF] bolts and two (2) [VV] flat washers to attach each end of upper cross beam **F5** to post **A5** and **A8**. Use two (2) [FF] bolts and two (2) [VV] flat washers to attach each end of upper cross beam **F6** to post **A6** and **A7**.

[FF] x8

[VV] x8

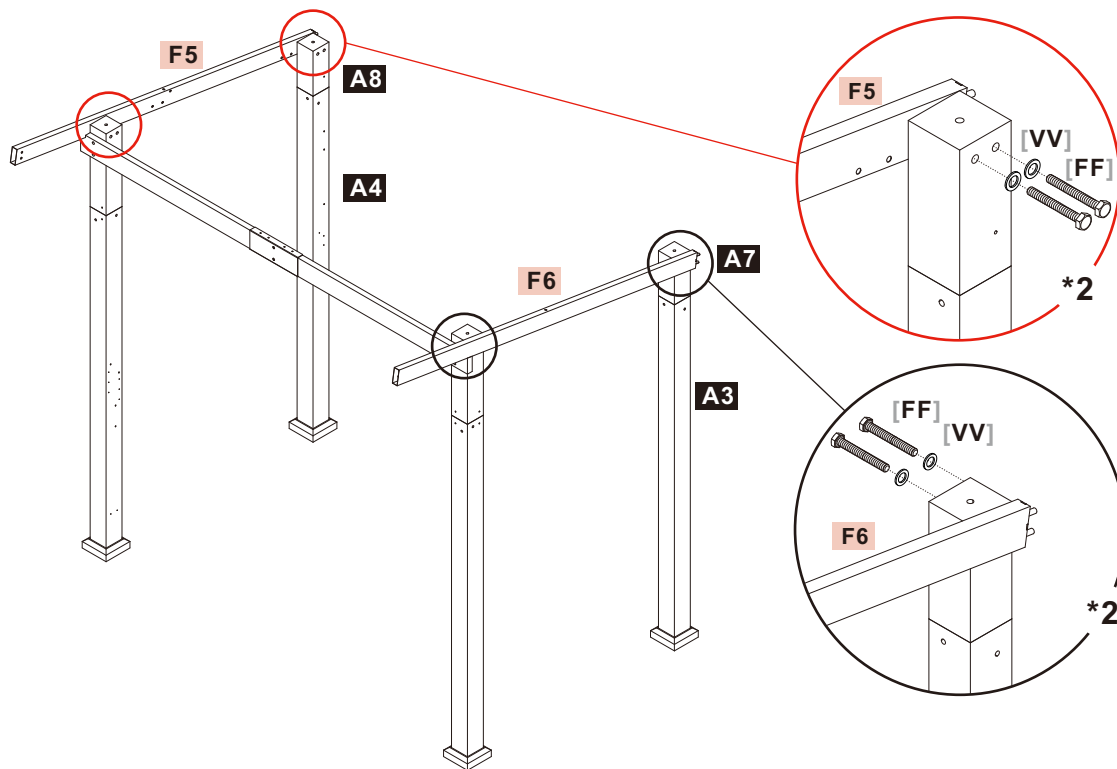**STEP 10#**


Use two (2) [GG] bolts and two (2) [TT] flat washers to attach one (1) connector **K7** to upper cross beam **F4** and **F5**. Use two (2) [KK] bolts and two (2) [TT] flat washers to secure connector **K7**.

Use two (2) [GG] bolts and two (2) [TT] flat washers to attach one (1) connector **K6** to upper cross beam **F3** and **F6**. Use two (2) [KK] bolts and two (2) [TT] flat washers to secure connector **K6**.

[GG] x4


[KK] x4

[TT] x8

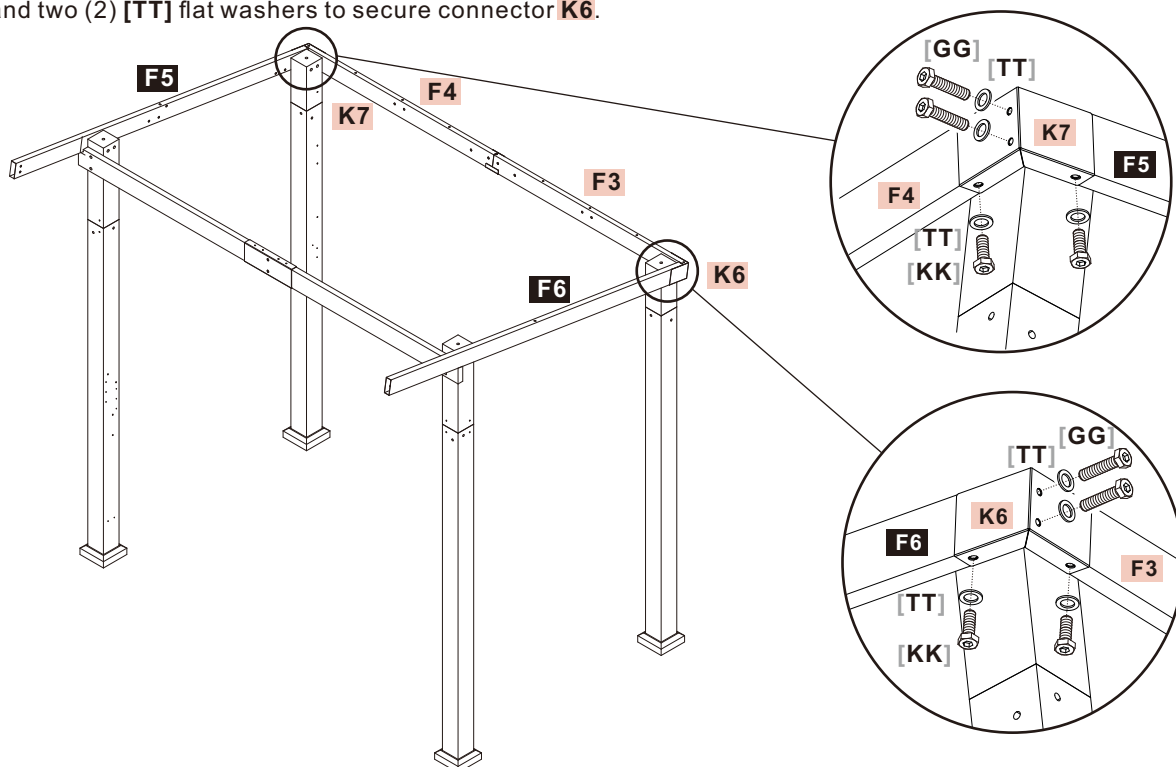

STEP 11#

CRITIAL: SQUARE UNIT BEFORE PROCEEDING TO NEXT STEPS. ONCE SQUARE, TIGHTEN ALL HARDWARE.

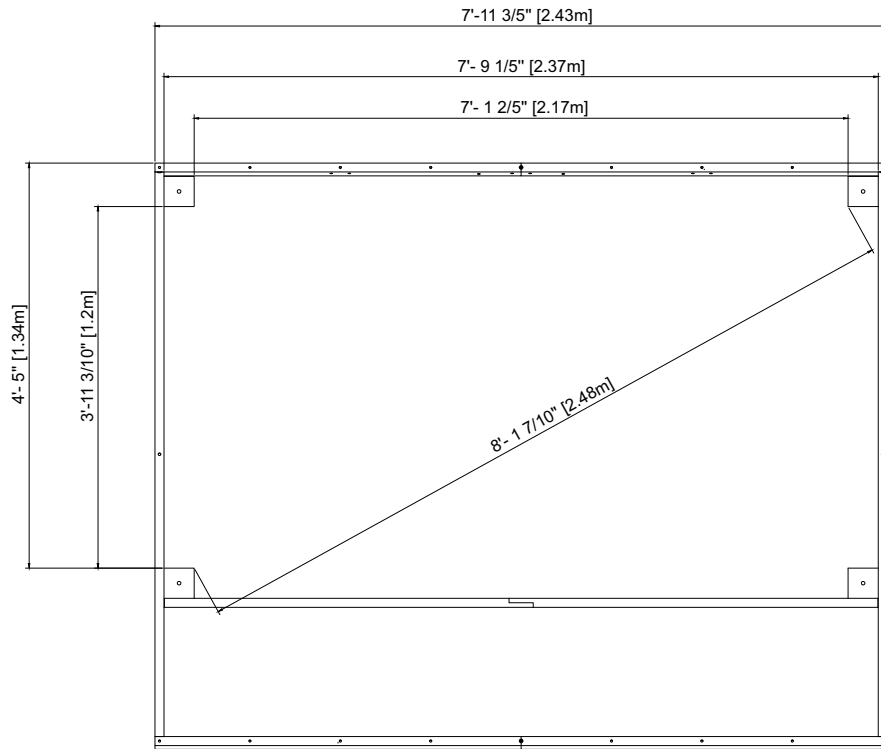
**STEP 12#**

Use five (5) [AA] bolts to attach one (1) support bracket **E6** to post **A8**. Use two (2) [KK] bolts and two (2) [TT] flat washers to attach **E6** to upper cross beam **F5**. Repeat support bracket **E5** to post **A7** and upper cross beam **F6**.

[AA] x10


[TT] x4

[KK] x4

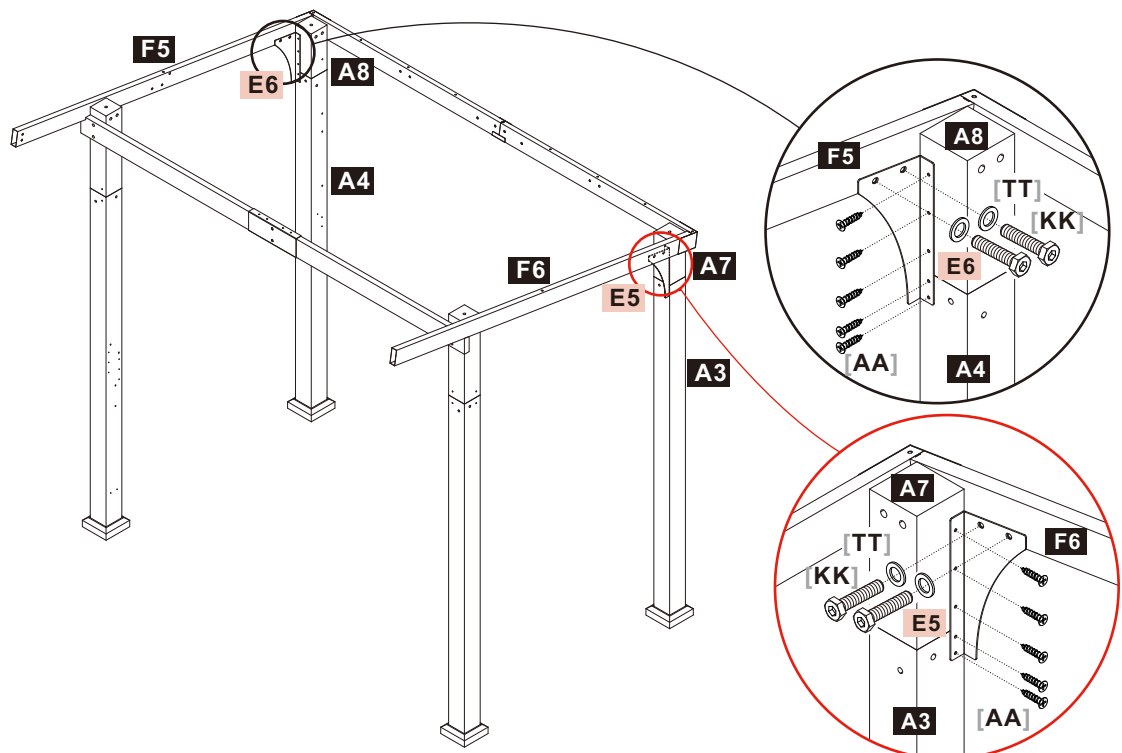


STEP 13#


Use four (4) [CC] bolts and four (4) [UU] flat washers to attach support bracket **E1** to post **A5** and front cross beam **D1**. Repeat with support bracket **E2** with post **A6** and cross beam **D2**. Use two (2) [CC] bolts and two (2) [UU] flat washers to attach lower end of support bracket **E3** to post **A5**. Use two (2) [HH] bolts and two (2) [TT] flat washers to attach upper end of support bracket **E3** to upper cross beam **F5**. Repeat with support bracket **E4** with post **A6** and upper cross beam **F6**.

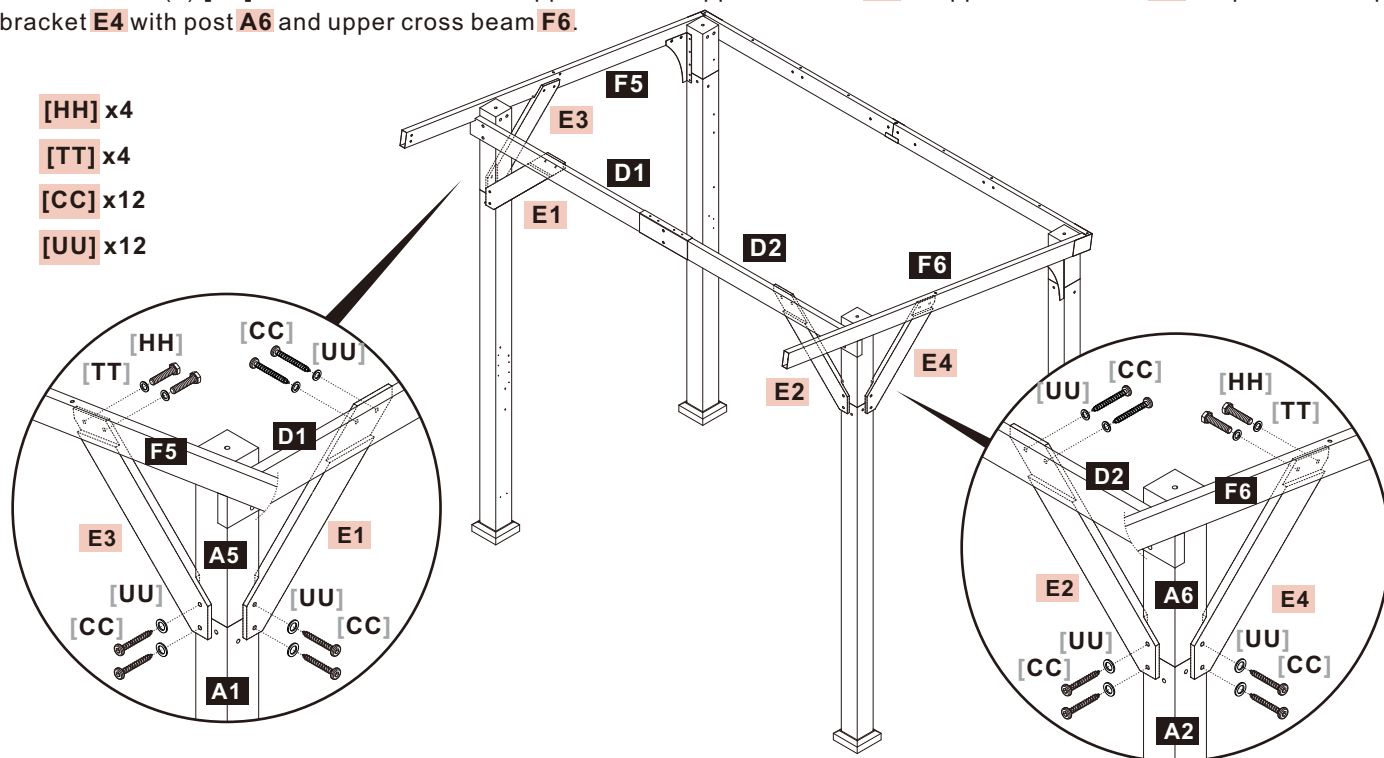**STEP 14#**

Use two (2) [KK] bolts and two (2) [TT] flat washers to attach one (1) connector **K8** on upper cross beam assembly **F1** **F2** to upper cross beam **F5**. Repeat with the other **K8** to upper cross beam **F6**.

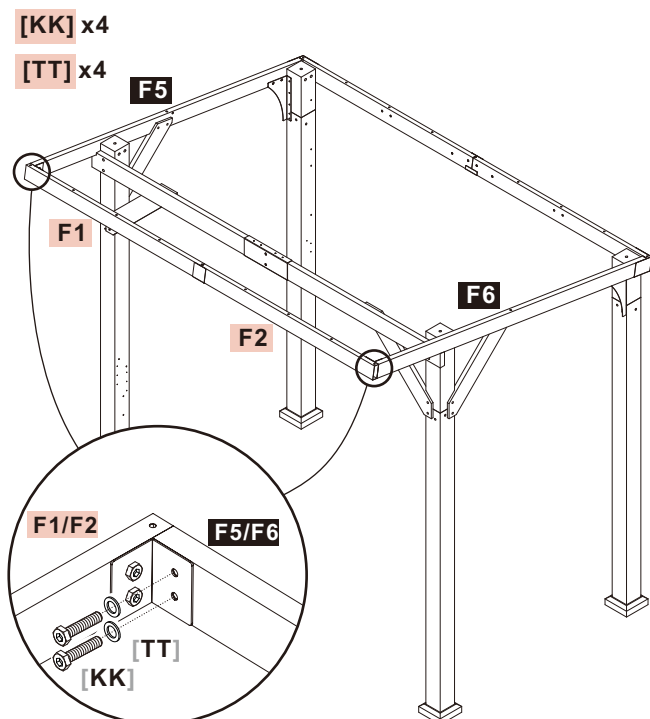**STEP 15#**

Use two (2) [KK] bolts and two (2) [TT] flat washers to attach one (1) connector **K5** to upper cross beam **F1** and **F5**. Repeat with the other **K5** to **F2** and **F6**.

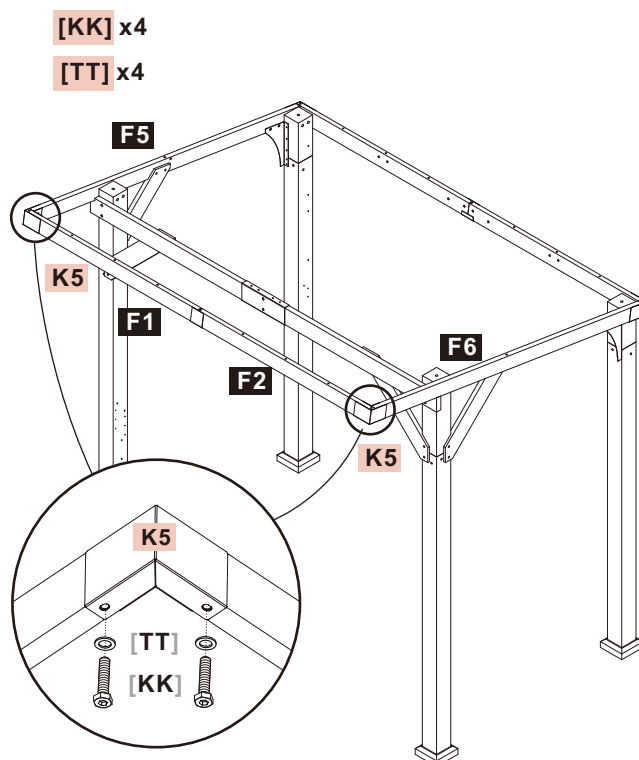


STEP 16#

Use two (2) [KK] bolts and two (2) [TT] flat washers to attach each end of roof rib **G** to upper cross beam assembly **F1 F2** and **F3 F4**. Repeat with the other two (2) roof ribs **G**.

[KK] x12

[TT] x12

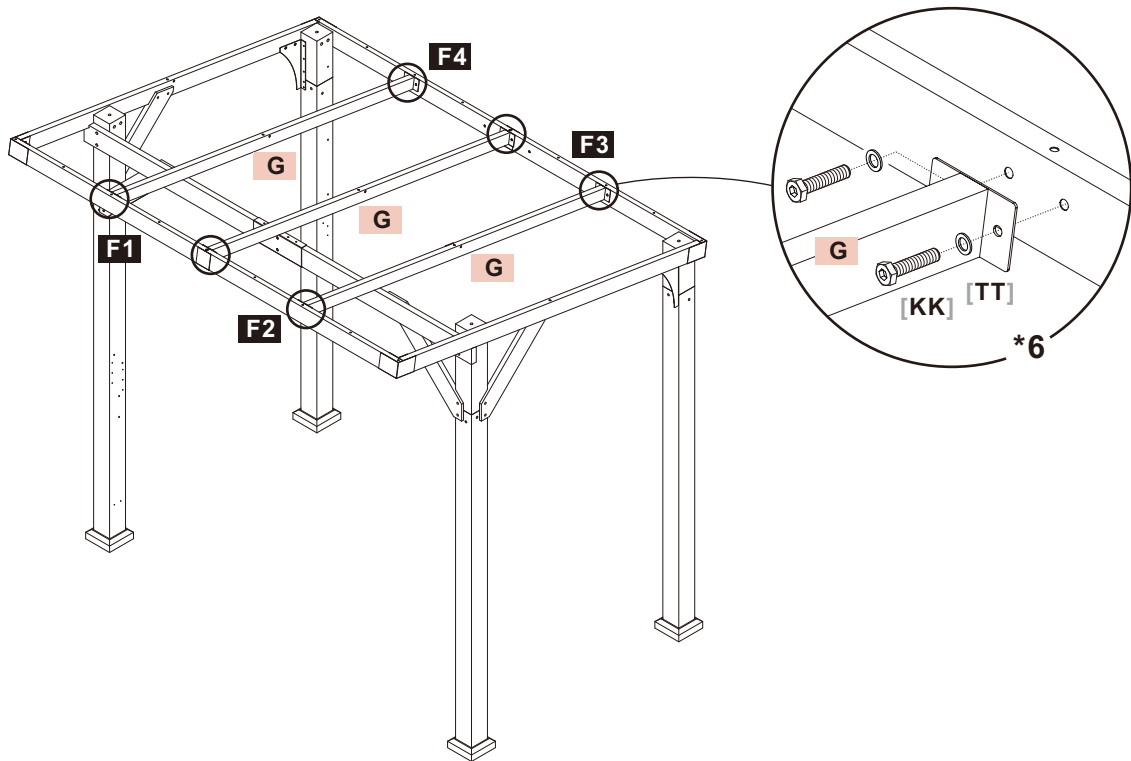
**STEP 17#**

Use two (2) [KK] bolts and two (2) [TT] flat washers to attach one (1) roof support **H** to upper cross beam **F5/F6** and roof rib **G**. repeat with the other roof support **H**.

Use two (2) [KK] bolts and two (2) [TT] flat washers to attach one (1) roof support **H** to roof ribs **G**. repeat with the other roof support **H**.

[KK] x8


[TT] x8

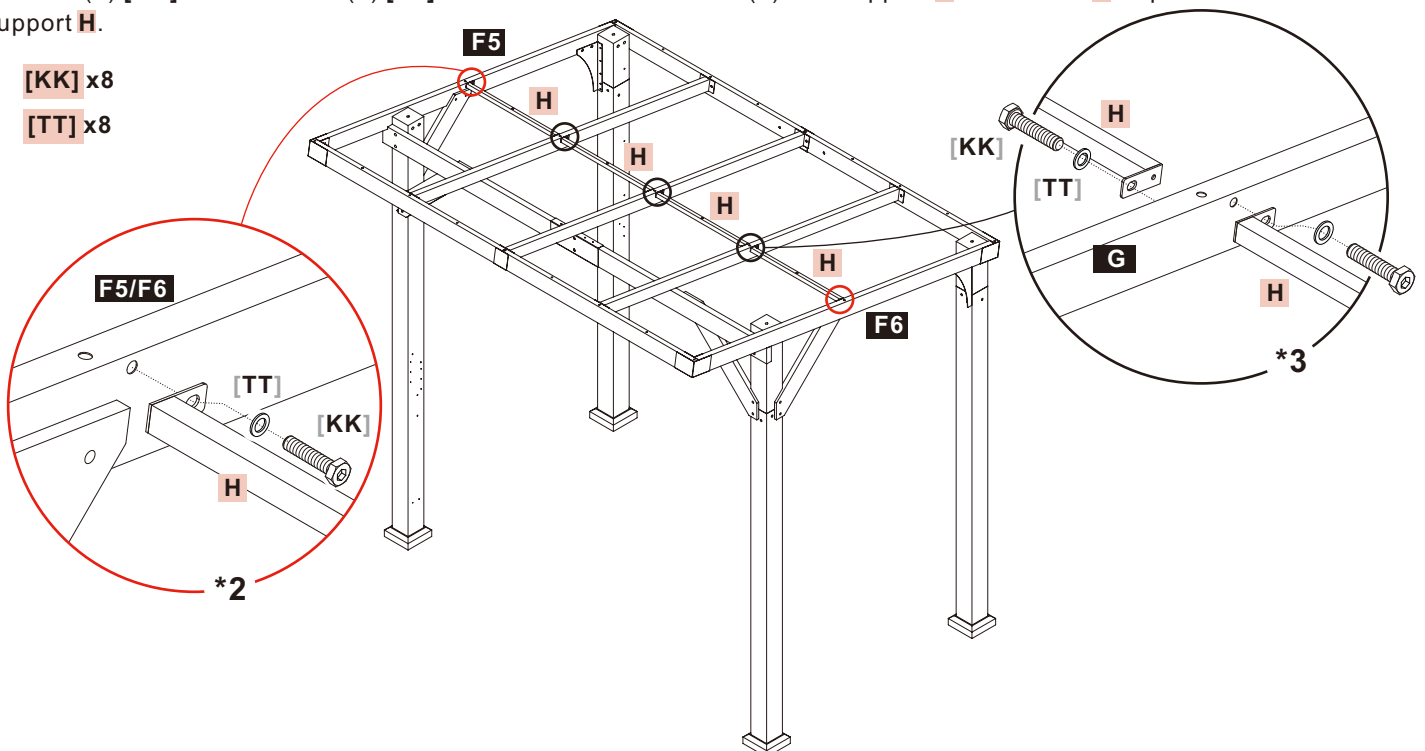

STEP 18#

Attach nine (9) [QQ] double head screws to four (4) roof supports H.

[QQ] x9

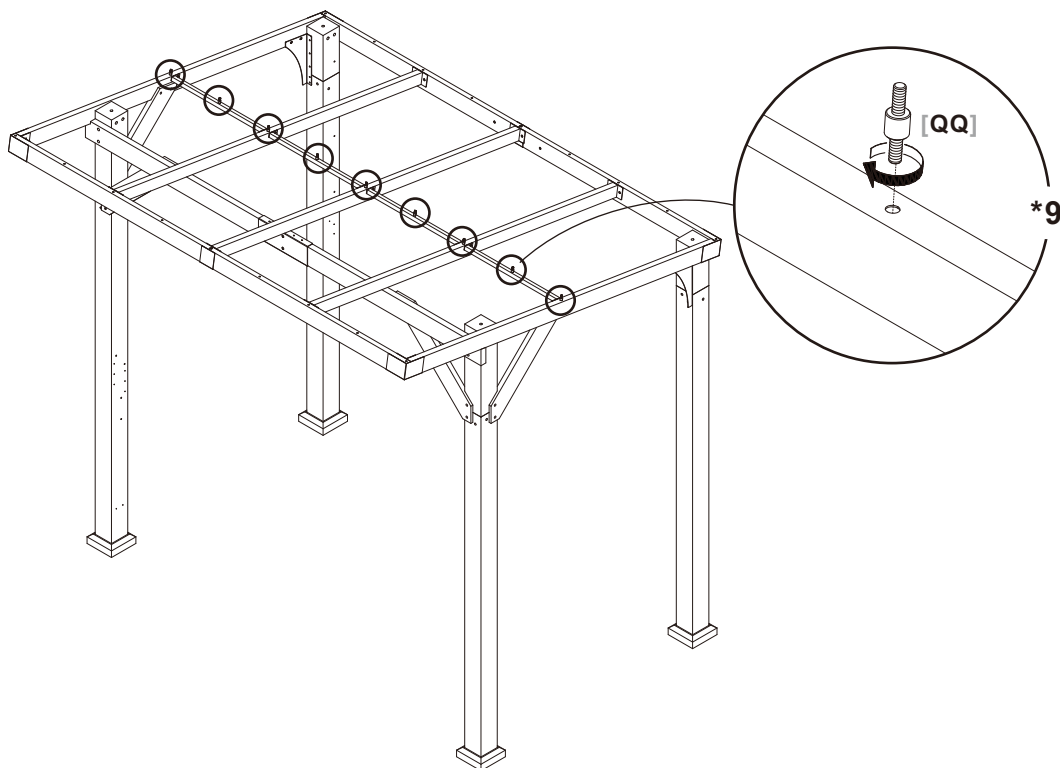


STEP 19#

DO NOT tighten the bolts completely until all the bolts and washers are properly installed.

Overlap the edges of the adjacent roof plates together.

Attach each hole of roof plates S to [QQ] double head screws on roof supports H.

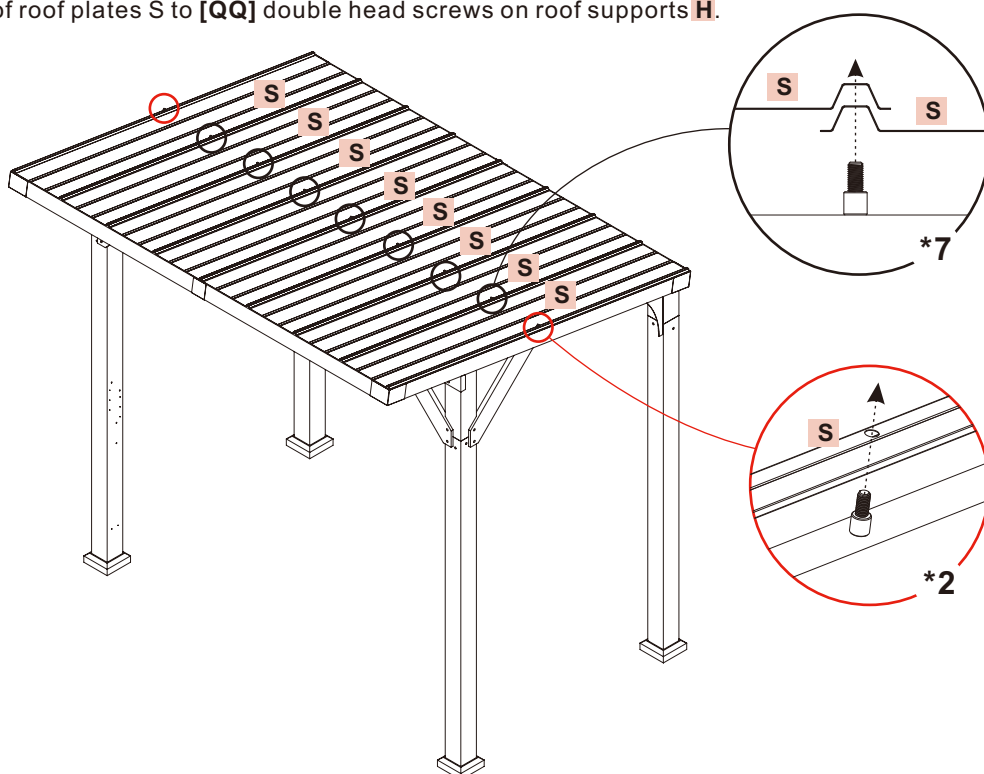

Use one (1) **[RR]** ball nut, one (1) **[SS]** flat washer and one (1) **[WW]** sealant washer to attach one (1) roof plate border **P3** to the side of roof plate. Repeat with the other roof plate border **P3**.

Use one (1) **[RR]** ball nut, one (1) **[SS]** flat washer and one (1) **[WW]** sealant washer to secure the holes with double head screws of roof plates.




Overlap the end of roof plate border **P1** and **P2** together. Use one (1) **[JJ]** bolt, one (1) **[SS]** flat washer and one (1) **[WW]** sealant washer to attach each hole of **P1** and **P2** to the edges of roof plates.

Use one (1) **[JJ]** bolt, one (1) **[SS]** flat washer and one (1) **[WW]** sealant washer to secure each corner of **P1**, **P2** and **P3**.

STEP 22#

Use three (3) [AA] bolts to attach one (1) shelf support bracket **L1** to post **A1**. Repeat with shelf support bracket **L2** to post **A2**.

[AA] x6

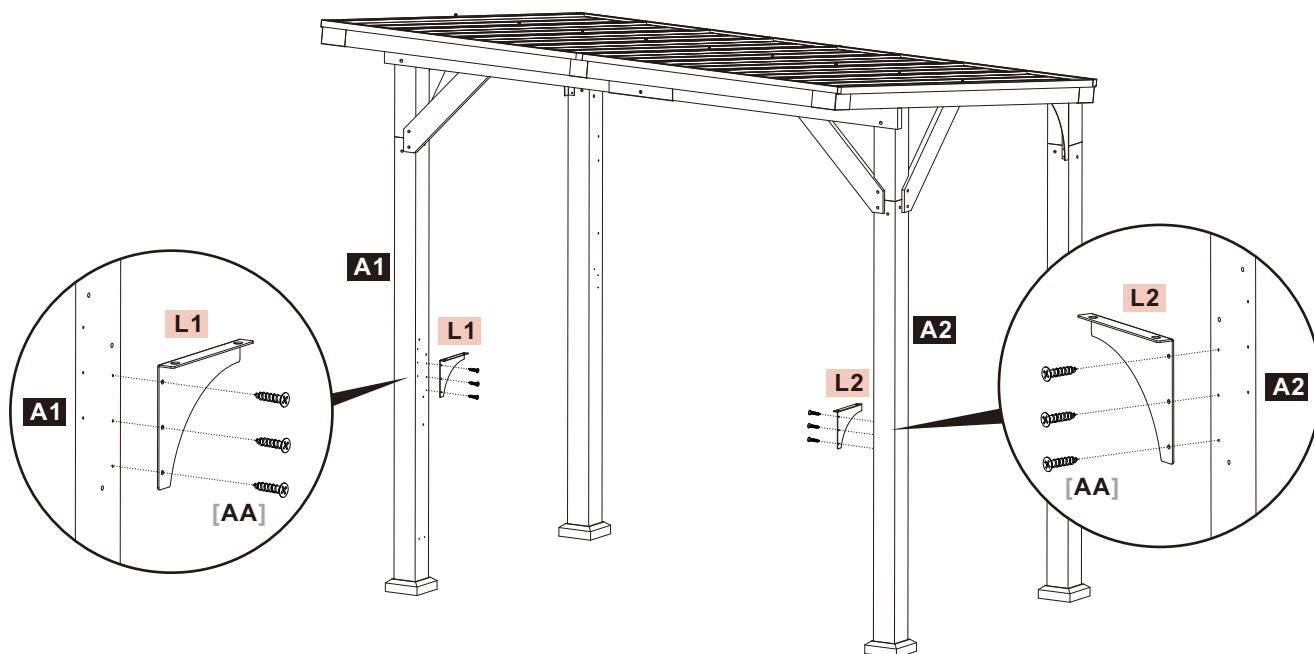


STEP 23#

Use two (2) [KK] bolts and two (2) [TT] flat washers to attach shelf support bracket **L1/L2** to shelf **M3**. Use one (1) [BB] bolt and one (1) [TT] washer to attach each end of shelf **M3** to the posts.

[BB] x2

[TT] x6

[KK] x4

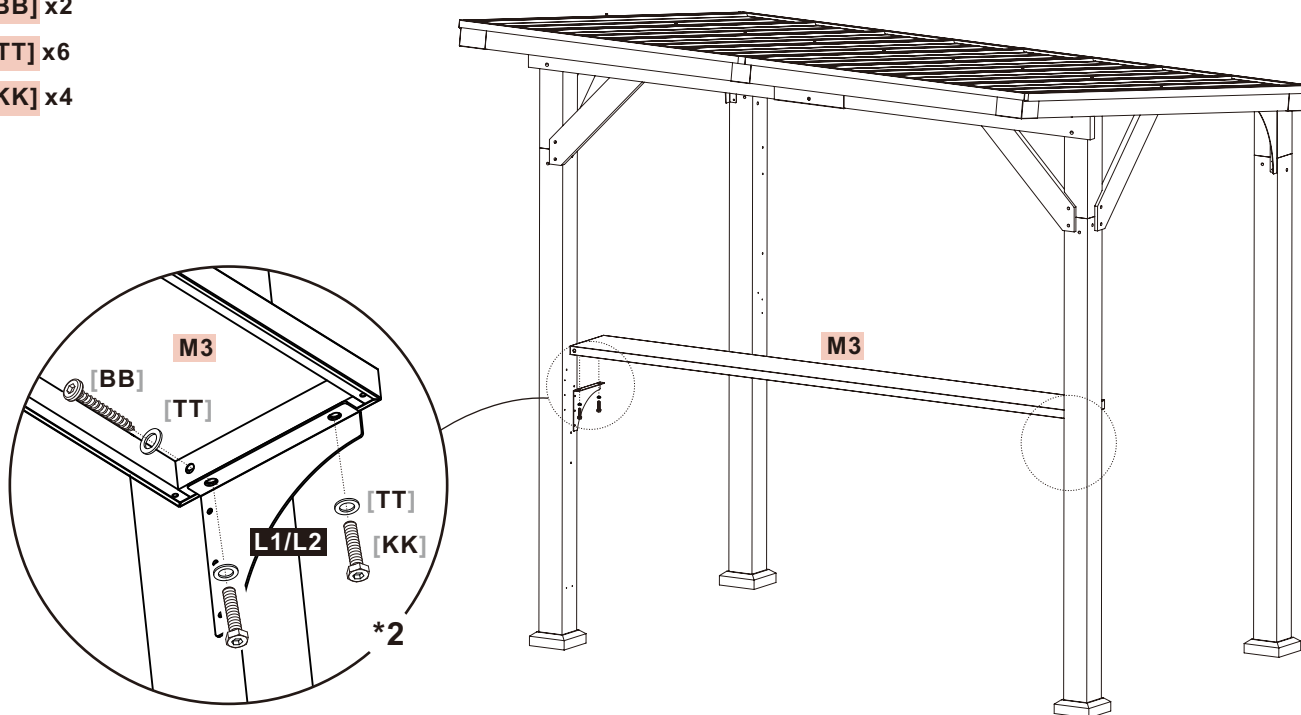


STEP 24#

Use two (2) [ZU] bolts and two (2) [TT] flat washers to attach one (1) connector **K1** to the posts. Repeat with the other connector **K1**.

[TT] x4

[ZU] x4

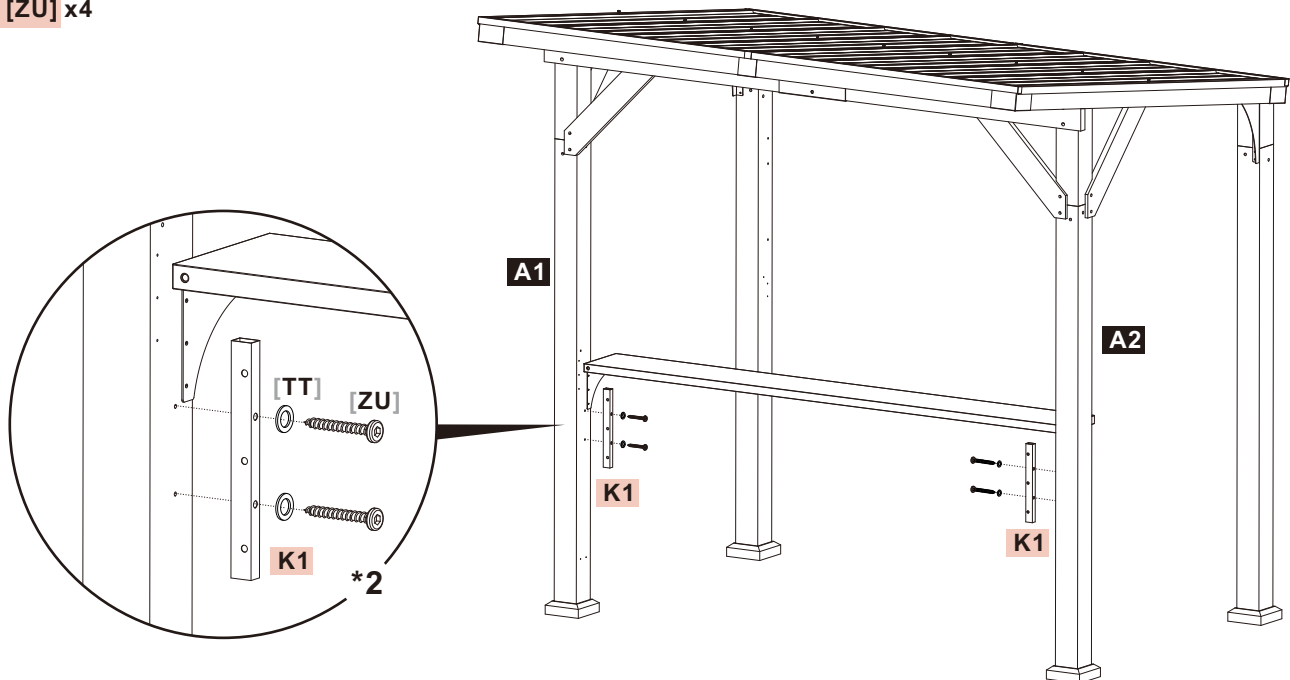
**STEP 25#**

Use one (1) [HH] bolt and one (1) [TT] flat washer to attach each end of screen beam **J1** to shelf **M3**.

Use one (1) [HH] bolt and one (1) [TT] flat washer to attach each end of screen beam **J1** to connector **K1**. Repeat with the other two (2) **J1**.

[HH] x8


[TT] x8

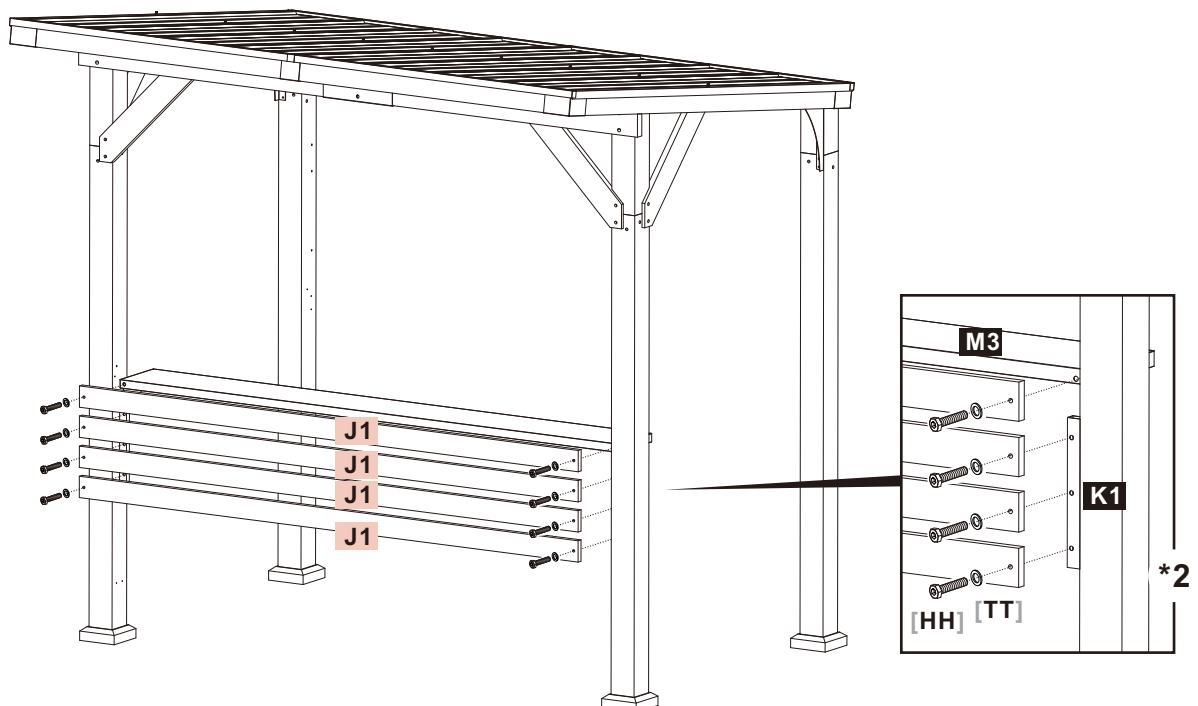

STEP 26#

Use three (3) [AA] bolts to attach one (1) shelf support bracket **L1** to post **A1**. Repeat with shelf support bracket **L2** to post **A2**.

[AA] x6

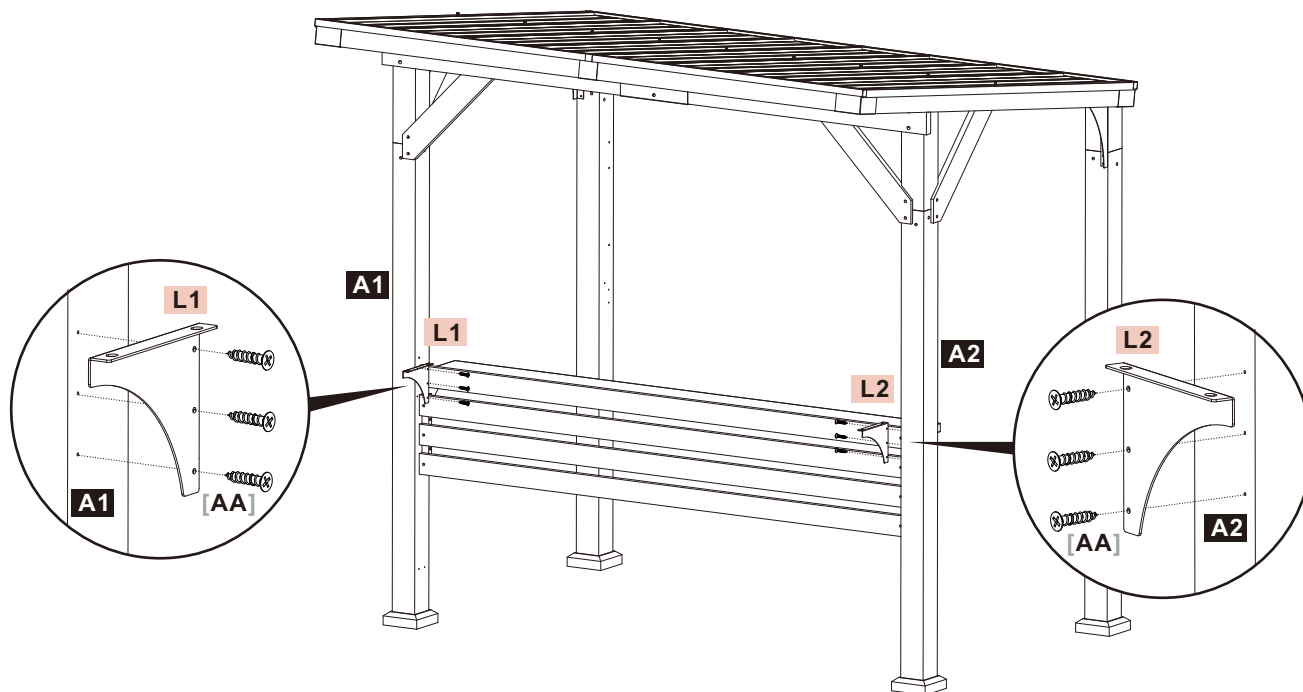


STEP 27#

Use two (2) [KK] bolts and two (2) [TT] flat washers to attach shelf support bracket **L1/L2** to shelf **M1**. Use one (1) [BB] bolt and one (1) [TT] washer to attach each end of shelf **M1** to the posts.

[BB] x2

[TT] x6

[KK] x4

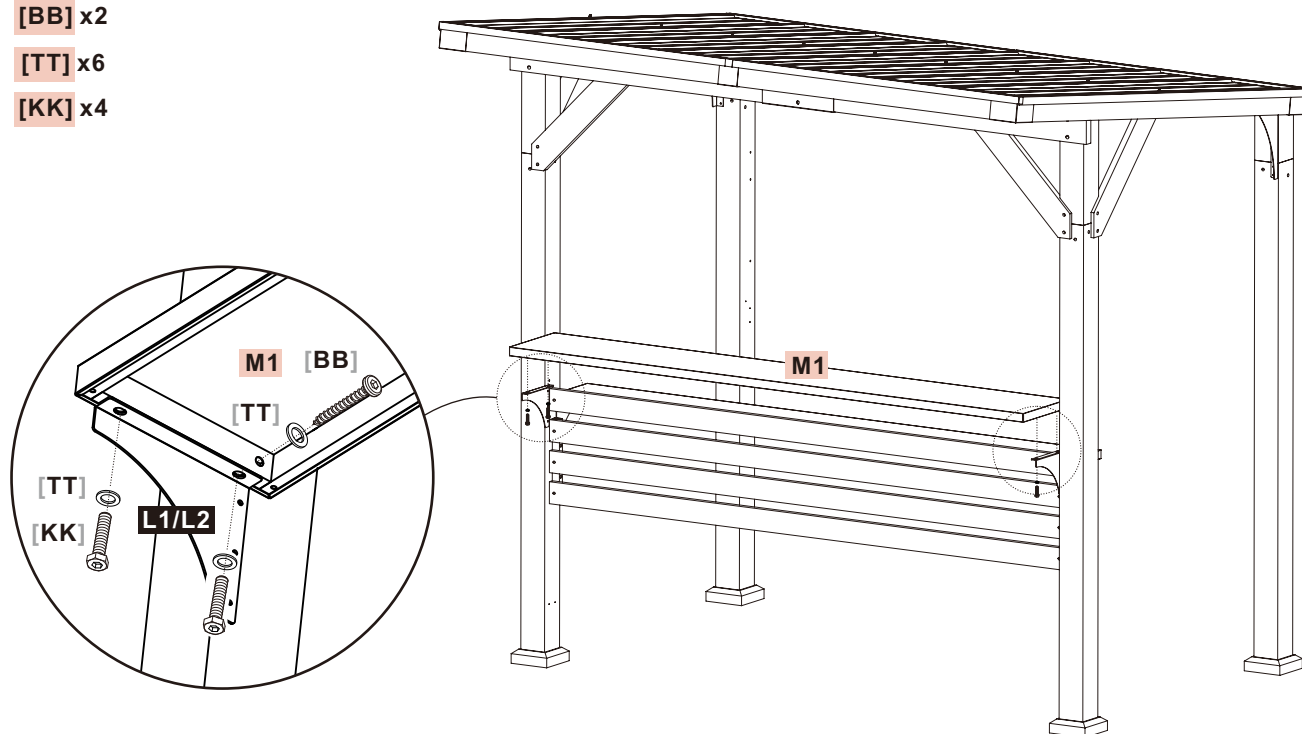


STEP 28#

Attach one (1) connector **K11** to each end of bottom support **Q**, securing with two (2) **[KK]** bolts and two (2) **[TT]** flat washers.


[KK] x4

[TT] x4

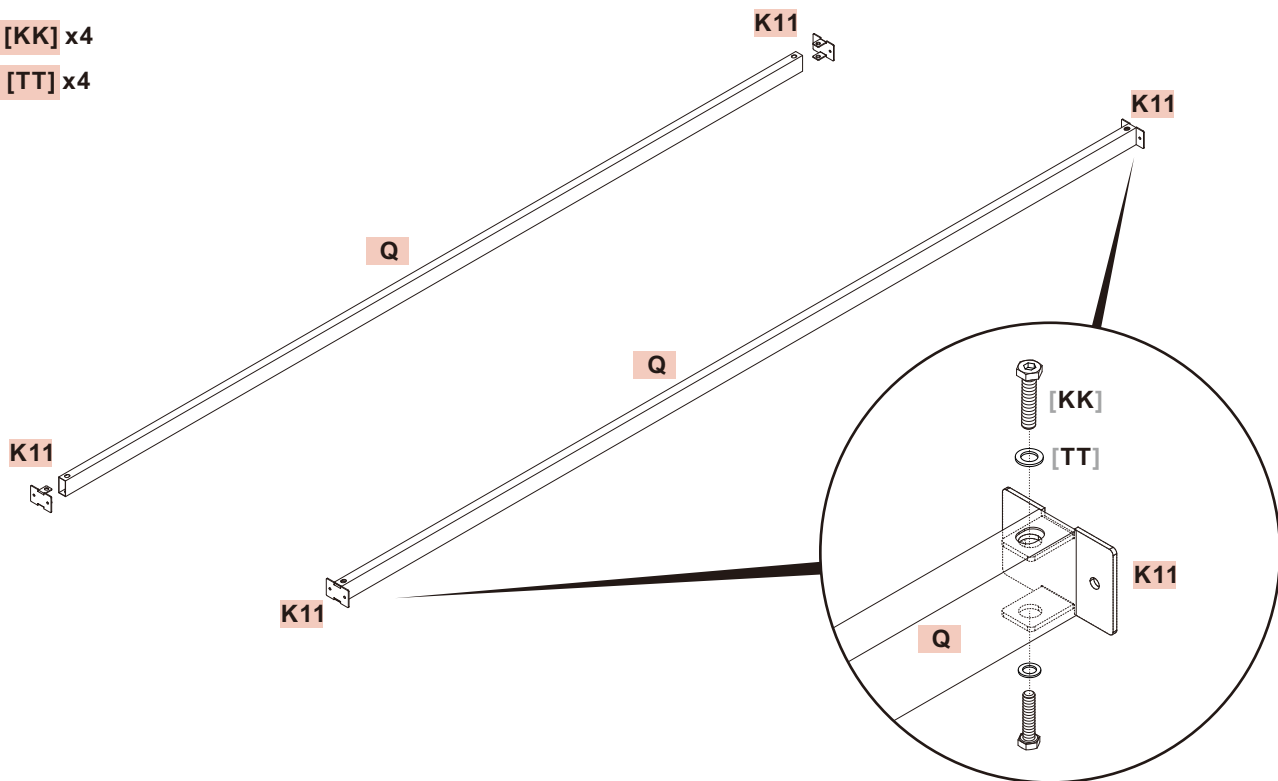**STEP 29#**

Use two (2) **[AA]** bolts to attach each end of bottom support **Q** to posts **A1** and **A2**.


[AA] x4

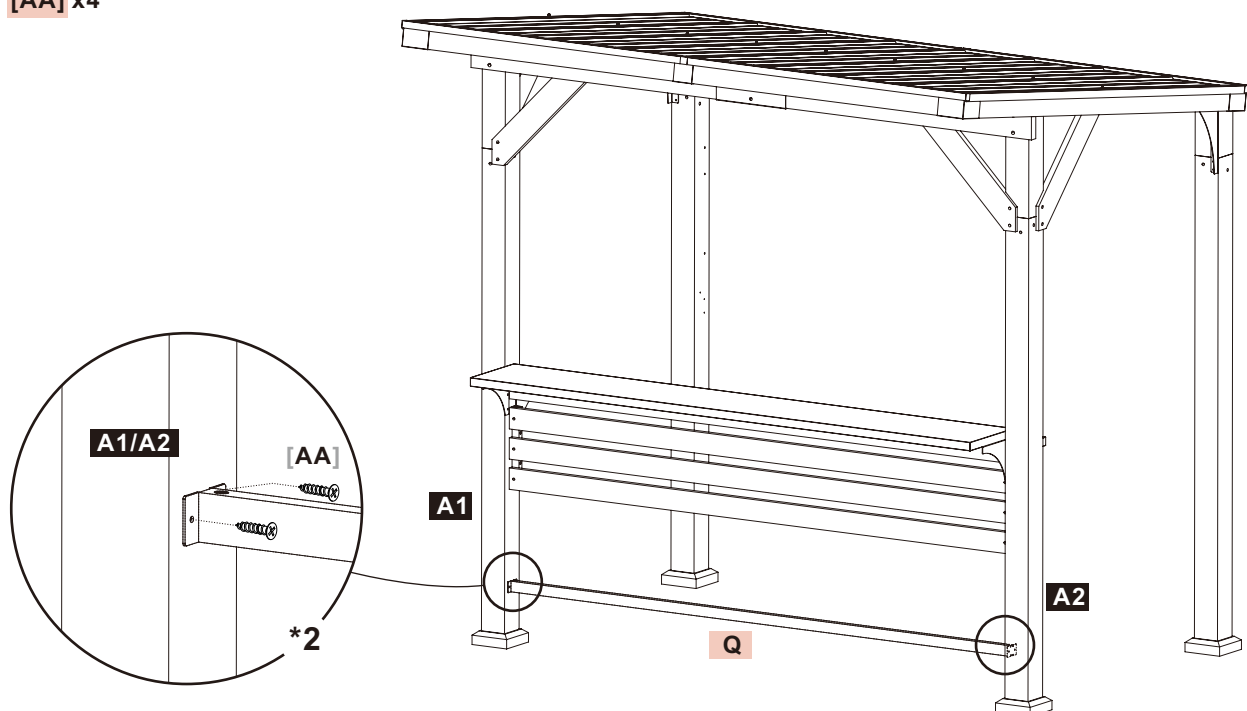

STEP 30#

Use four (4) [AA] bolts to attach paper tower rack **V** to post **A1**. Use two (2) [AA] bolts to attach bottle opener **W** to post **A2**. The installation position can be adjusted based on practical needs.


[AA] x6

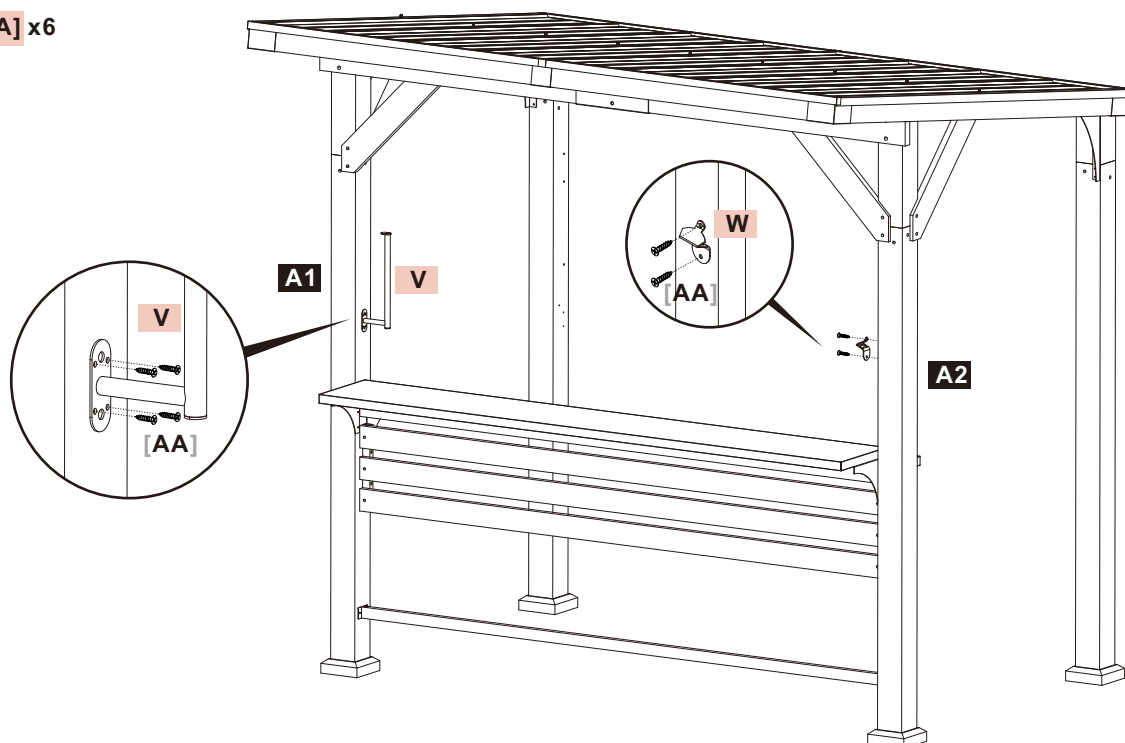**STEP 31#**

Move to the back of gazebo. Use four (4) [ZU] bolts and four (4) [TT] flat washers to attach one (1) connector **K2** to post **A3** **A7**. Repeat with the other **K2** to post **A4** **A8**.

[TT] x8

[ZU] x8

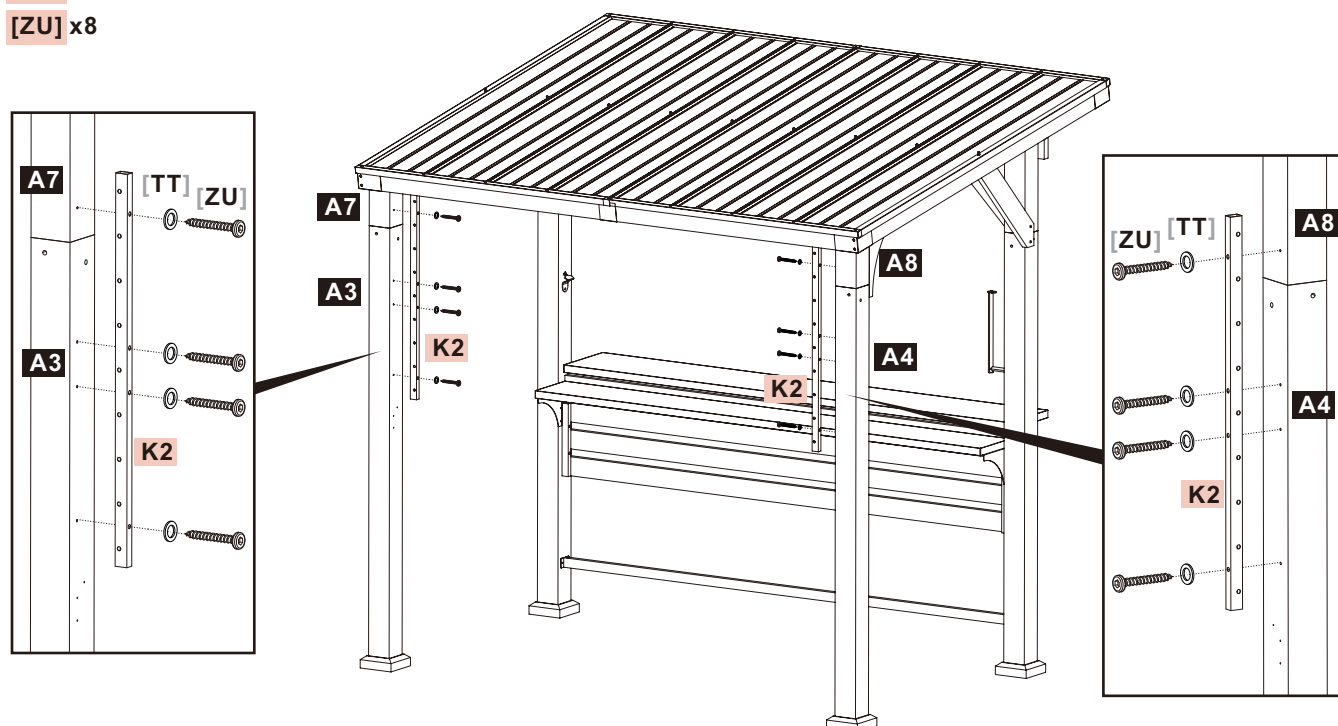

STEP 32#


Use one (1) [HH] bolt and one (1) [TT] flat washer to attach each end of screen beam **J2** to connector **K2**. Repeat with the other three (3) **J2**.

Use one (1) [HH] bolt and one (1) [TT] flat washer to attach each end of screen beam **J3** to connector **K2**. Repeat with the other **J3**.

The holes within the dashed box must face the inside of the gazebo. Ensure there are no holes on the outer side of this position.

[HH] x12

[TT] x12

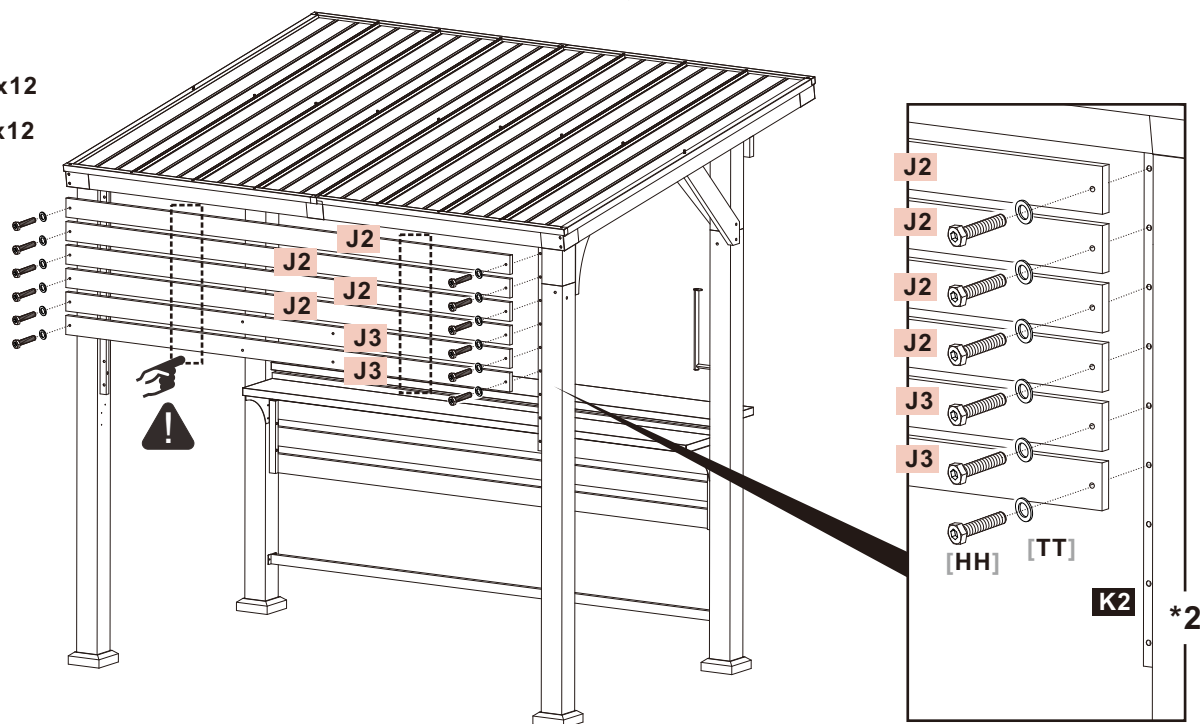
**STEP 33#**

Use four (4) [HH] bolts, four (4) [TT] flat washers and four (4) [ZV] nuts to attach one (1) TV stand **R1** to screen beams **J3**.

[HH] x4

[TT] x8


[ZV] x4

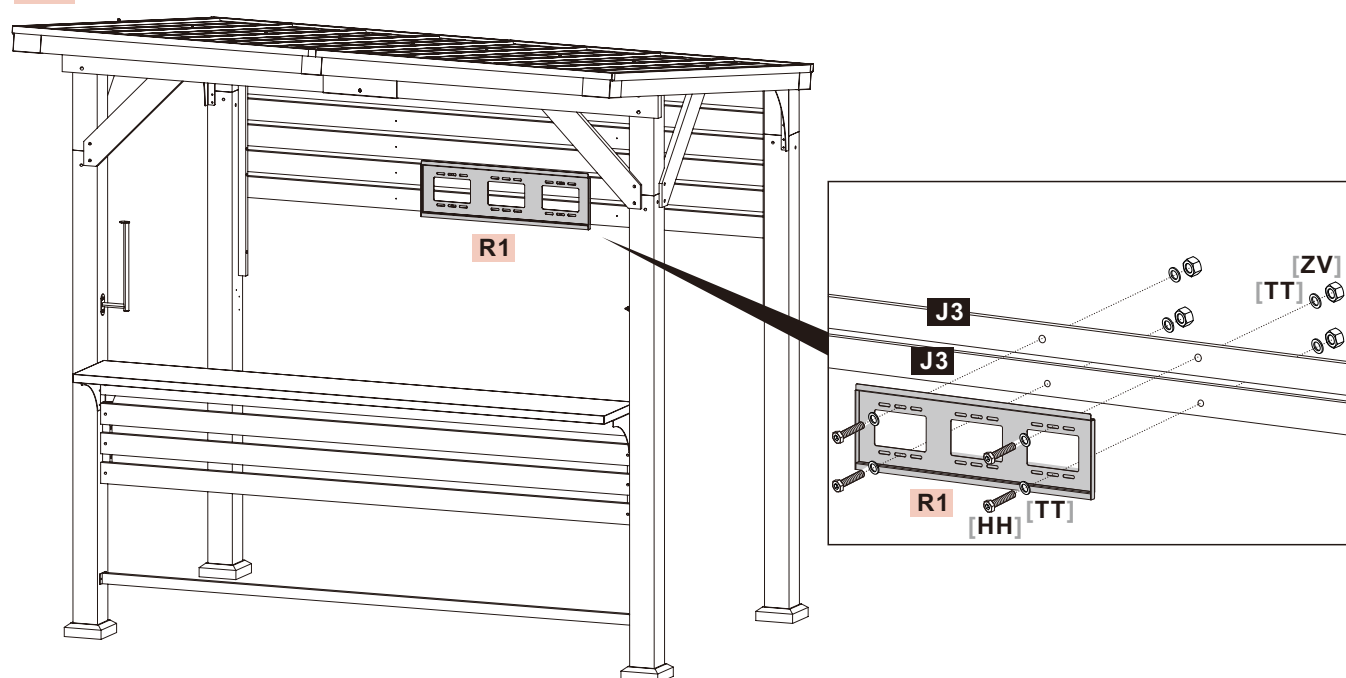

STEP 34#

Use one (1) [JJ] bolt to attach one (1) TV stand **R2** to **R1**. Repeat with the other **R2**.

[JJ] x2

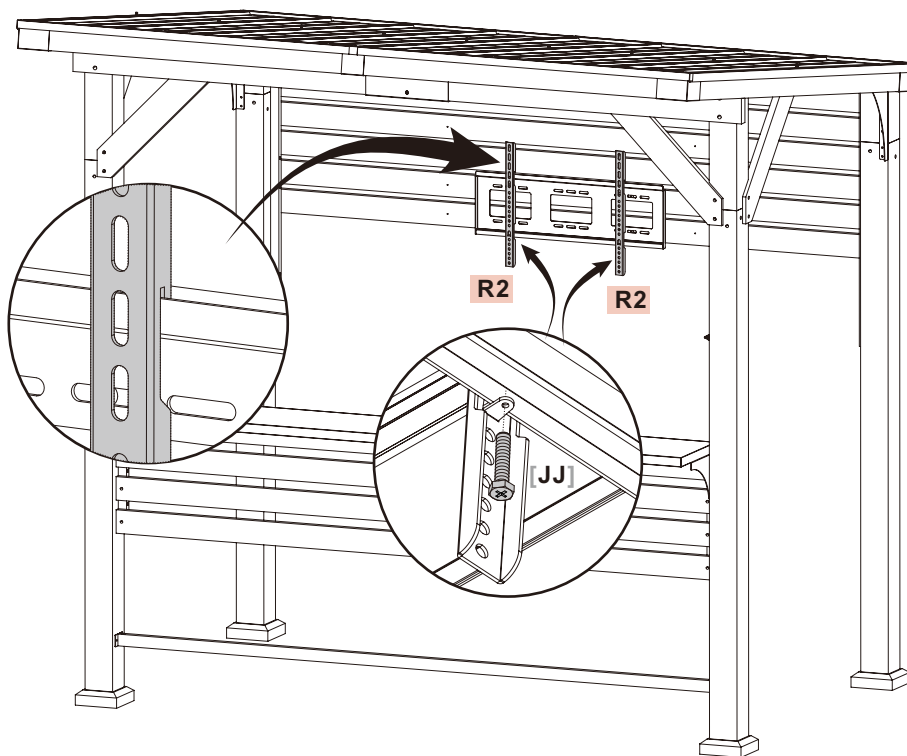


STEP 35#

Use one (1) [HH] bolt and one (1) [TT] flat washer to attach each end of screen beam **J2** to connector **K2**. Repeat with the other two (2) **J2**. The holes within the dashed box must face the inside of the gazebo. Ensure there are no holes on the outer side of this position.

[HH] x6


[TT] x6

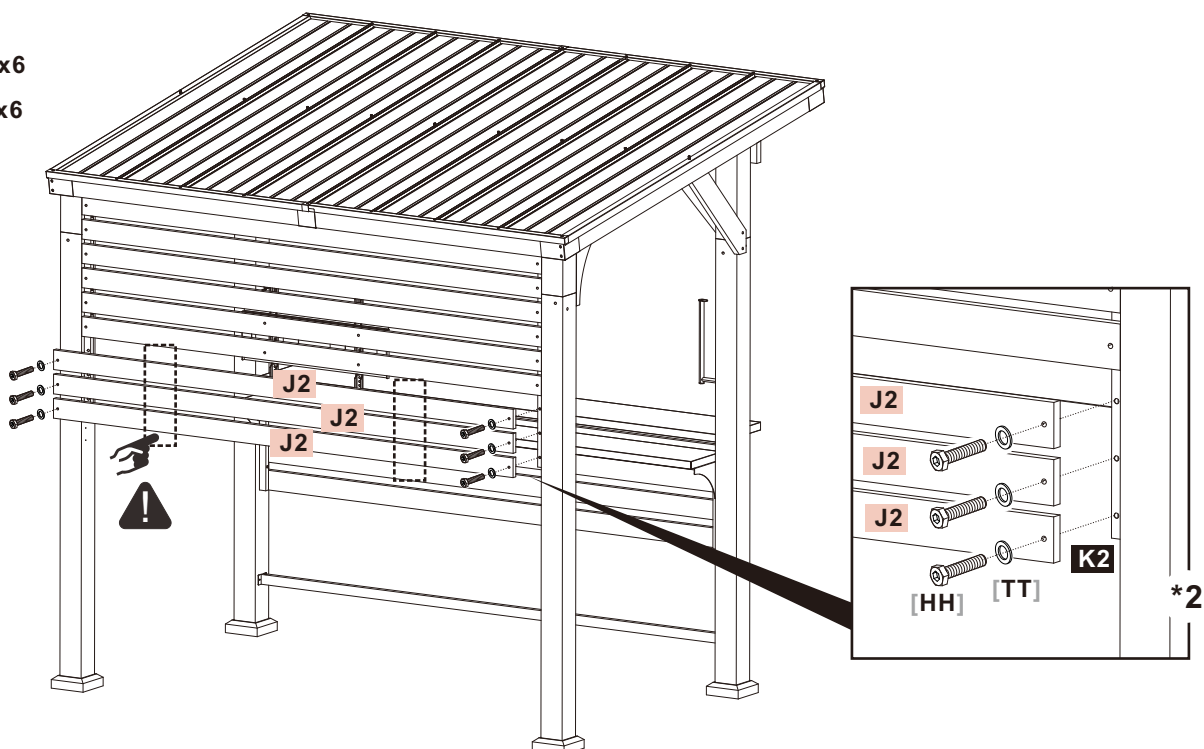

STEP 36#


Use nine (9) [AA] bolts to attach one (1) connector **K3** to screen beams **J2** and **J3**. Repeat with the other connector **K3**.

[AA] x18

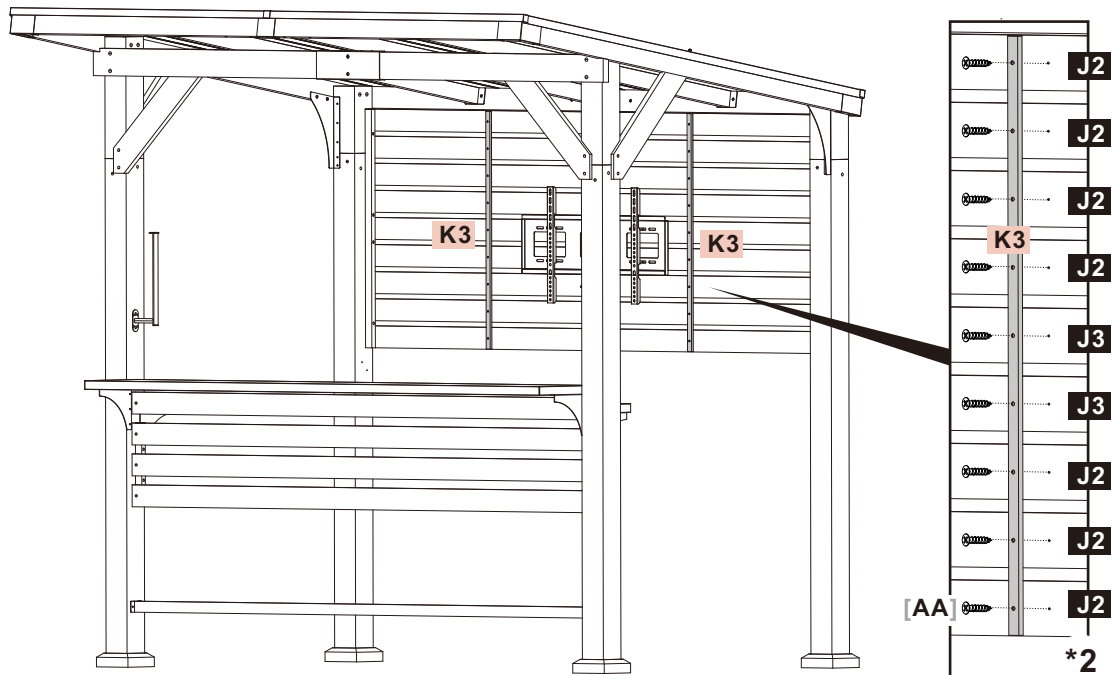**STEP 37#**

Use three (3) [AA] bolts to attach one (1) shelf support bracket **L3** to post **A4**. Repeat with shelf support bracket **L4** to post **A3**.

[AA] x6

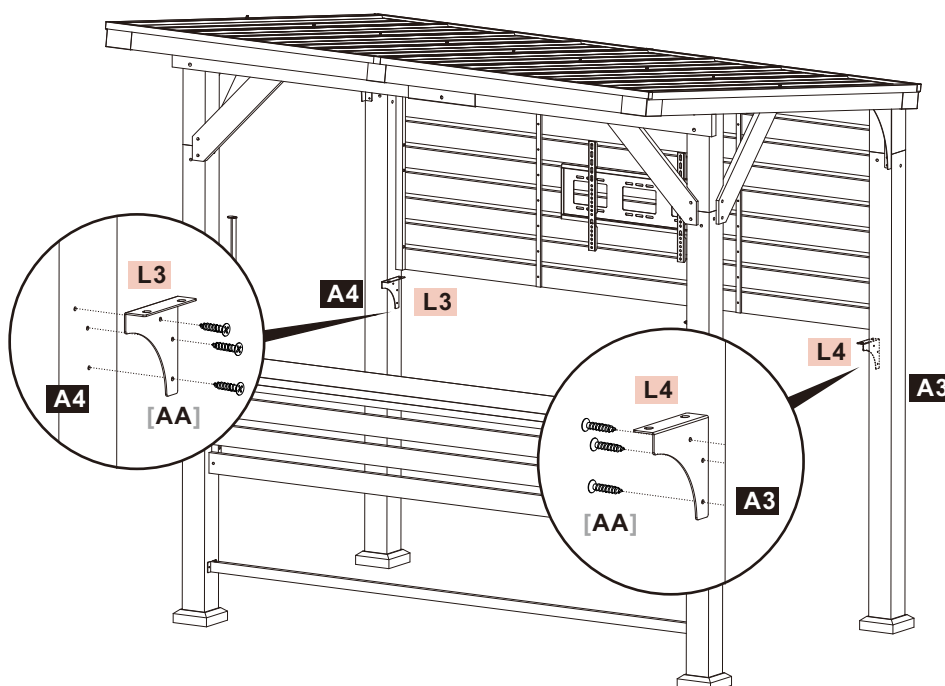


STEP 38#

Use five (5) [KK] bolts and five (5) [TT] flat washers to attach fence **N** to shelf **M2**.

[KK] x5

[TT] x5

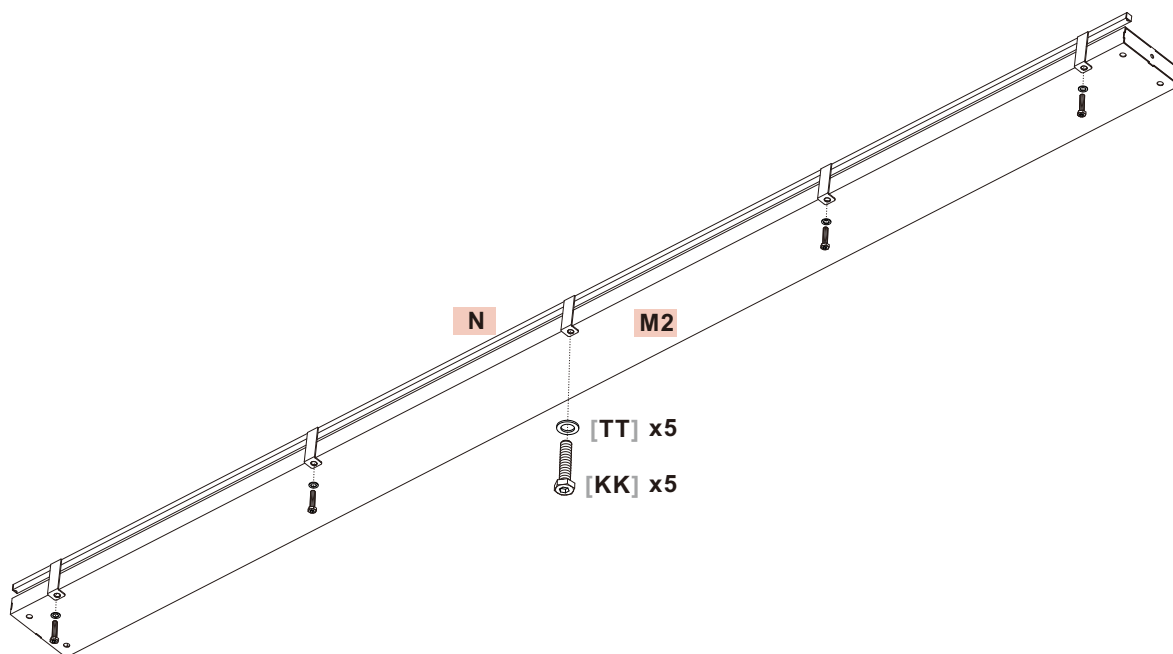


STEP 39#

Use two (2) [KK] bolts and two (2) [TT] flat washers to attach shelf support bracket **L4/L5** to shelf **M2**.


[KK] x4

[TT] x4

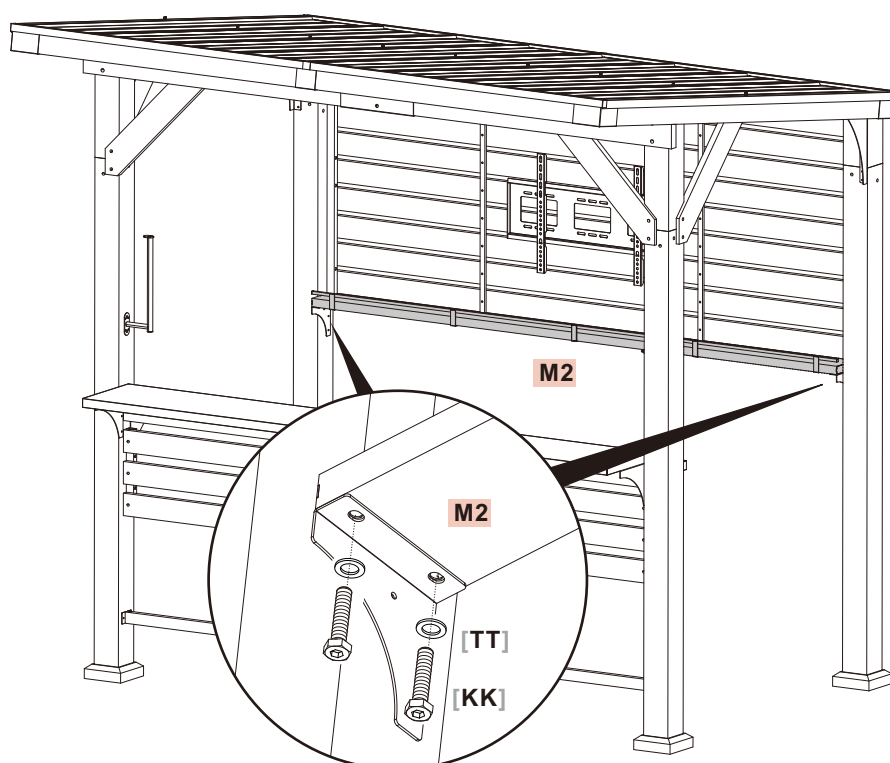


STEP 40#

Take off the front panel of power strip **T**. Use four (4) **[EE]** bolts to attach power strip **T** to power strip case **X**. Then attach the removed panel back.

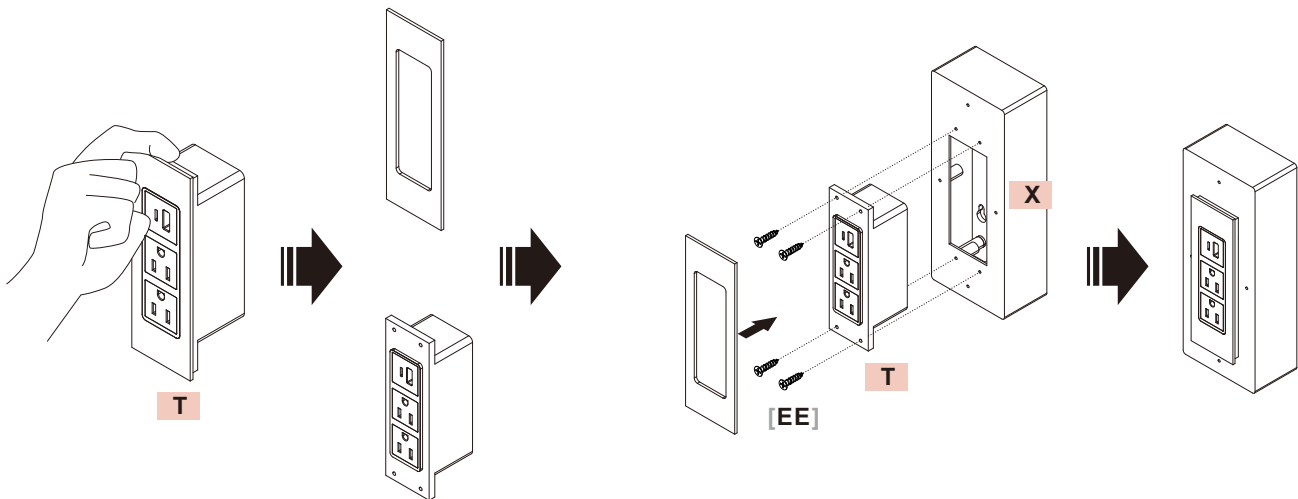[EE] x4**STEP 41#**

Use four (4) **[EE]** bolts to attach power strip cover **U** to power strip case **X**.

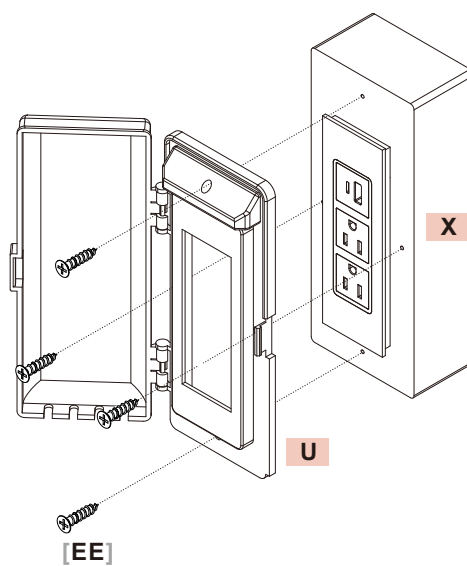
[EE] x4

STEP 42#

Mark "cross" with a pen at the appropriate positions on the post **A4** according to the distance between the holes on the back of power strip case **X**.

Attach four (4) **[AA]** bolts to the marks, then hook the power strip case **X** to post **A4**.


[AA] x4

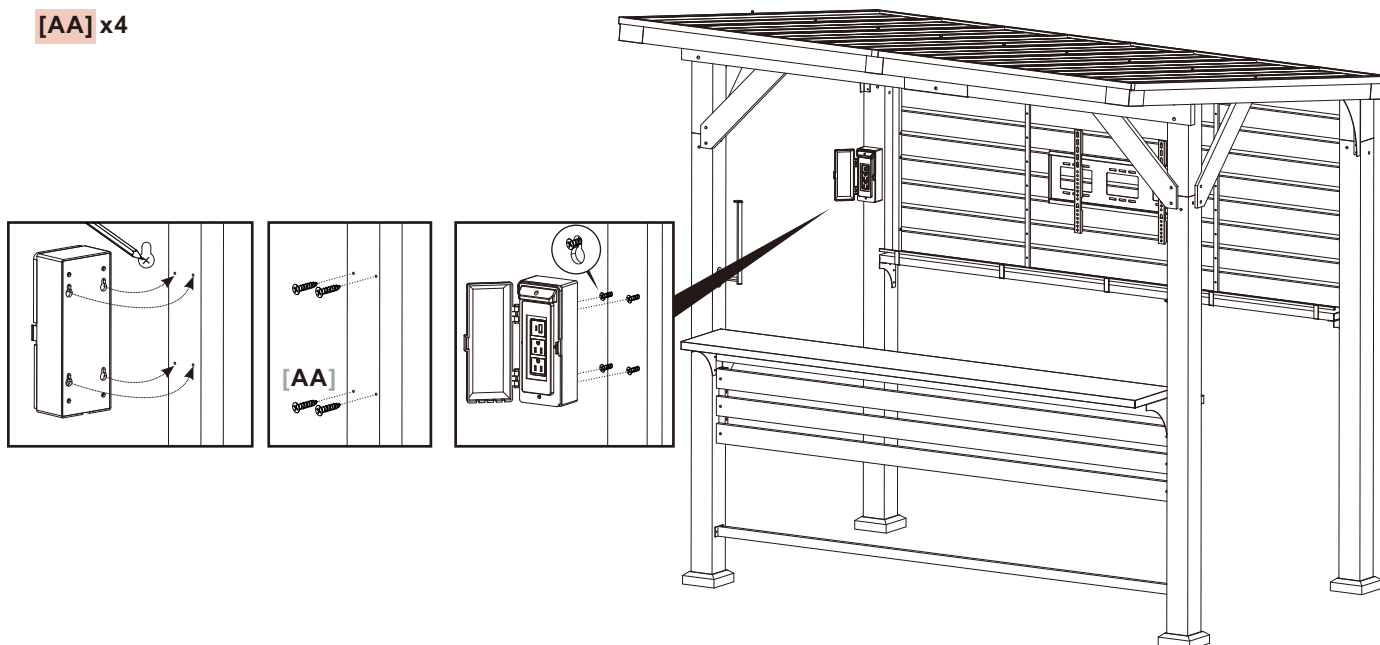

STEP 43#

Use two (2) **[ZW]** expansion bolts to anchor each post foot base **B**. please make sure the expansion bolts are fully anchored.


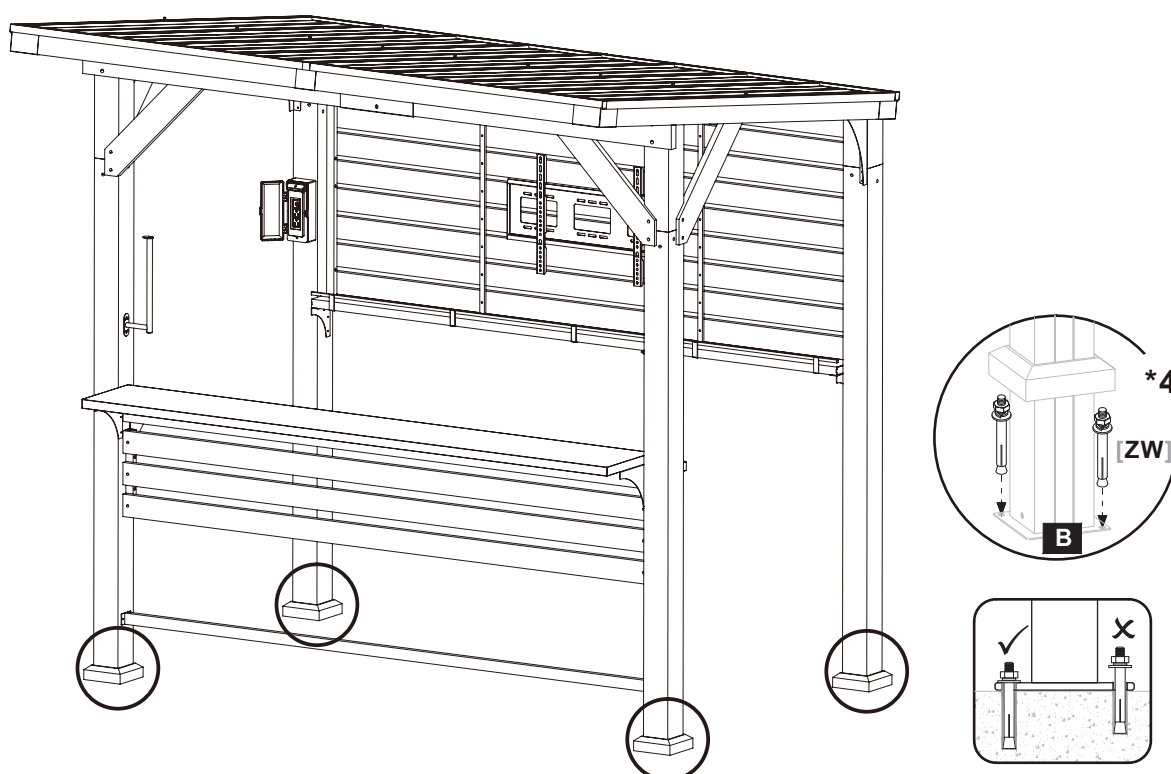


[ZW] x8



Outdoor Structure anchoring guide for anchoring gazebo to wood or concrete: If step 43, on page 26 in the assembly instructions is not properly completed, this will void the warranty.

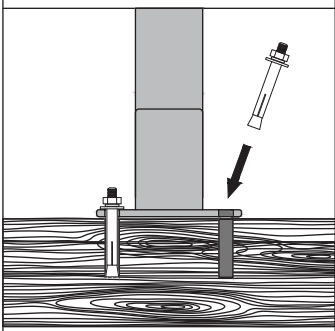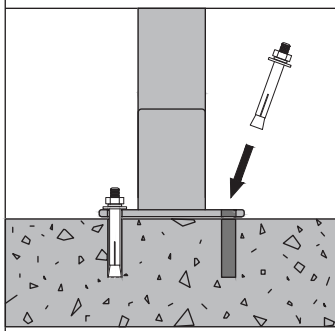

WARNING! If your gazebo is not properly anchored, damage could occur. It is highly recommended for maximum safety that you mount and secure to wood or concrete footers. This is far better and safer than using ground stakes. The following are some examples of how to mount the structure to wood or concrete surfaces. Refer to local building codes or consider consulting a licensed contractor for assistance in the anchoring of this product.

WOOD	CONCRETE
	
<p>Anchors should be drilled into joists or reinforced blocking (not only deck boards).</p>	<p>Pre-drill holes for appropriately sized concrete anchors.</p>
	
<p>Recommended Hardware: Expansion Bolt</p>	<p>Recommended Hardware: Expansion Bolt</p>

If digging for foundation, please double check for possibility of any underground utilities such as gas, telephone, cable or sprinkler lines. Refer to your local building and city codes, ordinances, neighborhood covenants, or height restrictions regarding this type of structure for guidance on acceptable installation requirements.

CAUTION

DO NOT climb or walk on roof for any reason.

- Our components are intended for privacy, decorative and ornamental use only.
- Product is NOT INTENDED for the following:
 - A safety barrier to prevent unsupervised access to pools, hot tubs, spas or ponds.
 - As load bearing support for a building, structure, heavy objects or swings.
 - Used in structures that trap wind, rain or snow that would create extra load on the product.
 - Accumulated snow must be removed from roof.
 - DO NOT climb or walk on roof for any reason.

LIMITED WARRANTY

We warrants this product against defects in materials and workmanship for a period of one (1) year from the original date of purchase. To the extent any such defects occur, our products will send the appropriate replacement part(s) at no charge.

This warranty does not cover:

- Inspection costs or labor for replacement of any defective parts;
- Incidental or consequential damages;
- Cosmetic defects which DO NOT affect performance;
- Normal wear and tear;
- Damage due to vandalism; acts of nature, including but not limited to wind, storms, hail, floods;
- Improper assembly, installation, or use;
- Discoloration or fading of the finish as a result of exposure to chemicals, spills, pool or salt water
- Corrosion/ rust.

Your product has been designed for safety and quality.

Any modifications made to the original product could compromise its structural integrity or function, and could lead to product failure or personal injury. As such, modifying this product voids any and all warranties.

This product is warranted for RESIDENTIAL USE ONLY, and is not for commercial, contract or other non-residential purposes. Products disclaims all other representations and warranties of any kind, express or implied.

The warranty applies to the original purchaser and is non-transferable. It does not apply to purchases of display models, or when the product is sold on clearance or "as is".

We makes no warranty whatsoever in respect to accessories or parts not supplied with it. This warranty shall apply only within the boundaries of the United States of America and Canada. This warranty gives the original purchaser specific rights, and the original purchaser may also have other rights, which vary from state to state.

