


DETAILS OF THE MULTI-FUNCTIONAL FOLDABLE HANDCART

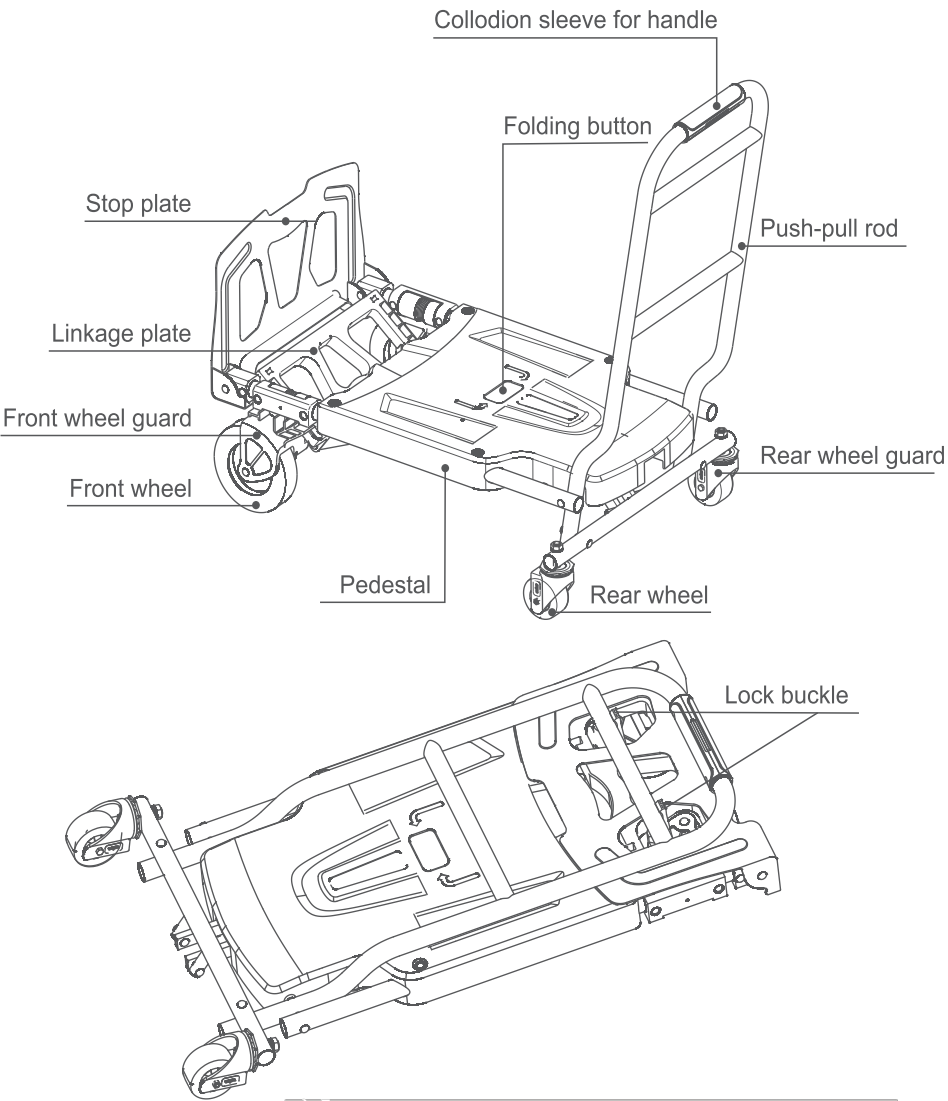


Customer Service


Contact us through our website:
www.TeamCustomerService.com
have a question about assembly, use or a possible missing
Please contact us and we will be glad to assist you.

INTRODUCTION TO FOLDING METHODS OF MULTI-FUNCTIONAL FOLDABLE HANDCART


UNFOLDING

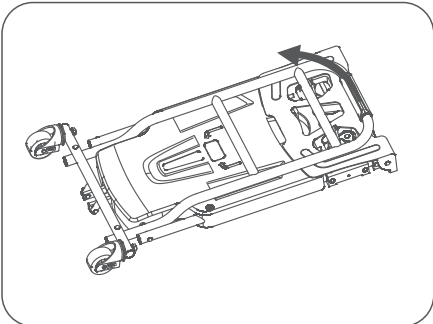


1. First pull the welded tube out of the limit buckle; then slowly pull the push-pull rod.

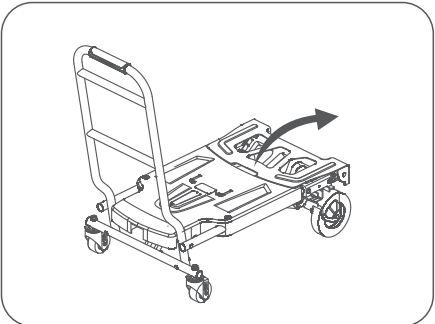


2. The push-pull rod will be locked once reaching certain position; the stop plate can be unfolded upward if necessary.

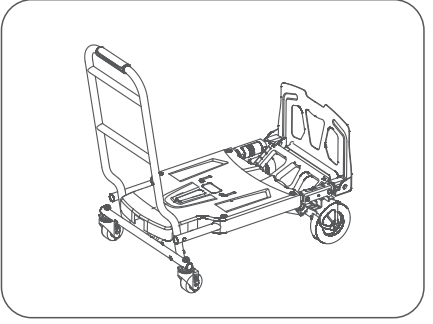

3. At this moment, the trolley is just like a handcart, with the stop plate unfolded or folded as necessary.

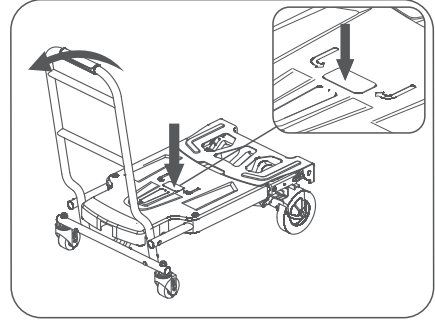


4. Press the folding button and pull the push-pull rod backward.

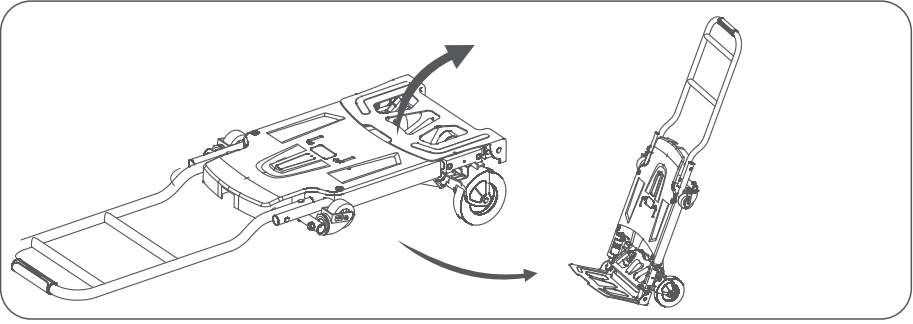


5. The push-pull rod will be locked once reaching certain position; uplift the stop plate and set the handcart up.


FOLDING STEPS

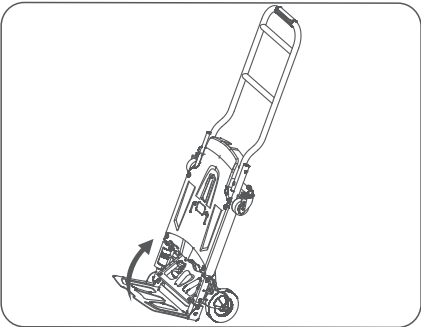


1. First, fold the stop plate.

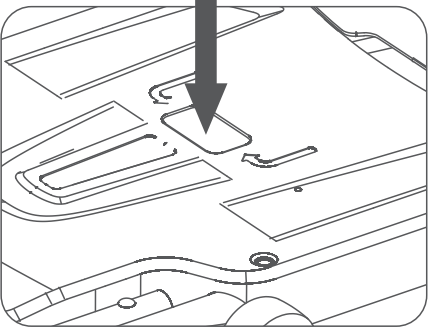


2. Press the folding button. (Note: when press the button with the cart completely unfolded, you shall press harder)

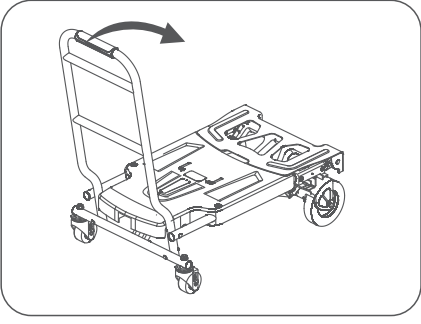


3. Press the push-pull rod downward.

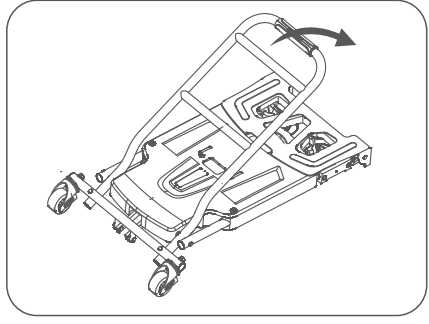

4. After it reaches certain angle, the folding button can be released and the push-pull rod can still be further pressed.

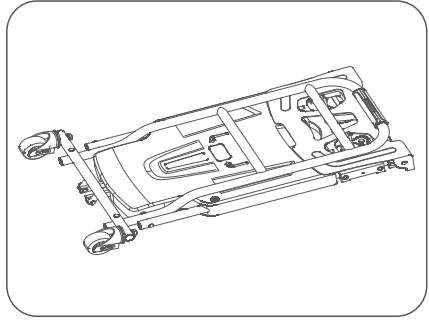

5. Lock the push-pull rod on the lock buckle.

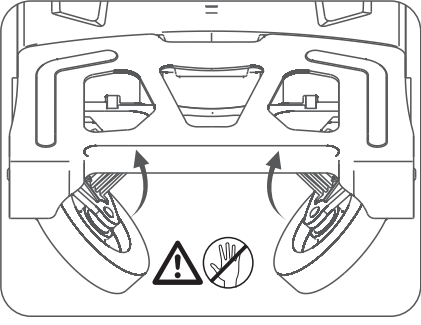

▲ Special attention: when folding, the two front wheels will retract inward along with the pressing of push-pull rod. Please keep your body away from the linkage plate to avoid injury.