

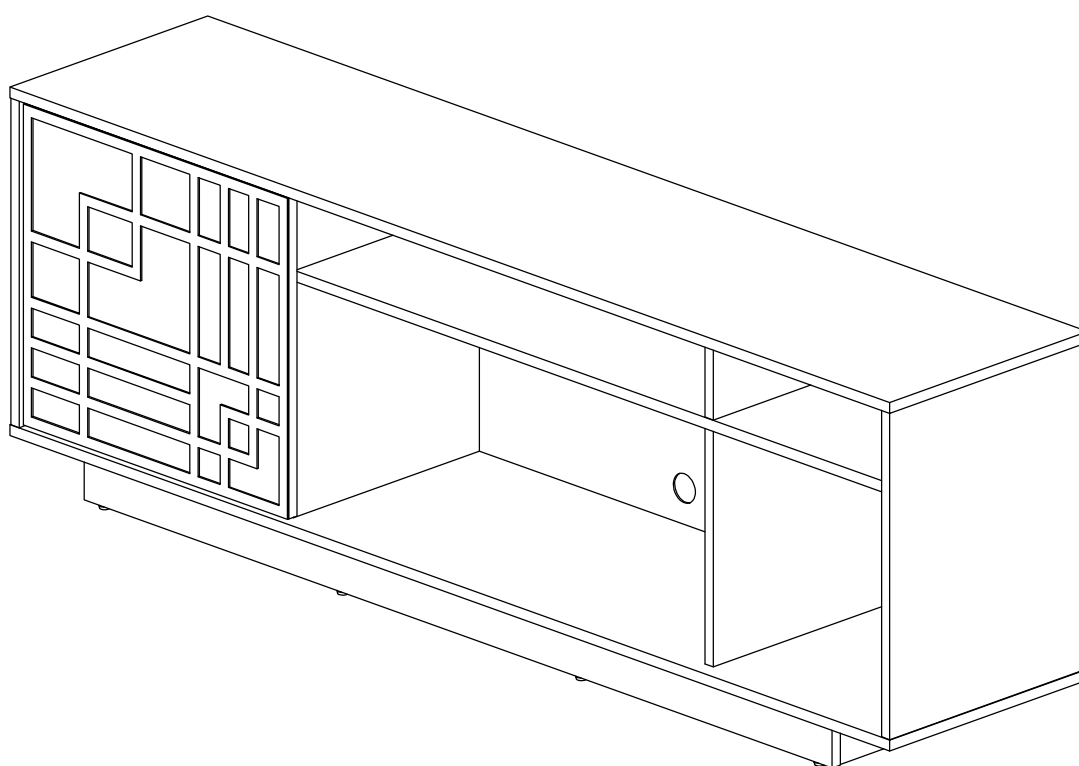
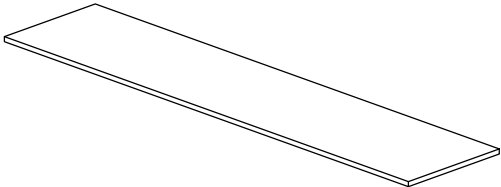
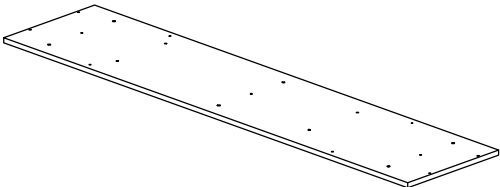

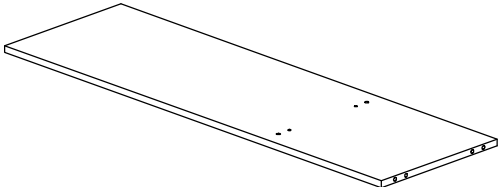

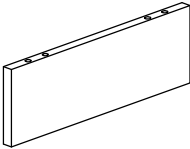

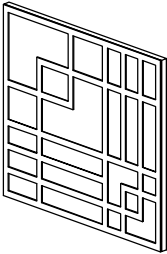
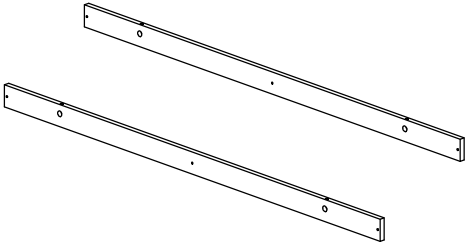
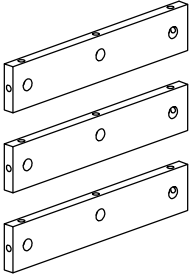


ASSEMBLY INSTRUCTIONS

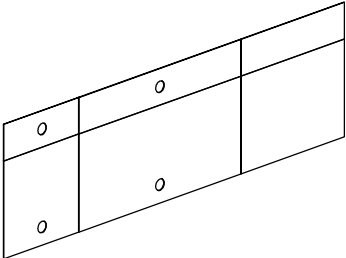

MAIN PARTS LIST			
A Top		B Bottom	
			
C Left side	D Right side	E Shelf	
			
F Left partition	G Upper shelf divider	H Lower shelf divider	I Door
			
J Long base x2		K Short base x3	L Back
			

Main parts Layout (For Reference and orientation)


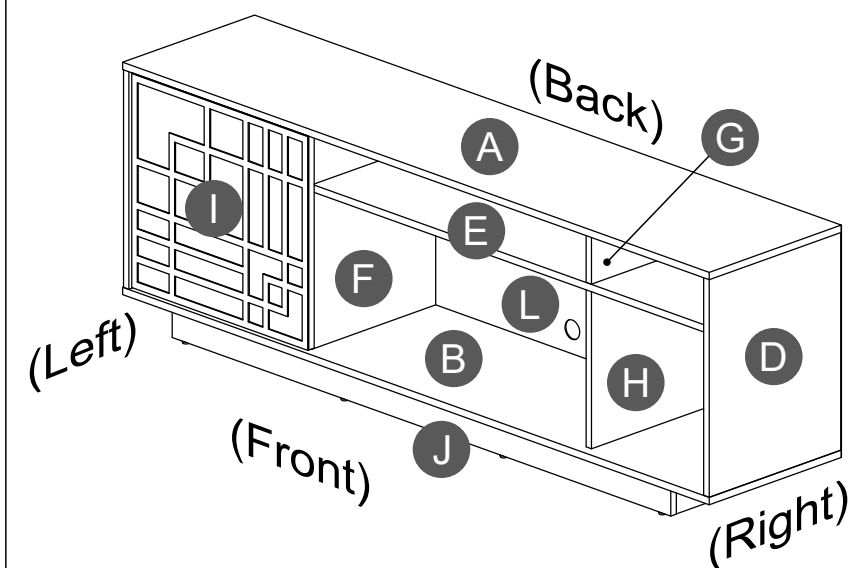


Hardware

No.	Item	Qty.
1	Short Dowels	26
2	Bolt + Cam Lock	27 Sets
3	Cam Lock caps	10
4	ST5x40	10

No.	Item	Qty.
5	Glides	8
6	Door hinge	2
7	ST3.5x16	12
8	Nails	32
9	Long Dowels	2


Tools required (Not included)

**Bolt****Cam lock**


In some of the assembly steps you will use bolts and cam locks (also known as mini-fix). If you are not familiar with this kind of hardware, the below is a tutorial that explains how to use them.

The instructions below are ONLY A TUTORIAL for bolts and cam locks. The actual assembly starts on the next page.


1. Install the bolt into the first panel.

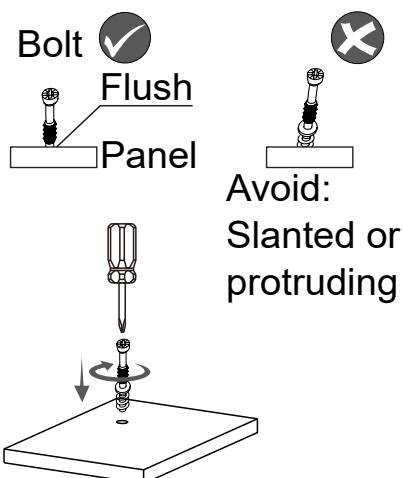

2. Join the second panel by inserting it into the bolt of the first panel.

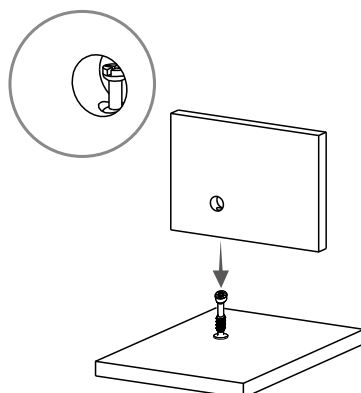

3. Insert the cam lock and turn it to lock both panels.

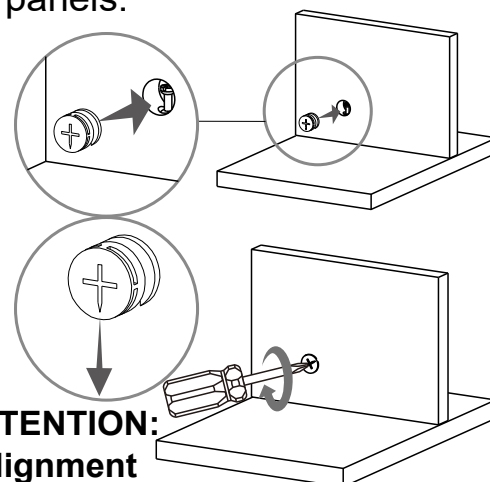

- Use blankets to protect the product's finish during assembly.
- Some of the steps might require 2 people.
- Do not overtighten any screws.

ASSEMBLY STEPS

STEP 1

This step
requires
2 people




1	Short Dowels	6
4	ST5x40	2
9	Long Dowels	2
OR		
OR		

1st: Install #1 into the indicated holes on E.





TIP!

Use blankets to protect the product's finish during assembly.

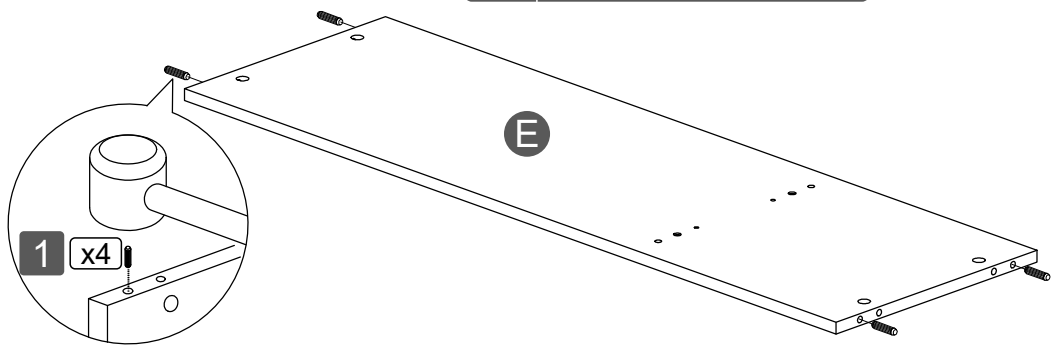

2nd: Install #1 (SHORT) into the indicated holes at the top of G, and #9 (LONG) at the bottom.


⚠ PAY ATTENTION!
#1 (SHORT) at the TOP.

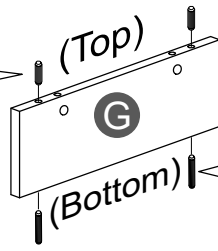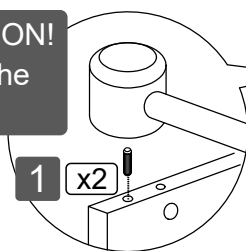

⚠ PAY ATTENTION!
#9 (LONG) at the BOTTOM.

3rd: Use #4 to attach G to E.

NOTE: #9 will come out on the other side of E.

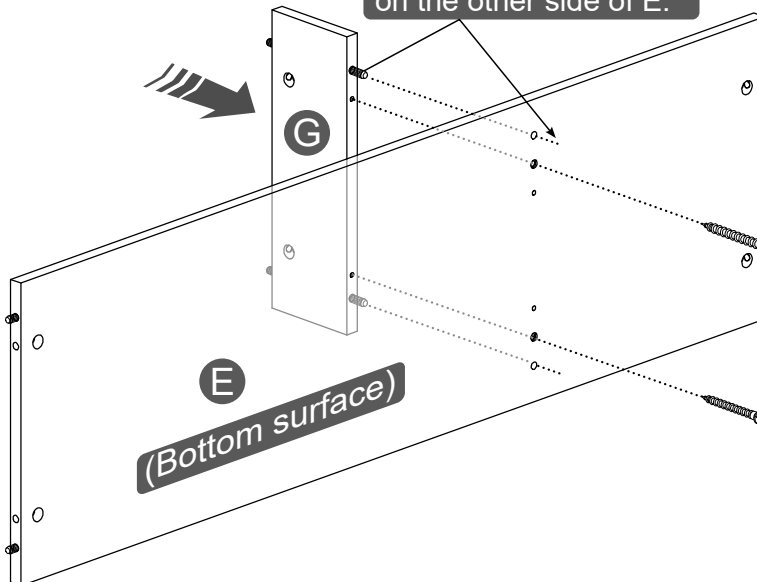

⚠ PAY ATTENTION!
#4 goes through the middle hole.


STEP 2

This step
requires
2 people




1	Short Dowels	10
2	Bolt + Cam Lock	6 Sets
 OR 		
 OR 		


1st: Install #1 into the indicated holes on D, F and H.

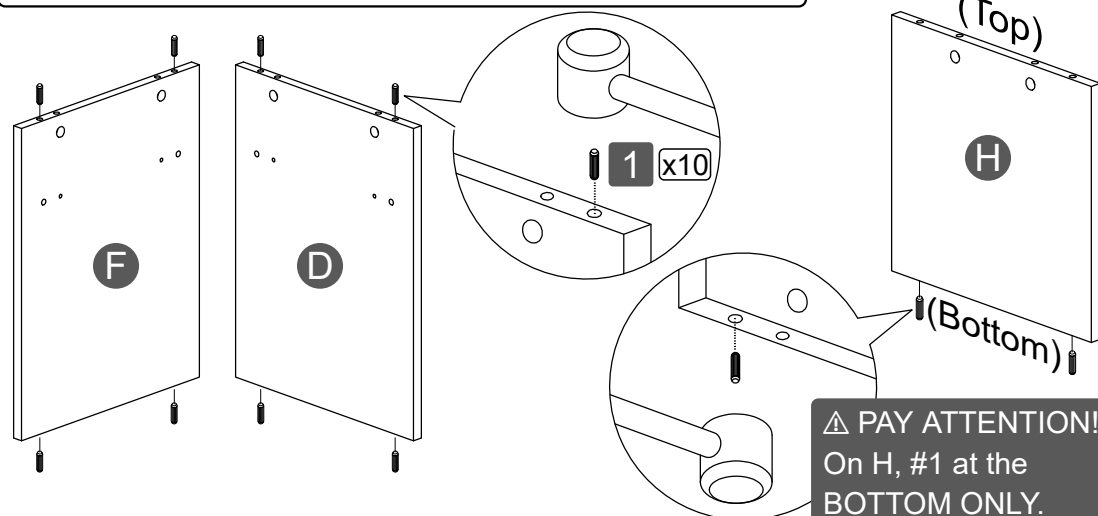

2nd: Install bolts #2 into the indicated holes on D, E and F.

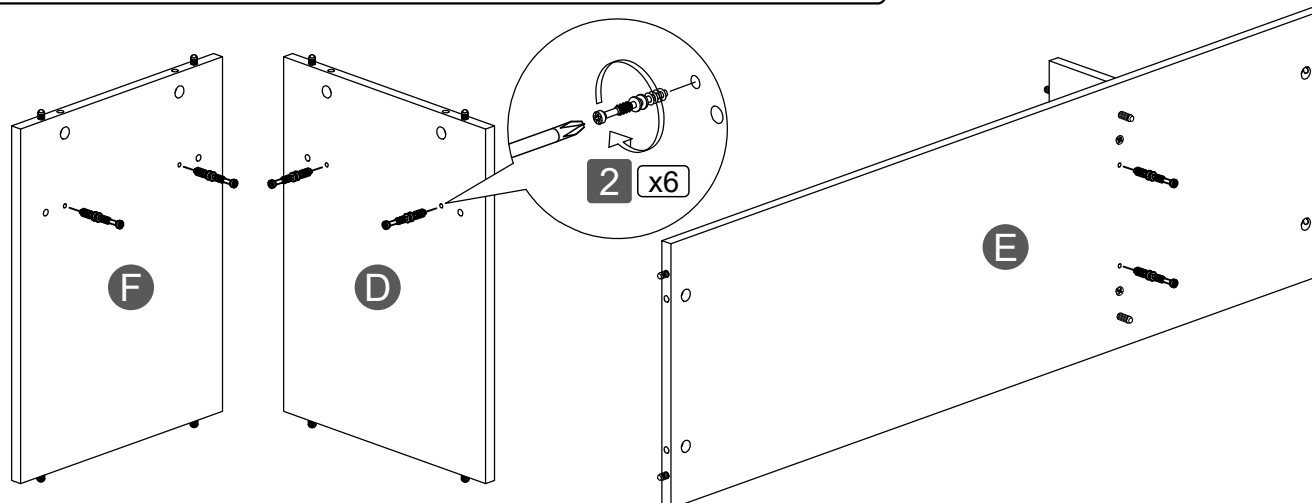

3rd: Use cam locks #2 to assemble D, F and H to E.

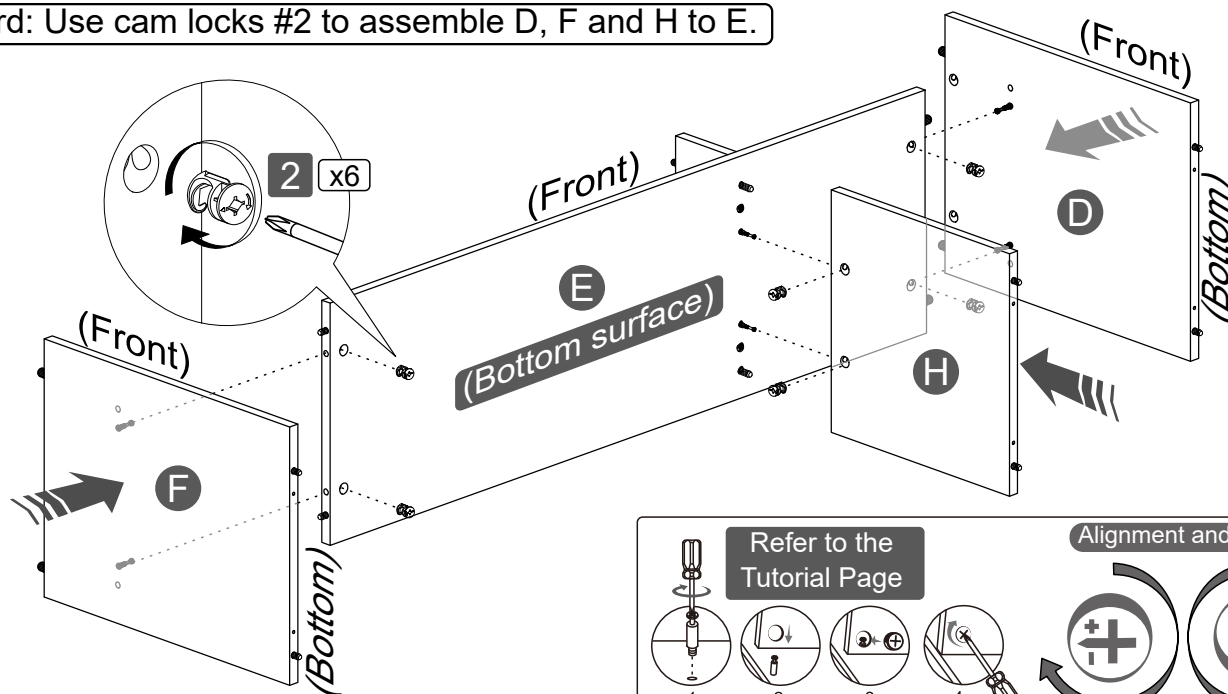


STEP 3

This step
requires
2 people




1 Short Dowels 4


4 ST5x40 8



1st: Install #1 into the indicated holes on C.

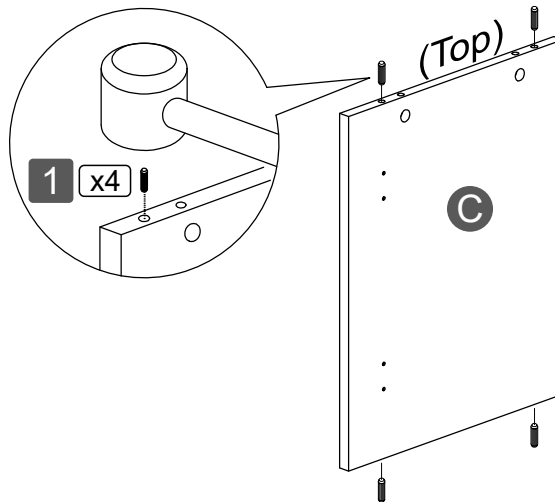


2nd: Use #4 to assemble B to C, D, F and H as indicated.

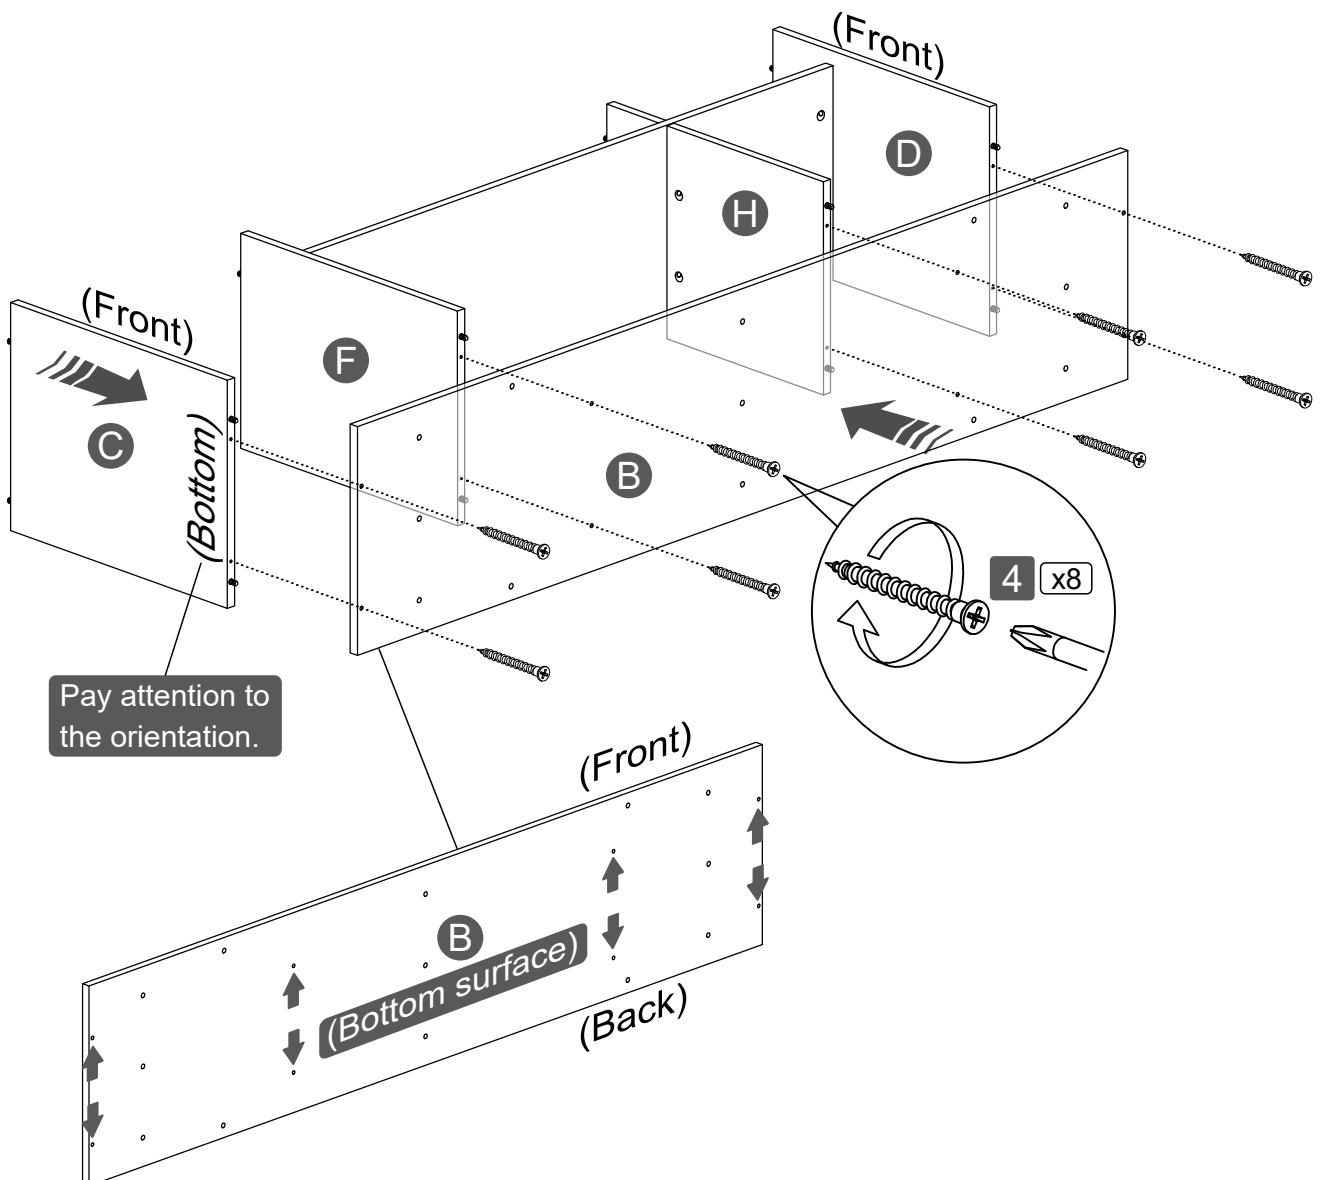


STEP 4



This step
requires
2 people

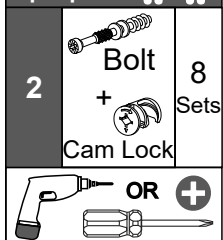


1st: Attach bolts #2 into the indicated holes on A.

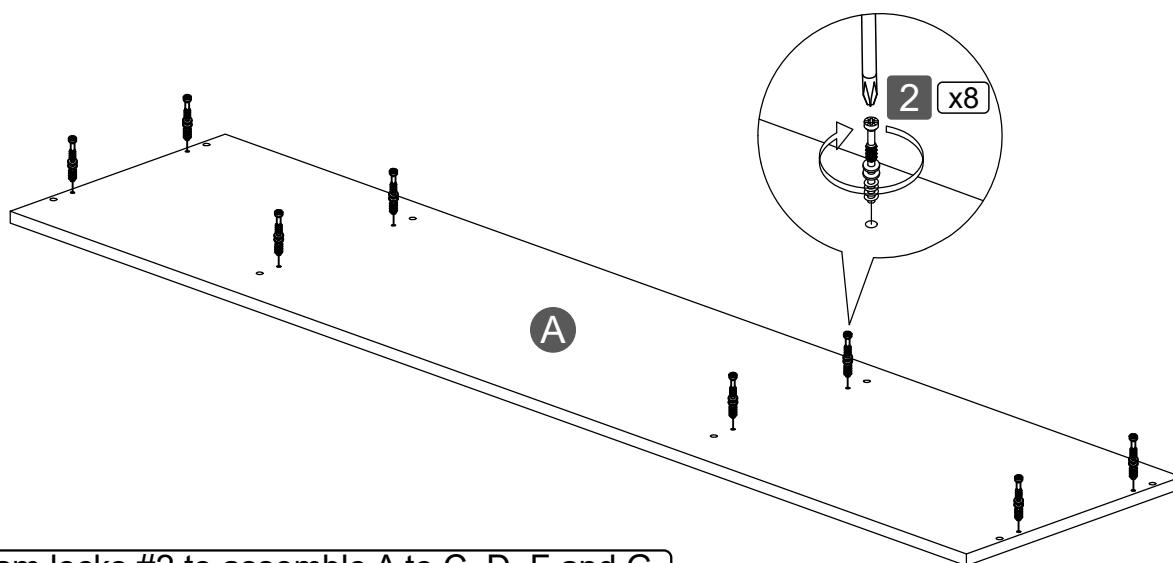

2nd: Use cam locks #2 to assemble A to C, D, F and G.

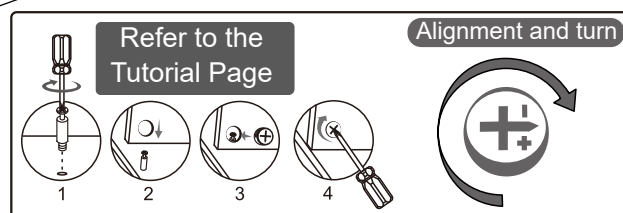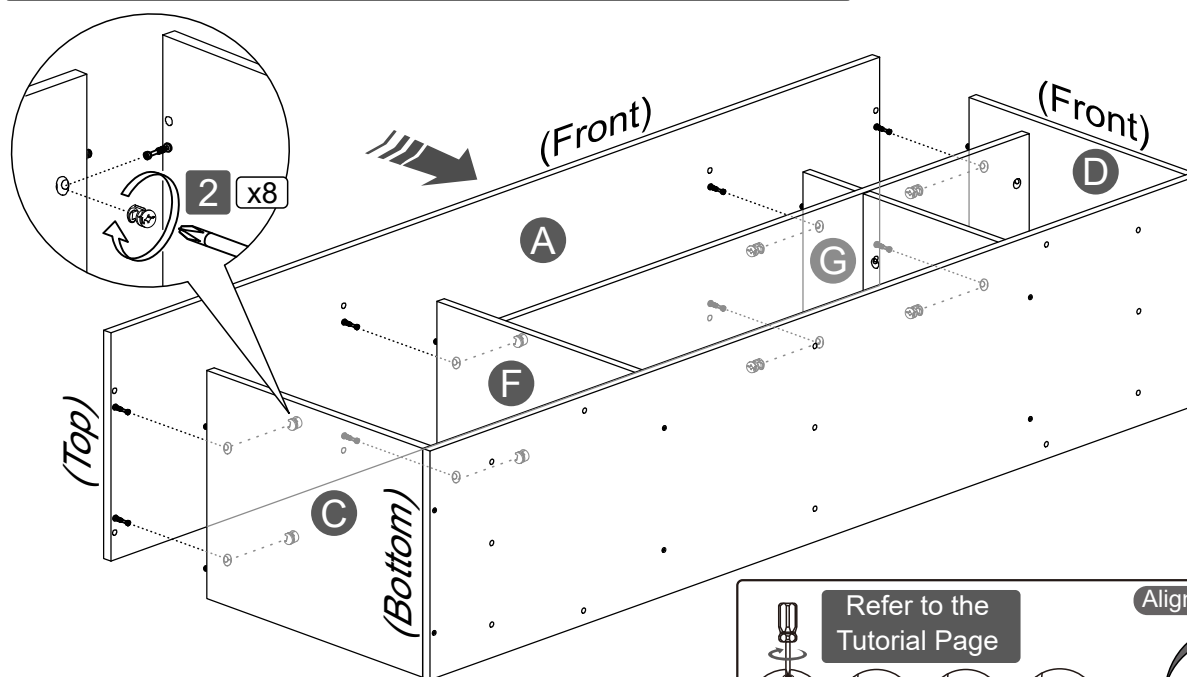

3rd: Carefully flip the unit upside-down to have it ready for the next step.

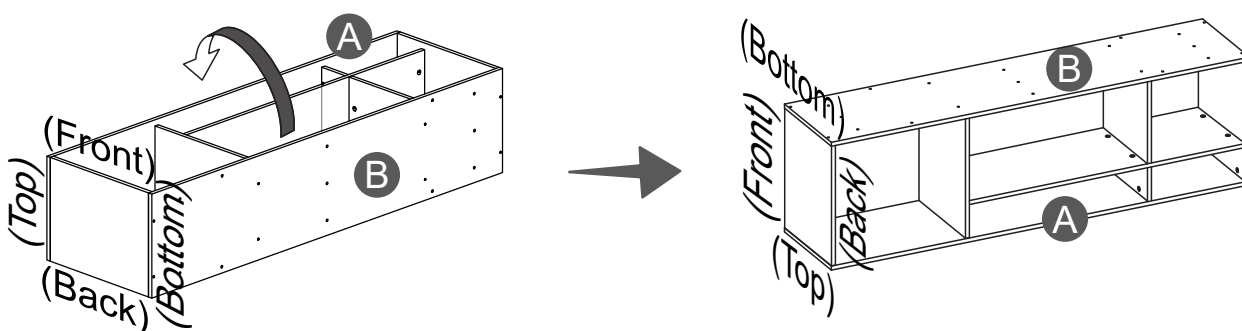

STEP 5

This step
requires
2 people



1


Short
Dowels

6





2

Bolt
+
Cam Lock




13
Sets




1st: Install #1 into the indicated holes on K.

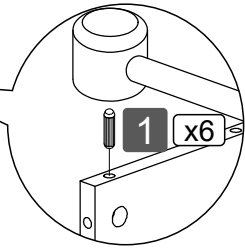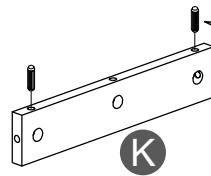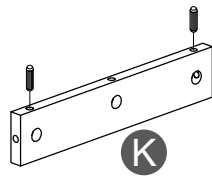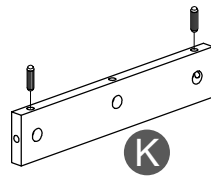

2nd: Install bolts #2 into the
indicated holes on B and J.

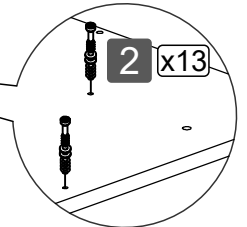
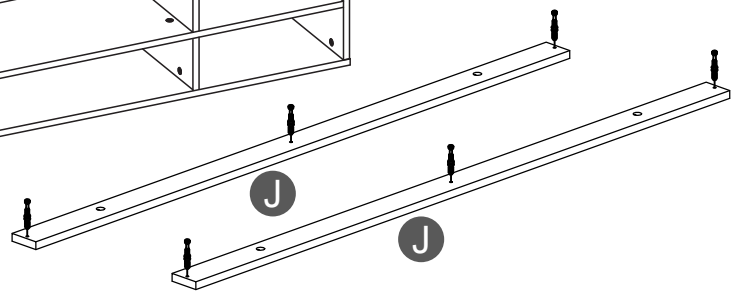
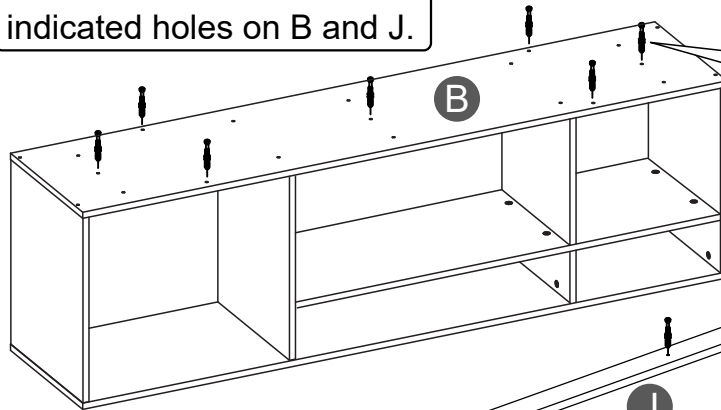


3rd: Use cam locks #2 to assemble the base pieces J and K as indicated.

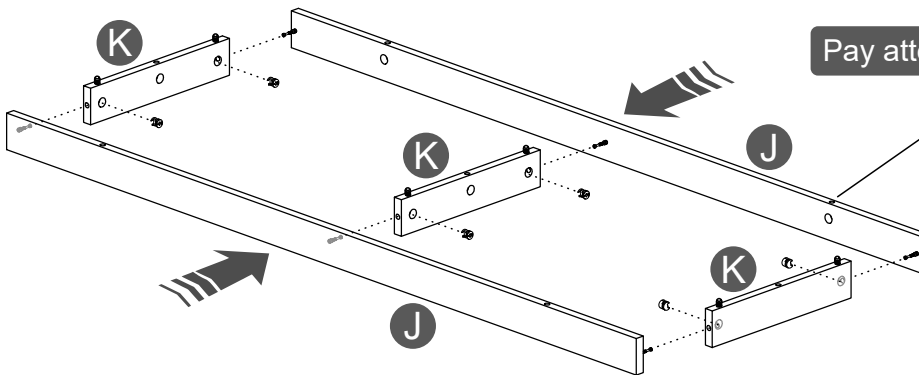

Pay attention to the orientation.

4th: Use cam locks #2 to assemble
the base pieces J and K to B.

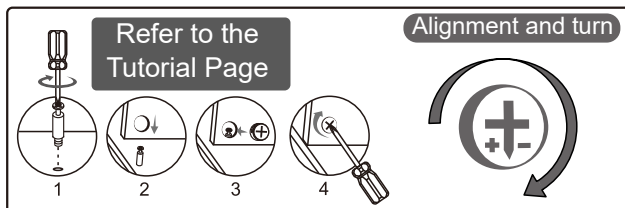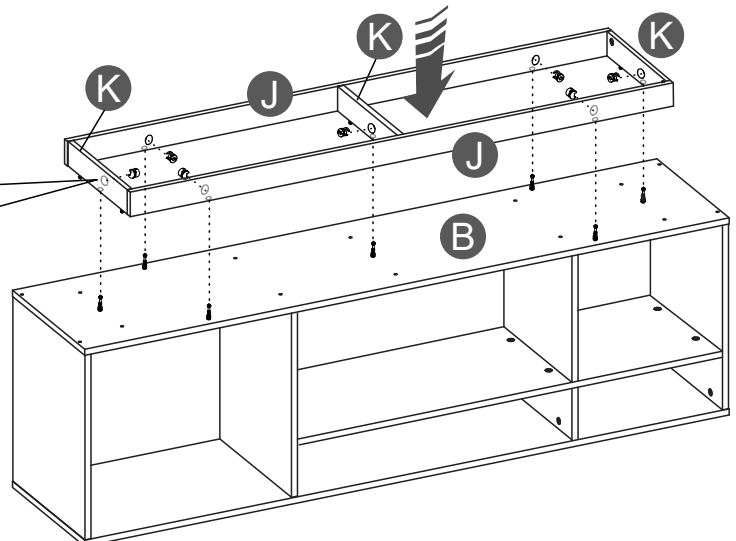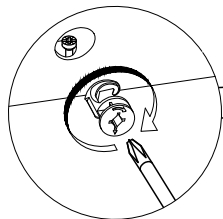

STEP 6

This step
requires
2 people



5



Glides

8

8





Nails

32





OR


1st: Attach #5 to J as indicated.

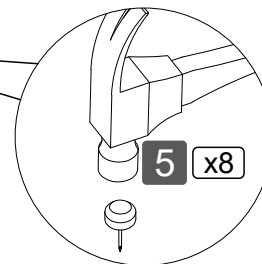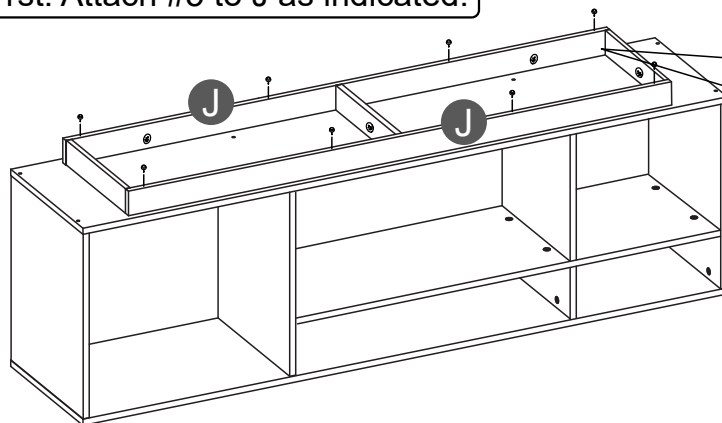

2nd: Carefully flip the unit on its front (unfinished back facing UP).

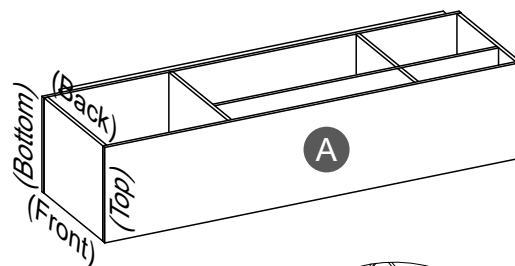
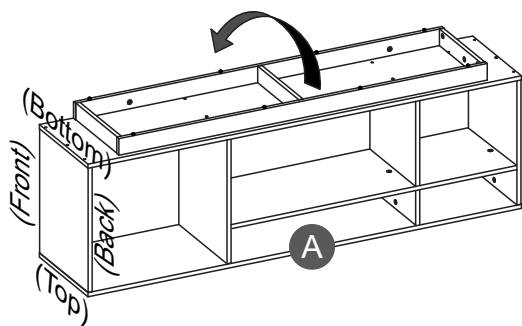


3rd: Place the back boards L centered over the unit, and use nails #8 to secure it along the edges.


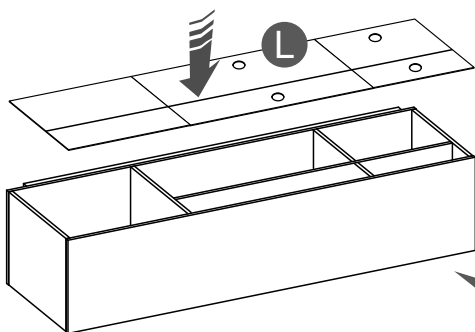


⚠ PAY ATTENTION!

Nail as straight as possible and centered on the frame to avoid the wood cracking or splitting.

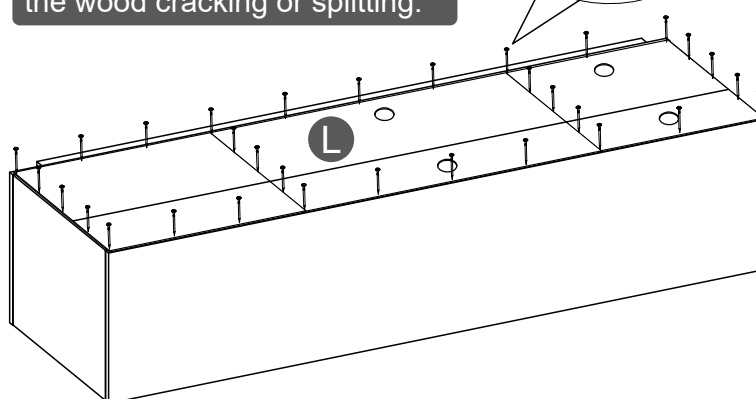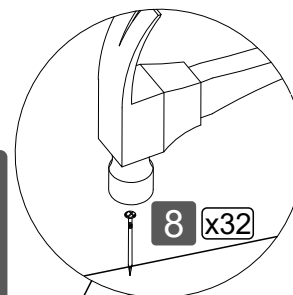

4th: Carefully bring the unit upright.

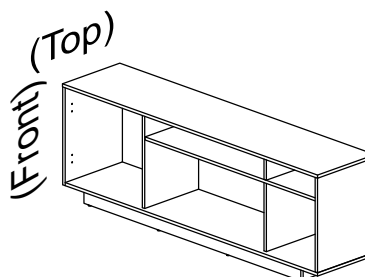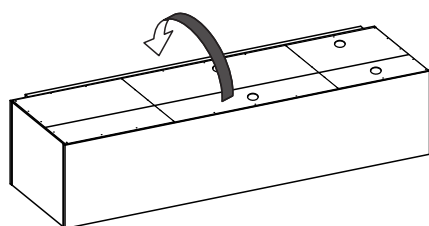


STEP 7

This step
requires
2 people



3	Cam Lock caps	10
6	Door hinge	2 Sets
7	ST3.5x16	12
 OR 		



1st: Use #7 to attach #6 to the door I.

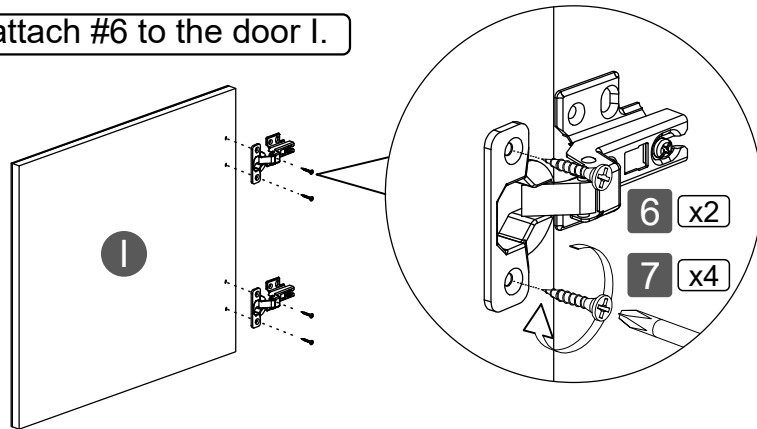


2nd: Use #7 to attach the door I to C, and adjust the alignment of the door as indicated.

⚠ PAY ATTENTION!

FIRST: Attach on the OVAL holes.

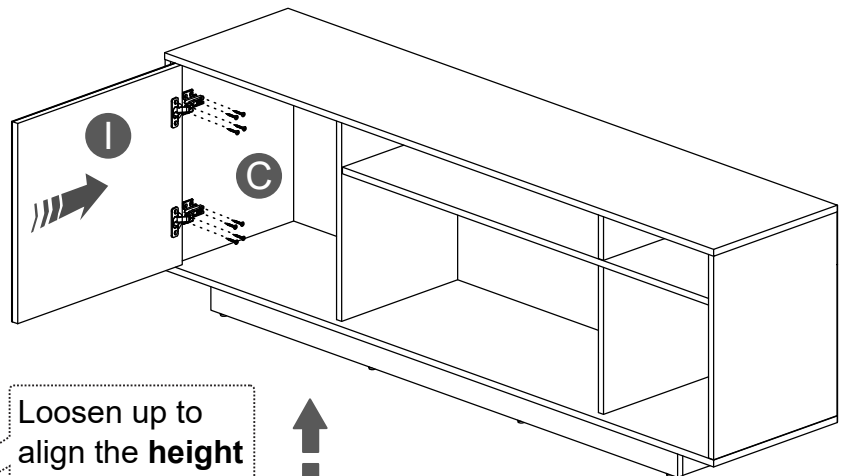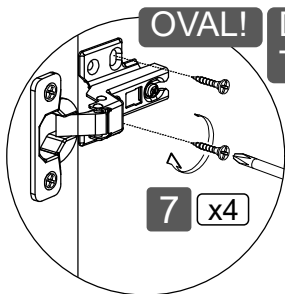

THEN: Align the door.

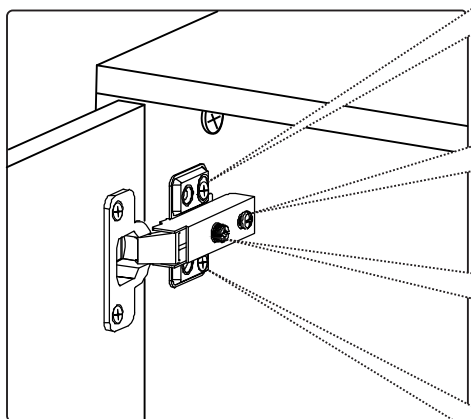


Loosen up to align the **height**
(Up-Down)

Loosen up to align the **depth**
(Front-Back)


Loosen up to align
side-to-side

Loosen up to align the **height**
(Up-Down)

THEN: Tighten on OVAL and
secure on the ROUND.

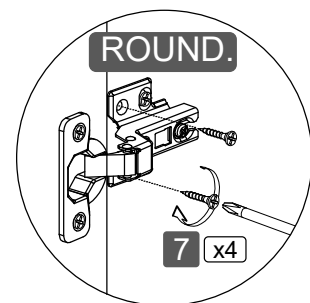

FINALLY: Cover the visible cam locks with #3.

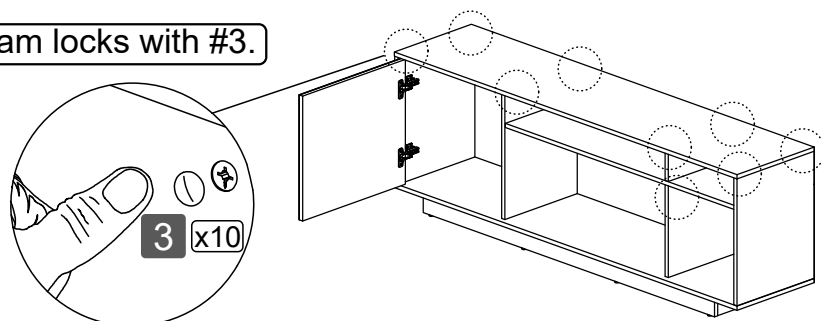


WARNINGS


Not paying attention to the following warnings could result in injuries.

TIP-OVER WARNING!


Always pay close attention to small children playing near the unit or if they are watching TV very close to it to prevent tip-over accidents.

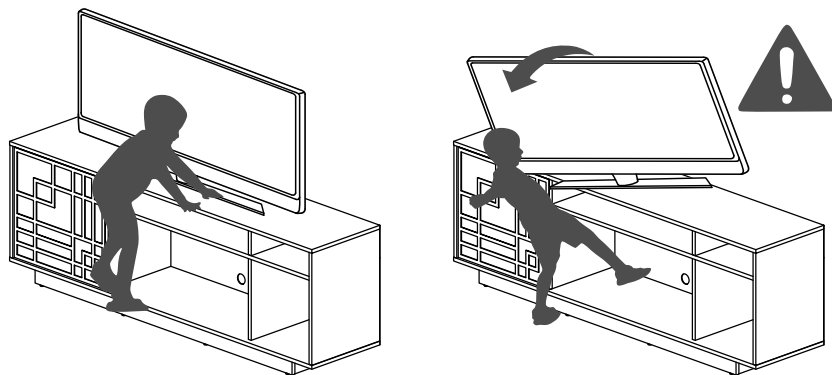


- Do not sit, climb or stand on the Unit.
- Do not allow children to play over or inside the unit.

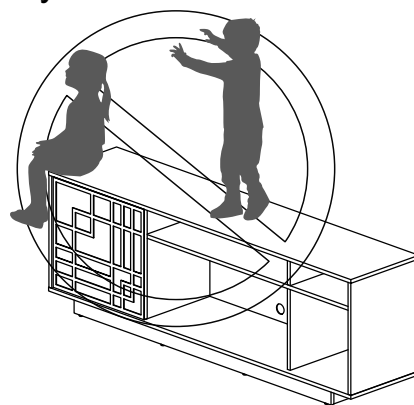

- 2 persons are required for moving the unit at distances longer than 2 feet.
- Remove or secure your TV or any objects that might fall off during moving.
- Lift by bending your knees, not your backs.

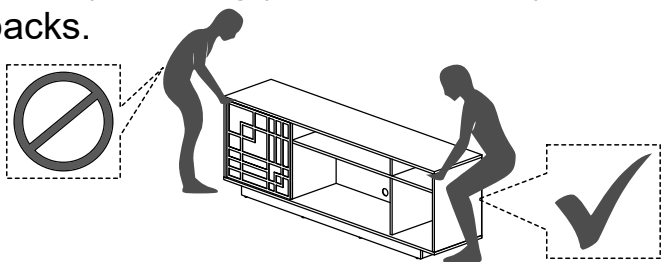

WEIGHT LIMITS DO NOT EXCEED


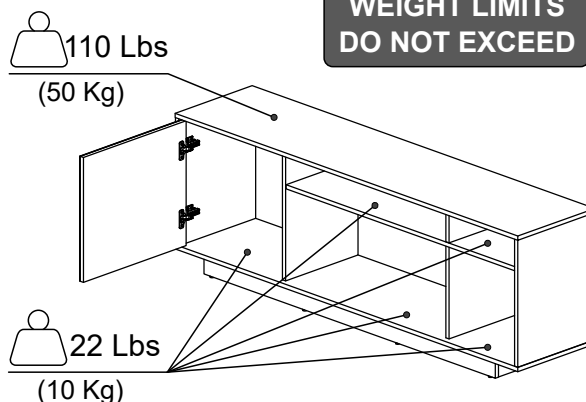


CARE AND MAINTENANCE



- Clean with a cloth lightly dampened in a solution of mild soap and water.
- Do not use solvents or abrasive materials.



Do not expose to direct sunlight or extreme environmental conditions.

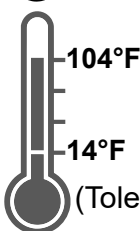

(Tolerance)

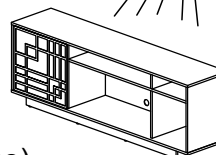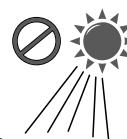

Inspect and re-tighten any loose screws every 4 months.

