Sanyipace Intelligent Toilet Bidet Seat



Model: SU01B/SV01W

Please contact us at the first time you got issue with the product


Amazon Orders Support: **support@sanyipace.com**
Website Orders Support: **support@sanyipacetoilet.com**

* Be sure to include your Order ID for faster service

Catalog


Component & Structure 1
Confirm Toilet Size Before Installation 2
How to Install 3
Safety Information 5
Side Knobs and Display 7
Remote Control Instructions 8
Warm Tips for Use 12
Disassembly and Cleaning 13
If the Nozzle Function Weakens 14
When not in Use for a Long Time 15
Fault Diagnosis 16
Product Specification 18
Warranty 19

Component & Structure

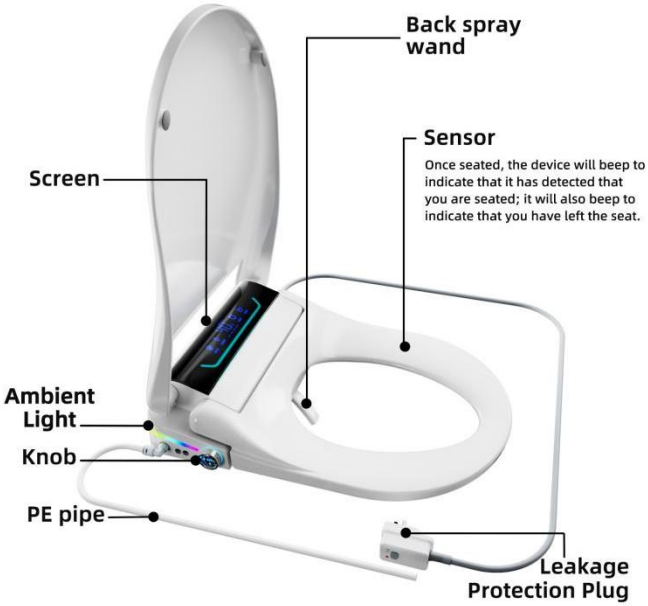


Package included:

Toilet seat * 1; Plastic mounting plate * 1; Long screws * 2;
Rubber expansion bolts * 2; Adjusting Piece * 2; Water Filter * 1;
80cm PE pipe * 1; T-connector * 1; Fragrance tablet * 1;
Remote Control * 1

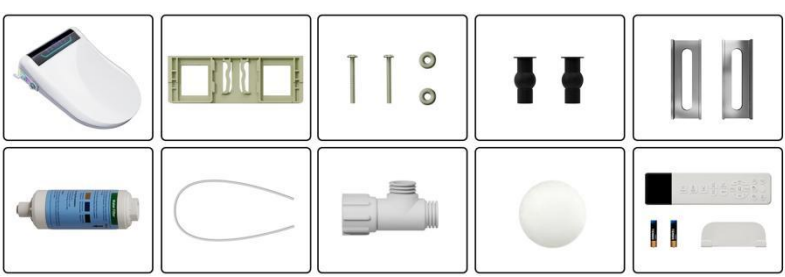


Confirm Toilet Size Before Installation

1. Measure the length, hole spacing and width of the toilet.

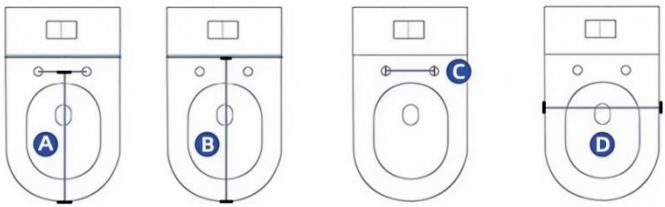

45-50CM ≥52CM 11CM-19CM 35-40CM

2. Confirm the shape of the toilet

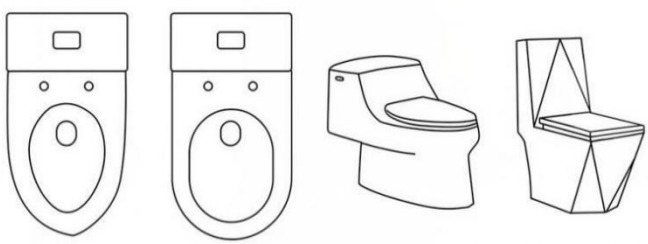

*Please choose V-shaped or U-shaped according to the toilet.

*Concave water tank please contact seller to confirm whether it fits.

*This toilet seat is not suitable for square toilets

2. Installation environment requirements



There is socket within 1.3m of the toilet

There is a water inlet within 0.7m around the toilet

The distance between the toilet right side and the wall is greater than 4cm

How to Install

1. Install the toilet seat to the toilet



Insert the two rubber expansion plugs into the designated screw holes.



(See illustration) Place the mounting plate and the rectangular metal pad (space adjustment plate) over the screw holes. insert the screws into the small round pad and screw them into the respective holes.
Note: Adjust the position of the plastic mounting plate before fully tightening the screws.



Open the fragrance container on top of the toilet seat, insert a fragrance tablet, and close the lid.



Align the toilet seat parallel to the mounting plate and slide it straight up until it clicks into place and is securely in place.

2. Install the water line



a. install the T-connector between the water valve and the water tank braided hose
b. install the water filter on the T-connector

c. use the 1/4" PE pipe connect the water filter and the toilet seat
d. Open the angle valve, plug in the power and start the product.

Important Tips:

*To avoid of the toilet seat internal blockage and spray wand nozzle leakage, please open the angle valve and drain the sediment and sewage in the water pipe for 2-3 minutes before installation.

*Please install the filter's inlet and outlet correctly.

Please scan below QR code to learn how to install the toilet seat

Post-Installation Verification

After installation, confirm the following before first use:

1. Check for leaks — Dry all pipe connections and check the spray nozzle and water pipes with absorbent paper.
2. Test the seat sensor — Press the seat ring sensor and listen for a beeping sound.
3. Test cleaning & drying — Hold the sensor down (function only activates when seated) and test hip cleaning, feminine cleaning, and warm air drying.
4. Check the damping mechanism — Ensure the seat and lid close smoothly.
5. Remote control pairing — Rotate and hold the side knob, press any key on the remote. A long beep confirms pairing.

⚠ When testing cleaning, cover the front end of the spray wand nozzle to prevent water splashing.

Safety Information

Please follow all guidelines to reduce the risk of electric shock, fire, scalding, and injury.

Electrical Safety

1. Do not place or store the product where it may get wet. Do not pour water or detergent on the product body or power plug — may cause fire or electric shock.
2. The socket circuit must be protected by a high-sensitivity leakage switch (rated ≤15 mA) or an insulated transformer (1.5–3 KVA).
3. Install the socket at least 0.3 m above the floor, away from the bathtub.
4. The unit must be properly grounded (grounding resistance < 100 Ω, copper wire ≥ 1.6 mm diameter).
5. In the bathroom, ensure the power plug is waterproofed with silicone — may otherwise cause fire or electric shock.
6. Do not insert or remove the power plug with wet hands.
7. Do not use a damaged power cord or plug. If the power cable is damaged, have it repaired by a professional.
8. Do not connect to a loose electrical outlet. Do not plug multiple high-wattage appliances into the same power strip.
9. During thunderstorms, unplug the power cord.
10. Before use, ensure the plug is fully inserted — a loose connection may overheat and cause fire.

Usage Safety

1. Do not spill water on the product. After use, wipe off any condensation with a cloth and ventilate.
2. Avoid dropping the remote control into water.
3. Keep cigarettes, lighters, and other kindling away from the product.
4. Do not block the warm air outlet with fingers or objects — may cause scalding, electric shock, or burns.
5. Do not stand on, exert force on, or impact the seat or cover — may cause cracking, falling parts, or injury.
6. Do not insert or drop anything into the product opening or water pipe.
7. Do not use the product while drowsy or asleep.
8. Use only tap water — other water may cause skin irritation.
9. Do not expose the product to direct sunlight — may cause

discoloration, aging, and cracking.
⚠ Low-temperature burn warning: Prolonged contact with the heated seat may cause burns even at low temperatures. If sitting for a long time, set the seat temperature to low or off. For children, the elderly, or persons with sensitive skin, set seat and air temperatures to the lowest level or off.

Child & Vulnerable User Safety

Users (including children) with physical, perceptual, or intellectual disabilities, or lack of experience, must be accompanied by a responsible adult when using the product.
Set all temperature functions to the lowest setting or turn them off for these users.
Do not allow children to play with this device.

Maintenance & Cleaning Safety

1. Do not disassemble, modify, or transform the product without authorization.
2. If the product fails, stop using it immediately and contact support.
3. For cleaning, use diluted neutral kitchen detergent only. Do not use toilet cleaner, residential detergent, gasoline, banana oil, detergent powder, or nylon brushes — may damage plastic and cause cracking/leakage.
4. Do not wipe the product body, seat, or lid with a dry cloth or toilet paper. Direct flushing with water is strictly prohibited.
5. Do not urinate on the body or spray wand.
6. Do not lean back against the toilet cover — may damage housing and damping.
7. When the inlet angle valve is open, do not remove the inlet filter. Do not twist or damage the water inlet hose — may cause water leakage.
8. Tighten the water filter securely during installation — loose fitting may cause water leakage.
9. If water leakage occurs, immediately close the inlet angle valve.

Freeze Prevention & Long-Term Inactivity

If not using for a long time:
1. Remove the power plug from the socket.
2. Close the water inlet valve.

3. Drain the water from the hose and internal tank to prevent contamination, blockage, and freezing damage.

Winter freeze prevention:
- Set water and seat temperature to [High], close the seat cover.
- Turn on room heating.
- If no heating is available: unplug, drain all water, and discontinue use.

Side Knobs and Display



-Before sitting down:

Press and hold the knob for 3 seconds to turn the machine on and off

-After sitting down:

Rotate the knob clockwise: Initiate buttock cleansing, rotate again for oscillating cleansing.

Rotate the knob counterclockwise: Commence feminine cleansing mode , rotate again for oscillating feminine cleansing.

-Tap the knob to activate the warm air drying function， and tap again to stop.




-Display lighting up indicates turn on, going to dark enter sleep mode.

-Water temperature, seat temperature: display gear and real-time temperature, “00” or “--”indicates off.

-Cleaning, drying: Display the corresponding functions in execution

Remote Control Instructions

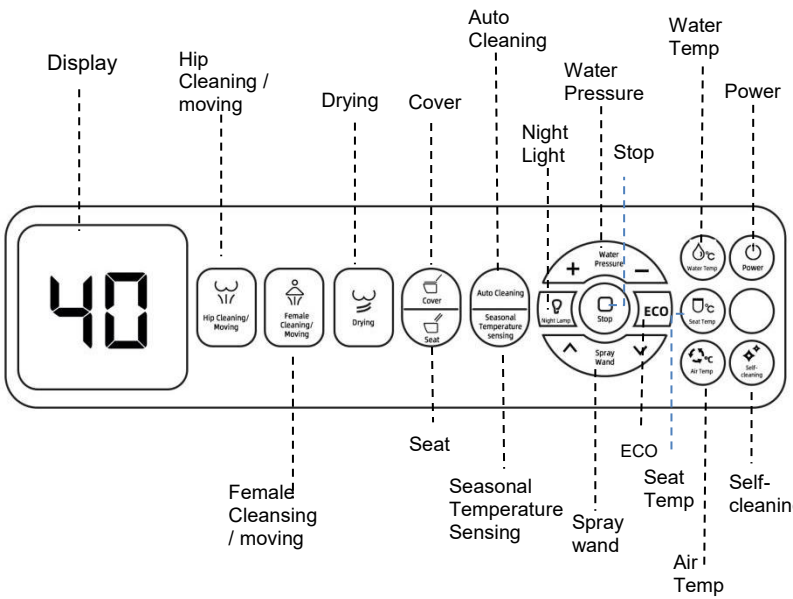

Remote Pairing: rotate and hold the knob on the side of the seat, press any key on the remote control, and the pairing is successful with a long beep.
(**please pair the remote control before using the product**)

Hip Cleaning / moving: Press to start hip cleaning, press again to start oscillating cleaning in the hip cleaning mode. (function can be enabled successfully only when you sit on it)
Female Cleaning / moving: Press to start female cleaning, press again to start oscillating cleaning in the female cleaning mode.(function can be enabled only when you sit on it)
Drying: Press to start warm air drying.
(function can be enabled only when you sit on it)
Cover: Press to open or close the toilet cover (lid).
Seat: Press to lift up or put down the seat
Auto Cleaning: Press to start auto cleaning (the function can be activated successfully only when you sit on it, including cleaning + drying program).
Seasonal Temperature sensing: Press to turn on or off the Intelligent temperature control function. A long beep indicates the function is enabled, and a short beep indicates it is disabled. (Manual temperature setting is disabled in this mode)
Night Light: Press to turn on or off the night light or set the Ambient Lighting details please refer to below “Custom Settings” paragraph.
Water pressure: Press to adjust the water pressure of the spray wand.
Stop: Press to pause cleaning, drying or other program.
ECO: Press to enter energy saving mode. two beeps indicate the function is enabled, and one beep indicates the function is disabled. (the device will set the temperature to the lowest gear automatically in this mode, and manual temperature setting is disabled in this mode)

∧ **Spray wand** V**:** Press to adjust the spray wand position (forward or backward).

Water Temp: Press to set the water temperature, “00” or “--” means off.

Seat Temp: Press to set the seat temperature, “00” or “--” means off.

Air Temp: Press to set the air temperature, “00” or “--” means off.

Power: Press to switch on of off the power supply.

Self-cleaning: Press to start spray wand self-cleaning.

Custom Settings:

1. Lid opening angle adjustment: press “power” key, and press the “∧” within 3s to enter the adjustment mode, then press “∧” to increase the lid opening angle and press “V” to decrease the lid opening angle, then press “power” key to confirm.

2. Auto-Open Lid Function ON/OFF: when the device is powered on, press and hold the “cover ” button, “beep” once is turn off and twice is turn on this function.

3. Auto-Open Lid Sensing Distance Adjustment: press “power” key, and press the “cover” key within 3s to enter adjustment mode, then press “∧” key to increase and “V” key to reduce the gear， then press “power” key to confirm. (The default sensing distance is 60cm)

4. Ambient Lighting on/off: (when device is on) , put your hand on the seat “sensor” position until a “beep” sound, press “night light” to turn on or off the ambient light.

5. Ambient Lighting Color Setting: Press power button to turn off the device and press “air temp” within 3s to choose colour, press power button to confirm and turn on the device again.

6. Intelligent Temperature Control Function ON/OFF: press “power” key, and short press the “seat temperature” key within 3s, beep once is off and twice is on

Remote Control Battery Replacement


When the remote is low battery, the indicator light will dim or turn off.

※ Under normal circumstances, the remote control light is always on.

※ The included battery is mainly used to check the operation of the installation, so its service life may be short.

Notice!
-The battery positive and negative electrodes must be consistent with the markings on the remote control.
-Please don't use new batteries and old batteries together
-Please use alkaline batteries

Open the battery compartment cover on the back of the remote control; put 2 new AAA batteries in, and then carefully close the cover.

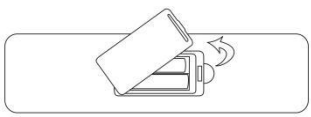

Warm Tips for Use

Energy-saving Function

The following measures can effectively save energy .
put down the toilet lid after use.
1. Set the seat and water temperature to comfort temperature instead of blindly raise
2. Adjust temperature setting in different seasons.
3. Please cut off the power supply when you are away for a long time.

Tips:
* The machine will automatically enter sleep mode after 3 minutes of inactivity, Sit down or press the button to wake up
* When freezing is possible, please take anti- freezing measures

About Seating Sensor

If nobody seat down, even if the remote is pressed by mistake, the nozzle will not spray water, and the rear cleaning and female cleaning function will not be activated.
The sensor does not work if you are not seating within sensor range.
※ Please adjust your position.

Please Close Seat and Cover Slowly

The intelligent toilet seat is equipped with a damping buffer to avoid the collision sound when closing.

Water is flowing out around the nozzle

There is water flowing out around the nozzle before and after the cleaning program, please don't worry, it is the spray wand self-cleaning program, Not a fault



※In addition to the above situations, if spray wand keeps leaking, please close the water inlet valve, unplug the power plug and contact us seller for help


About the Remote Control

When the remote control is low battery, the remote display will dim or control will not work, please replace the batteries in time.

Disassembly and Cleaning

How to disassembly it


1.unplug from the socket.

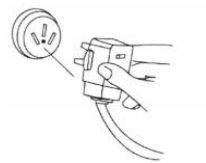


2.Close the water inlet valve to stop water supply.



3.Pull the seat backward to remove it

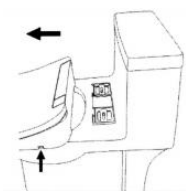

4.Gently place it on the floor mat.

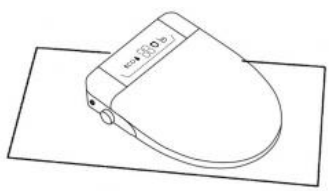

Tips:

1. Make sure to unplug the power plug from the socket.

※ Or the heater keep heating may cause fire.

2. Do not connect external power cords or water supply lines.

※ Or it may cause damage or water leakage.


3. When removing the toilet seat for cleaning, please handle with care.

※Or water leakage or malfunction may occur.

4. Do not turn the toilet seat upside down without unplugging the power cord. Also, please do not place it directly on the ground.

※ Or it may cause surface scratches or faults

Do not turn the cover upside down!
Don't put it on the ground!

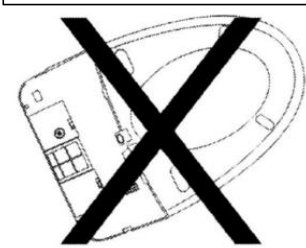

If the Nozzle Function Weakens

If the water spray strength weakens after a long-term use, please clean the filter as follow. (Cleaning cycle depends on local water quality)

Filter cleaning steps

1.Close the water inlet valve.




2.Rotate to remove the filter screen.

(Please place a container such as basin under the angle valve, as a small amount of water will flow out.)



3.clean the dirt on the filter screen with a small brush and water

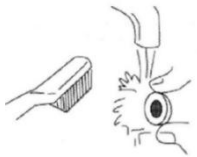

4.Place the filter screen into the filter in the original direction, and then tighten to the water supply hose.

5.Open the angle valve to supply water to the original position.





6. Finally, turn on the equipment and test again

Close the water inlet valve when removing the filter!
When installing the filter, tighten the water supply hose; otherwise, water leakage and indoor water accumulation may occur.

When not in Use for a Long Time

Please drain the water if don't use the toilet seat for a long time, as 1) water pollution may lead to blockage; 2)sudden temperature drop leads to freezing and leaks.

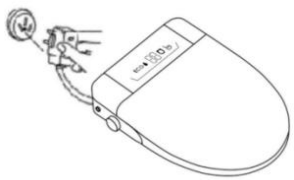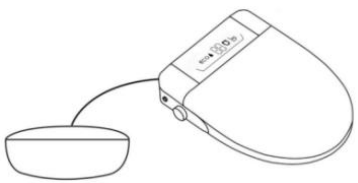How to drain water	
1. Remove the power plug from the socket. 	2. Close the water inlet valve. 
3. Drain the water from the hose. *Place a container under the inlet valve. *Remove the water supply hose from the inlet valve and place the end of the water supply hose into the container. 	
4. unscrew the drain bolt, drain the water in the small water tank in seat cover, and screw the bolt back to its original position.	5. Please conduct a trial run before using it again

Notice !

-When removing the water supply hose, make sure that the inlet valve is closed.

-When installing a water supply hose, Please plug it firmly into place.

※ otherwise, it may easily cause water leakage resulting in indoor water.

When freezing occurs and the water does not spray out

if the water supply hose or water supply joints freezes and does not spray water, please wrap the hose or water supply joint with hot water soaked cloth to thaw it, or increase the indoor temperature to allow it to thaw naturally.

Warning!

Do not pour hot water or blow hot air on the hose directly, or the main water supply pipe may be damaged

Fault Diagnosis

Some faults can be eliminated by simple operation, please confirm the following before contact vendor for repair:

Fault	Reason	Troubleshooting
Unable to spray water	The power outlet is not powered on	Check if there is a power outage
	The power switch is in the [Off] state	Press the power switch to light on the display part of the body
	Electrical leakage occurs	Please unplug the power and order the repair
	The water inlet valve is closed	Open inlet valve

Unable to spray water	The filter hole is blocked	Clean the filter screen
	The water inlet pipe twists result in blockage	Straighten the pipe
	did not seat within the range of the seat sensor	Adjust your seating position
	Cleaning nozzle is blocked	Cleaning nozzle
	The water supply hose freezes	Use a warm, wet cloth to thaw the water supply hose and joints, or raise the room temperature to let them thaw naturally
The spray water is not gentle	The water temperature is not set at the proper temperature	Press the water temperature button to adjust to the appropriate temperature
The seat ring is not warm	Improper seat temperature setting	Press the seat temperature button to adjust to the temperature
Knob light keeps flashing	**Indicates component failure. Please contact us seller for assistance!**	

Product Specification

Category			Specification
Rated voltage			AC110V ±10%, 50HZ / 60Hz
Rated power			1300W
Clean Function	Water output	Hip Cleaning	about 650ml/min
		Feminine Cleansing	About 650ml/min
	Outlet water temperature		Room temperature, 34℃, 37℃, 40℃ (four level)
	Water heating system		instant heating
	Heater power		1200W
	Safety device		Inlet/outlet water temperature sensor, leakage protector, thermostat
Drying Function	Warm air temperature		Room temperature 45℃, 50℃, 55℃, (fourth gear)
	Wind speed		6800 rpm
	Heater Power		The average is about 220W
	Safety device		Bimetallic strip, thermal fuse
Seat Heating	Seat temperature		Room temperature, 34℃, 37℃, 40℃, (4 level)
	Heater power		About 40W
	Safety device		Temperature sensor, thermal fuse
Deodorization	Type		Activated carbon high efficiency catalyst filter
Moving cleaning			Move the spray wand back and forth 1.5cm
Spray wand position			Adjustable front and rear
Water supply temperature			3-40℃
Static pressure of water supply			0.15-0.75mpa

Warranty

Warranty Policy:

1. Under normal use, please do not repair it without permission if a fault occurs. We provide a one-year warranty from the date of purchase.
2. Below situations are not covered by warranty, However, maintenance may be performed for a fee:
   a) Damage caused by human factors, including damage caused by use in abnormal working environment and non-use according to instructions;
   b) The user privately disassemble the machine, repair, modify or repair by non-warranty units of the company;
   c) Damage caused by irresistible force (such as fire, flood, earthquake, lightning strike, etc.
   d) Expired the warranty period

-----Contact Us-----

If you need the PDF user manual, you can download it from the product page on our website:
https://www.sanyipacetoilet.com

Our After-sales email:
Amazon Orders: **support@sanyipace.com**
Website Orders: **support@sanyipacetoilet.com**

Our WhatApp:
WhatsApp: **+86 137 1399 9105**
Scan the QR code to enter our website to learn more: