


Instruction Manual

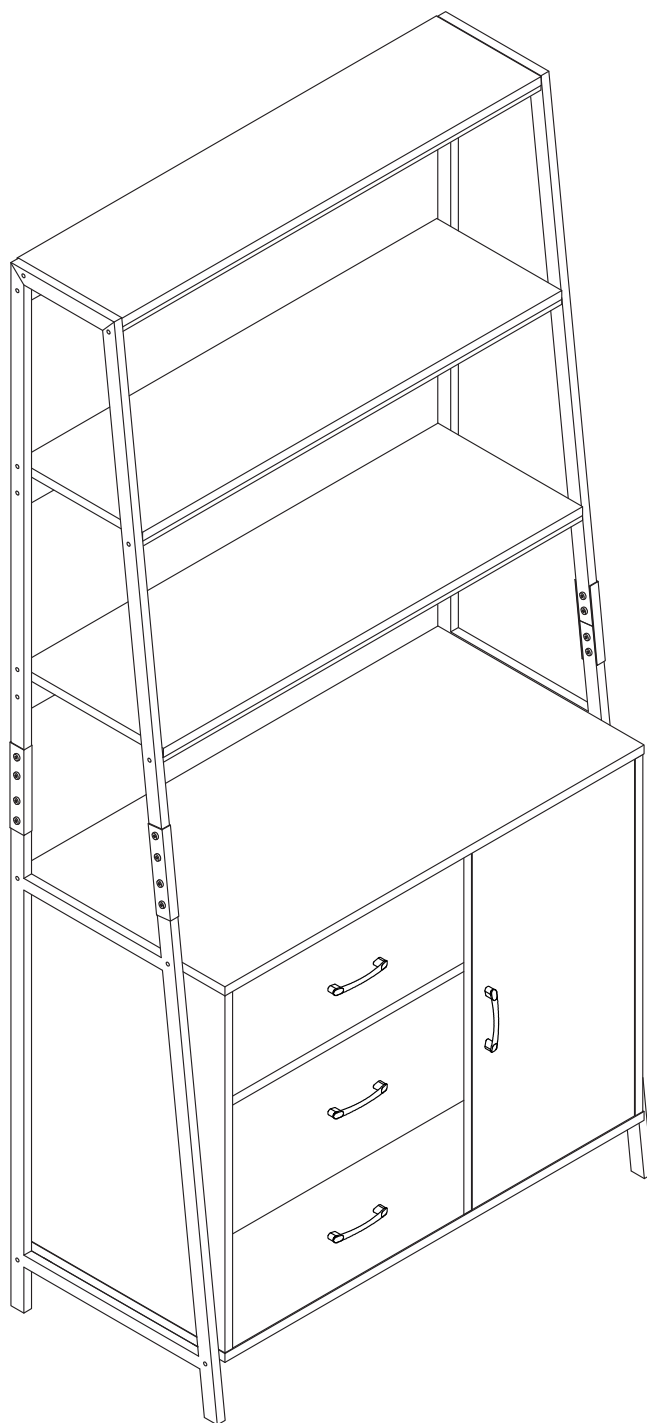

HOS-MW-124

HOS-MW-125

HOS-MW-126

V1.0

**Double Drawer
Console Table**

EN

Thank you for purchase on our products. Please contact us if you have difficulty with assembly or need replacement parts. Our customer service is here to assist you. Please attach your User Name or Order ID so that we can assist you better.

WARNING

Serious or fatal injury may occur from unexpected assembly or use.

1. During the assembly process, keep all parts away from babies or children.
2. Always securely fix this product to the wall. Make sure the wall area to be drilled is free from hidden electrical wires, water and gas pipes.
3. Use of tip-over restraints may only reduce, but not eliminate the risk of tip-over.
4. Unless specially designed to accommodate, do not set heavy objects on top of this product.
5. Place the heaviest items on the lowest shelf.
6. Never allow children to climb or bang on drawers, doors or shelves.

DE






















Vielen Dank für Ihren Kauf von uns Produkten. Bitte kontaktieren Sie uns, wenn Sie Probleme mit Montage haben oder Ersatzteile benötigen. Wir Kundenservice ist für Sie da. Bitte geben Sie Ihren Benutzernamen oder Ihre Bestellnummer an, damit wir Sie besser unterstützen können.

WARNUNG

















Bei unerwarteter Montage oder Verwendung können schwere oder tödliche Verletzung auftreten.

1. Legen Sie in den Montageprozess alle Teile weg von Babys oder Kindern.
2. Stellen Sie sicher, dass der gebohrte Wandbereich frei von verborgenen Stromkabeln, Wasser- und Gasleitungen ist, wenn Sie dieses Produkt an der Wand befestigen.
3. Die Verwendung von Kippsicherungen kann die Gefahr eines Kippens nur verringern, jedoch nicht beseitigen.
4. Setzen Sie bitte keine schweren Gegenstände auf dieses Produkt, es sei denn, dass das Produkt speziell für die Unterbringung konzipiert wird.
5. Legen Sie bitte die schwersten Gegenstände auf das unterste Regal.
6. Erlauben Sie nie Kindern, auf Schubladen, Türen oder Regale zu klettern oder zu knallen.

Parts List(EN) / Teile Liste(DE)

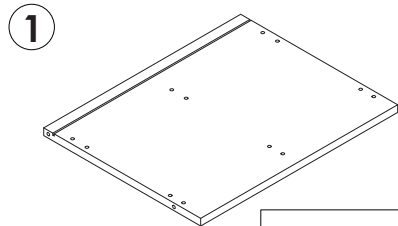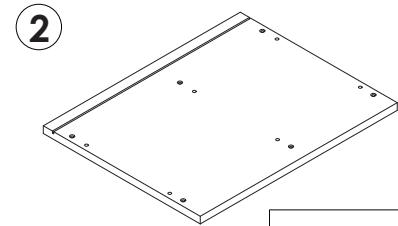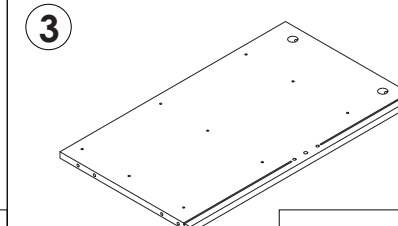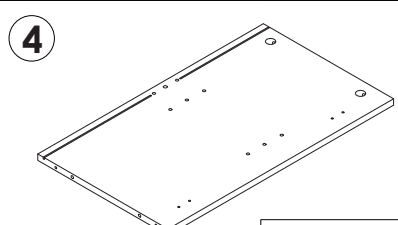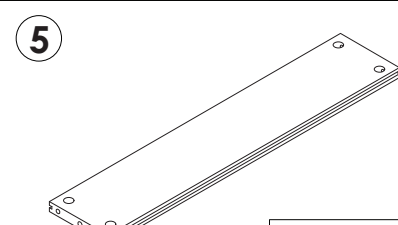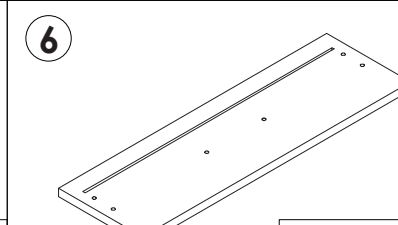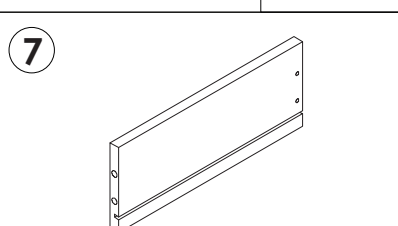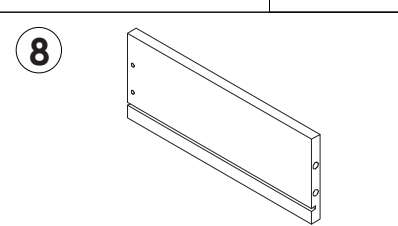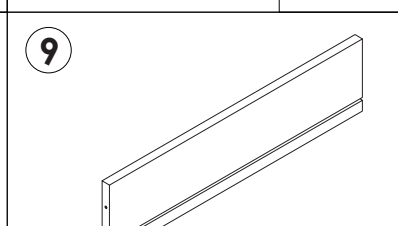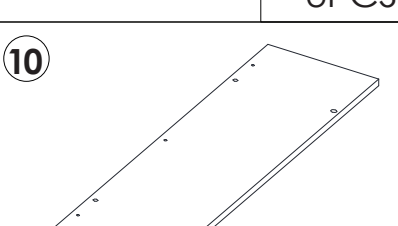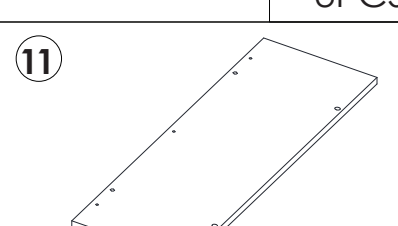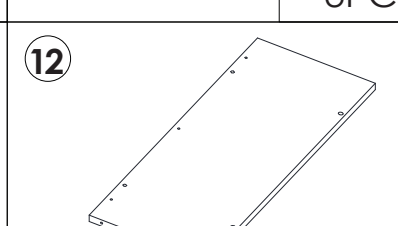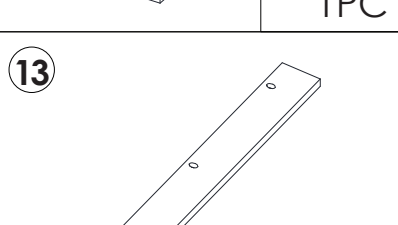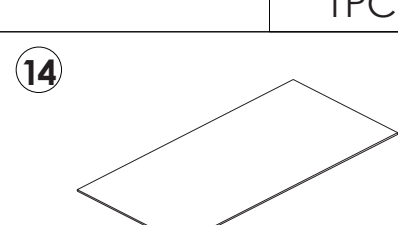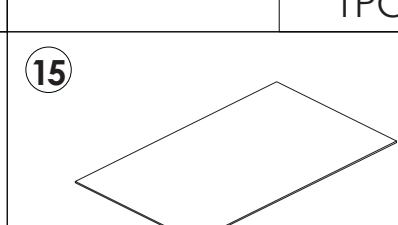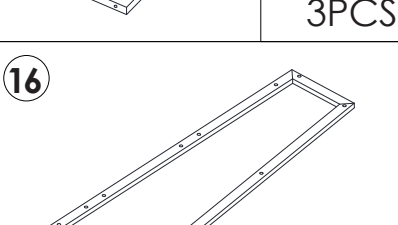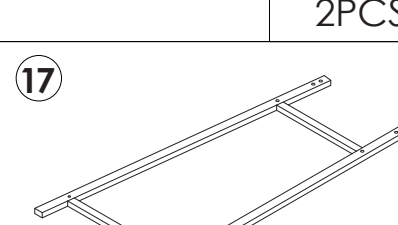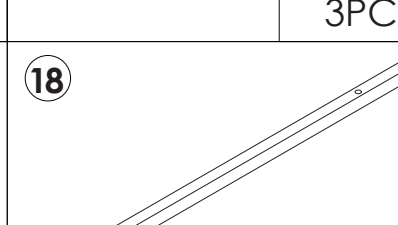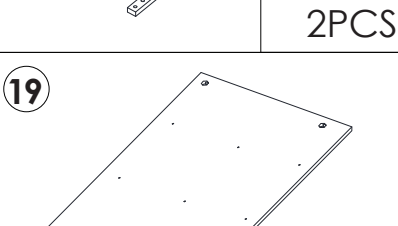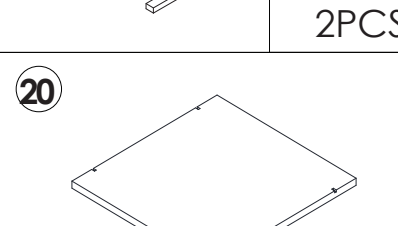
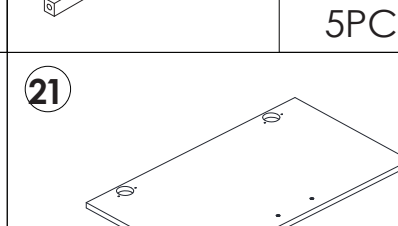
 1PC	 1PC	 1PC
 1PC	 1PC	 3PCS
 3PCS	 3PCS	 3PCS
 1PC	 1PC	 1PC
 3PCS	 2PCS	 3PCS
 2PCS	 2PCS	 5PCS
 1PC	 1PC	 1PC

Parts List(EN) / Teile Liste(DE)

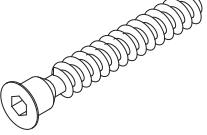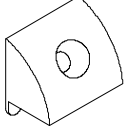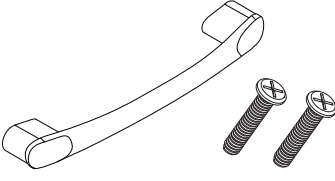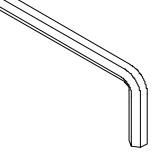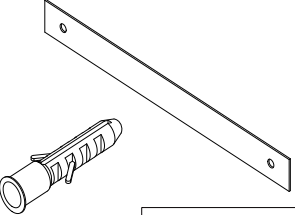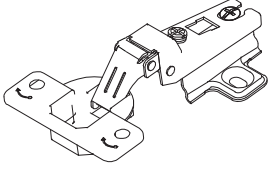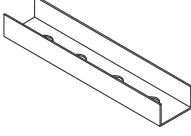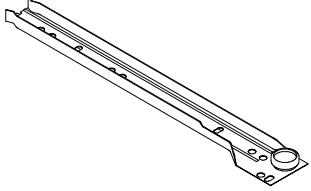
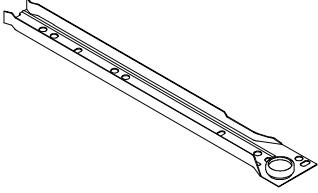
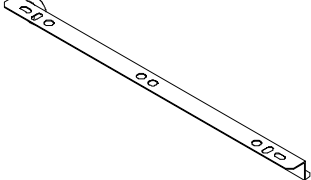
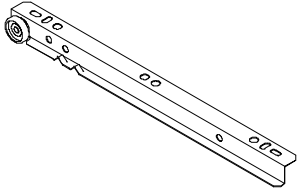
A  M6x25mm 20+2PCS	B  M6x10mm 16+2PCS	C  M6x10mm 16+2PCS
D  M6x33mm 31+2PCS	E  Φ15x9mm 31+2PCS	F  Φ8x30mm 20+2PCS
G  M6x50mm 16+2PCS	H  M3.5x12mm 44+2PCS	I  M4x35mm 20+2PCS
J  8+1PCS	K  M4x16mm 4SETS	L  M4 2PCS
M  2SETS	N  2PCS	O  M4x14mm 8+1PCS
P  4PCS	Q  4PCS	CL  L350mm 3PCS
CR  L350mm 3PCS	DL  L350mm 3PCS	DR  L350mm 3PCS

Assembly Steps(EN) / Montageschritte(DE)

STEP 1

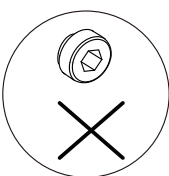
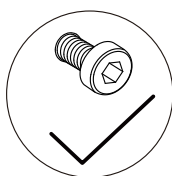


Semi-tighten the screws

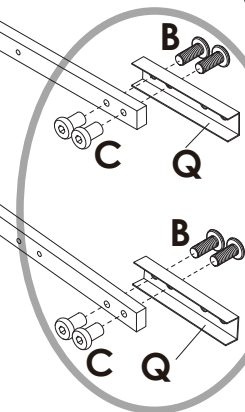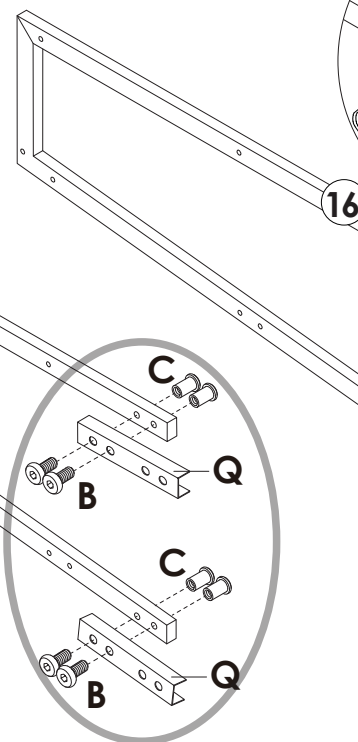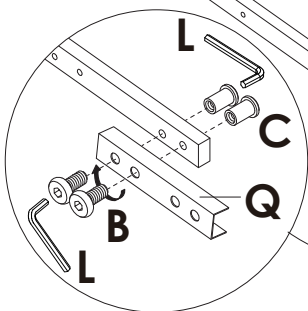
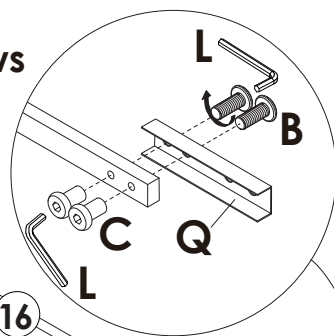


	B x 8PCS
	C x 8PCS
	Q x 4PCS
	L x 2PCS

STEP 2

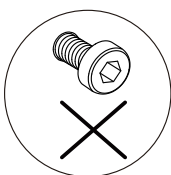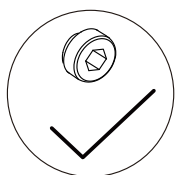





Tighten the all screws

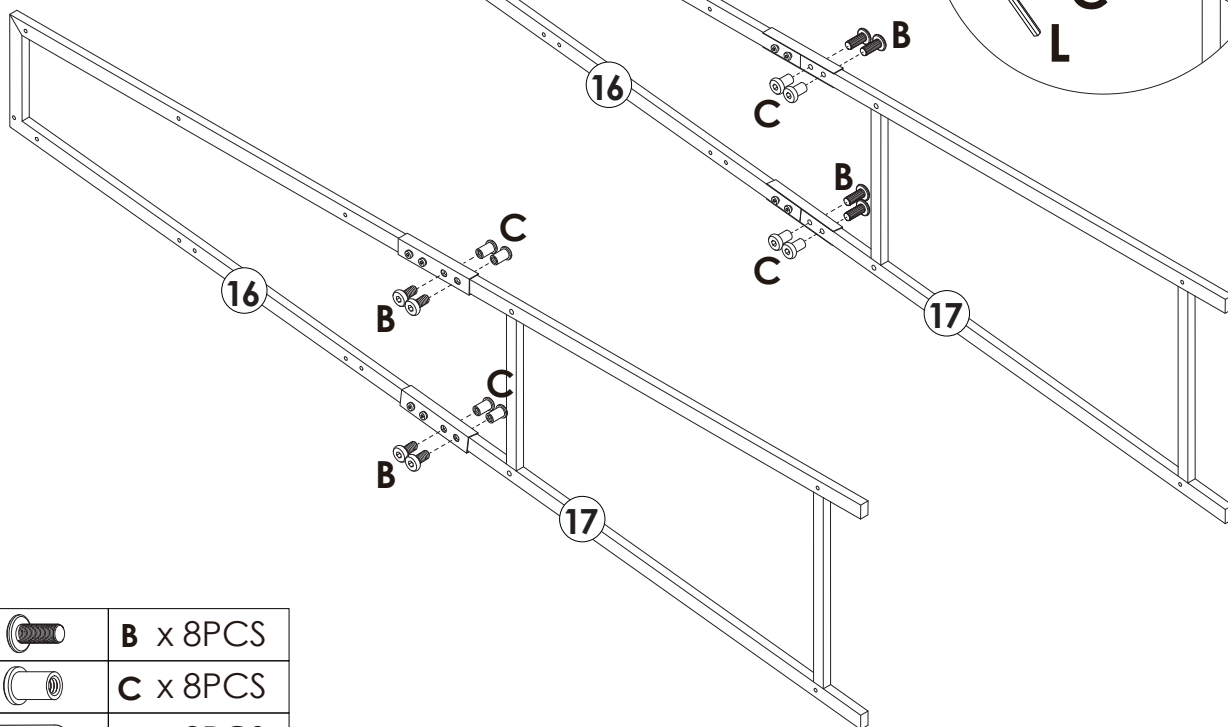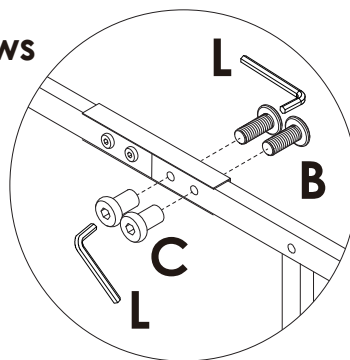

	B x 8PCS
	C x 8PCS
	L x 2PCS




Assembly Steps(EN) / Montageschritte(DE)

STEP 3

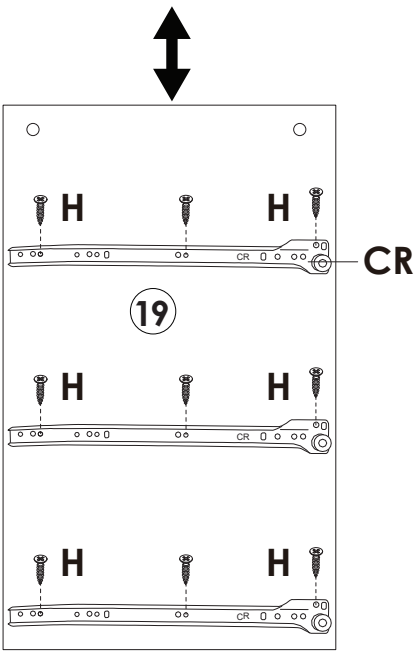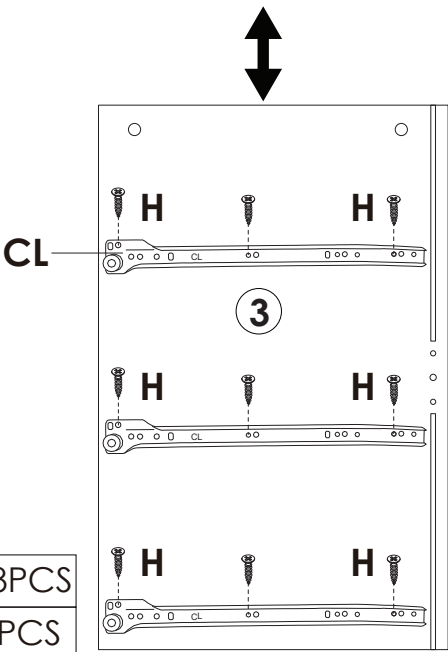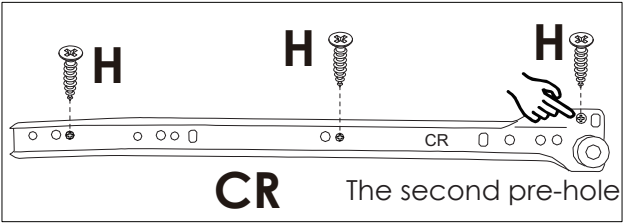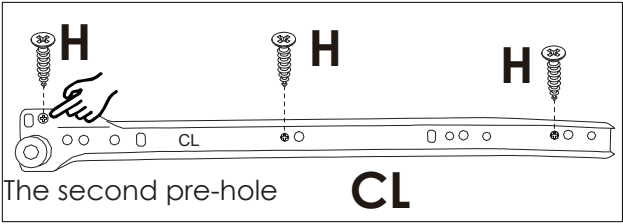

	H x 18PCS
	CL x 3PCS
	CR x 3PCS


STEP 4

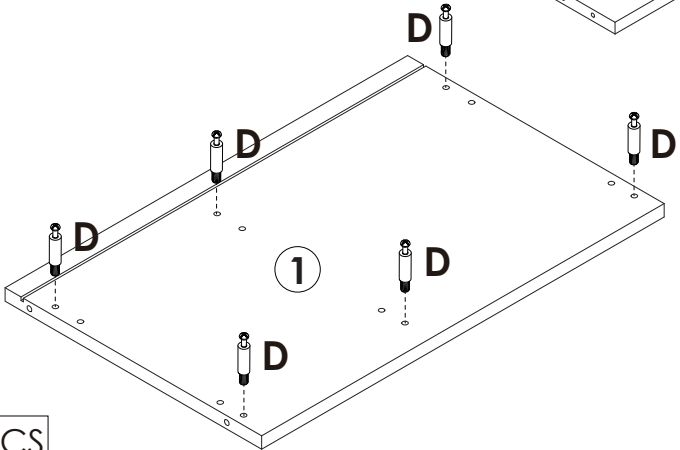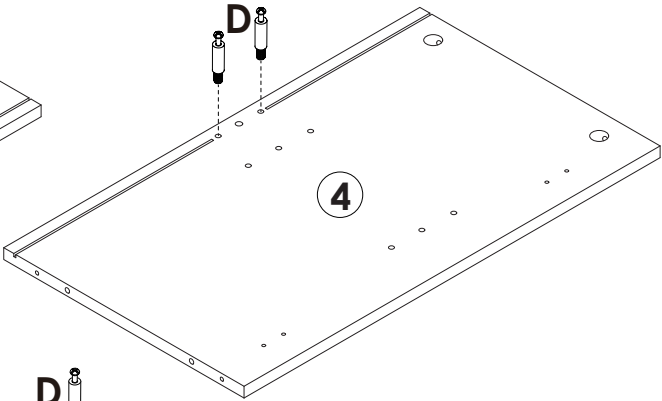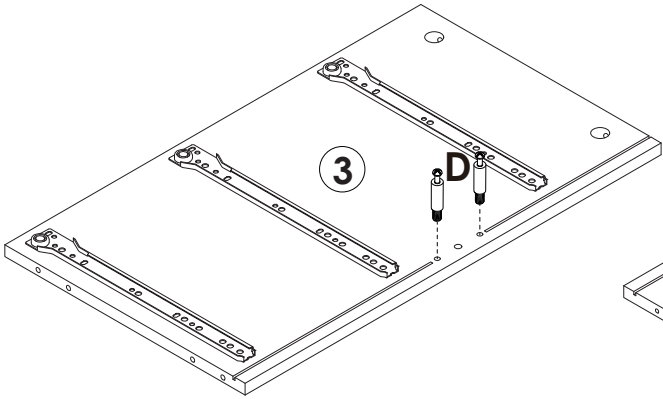


	D x 10PCS
---	------------------

Assembly Steps(EN) / Montageschritte(DE)


STEP 5

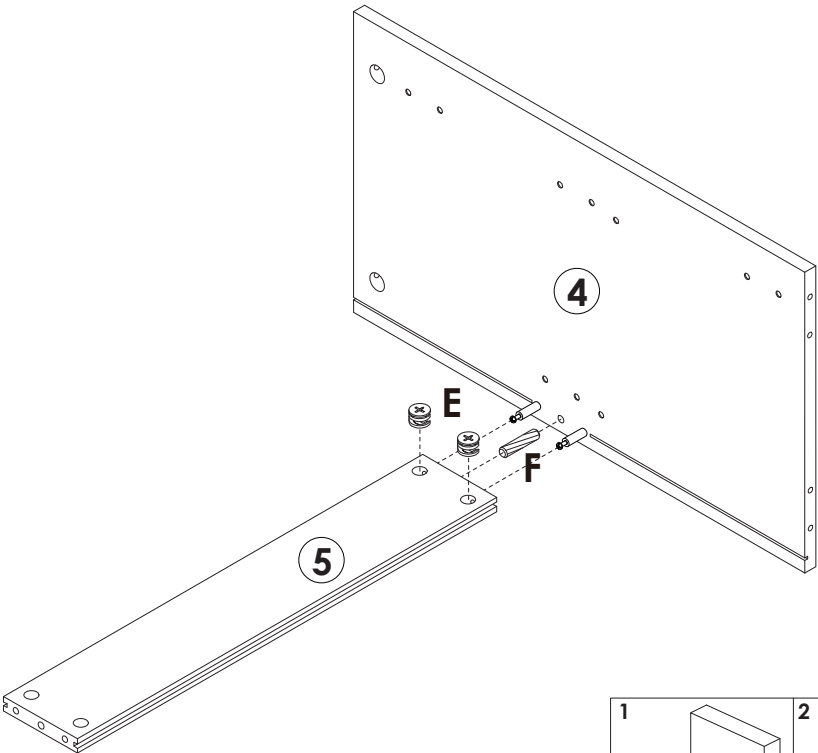


	E x 2PCS
	F x 1PC

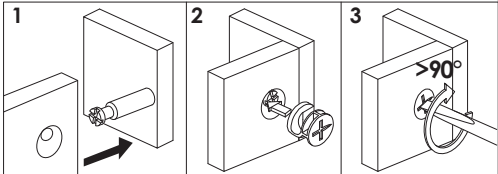

STEP 6

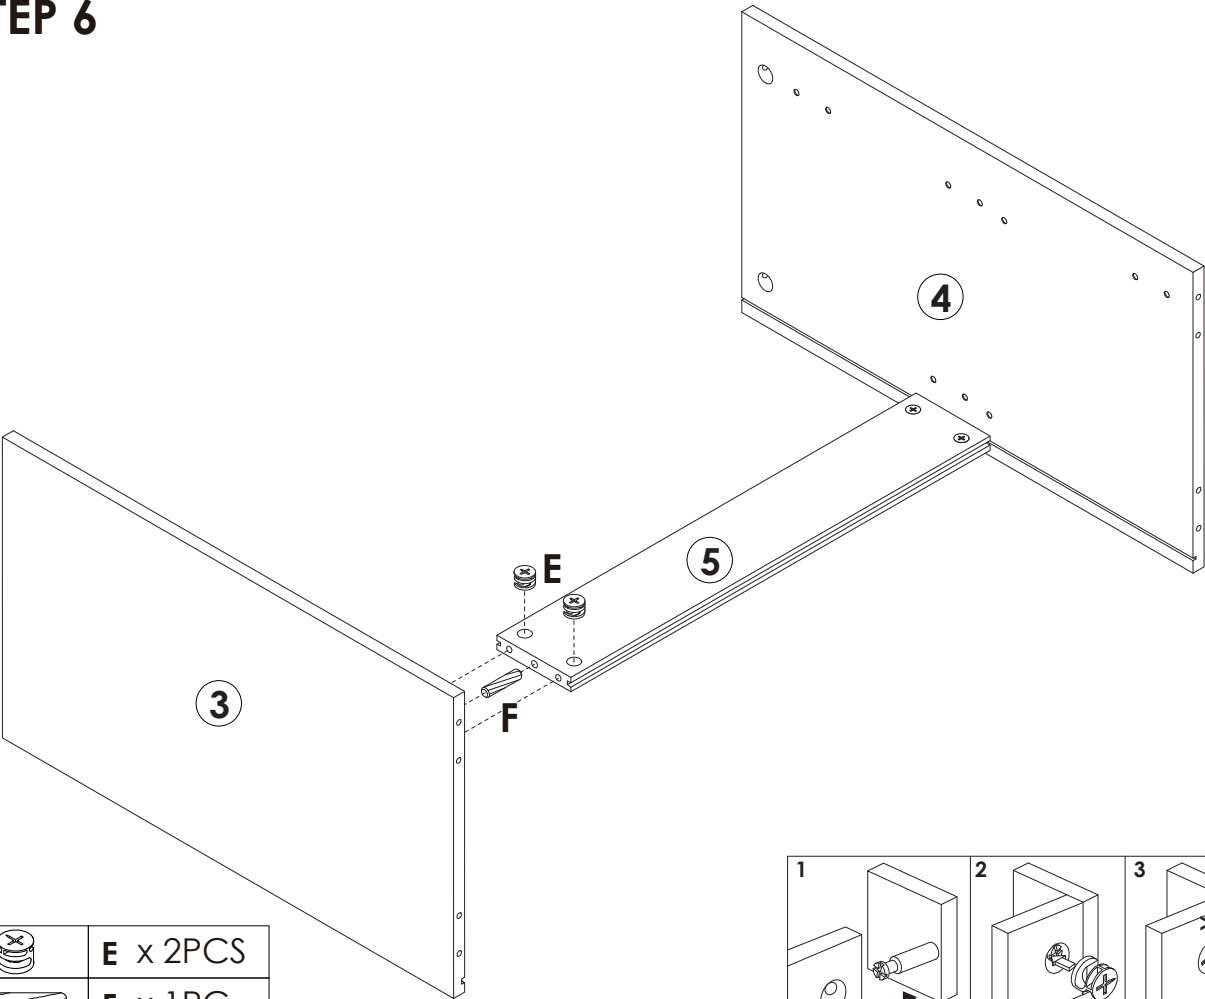


	E x 2PCS
	F x 1PC

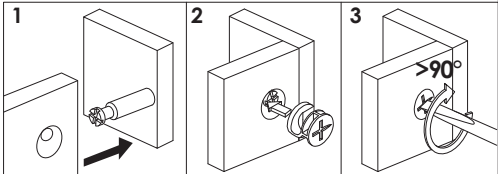


Assembly Steps(EN) / Montageschritte(DE)


STEP 7

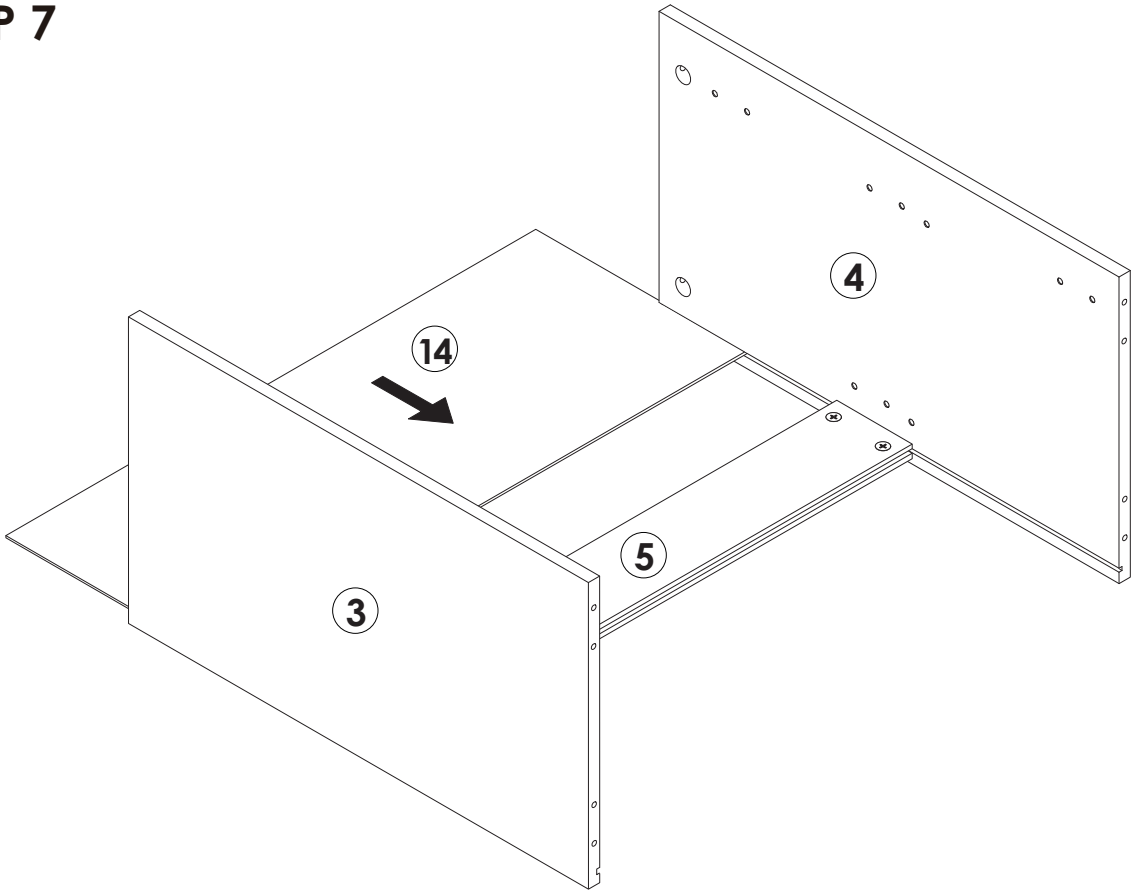

STEP 8

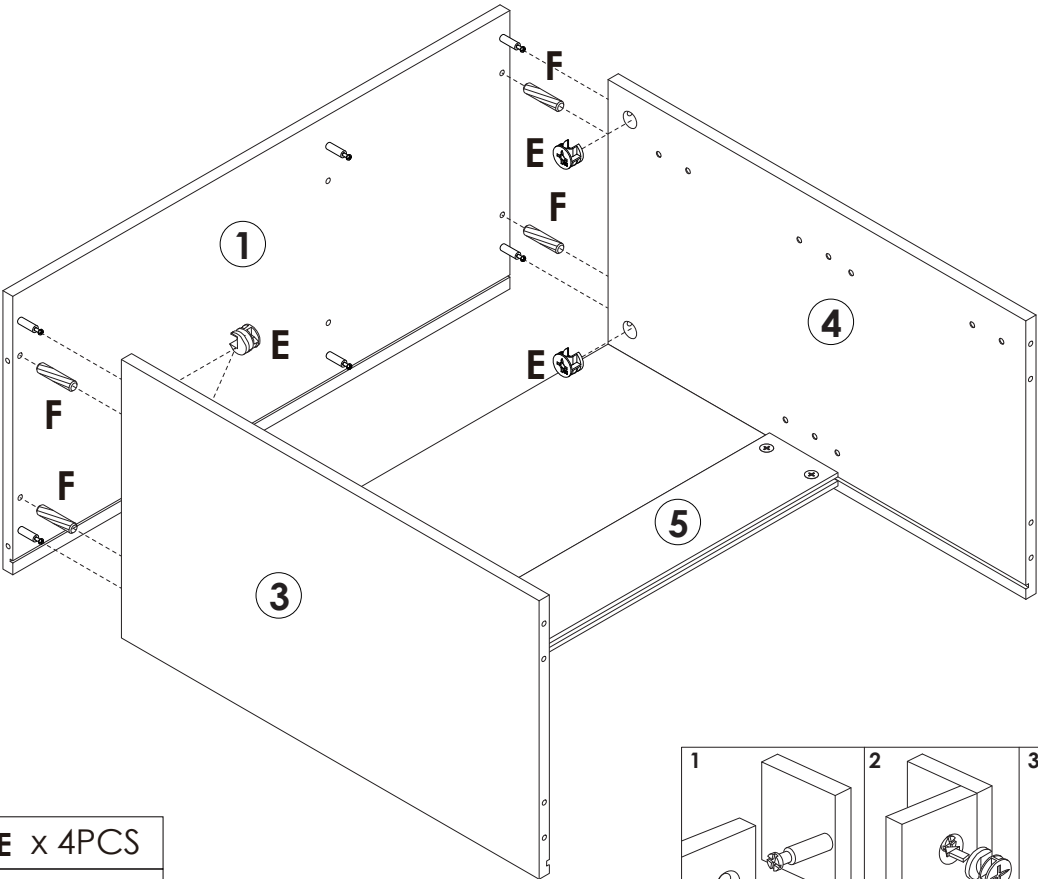


	E x 4PCS
	F x 4PCS

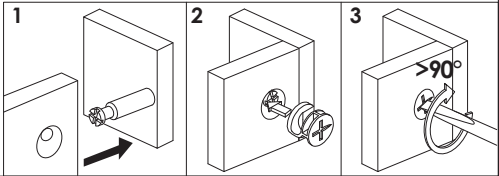


Assembly Steps(EN) / Montageschritte(DE)


STEP 9

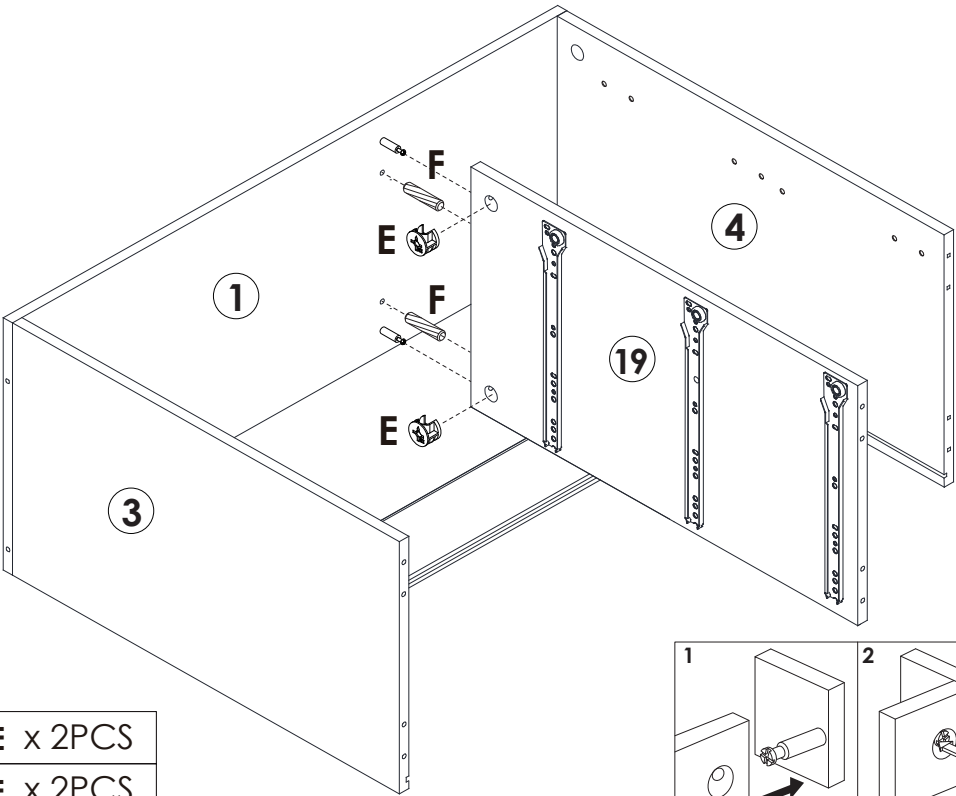

	E x 2PCS
	F x 2PCS


STEP 10

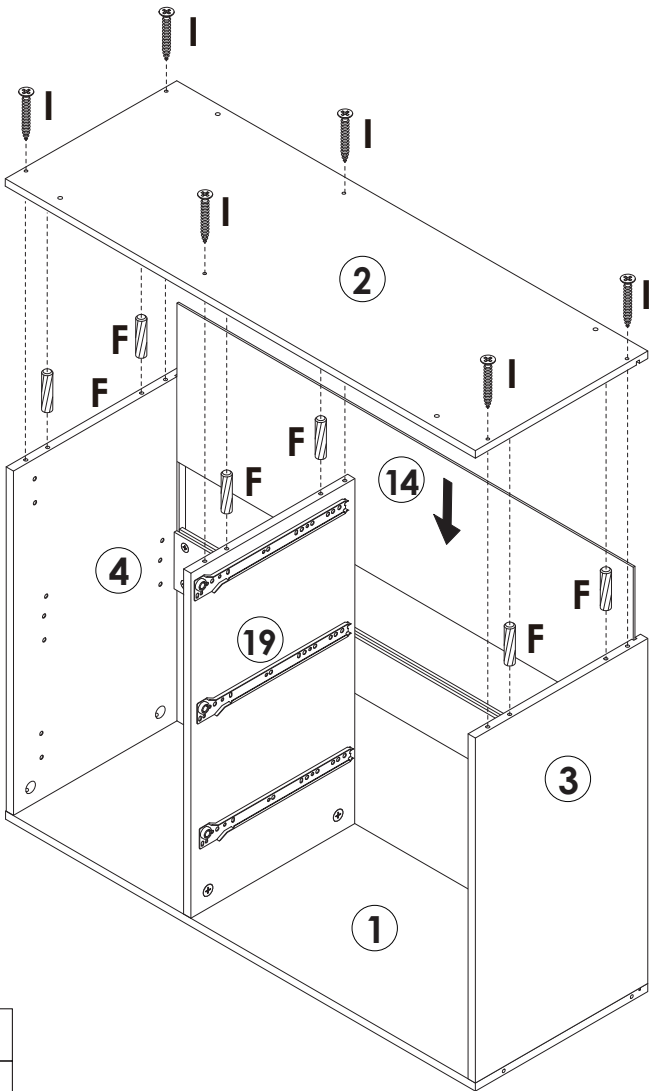

	F x 6PCS
	I x 6PCS


Assembly Steps(EN) / Montageschritte(DE)

STEP 11

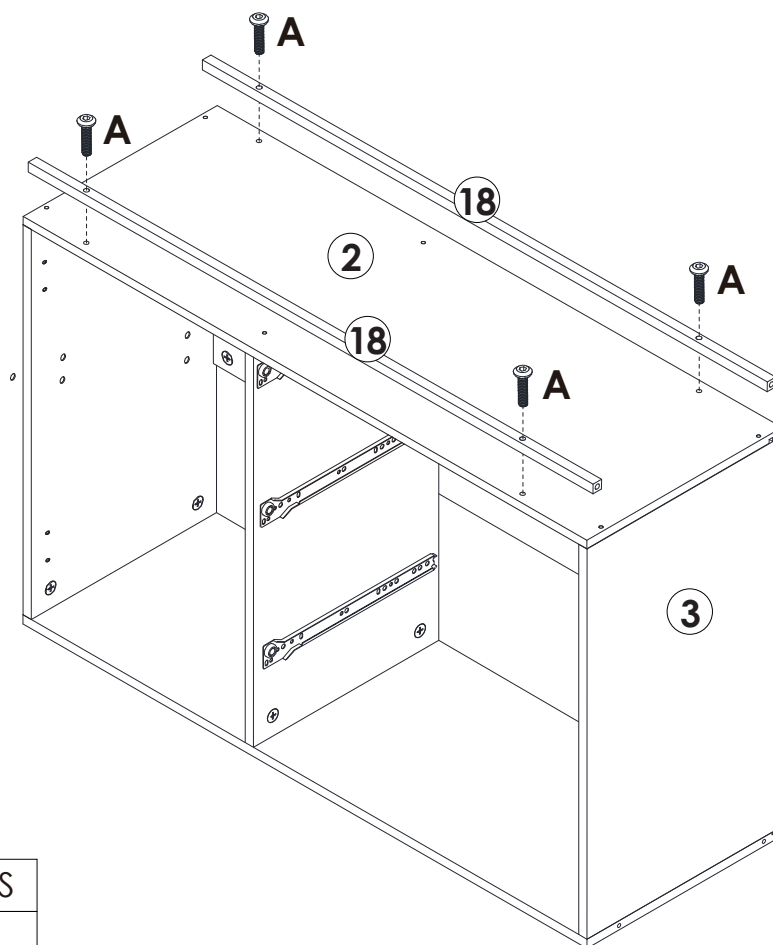

	A x 4PCS
	L x 1PC


STEP 12

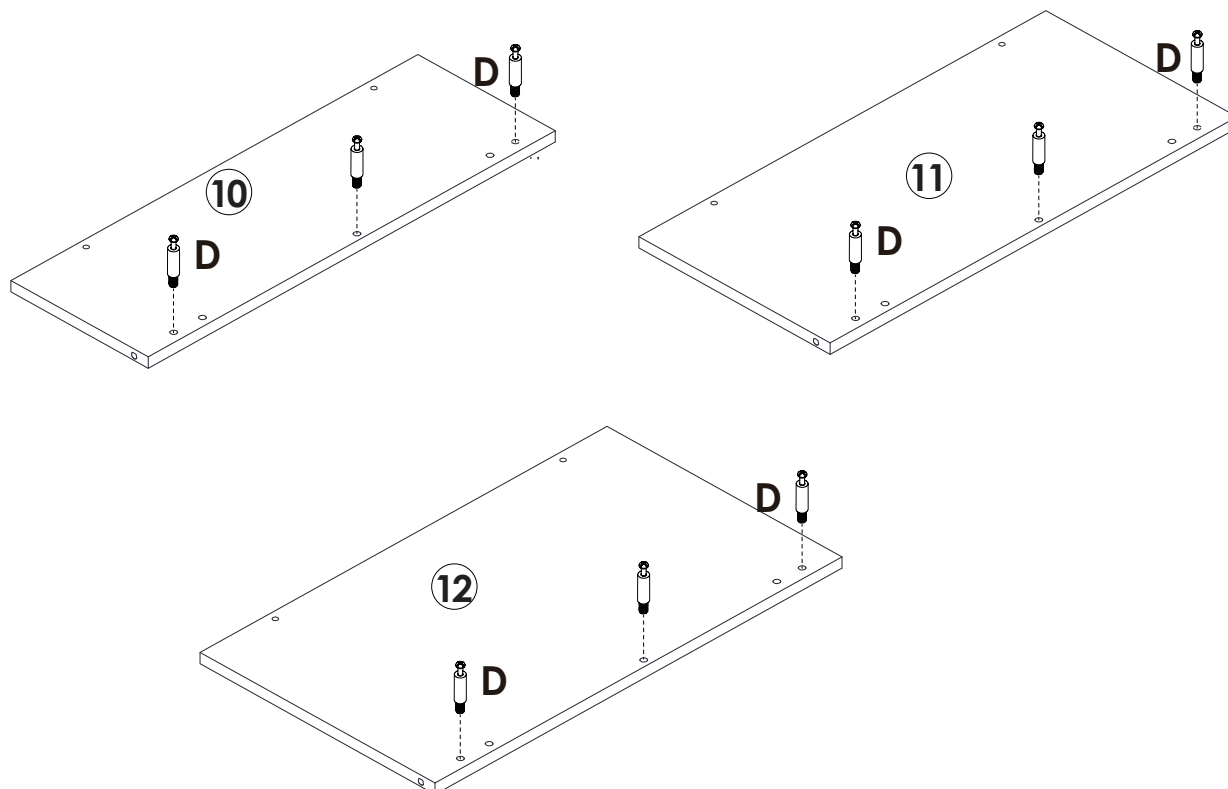

	D x 9PCS
---	----------


Assembly Steps(EN) / Montageschritte(DE)

STEP 13

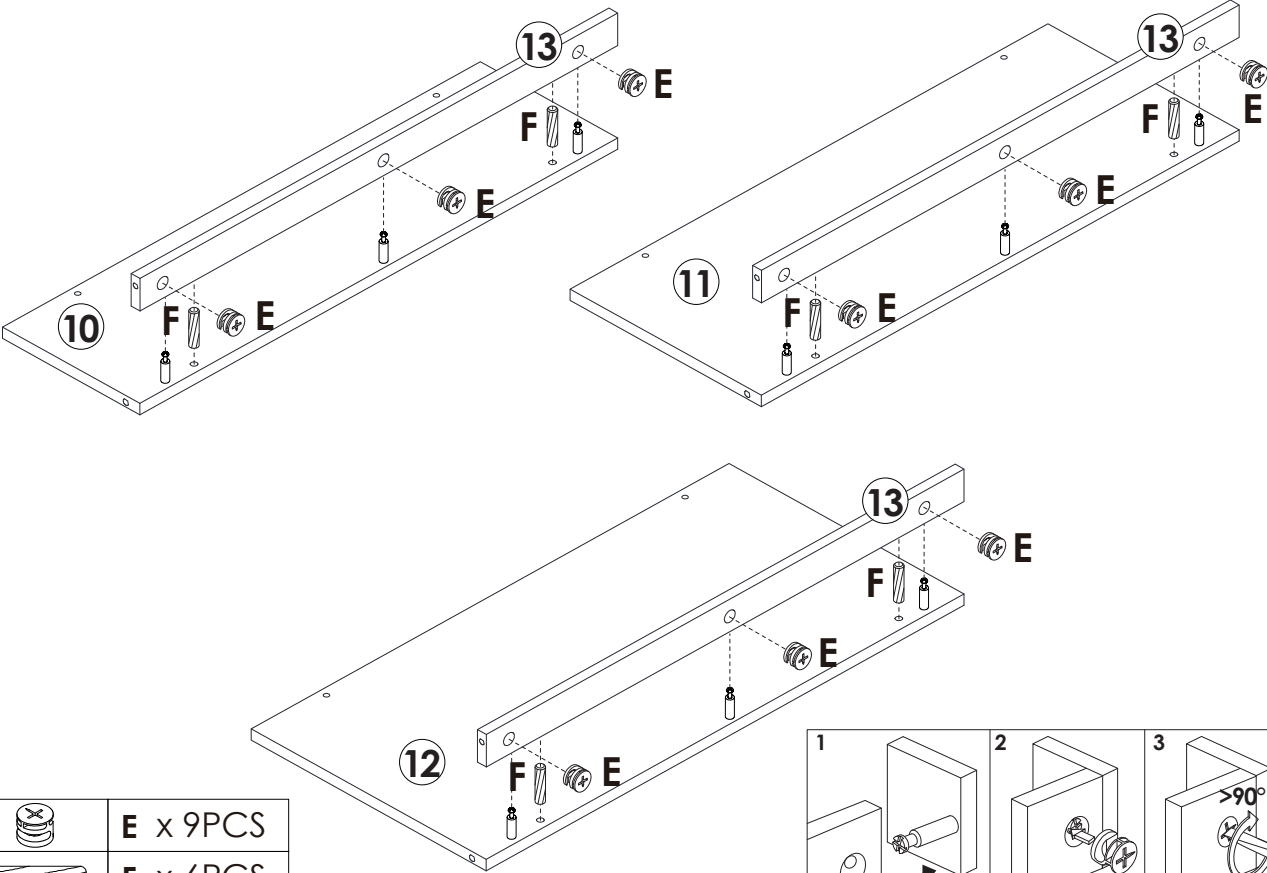


	E x 9PCS
	F x 6PCS

STEP 14

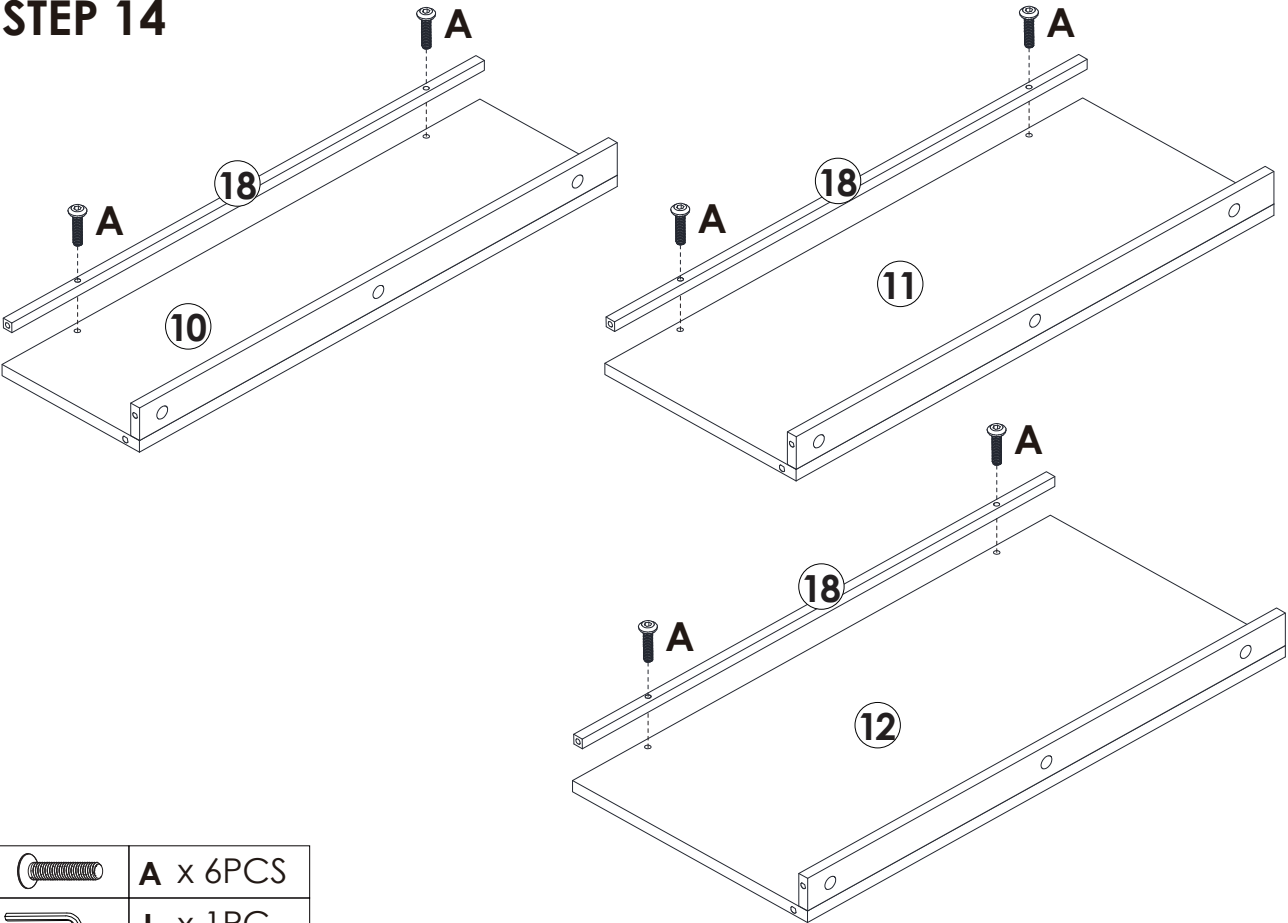

	A x 6PCS
	L x 1PC


STEP 15

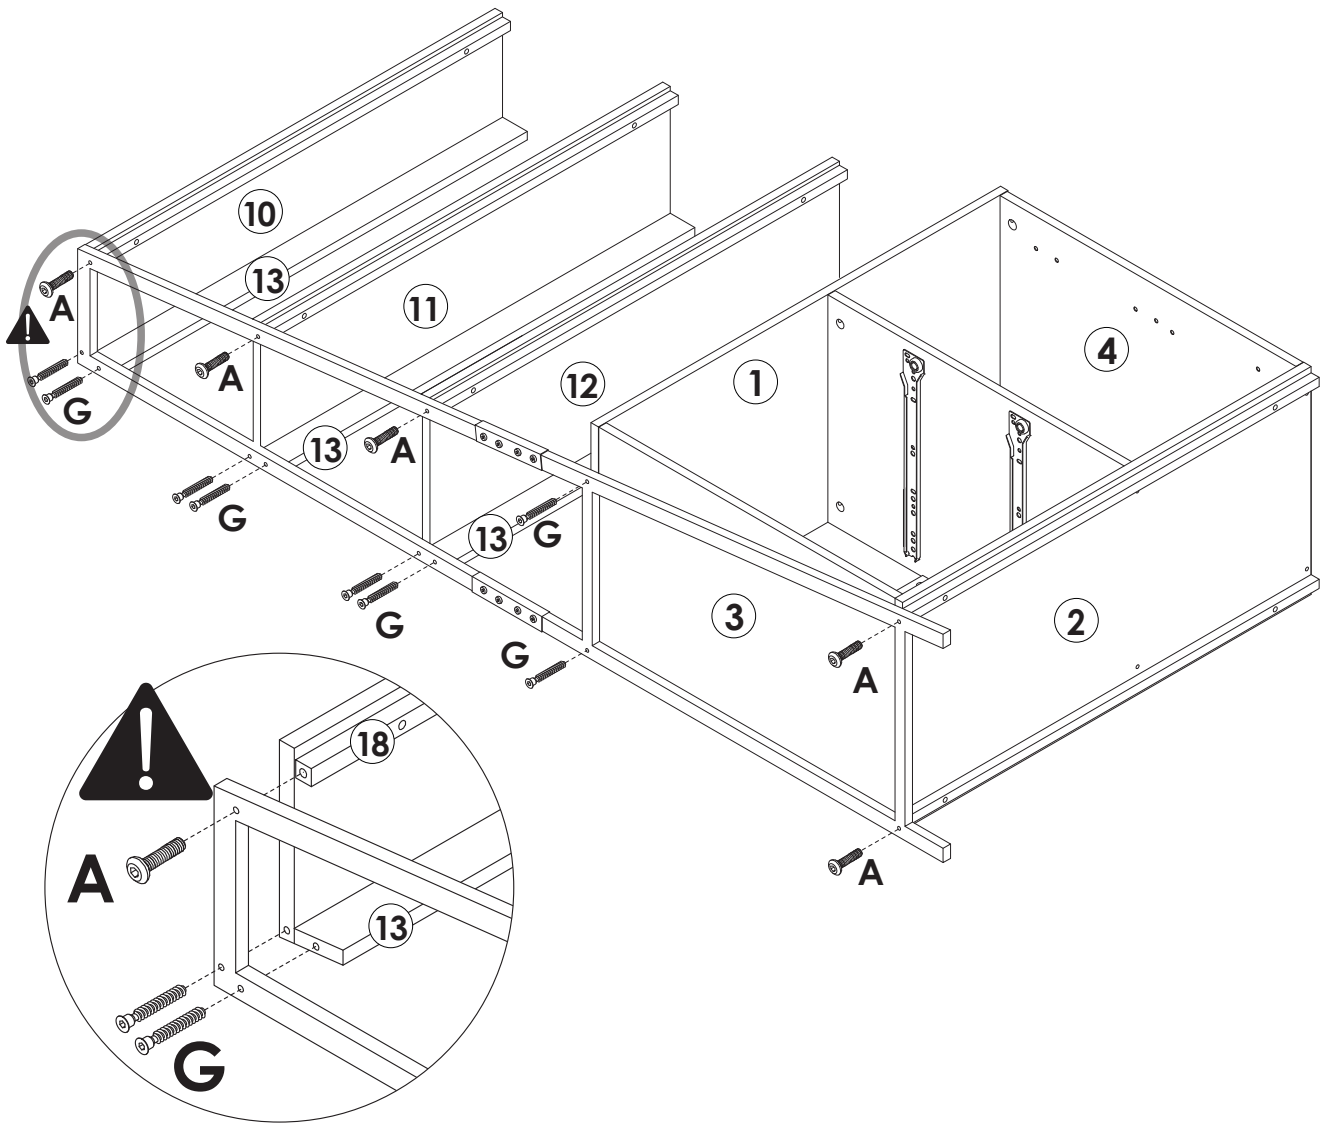

	A x 5PCS
	G x 8PCS
	L x 1PC

Assembly Steps(EN) / Montageschritte(DE)


STEP 16

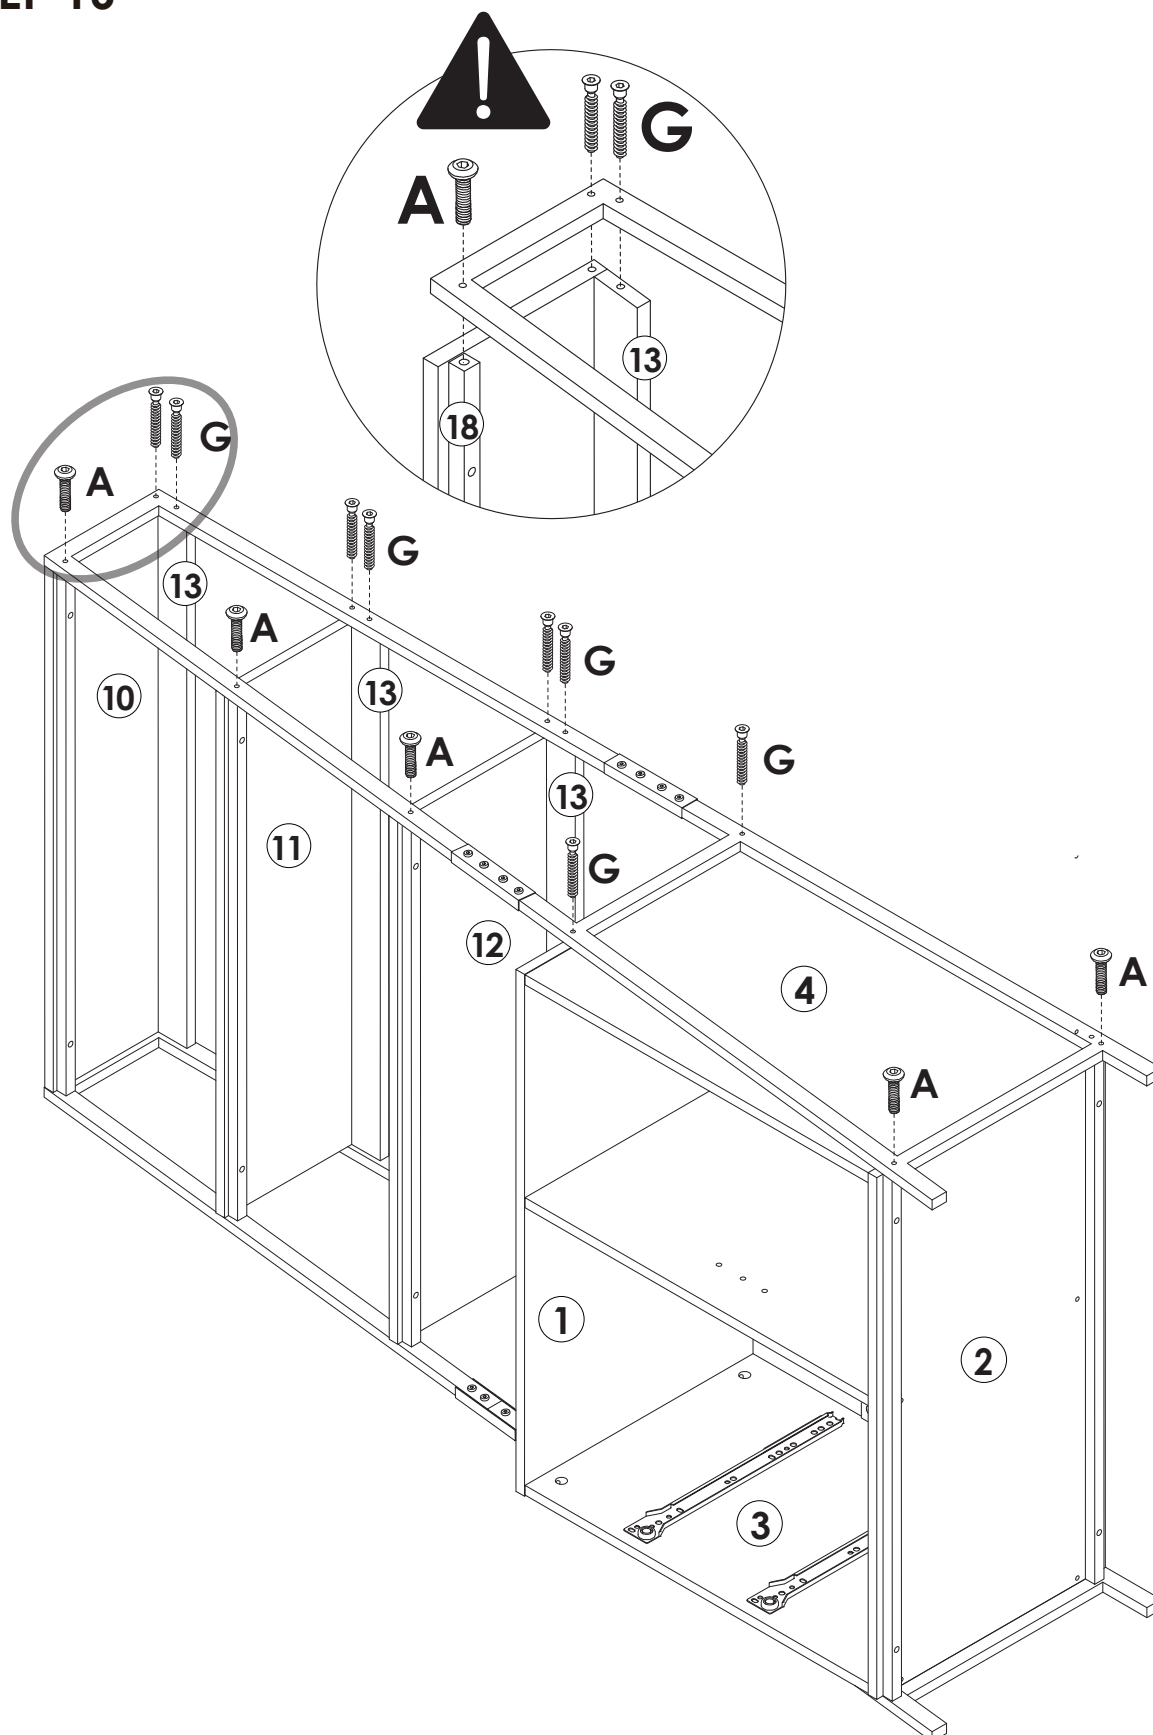

	A x 5PCS
	G x 8PCS
	L x 1PC

Assembly Steps(EN) / Montageschritte(DE)


STEP 17

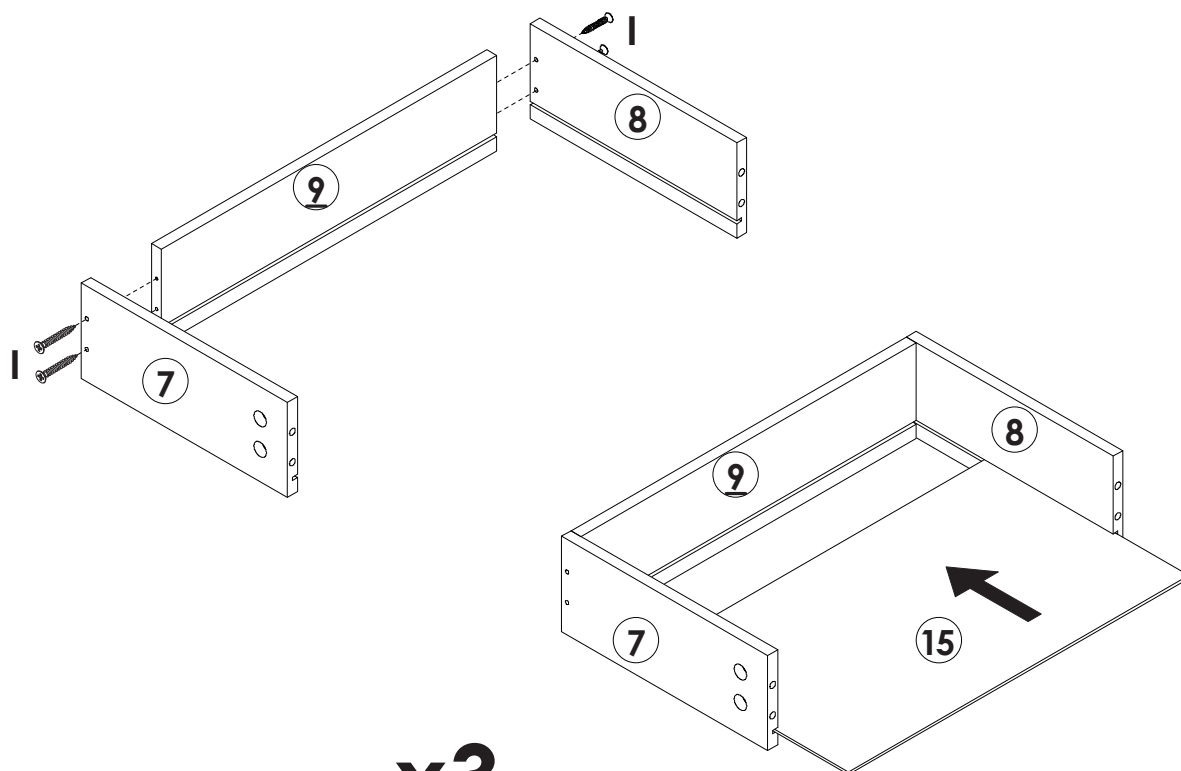


x3


 I x 12PCS

STEP 18

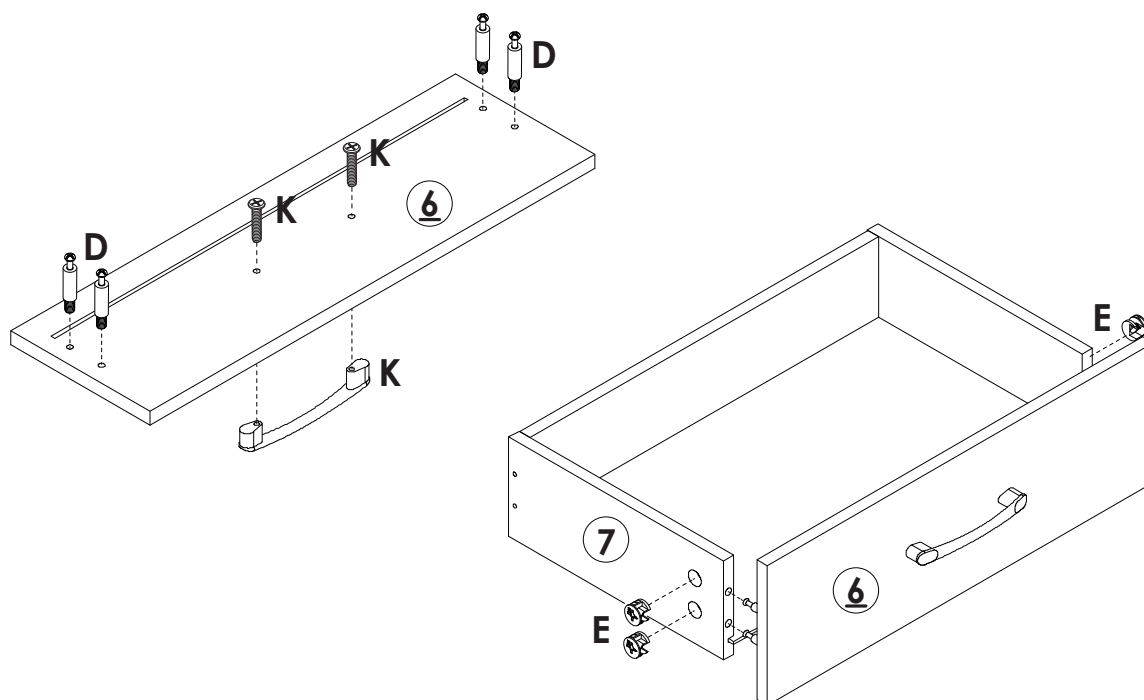


x3

	D x 12PCS
	E x 12PCS
	K x 3SETS

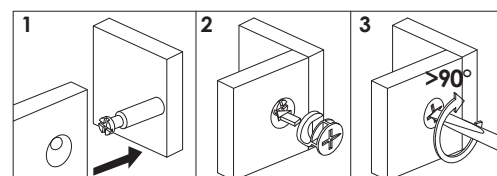

Assembly Steps(EN) / Montageschritte(DE)



STEP 19

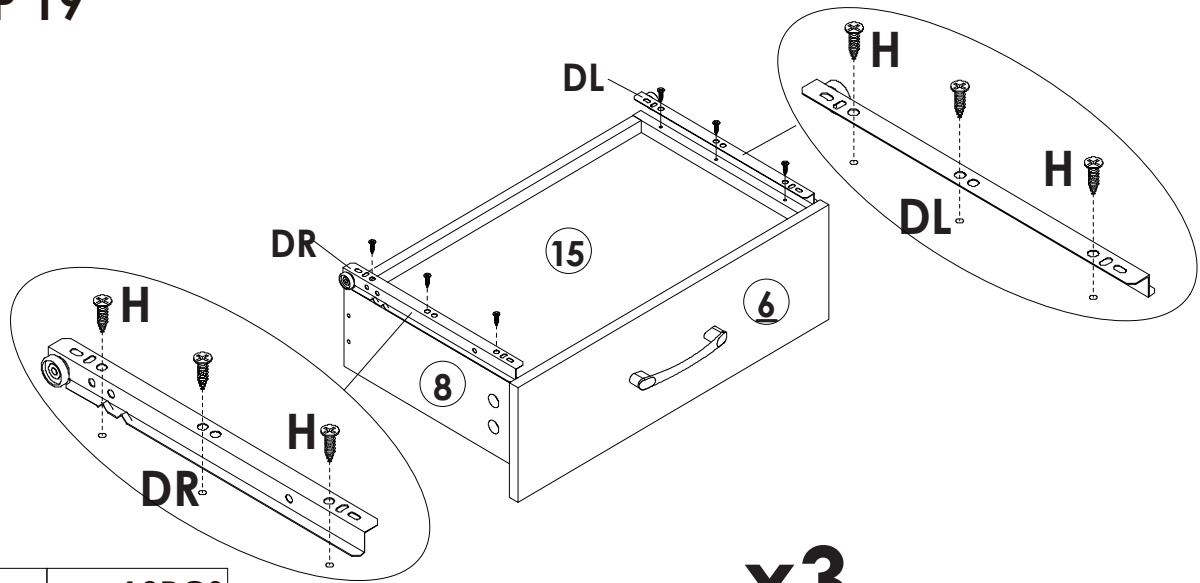


x3

	H x 18PCS
	DL x 3PCS
	DR x 3PCS

STEP 20

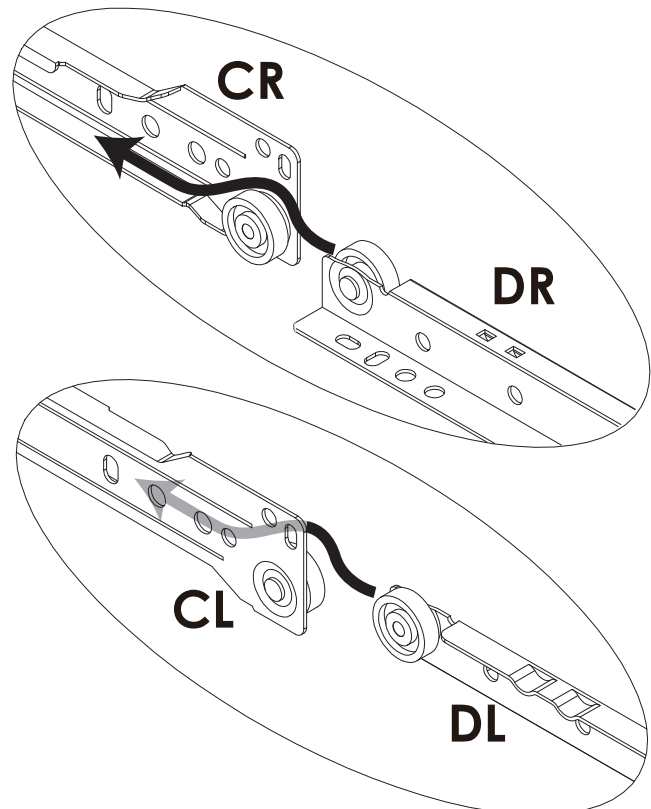
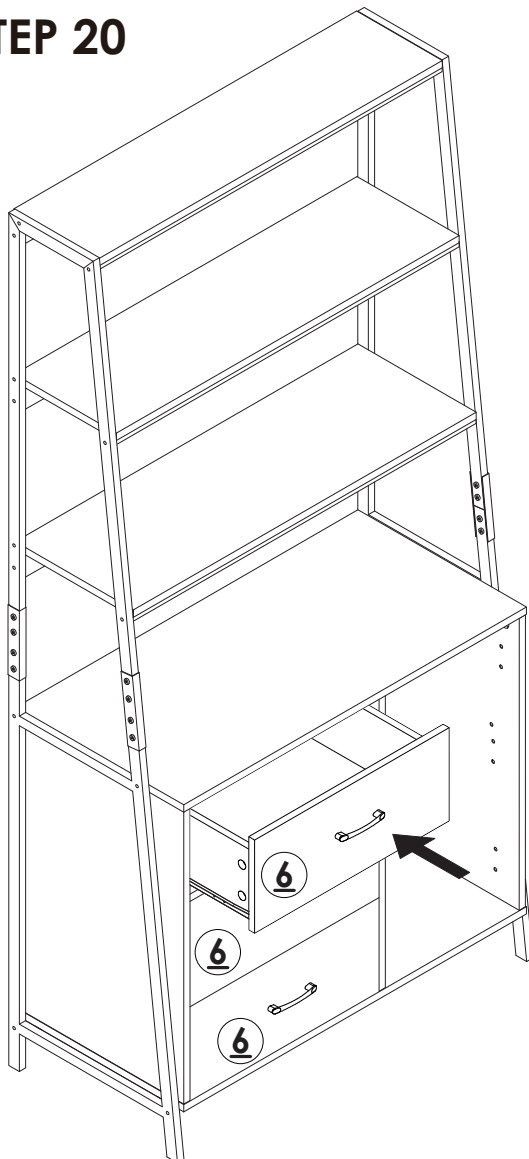


STEP 21

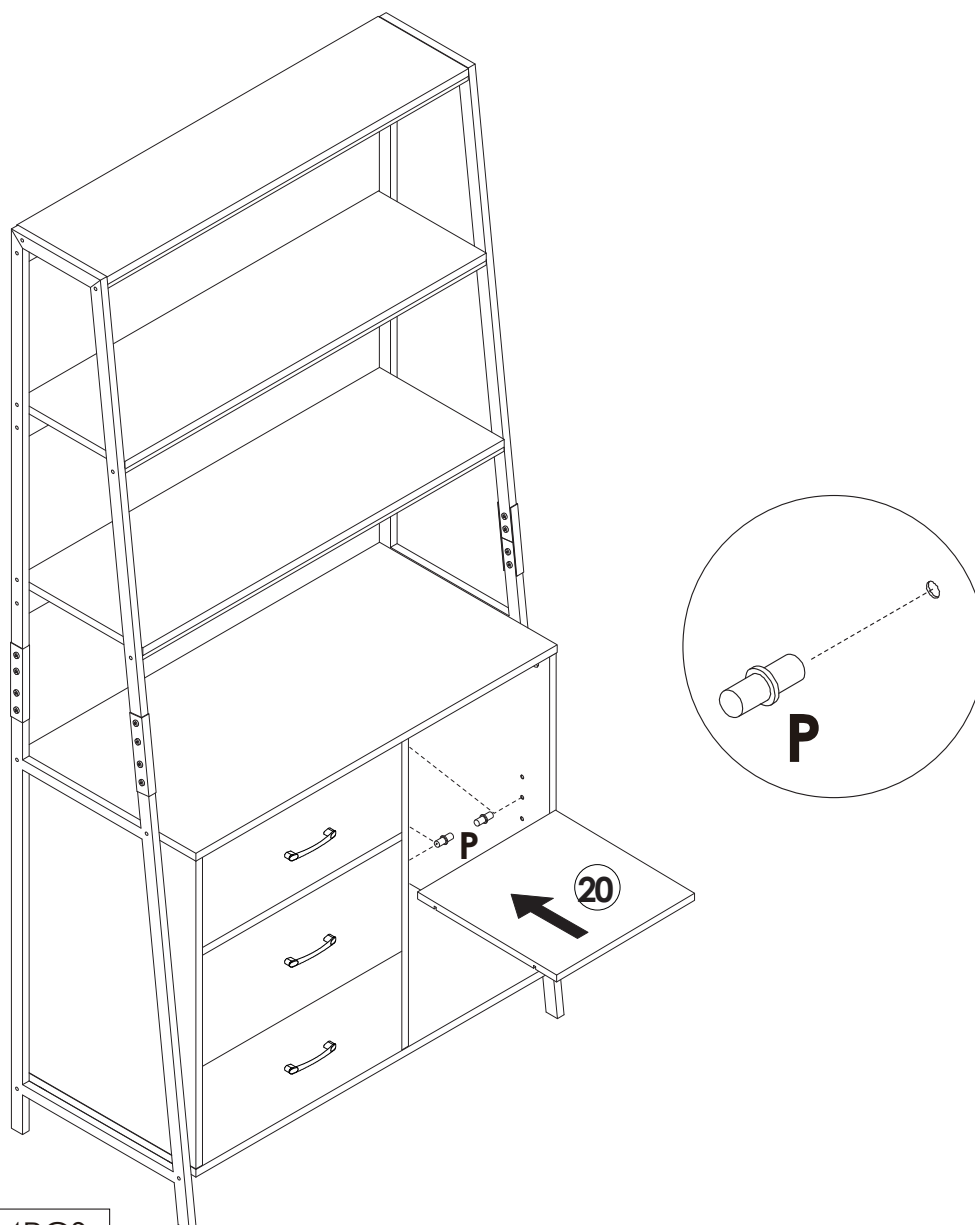

P x 4PCS

STEP 22

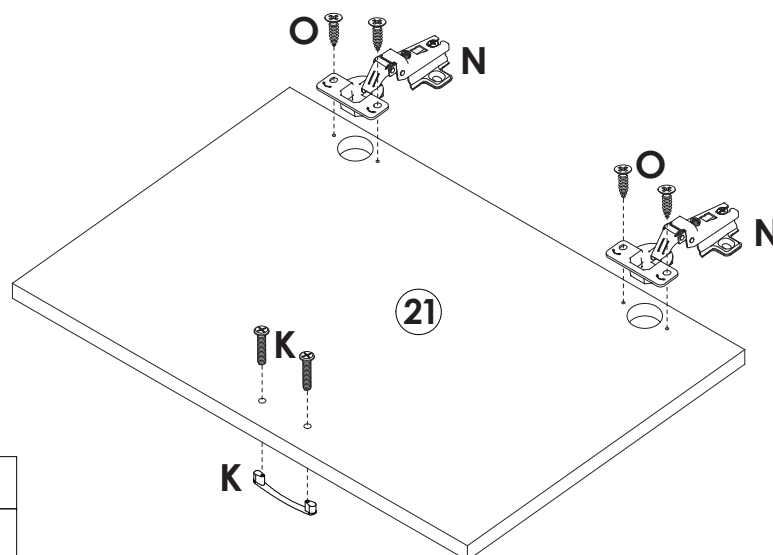

K x 1SET





N x 2PCS



O x 4PCS



Assembly Steps(EN) / Montageschritte(DE)

STEP 23

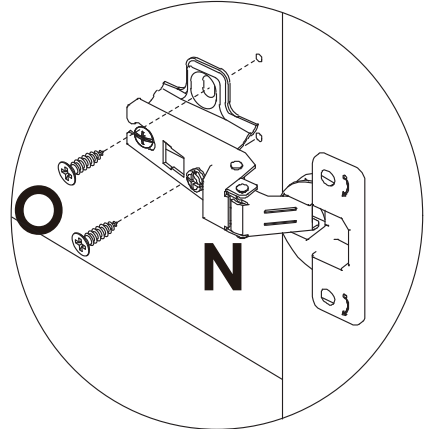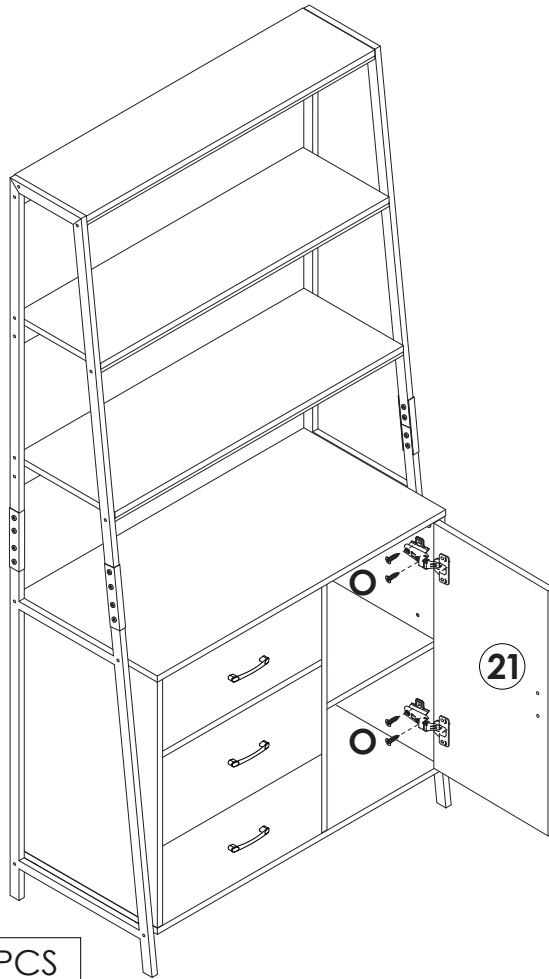

O x 4PCS

STEP 24

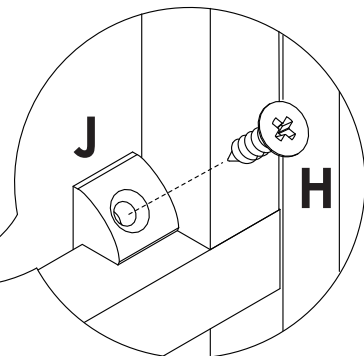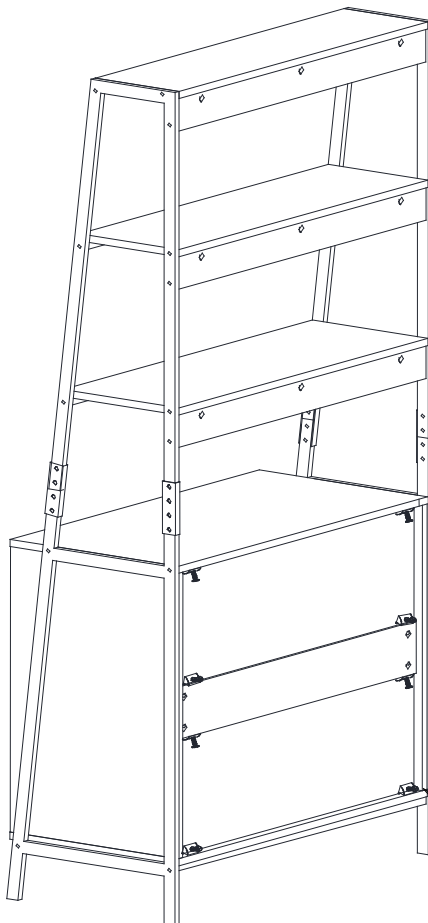

H x 8PCS




J x 8PCS

Assembly Steps(EN) / Montageschritte(DE)

STEP 25


Drill 2 holes on the wall at the required position for anti-falling device installation.

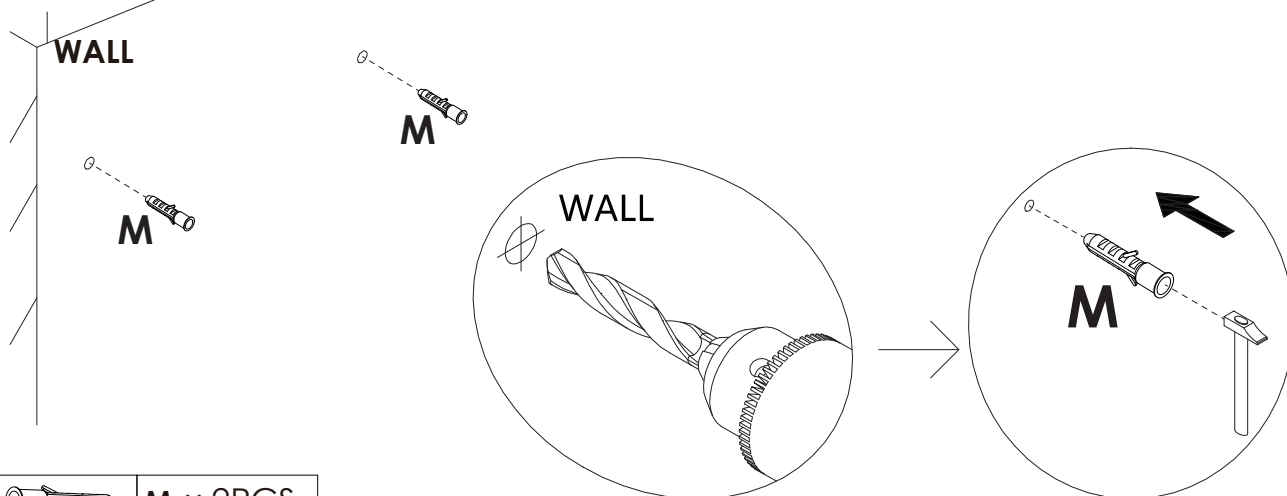

M x 2PCS

STEP 26

Fold the part "M" in half and fasten it on the two sides of the product, use the screw "I" through the hole above and lock it in the plastic screw "M", and the anti-falling device is completed.

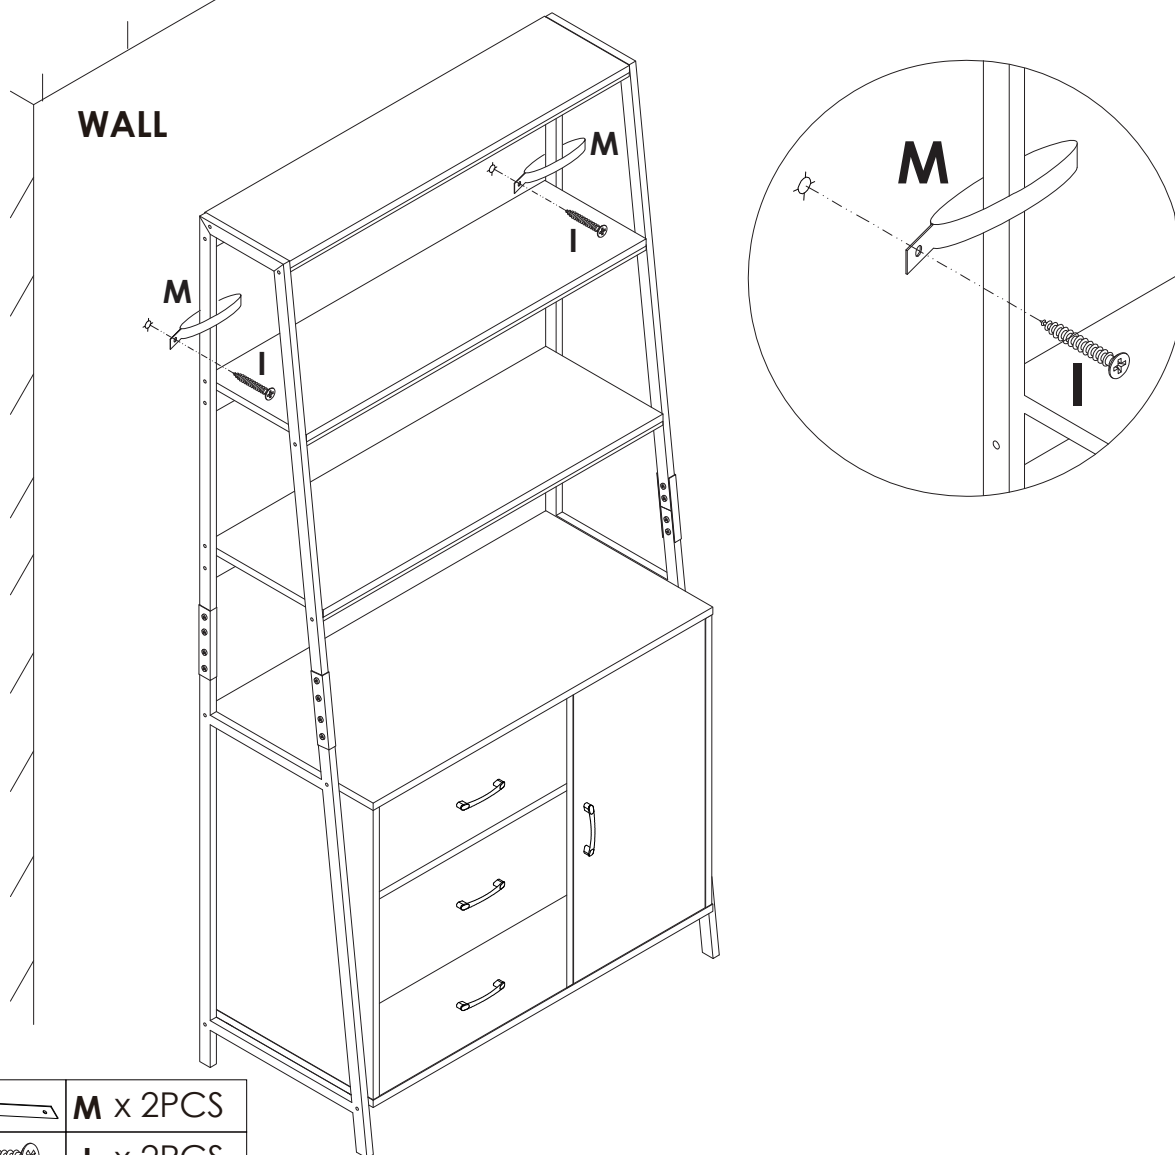

M x 2PCS




I x 2PCS


The ways to adjust the door

- Before adjusting the hinge, please check whether the cabinet is skewed.
- If the skew can not be repaired, please remove the anti-tipping device first, then adjust the cabinet to vertical position.
- Please adjust the hinge with the door open.
- Please operate it with more than 2 people, one person holds the door and the other one adjusts the screw.



Components Name

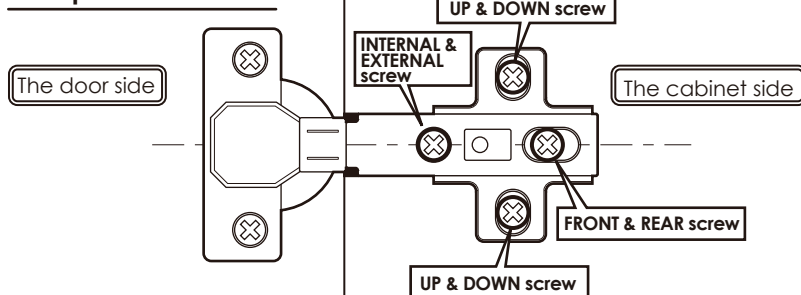

Obvious gaps between doors or Doors don't look closed

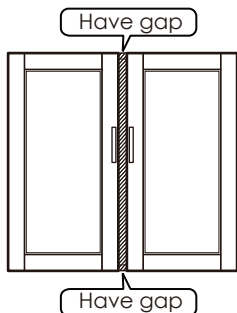

- 1 Turn "internal & external screw" to the right can make the door approach inside. Please adjust the doors little by little.

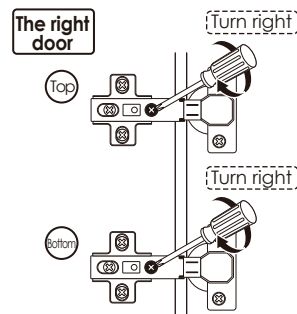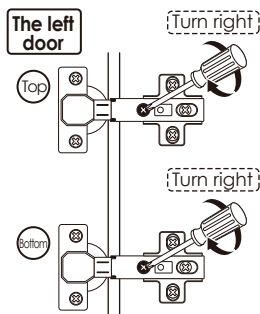


※ If the 2 doors are overlap, please turn the "internal & external screw" to the left.

When door is crooked




Please take the following steps to adjust first.

- 1 Rotate the "front and rear screws" to the left

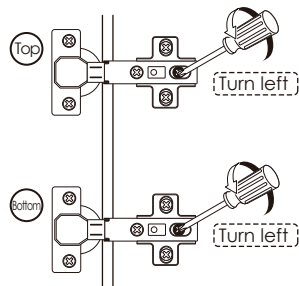


※ After adjusting the "front and rear screw", the door still does not change, please turn the "internal & external screw" to the right slightly.


- 2 Push the door to the cabinet

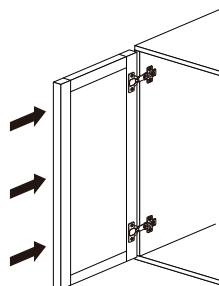


- 3 Rotate the "front and rear screws" to the right

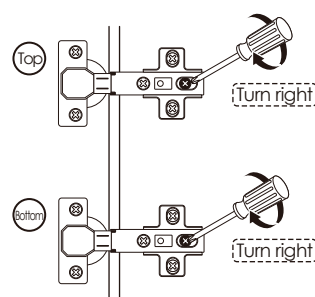


When door is leaning

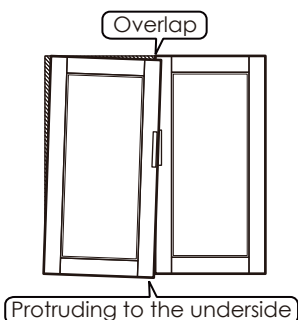


- 1 Turn "internal & external screw" to the left can make the top of the door tilted outward.

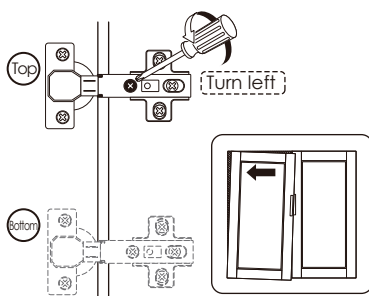


Protruding to the upside

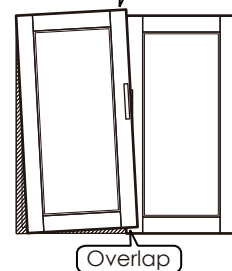


- 1 Turn "internal & external screw" to the left can make the bottom of the door tilted outward.

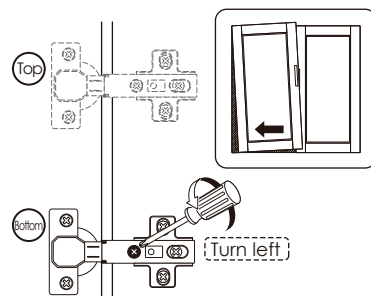


When the door is higher on top

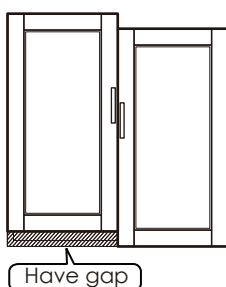


- 1 Turn "up & down screw" to the left

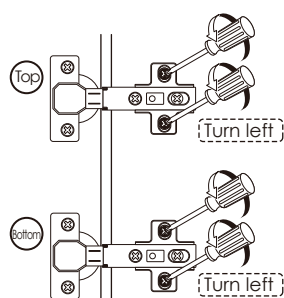

- 2 Lower the door's height so that 2 doors are of the same height.

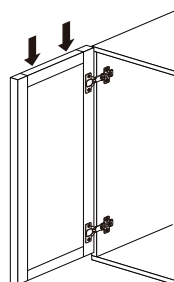

- 3 Turn "up & down screw" to the right

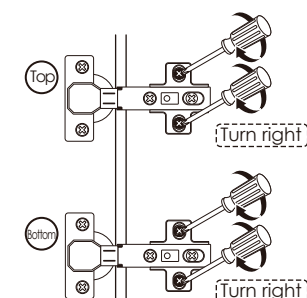

※ If the door is lower on bottom, please lift up the left door slightly on step 2



WARNING



Children have died from furniture tipover. To reduce the risk of furniture tipover:

- **ALWAYS** install Anti-tip device provided.
- **NEVER** put a TV on this product.
- **NEVER** allow children to stand, climb or hang on drawers, doors, or shelves.
- **NEVER** open more than one drawer at a time.
- Place heaviest items in the lowest drawers.