

# Styling Chair Instruction



## OPERATING THE CHAIR

**How to lift this chair:** Step down on the Foot Bar repeatedly to raise the chair to the desired height. Do not over-extend the chair, creating the risk of falls or tipping the chair and its occupant over, resulting in injury, step down and hold the Foot Bar to allow chair to lower.

**How to use this chair safely:** 1 Avoid the chair tipping over, Do not step on the footrest to sit on the chair

2 Avoid the chair tipping over, Do not step on the footrest when you want get off the chair

**Step 1:** Check all parts you received.

			
Cushion . (1pc)		Armrest. (2pcs)	
			
Backrest . (1pc)		Pedal . (1pc)	Base . (1pc)
			
Nut . (6pcs)	Pump . (1pc)	Foot bar . (1pc)	
			
		Corner (2pcs)	

**Step 2:** Unscrew 2 screws previously assembled on the armrests, assemble armrest and cushion ,do not tighten the screws, otherwise it's hard to assemble backrest in next step.



Be care of direction of seat cushion, the two holes on the black metal under seat cushion is the front of the whole chair

**Step 3:** Unscrew 2 screws previously assembled on the armrests, install 2 corner by those screws, do not tighten.



**Step 4:** Unscrew 4 screws previously assembled on backrest, assemble backrest to armrest by these screws. Note: please check the angle of the backrest is not tilted and make sure everything is correct, then tighten all screws.




**Step 5:** Unscrew 4 screws previously assembled on the cushion, assemble the pedal to the cushion as picture, tighten.



**Step 6:** Insert pump into holes on top of base. Tighten and locking by 6pcs nuts.



**Step 7:** Insert foot bar into pump, tighten the screws on the both sides. (please noted the direction of foot bar).

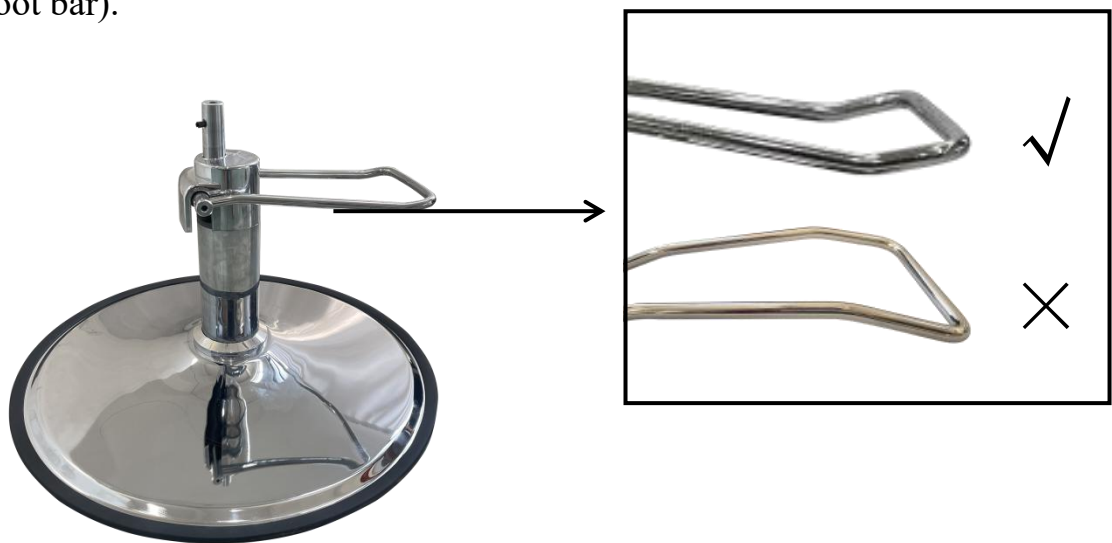

**Step 8:** Put the assembled seat to the hydraulic pump.



Noted: the tray on the set plate must be aligned with the black pin of hydraulic.

