ADJUSTABLE BASE

Owner's Manual Installation & Operation



Serial No.

CONTENTS

Safety & Warranty Warnings	01
Parts List	03
Electronics Quick Reference Guide	04
Installation Guide	05
Remote Control Instructions	07
Setting Programmable Positions and Pairing Remote	09
Setting Preset Positions	11
Synchronizing Two Bases	12
Troubleshooting	13

Safety & Warranty Warnings

READ THE FOLLOWING INFORMATION CAREFULLY BEFORE USING THIS PRODUCT

If unable to understand warnings, cautions, and/or instructions, contact the dealer or technical personnel if applicable, before attempting to use the equipment. Otherwise, injury or damage may result.

SAFETY WARNINGS:

- Do not use bed outdoors.
- Do not use bed near explosives.
- Using bed with oxygen administering equipment other than the nasal masked type creates a possible fire hazard.
- When using nasal or masked type administering equipment, route and secure oxygen or air tubing properly to ensure that tubing does not become entangled or damaged during normal operation of the bed.
- Use caution when having liquids in or around the bed to ensure no spilling occurs. In case of spillage, stand in a dry, clean area of the floor and unplug the bed immediately. Clean up spill and allow the area around bed to dry thoroughly before using the electric controls again. Do not eat or drink hot liquids while operating the bed.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instructions concerning use of the appliance by a person responsible for their safety.
- Do not allow children or individuals with disabilities to operate the bed without adult supervision.
- Do not allow any person or pet under the bed at any time.
- During bed operation, make sure body is positioned within the confines of the bed. Do not place extremities over the sides of the bed when operating bed functions.

WARRANTY WARNINGS:

Do not open or tamper with control box, motors, or remote (with the exception of battery compartments). The warranty will be void if the internal workings of these components are tampered with.

Product Rating:

The motors are not designed to operate continuously for more than [2] minutes in an [18] minute time period or approximately 10% duty cycle. Attempting to circumvent or exceed this rating will shorten the life expectancy of the foundation and may void the warranty.

Operating Information:

- After power foundation assembly is completed, operate remote control to ensure proper functions.
- Keep moving parts free of obstruction during bed operation (including sheets, clothing, tubing, wiring, and products using electric power cords).
- Distribute body weight evenly over bed surface. Do not place entire weight on head or foot sections of the bed, during repositioning and entering or exiting bed.

Hospital Use Disclaimer:

This power foundation is designed for residential use only. It is not approved for hospital use and does not comply with hospital standards.

Weight Limits:

This product is not rated to support weights in excess of 800 pounds inclusive of the mattress and bedding. The bed will structurally support weight under this amount, provided it is evenly distributed across the foundation. The power foundation is not designed to support or lift this amount in the head or foot sections alone. Exceeding this weight restriction could damage the bed and/or cause injury and will void the warranty.

AWARNING

DO NOT USE THIS BED IF WEIGHT LIMITATION IS EXCEEDED

RADIO FREQUENCY: 2.4 GHz

FCC COMPLIANCE:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

To comply with the FCC RF exposure requirements, no change to the antenna or the device is permitted. Any change to the antenna or the device could result in the device exceeding the RF exposure requirement and void user's right to operate the device.

Parts List

All electronics and components that need to be installed are located in boxes under the foundation or attached to the frame. Before discarding the packing materials, ensure that all the parts are accounted for.




OPTIONAL EQUIPMENT (NOT INCLUDED)






Actual product appearance and functionality may vary from photographs.

Electronics Quick Reference Guide

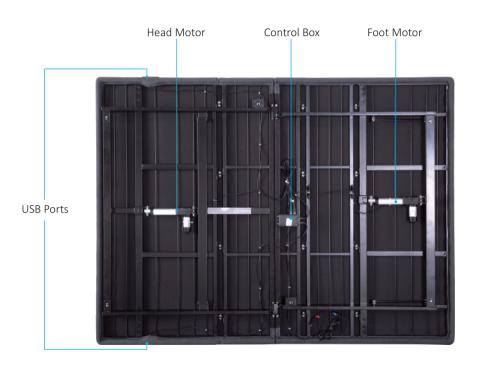

Installation Guide

Note: For safety reasons, lifting of the adjustable bed frame must be performed by two (2) people; and the unit should always be in a flat position before opening.



1. Lift the folded bed frame & put it on a flat floor





2. Thread the bolt of the leg to the nut on the foundation frame, and tighten by hand. DO NOT OVERTIGHTEN.







Nut on the frame is removable and replaceable.
Please remove tape on the nut to install legs.



Two of these legs are assembly on foot side.

3. Uncoil the input power cord (connected to the control box's power port) and plug it into the power supply.

Uncoil the power cord and connect it to the power supply.





5. Carefully flip the foundation over onto its legs.

Important: Two people are required to move the foundation. Do not drag across the floor. Do not rest frame on its side; excessive pressure may damage the legs.

6. Ensure that batteries are correctly installed.





AAA Batteries (3)


7. Locate the mattress retainer bar brackets.

Slide the left side of the mattress retainer bar into the bracket. Pull the retainer bar to the opposite bracket and secure the right side.





Α

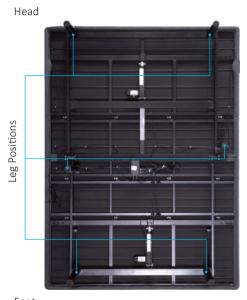

Foot

Remote Control Instructions



ADJUST



Lifts and Lowers Head



Lifts and Lowers Foot



Flat Button



Memory Position

ONE TOUCH BUTTONS



Zero-G Preset Position



Anti Snore preset position



Press and hold the button, flash light will be on.

Setting Programmable Positions and Pairing Remote

SETTING PROGRAMMABLE POSITIONS

The wireless power bed has a programmable feature that allows you to save custom positions. Please read all the instructions below before setting your custom presets on the remote.

STEP 1 Adjust the head and foot to your desired position.



STEP 2

Press and hold the flat button (FLAT) first, then press and hold (M) for 5 seconds until you hear 2 beeps sound.



STEP 3

To adjust the saved position, repeat steps 1 and 2 and the new position will be saved.

PAIRING REMOTE

The original remote that comes in the box is already paired to the foundation. No further action is required. In the event that the remote is not paired with the foundation, follow the steps below.

STEP 1
Make sure the batteries work fine. Replace them when needed.



STEP 2 Plug the power cord to the power source.



STEP 3

Press and hold head lift and foot lift simultaneously, then press and hold the button on the cord of control box for 3 seconds until you hear 2 beeps sound, the remote is then paired.





Setting Preset Positions

The wireless power bed has a programmable feature that allows you to modify preset Positions. Please read all the instructions below before setting your preset Positions on the remote.



STEP 1
Adjust the head and foot to your desired Positions.



STEP 2
Press and hold the flat button [FLAT] first, then press and hold button for 5 seconds until you hear 2 beeps sound.

STEP 3

To adjust the saved Position, repeat steps 1 and 2 and the new Position will be saved.

STEP 4

If you want to restore to factory settings, unplug the power supply for 5 seconds, then plug back in. The base will restore to factory settings.

Synchronizing Two Bases

OPTION 1: WIRELESS

If you have split bases, follow these instructions to operate both sides with one remote control in a synchronized manner. Skip this step if you don't have split bases.

- 1. Make sure each remote control operates a respective side (i.e., Remote A controls Base A and Remote B controls Base B).
- 2. Pair **Remote A** to **Base B**, then base A and base B can be simultaneous operated by Remote A.
- 3. Test moving both bases with **Remote A**. **Remote B** will no longer function.



Troubleshooting

In the event that the power foundation fails to operate, assess the symptoms and possible solutions provided in the chart below.

SYMPTOMS	SOLUTIONS		
Remote control illuminates and appears to be operable, but will not activate bed.	Verify that the power cord is plugged into a working, grounded electrical outlet. Test the outlet by plugging in another working appliance.		
	Program the remote control (see the Setting Programmable Positions and Pairing Remote section of this manual for programming procedures).		
N. C. a. Cil. C. Lei III	Unplug the power cord, wait 30 seconds and plug back to reset electronic components.		
No features of the power foundation will activate.	The surge protection device or the electrical outlet may be defective. Test the outlet by plugging in another working appliance.		
	Verify that the connector on the wired remote control is securely attached to the control box.		
Wireless remote will not illuminate.	Replace the batteries in the wireless remote.		
	Bed mechanism may be obstructed. Elevate bed and check for obstruction. Remove obstruction.		
Head or foot section will elevate, but will not return to the horizontal (flat) position.	Head section may be too close to the wall.		
	Headboard may be too close to the edge of the mattress. Verify that there is enough distance between the headboard brackets and mattress. Adjust if required.		

SYMPTOMS	SOLUTIONS		
	Check batteries in wireless remote control, replace with two (2) new AAA batteries if necessary.		
Head & Foot lift function has minor	Make sure that you are following the duty cycle of the motors (do not operate more th two minutes over a 18-minute period, or approximately 10% duty cycle).		
interference during operation.	Press the lift buttons squarely and accurately.		
	Wireless remote control may be experiencing common Radio Frequency Interference from other radio transmitting devices. Wait several seconds, and then try pressing appropriate button again, See FCC Compliance Statement on page 2 of this guide.		
A clicking noise is heard under the bed when raising or lowering.	This is normal. The lift motor relays "click" when they are engaged. No action is required.		

NOTES:			

Customer Service: 1-855-430-8943