











USE AND CARE MANUAL

2 LIGHT OUTDOOR WALL LANTERN

Model number: 21544

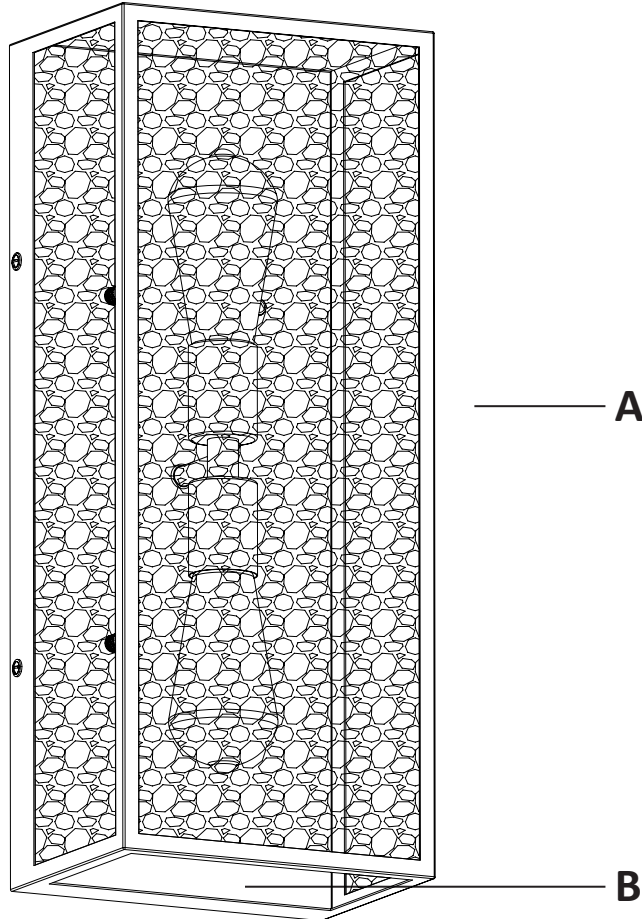

Hardware (Parts are not to scale)

H1 Mounting bracket (Pre-assembled to fixture body) 1 pc 	H2 Outlet box screw (long) 2 pcs 	H3 Green ground screw (Pre-assembled to mounting bracket) 1 pc 
H4 Wire connector 3 pcs 	H5 Rubber washer (Pre-assembled to mounting bracket and support screws) 8 pcs 	H6 Cap nut (Pre-assembled to mounting bracket) 4 pcs 
H7 Support screw (short) (Pre-assembled to fixture body) 4 pcs 	H8 Wood screw 2 pcs 	H9 Plastic anchor 2 pcs 

THIS MANUAL CONTAINS IMPORTANT SAFETY INFORMATION. PLEASE READ AND KEEP FOR FUTURE REFERENCE.

IMPORTANT SAFETY INFORMATION

- Please read and understand this entire manual before attempting to assemble, operate or install the product.
 - Turn off electricity at main fuse box (or circuit breaker box) before beginning installation by removing fuse (or switching off circuit breaker).
 - Be careful not to damage or cut the wire insulation (covering) during fixture installation. Do not permit wires to contact any surface having a sharp edge. To do so may damage or cut the wire insulation, which could cause serious injury or death from electric shock.
 - All electrical connections must be in agreement with local codes, ordinances or the national electric code (NEC). Contact your municipal building department to learn about your local codes, permits and/or inspections. If you do not have electrical wiring experience, refer to a do-it-yourself wiring handbook or have your fixture installed by a qualified licensed electrician.
 - Risk of fire – most dwellings built before 1985 have supply wire rated for 140°F/60°C. Consult a qualified electrician before installation.
 - Do not exceed the recommended wattage. Refer to the re-lamping label on the light socket for maximum wattage.
 - Do not replace a bulb when electrical outlet switch is turned to the “ON” position.
 - Do not immerse your lamp in water; doing so will damage the wire.
 - Keep materials that burn easily away from lighted bulbs.
 - This fixture is intended to be mounted at a minimum of 6' above ground level.
-


PREPARATION

- Before beginning assembly, installation or operation of product, make sure all parts are present. Compare parts with package contents list and diagram on previous page. If any part is missing or damaged, do not attempt to assemble, install or operate the product. Contact customer service for replacement parts.
 - Tools required for assembly (not included): flathead screwdriver, phillips screwdriver, pliers, electrical tape, wire cutters, safety glasses, ladder, wire stripper, caulk.
-

INSTALLATION

1 Preparing the mounting bracket

- Unscrew the four support screws (short) (H7) from the fixture body (B), remove the shade (A) from the fixture body (B), and keep the four support screws (short) (H7) and four rubber washers (H5) for later use.
- Unscrew the four cap nuts (H6) from the mounting bracket (H1). Remove the mounting bracket (H1) from the fixture body (B), and keep the mounting bracket (H1), rubber washers (H5) and the cap nuts (H6) for later use.

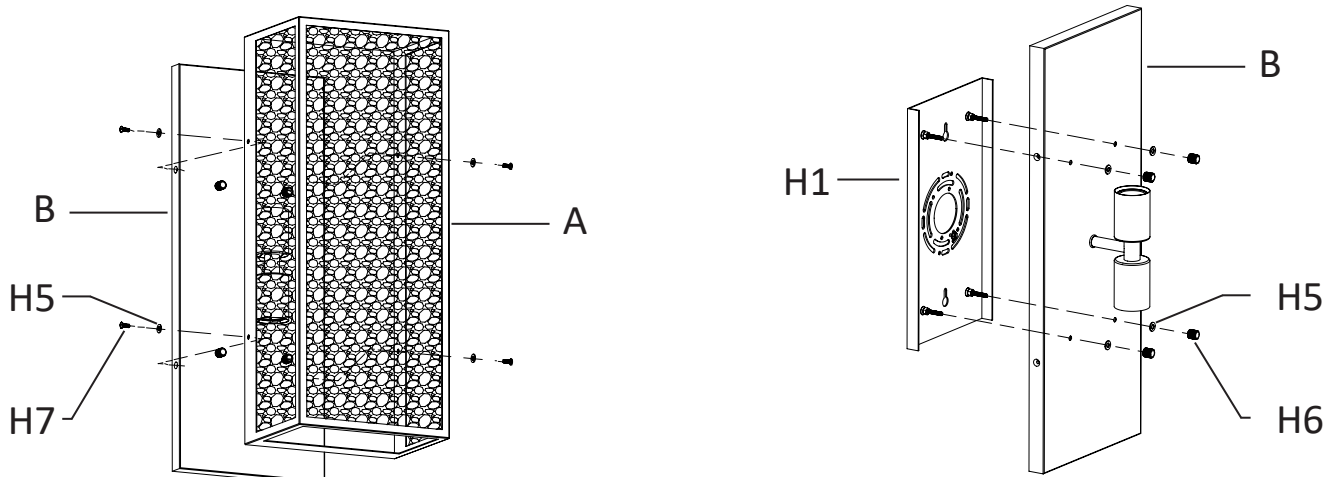


INSTALLATION (continued)

2 Installing the mounting bracket

- Place the flat side of the mounting bracket (H1) over the outlet box (not provided), secure the mounting bracket (H1) on the outlet box with two outlet box screws (H2) (Do not lock too tight) and adjust the mounting bracket (H1) to the desired location, and then make the location on the two key holes with a pencil (not provided). Remove the mounting bracket (H1) from the wall.
- Drill a small hole on each mark and push the plastic anchors (H9) into the ceiling using a hammer.
- Fasten the mounting bracket (H1) onto the outlet box using 2 outlet box screws (H2). Place the 2 wood screws (H8) in the key holes located on the mounting bracket (H1) and tighten until fully secured.


NOTE: If your wall is wood, do not drill holes. Use the two wood screws (H8) and two outlet box screws (H2) to secure the mounting bracket (H1).

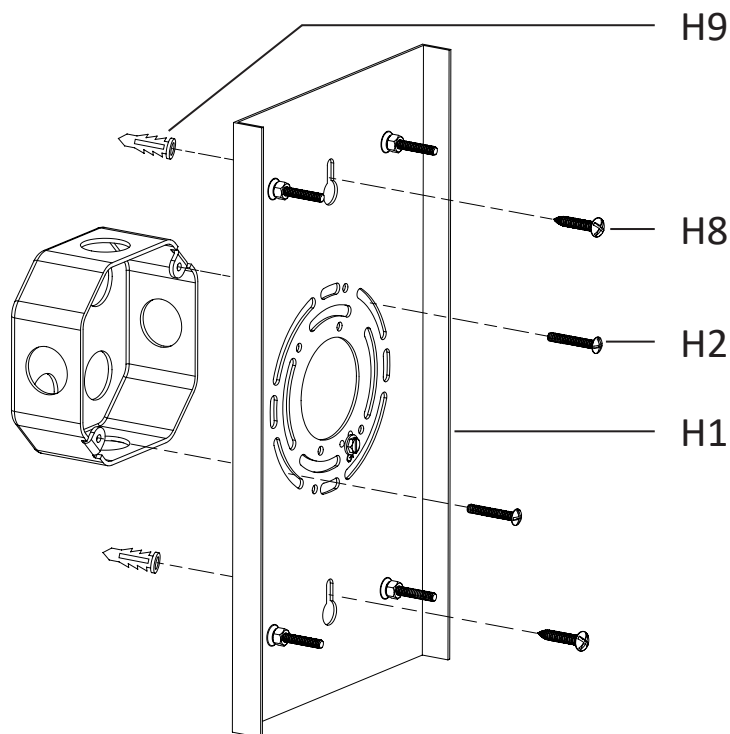

3 Making the electrical connections

- Strip 3/4 in. of insulation from the wire ends.
- Connect the black wire from the fixture to the black wire from the outlet box, then connect the white wire from the fixture to the white wire from the outlet box.
- The bare copper ground wire from the fixture must loop one turn under the head of the green ground screw (H3) on the mounting bracket (H1) before it is connected to the ground conductor of the supply circuit.
- Cover the wires with wire connectors (H4). Tape the wire connectors (H4) and wires together, and carefully position all wires inside the outlet box.

Note: Do not let go of the fixture body (B) before the fixture body (B) is installed on the mounting bracket (H1).

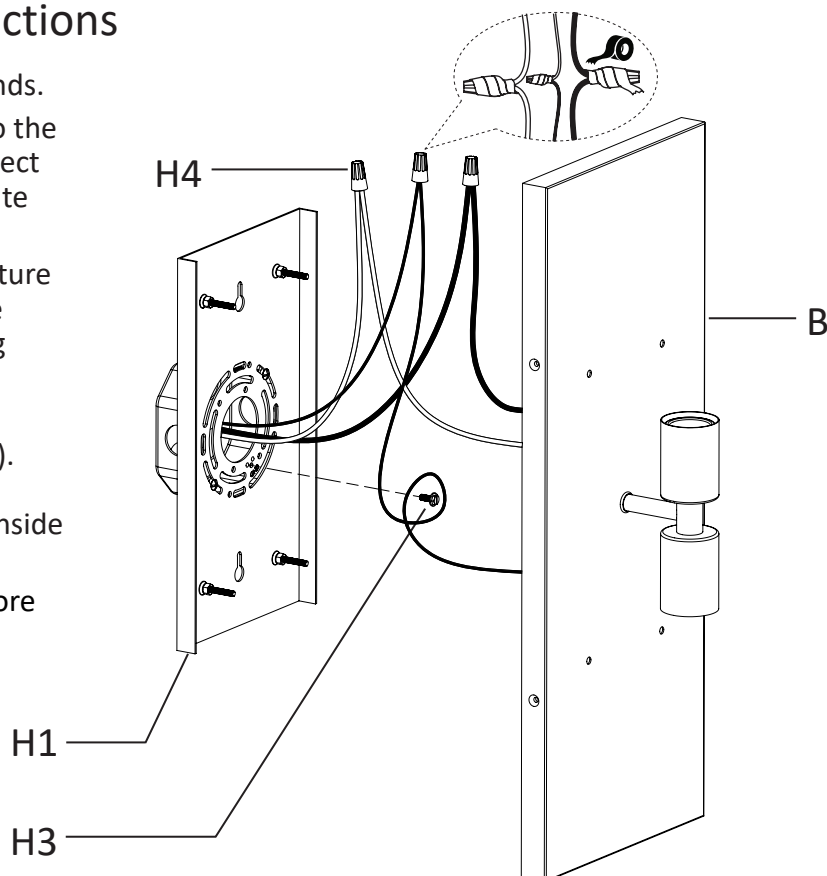


INSTALLATION (continued)

4 Assembling the fixture body to the outlet box

- Place the canopy of the fixture body (B) over the outlet box, let the heads of support screws of mounting bracket (H1) come through the holes of the canopy of the fixture body (B), then place the rubber washer (H5) over the support screws and secure by tightening the cap nuts (H6).


Note: Do not let go of the fixture body (B) before the fixture body (B) installed on the mounting bracket (H1).

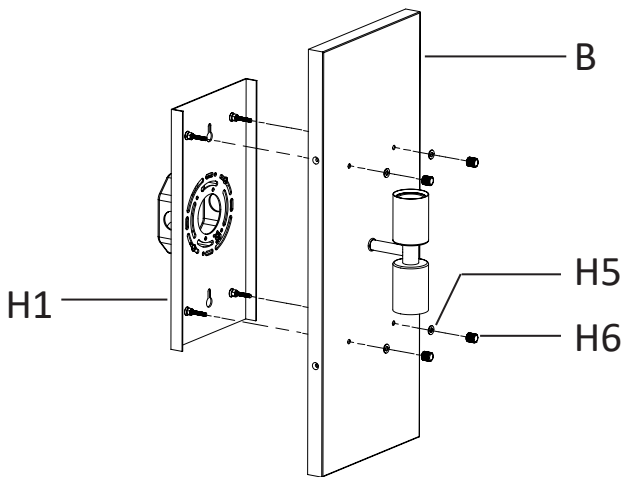

5 Installing the light bulbs


- Install the light bulbs (not provided) into the sockets. Use two **MAX 60 W medium base (E26) type "ST64"** bulbs (recommended).

Note: You can also use two **MAX 60 W medium base (E26) type "A"** bulbs or **MAX 9W medium base (E26) self-ballasted LED** bulbs. Do not exceed the recommended wattage.

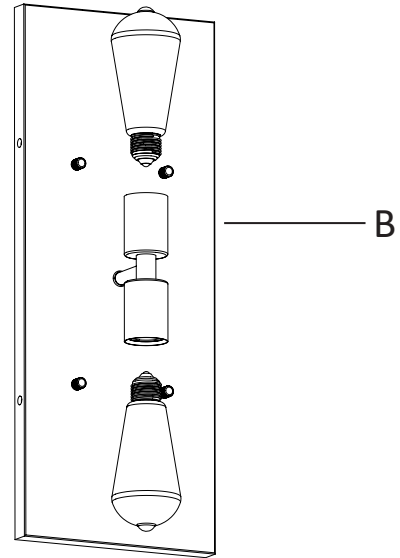


6 Assembling the shade to the fixture body

- Place the shade (A) over the fixture body (B), align the four holes of the canopy of the fixture body (B) and the shade (A), then tighten with four rubber washers (H5) and four support screws (short) (H7).

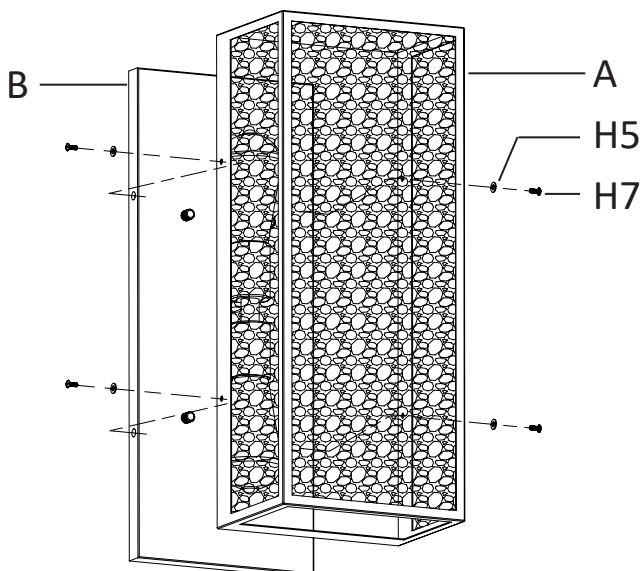

7 Applying the caulk

- Use weather resistant caulk (not included) to seal around top and side perimeter of fixture back plate. Do not caulk bottom to allow for condensation evaporation.

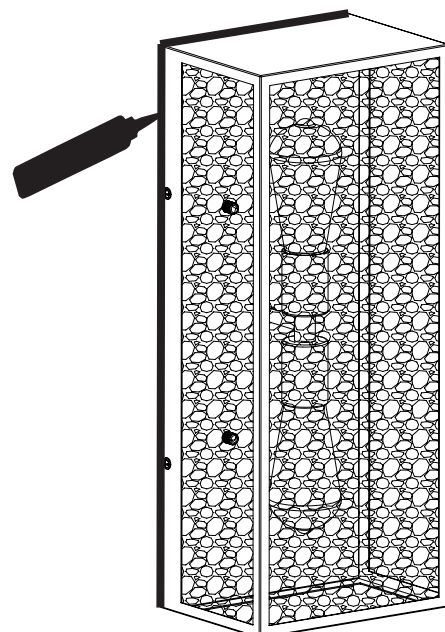

CLEANING

- Do not use any cleaners with chemicals, solvents, or harsh abrasives. Use only a dry, soft cloth to dust or wipe carefully.
- To clean the fixture, disconnect the power by turning off the circuit breaker or by removing the fuse at the fuse box. Use a dry or slightly dampened, clean cloth to wipe the exterior surface of the fixture.

TROUBLESHOOTING

- The light does not come on at all:
 - a) Check whether the bulbs were burned out.
 - b) Make sure the wall switch and circuit breaker are on.
 - c) Make sure the wiring is correct.
 - d) Make sure the circuit breaker is set in the "ON" position.
- Fuse blows or circuit trips when light is turned on.
 - a) Check for crossed wires, ensure wiring is correct.