


Vonluce

Ceiling Fan and Light

Instruction Manual

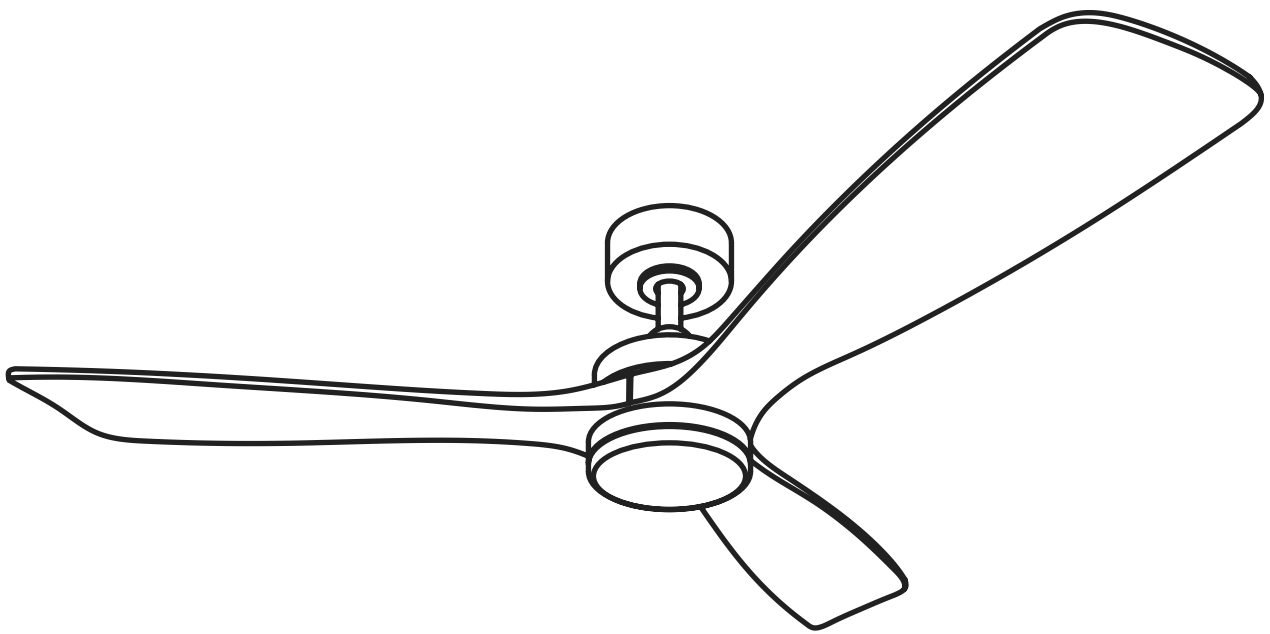

Make A House Home

Disclaimer

Read this disclaimer completely and carefully before proceeding with the rest of the manual content.

1. **Product Modifications**

Any modifications or alterations to Vonlucce products void any warranties and may result in damage or injury. Vonlucce shall not be liable for any damages resulting from such modifications or alterations.

2. **Compliance with Laws**

Customers shall be liable for ensuring that the use of Vonlucce products complies with all applicable laws and regulations in their respective jurisdictions. Vonlucce shall not be responsible for any violations of laws or regulations resulting from the use of Vonlucce products.

3. **Correct Use**

Always use Vonlucce products only as directed in the accompanying manuals. Failure to follow instructions may result in injury or damage.

Always ensure the assembly, installation, operation, maintenance, or repair of Vonlucce products is carried out by a competent person.

Regular maintenance should be performed throughout the lifecycle of Vonlucce products. You are responsible for ensuring the products operate as intended.

Always wear appropriate protective gear.

4. **Third-Party Products**

Vonlucce shall not be liable for any damages or losses resulting from the use of third-party products in conjunction with Vonlucce products. Customers shall refer to the third-party's guidelines and/or warranties (if any) for any third-party products used.

5. **Limitation of Liability**

Vonlucce shall not be liable for any direct, indirect, punitive, incidental, special, or consequential damages to property or life, whatsoever arising out of or connected with the use or misuse of Vonlucce products. In no event shall Vonlucce's liability exceed the value of the products sold.

6. **Warranty**

Refer to the sales page for warranty information.

This disclaimer states the entire obligation of Vonlucce with respect to Vonlucce products. If any part of this disclaimer is determined to be void, invalid, unenforceable, or illegal, including but not limited to the warranty disclaimers, liability disclaimers, and liability limitations set forth above, the invalid or unenforceable provision will be deemed superseded by a valid and enforceable provision that most closely matches the intent of the original provision and the remainder of the agreement shall remain in full force and effect.

Preface

Vonlucce is a team of dedicated home enthusiasts with a mission to offer you high-quality products at affordable prices, all from the comfort of your own home. Our goal is to transform your house into a place you truly call home.

We are committed to delivering an exceptional customer service experience, along with a diverse selection of quality products, all available at reasonable prices.

To ensure successful installation, please read this manual carefully before starting your work. For the latest PDF version, scan the left QR code using the appropriate app on your smartphone. For video form, go to our **YouTube** channel **Vonlucce** and search for "CFN 1309 00" or simply scan the right QR code.

Digital Manual



Installation Video



We care about your experience! ♥

We truly hope our product brings you joy and convenience.

If you have any questions or need assistance, please don't hesitate to reach out.

We're always happy to help!

Simply fill out the form below, take a photo of it (along with any relevant photos or videos if needed), and email it to us. Our service team will respond within 24 hours.

Platform

☐ Amazon ☐ eBay ☐ Walmart ☐ Wayfair ☐ Other: _____ (please specify)

Order Information

Order No.: _____

Product: _____

Purchase Date: _____

Your Name: _____

Subject of Inquiry

Your satisfaction means everything to us :)



support@vonlucehome.com

Contents


Introduction.....	1
Parts Diagram	2
Safety Information	3
Preparation.....	4
Installation.....	5
Mounting Bracket.....	5
Fan Blades	6
Downrod and Motor	6
Wiring	10
Canopy	11
Light.....	12
Remote Control	13
Introduction.....	13
Function Keys.....	13
Color Temperature Adjustment	14
Troubleshooting	14
Disposal.....	15
Customer Support and Policies	16

Introduction

Before beginning installation of this product, refer to **Parts Diagram** on Page 2 and ensure all parts are present and display no defects. If any part is missing or damaged, contact customer service and do not attempt to install the product. Read all of the safety information on Page 3 before installation or use.


Estimated assembly time: 120 minutes

Additional tools required for assembly: Electrical tape, flathead & Phillips screwdriver, power screwdriver, adjustable wrench, pliers, wire strippers, safety glasses, and ladder

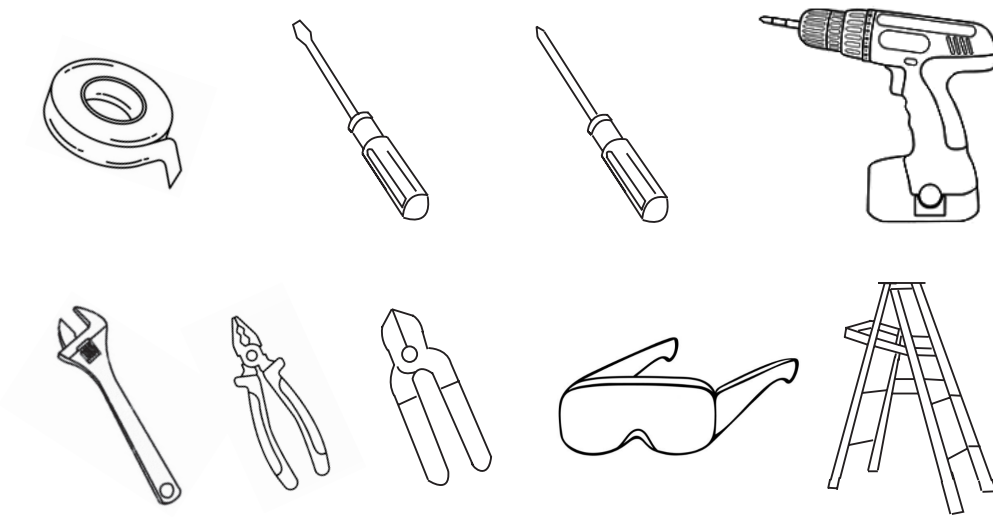

Additional helpful tools: AC tester light, tape measure, wiring handbook, and wire cutters

Parts Diagram

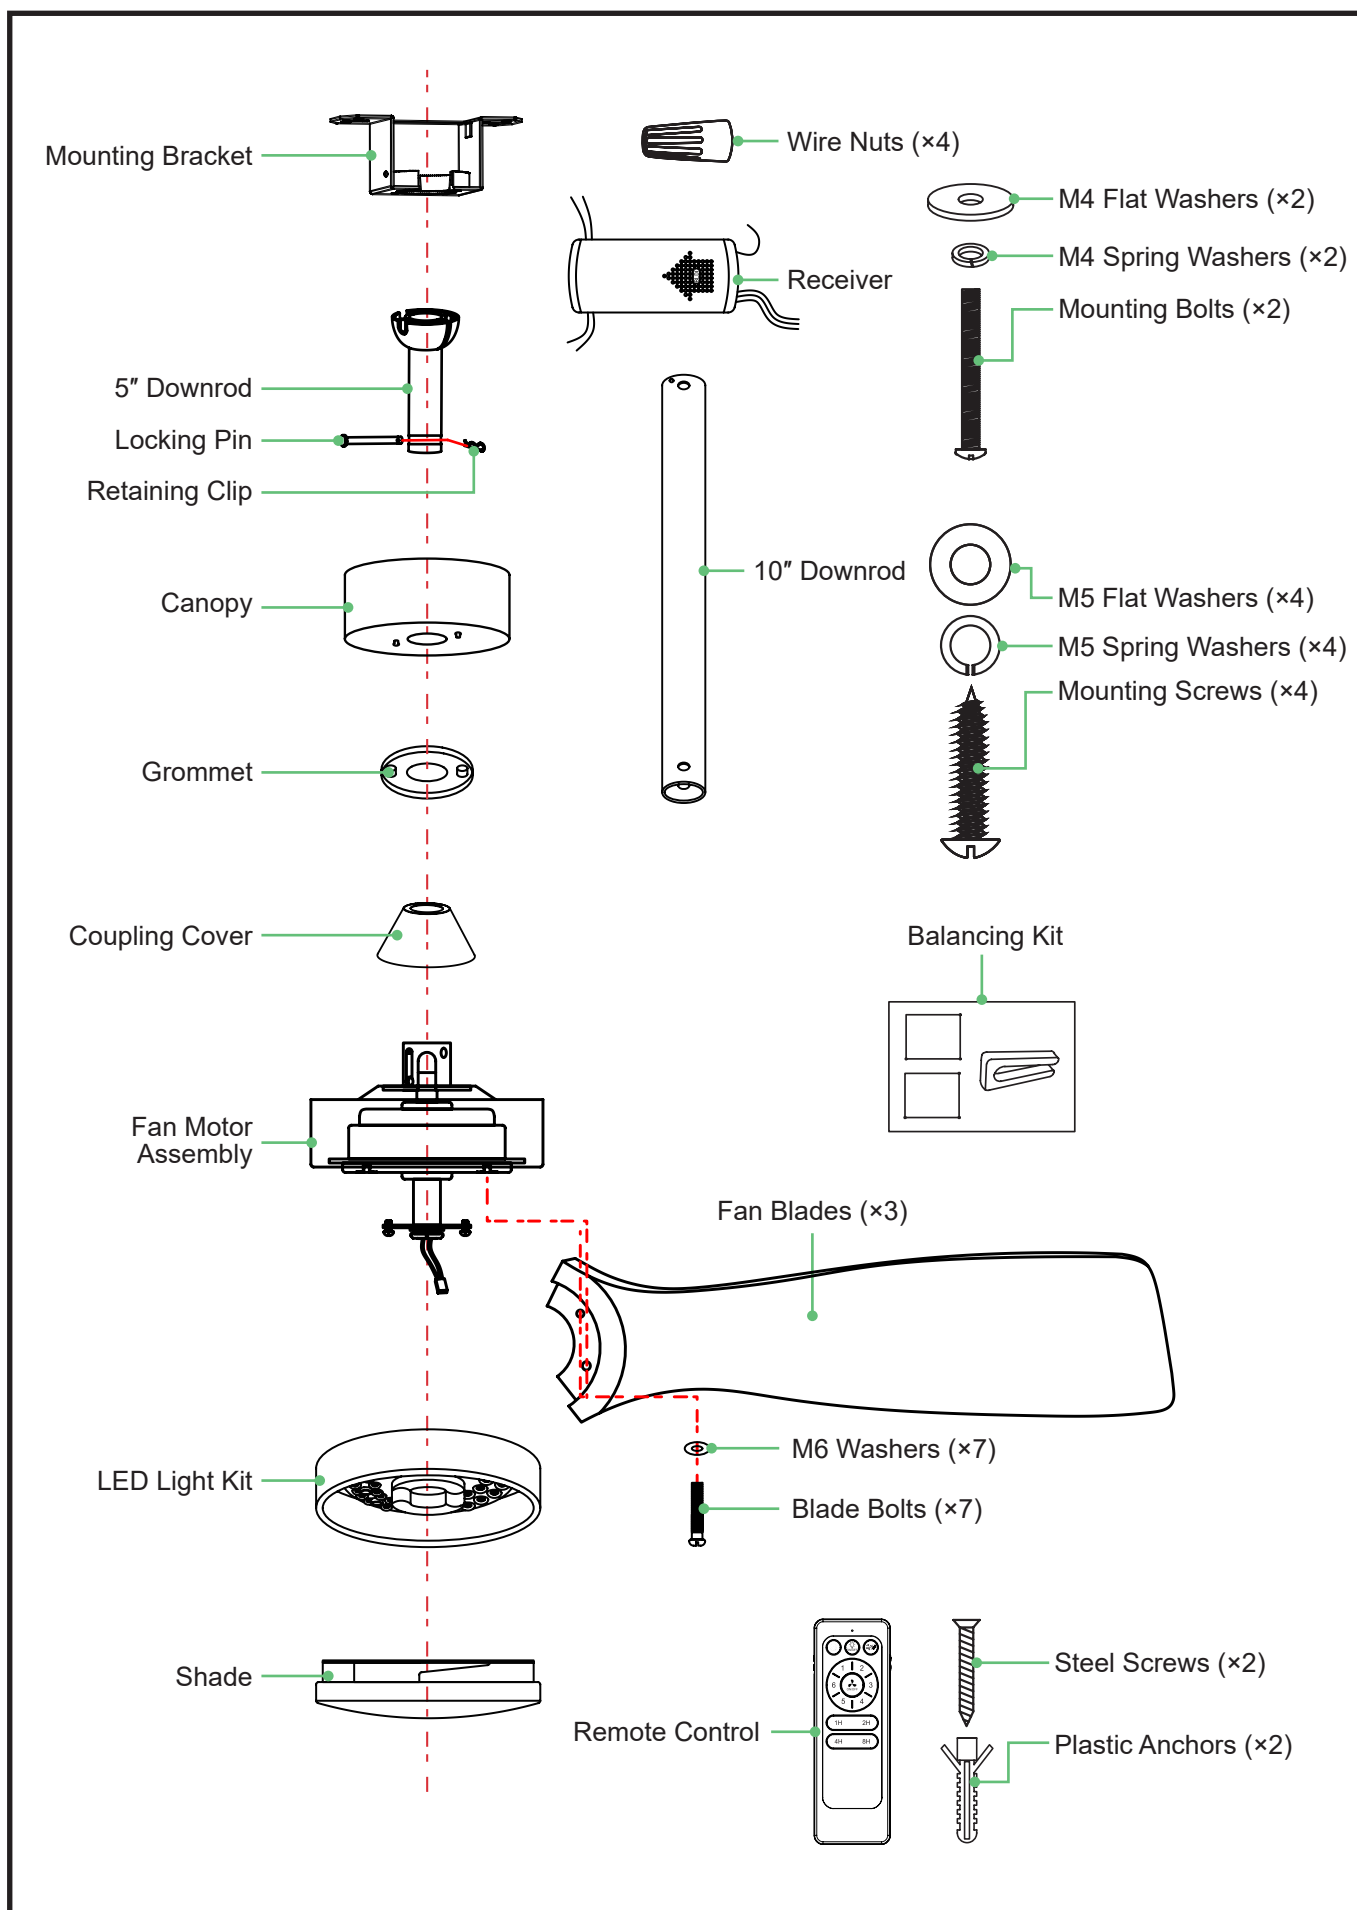

Safety Information

Read **ALL** these instructions carefully before installation and use. Save this manual for future reference.

Warning

- **ONLY** install and use this fan in accordance with these instructions.
Provide this manual to anyone who will use or service this fan.
- **ONLY** install this fan in indoor locations well protected from the elements.
- To reduce the risk of electric shock, ensure electricity has been turned off at the circuit breaker or fuse box before beginning.
- To reduce the risk of personal injury, **DO NOT** bend the fan blades when installing, balancing, or cleaning them, and **DO NOT** insert foreign objects between the rotating fan blades.
- To reduce the risk of fire, electric shock, or personal injury, **ALWAYS** install the fan onto a junction box marked as suitable for supporting fans weighing 35 lb. (15.9 kg) or less, and use the fasteners provided with the junction box.
- All wiring **MUST** be in accordance with national and local electrical codes.
Electrical installation should be performed by a qualified licensed electrician.
- This fan is suitable for use with solid-state speed controls.
- To reduce the risk of personal injury, **ONLY** use the fasteners provided with the junction box for mounting to the junction box.
Most junction boxes commonly used for the support of lighting fixtures are **NOT** acceptable for fan support and may need to be replaced.
Consult a qualified electrician if in doubt.
- The junction box and support structure **MUST** be securely mounted to create a level surface within 10° of horizontal and **MUST** be capable of reliably supporting a minimum of 50 pounds (23 kg).
ONLY use UL listed junction boxes marked "**FOR FAN SUPPORT**".
- After electrical connections are completed, spliced conductors should be turned upward and pushed carefully up into the junction box.
The wires should be spread apart with the grounded conductor and the equipment-grounding conductor on one side of the junction box.
- The fan **MUST** be mounted with a minimum clearance of 7 feet (2.5 m) from the trailing edge of the blades to the floor.
- **DO NOT** use the reverse switch while the fan blades are in motion.
To prevent damage and ensure long use, turn off the fan and wait for the blades to stop before reversing the direction.
- **DO NOT** place objects in the path of the blades.
- Exercise caution when working around or cleaning the fan.
- Use a soft dry cloth to clean the fan body and blades.
DO NOT use water or detergent.
- The electrical diagrams provided herein are for reference only.
Light kits that are not packaged with the fan **MUST** be UL listed and suitable for use with this fan.
Switches **MUST** be UL general use switches.
Refer to their separate instructions for proper assembly.
- **NEVER** bend the blades for any reason.
- **NEVER** replace any parts with nonidentical or unauthorized ones.

Preparation

1

Turn off Your Power


Begin installation by removing fuses or turning off circuit breakers to the wiring you will be using.

Use your compatible UL listed junction box if you already have one installed.



Warning

Failure to disconnect the power supply prior to installation may result in serious injury or death.

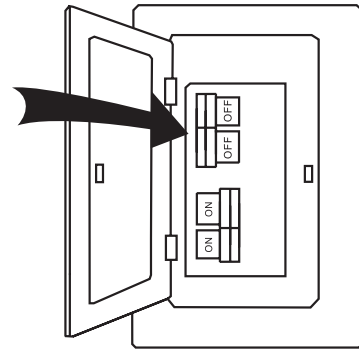

2

Choose Your Mounting Position

If you need to install a new UL listed junction box, secure it directly to your building's structure using appropriate fasteners and materials.




Caution


DO NOT use plastic boxes.

The junction box and its supports **MUST** be able to support the **MOVING** weight of the fan (at least 50 lb. or 23 kg) and be rated for fan support.

The junction box should create a level surface for the fan that is **NOT** sloped greater than 10 degrees from horizontal in any direction.

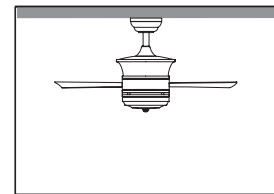

Use **ONLY** on Flat Ceilings ($\pm 10^\circ$)

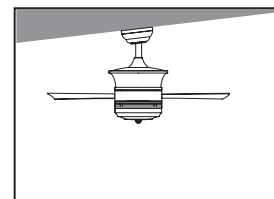

DO NOT Use on Steep Slopes

3

Choose a Suitable Location


Ensure the blades will be at least 30 inches (76 cm) from any obstruction and at least 7 feet (2.5 m) above the floor.

In locations without a ceiling joist, a hanger support bar may be required.



Caution


DO NOT install in damp locations.

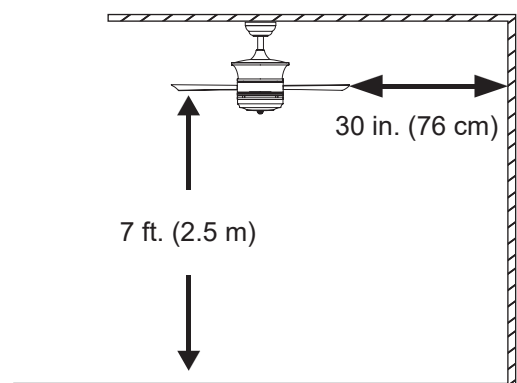

Installation

Mounting Bracket


1. Pass your building's supply wires through the central hole of the mounting bracket.
2. Secure the mounting bracket to your junction box with appropriate fasteners.
 - For wood or other thinner and weaker ceilings:
 - a. Partially fasten the bracket with the mounting bolts and M4 spring & flat washers.
 - b. Use the mounting screws and M5 spring & flat washers to secure the bracket into place.
 - c. If necessary, drill holes and insert matching plastic anchors (not included) to hold the mounting screws beforehand.
 - For reinforced concrete or similar ceilings, use anchor bolts (not included).

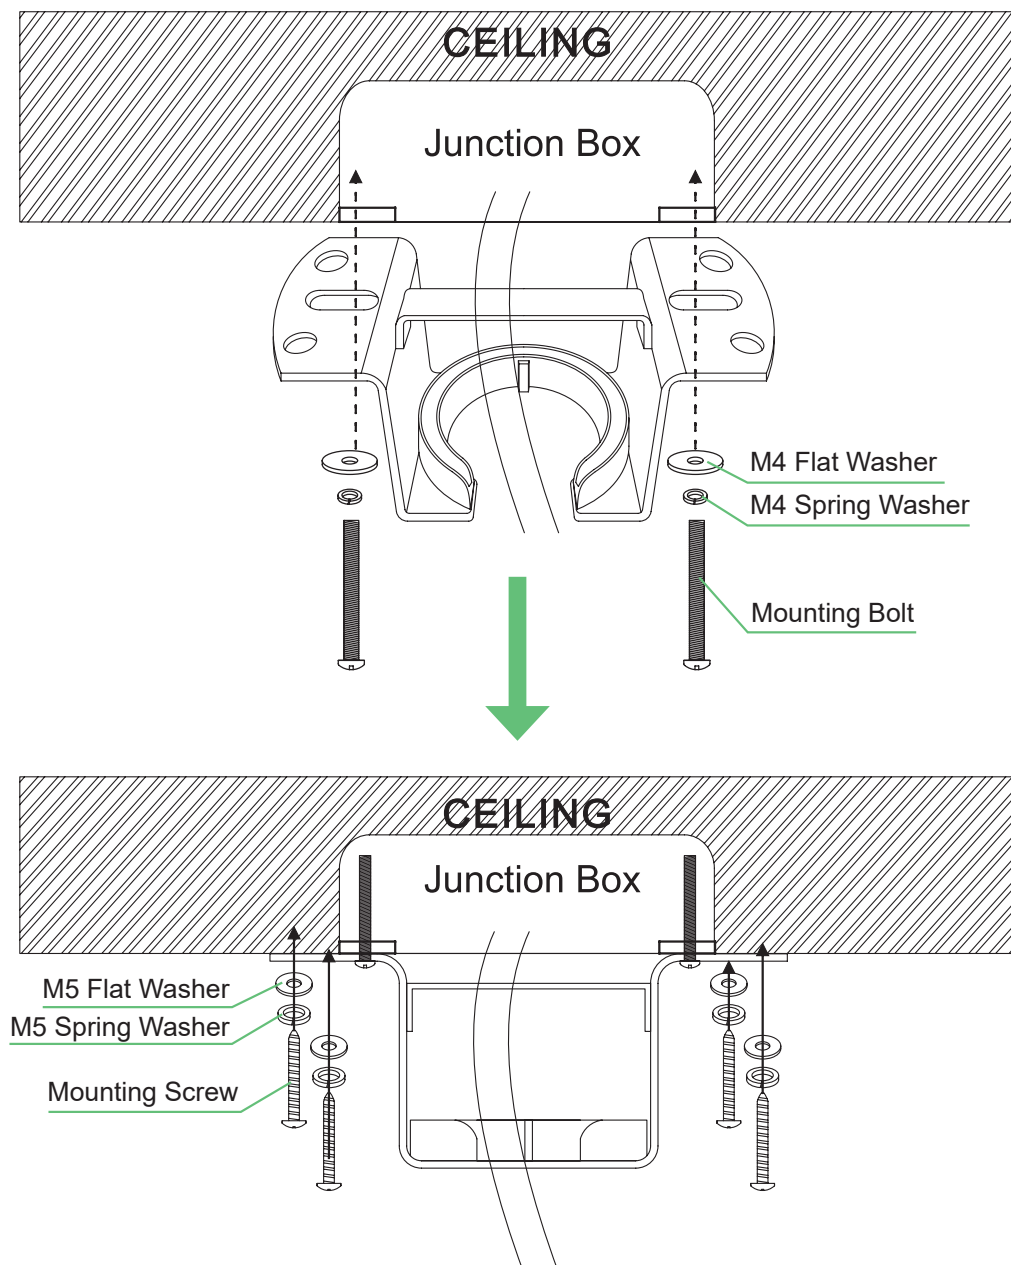

Installation

Fan Blades


1. Fit a fan blade on the bottom of the fan motor assembly, aligning their holes.
2. Making sure the blade is straight, attach two sets of M6 washers and blade bolts to secure it in place.
3. Repeat for the remaining blades.

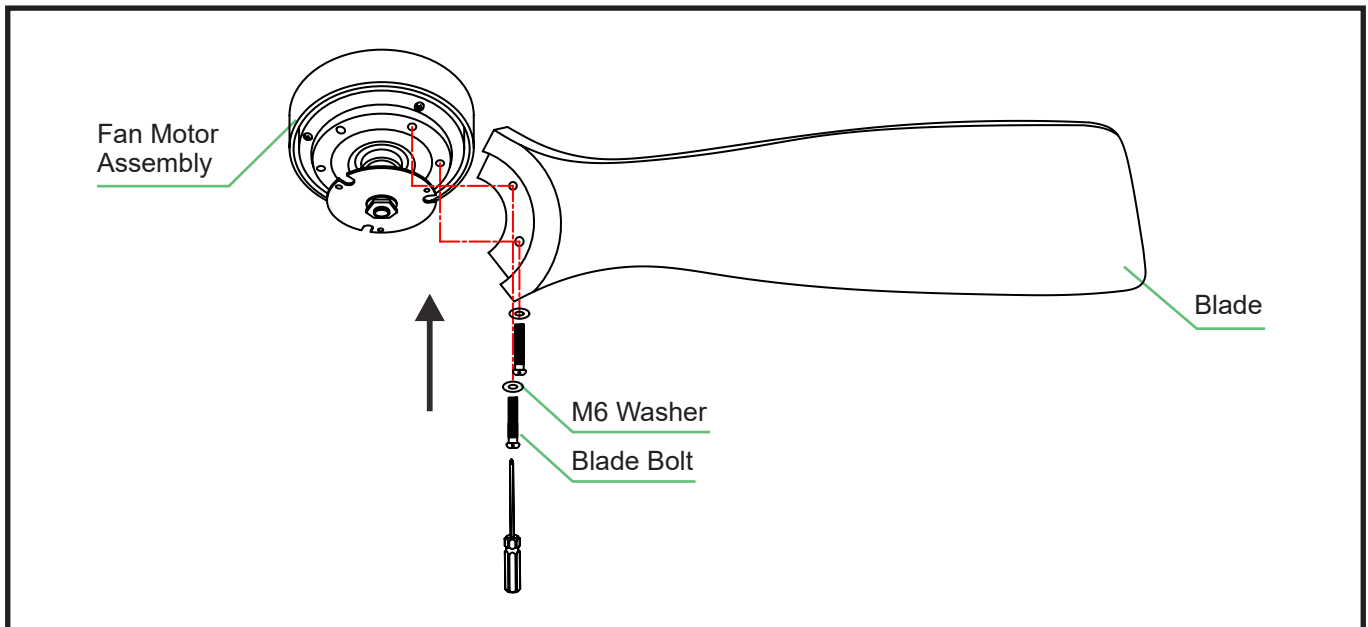

Downrod and Motor

Disassembling the 5" Downrod Kit

1. Remove the retaining clip and locking pin from the lower part of the 5" downrod.
2. Unscrew the two Phillips bolts from the mount of this downrod.
3. Slide down the mount away from this downrod.
4. Pull the latch out of the upper slot of this downrod.

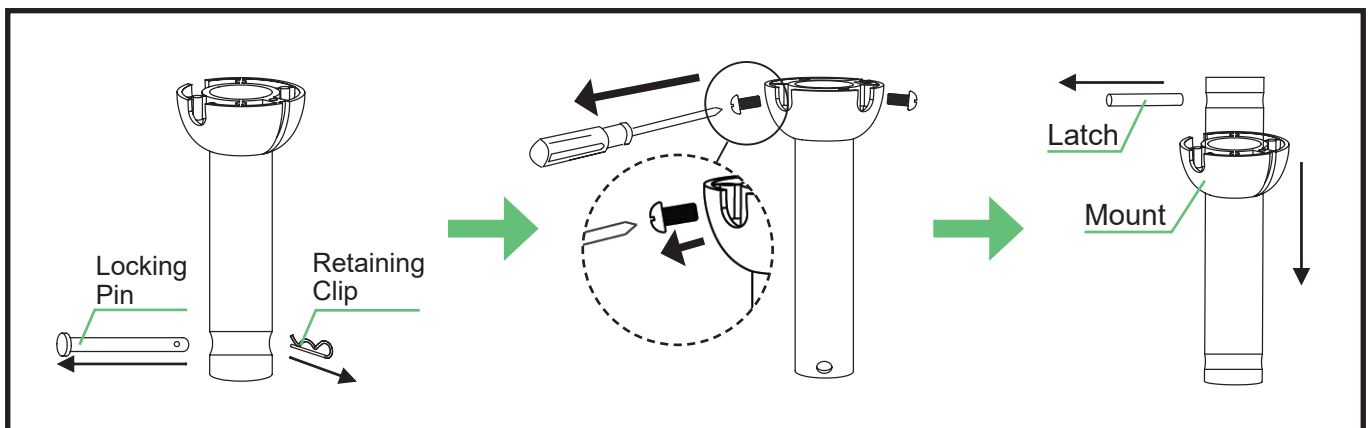


Installation

Downrod and Motor

Attaching a Downrod to the Motor


1. Select either the 5" or the 10" downrod to match the height of your ceiling.

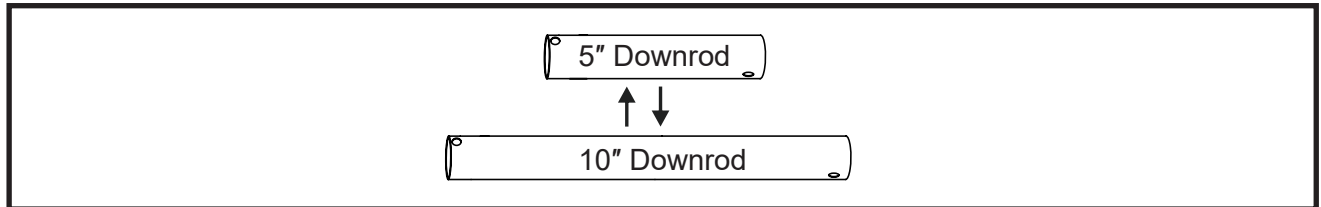

2. Pass the downrod through the coupling cover as shown.
3. Feed the lead wires and safety cable loop from the fan motor assembly through the downrod.
4. Loosen the two Phillips bolts at the top of the motor assembly.
5. Fit the downrod onto the motor's top, aligning their slots.
6. Partially fasten the downrod by replacing the previously removed locking pin and retaining clip.
7. Retighten the previously loosened bolts until the downrod is locked into place.

Warning

Failure to reattach the locking pin and retighten the Phillips bolts can cause the fan to fall from the ceiling during operation.

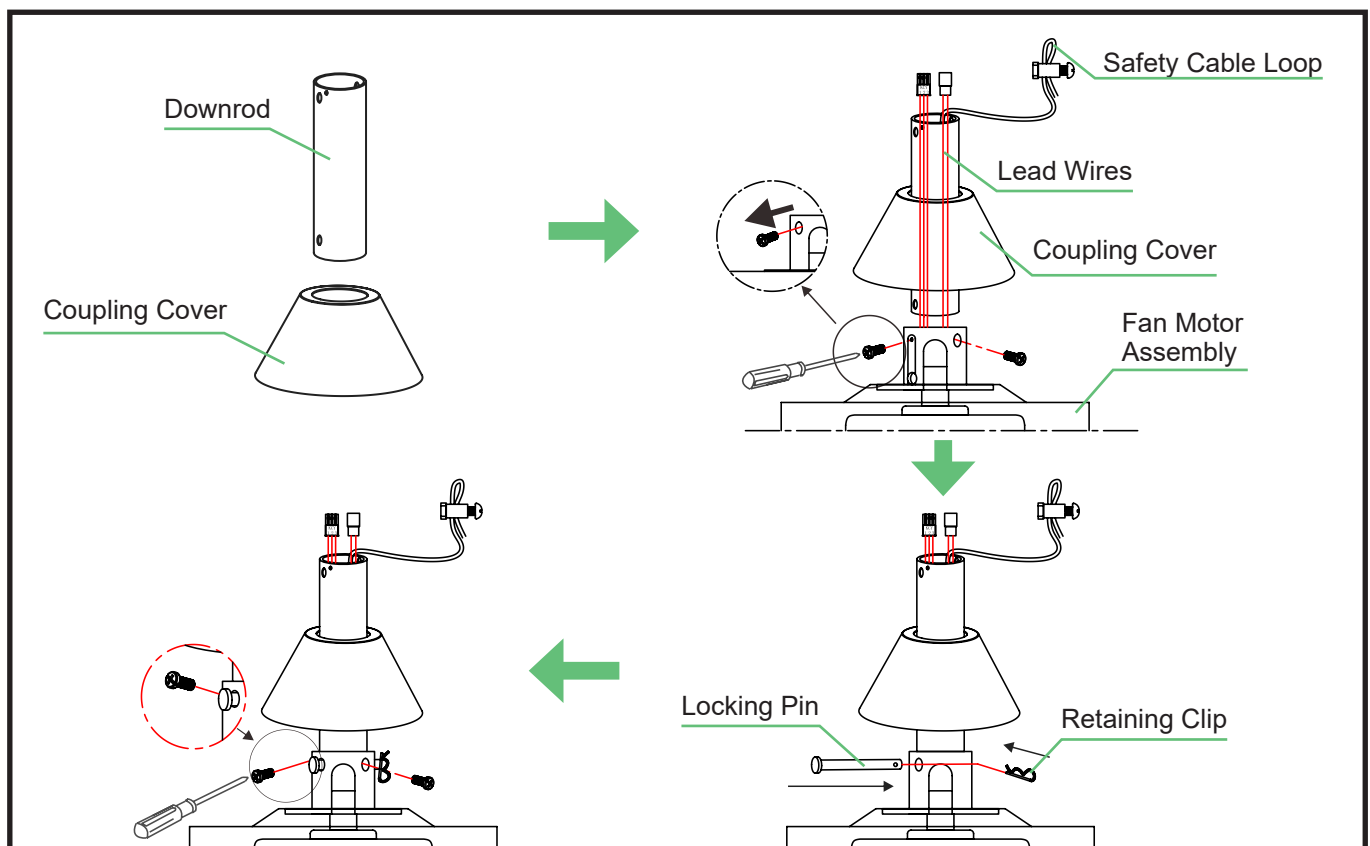


Installation

Downrod and Motor

Reassembling the Downrod Kit

1. Slide down the coupling cover.
2. Place the grommet and canopy onto the downrod and slide them to the coupling cover.
3. Replace the downrod's mount, passing the lead wires and safety cable loop through it.
4. Insert the removed latch back into the downrod's upper slot.
5. Slide up the downrod's mount, rotating until the latch is firmly seated inside the mount.
6. Replace the removed Phillips bolts onto the mount.
7. Tighten these bolts to secure the mount to the downrod.

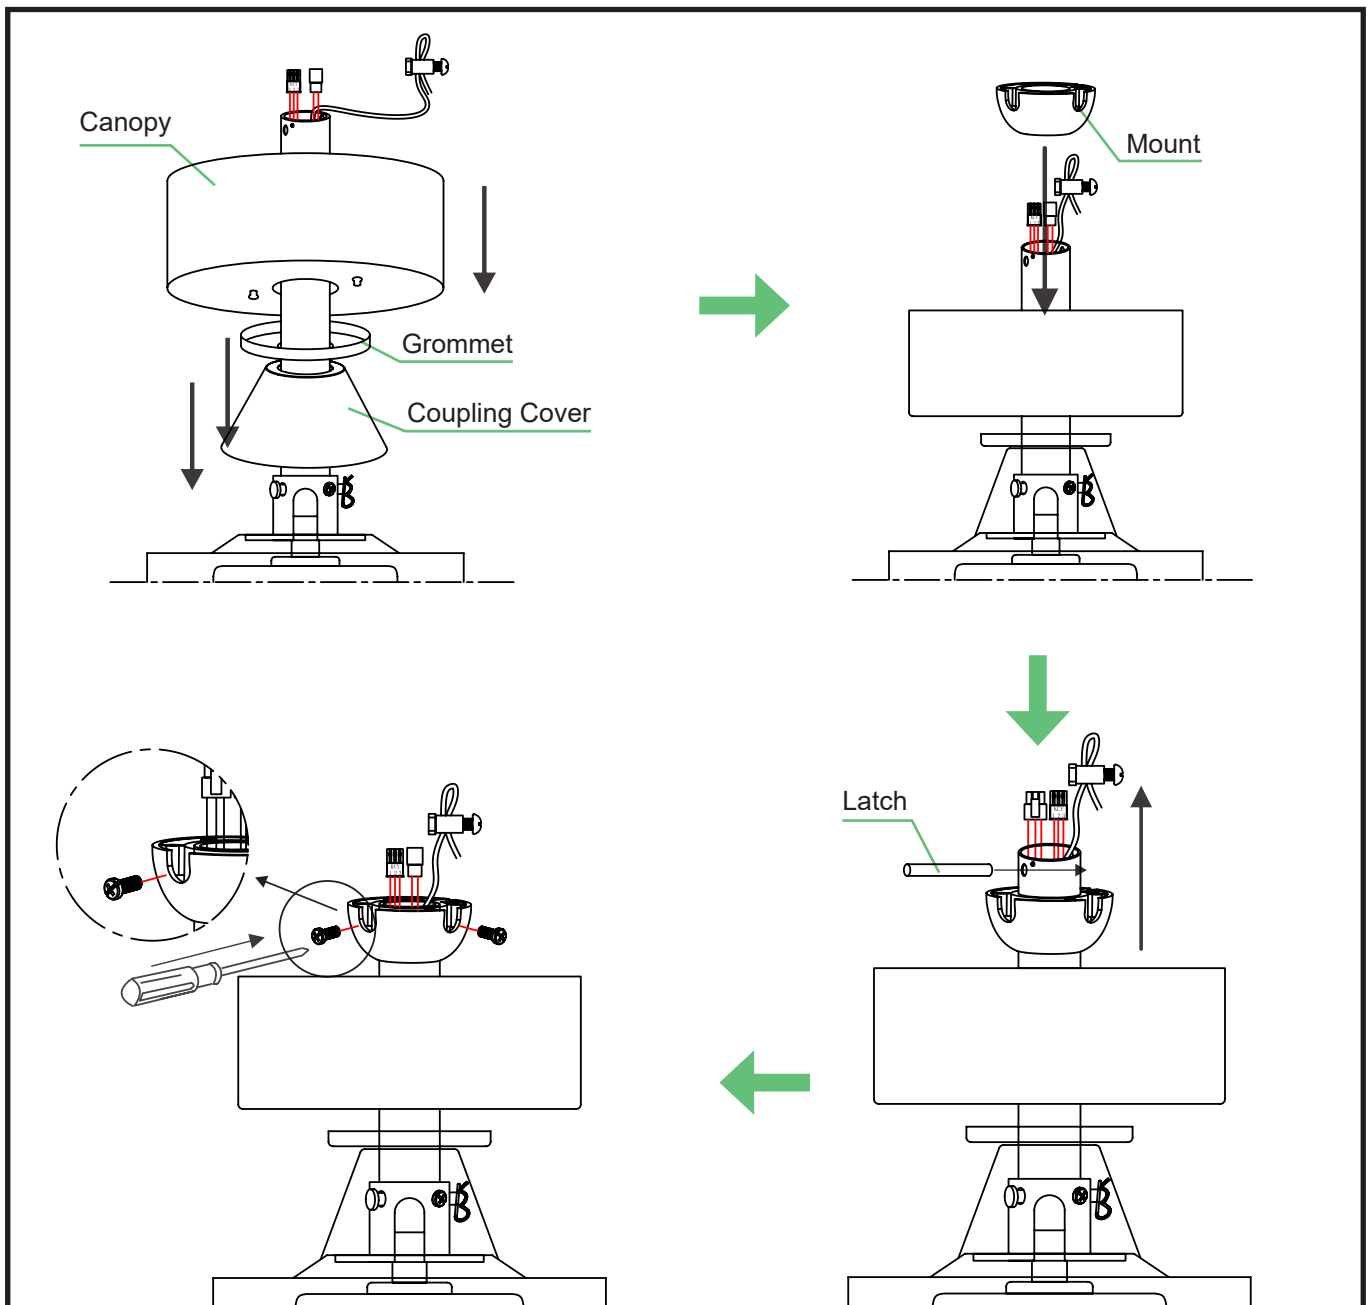

Installation

Downrod and Motor

Hanging the Downrod and Motor


1. Fasten the downrod to the mounting bracket.
 - a. Release the downrod's cable lock by loosening its Phillips bolt.
 - b. Unwind the safety cable loop and wrap the cable around the mounting bracket.
 - c. Thread the cable back through the lock.
 - d. Re-secure the lock by retightening the bolt.
2. Place the downrod's mount onto the mounting bracket.
3. Rotate the entire assembly until the tab has dropped into the mount's slot and locks itself in place.

The fan motor assembly should no longer rotate if seated properly.

Warning

Failure to properly fasten and seat the downrod can cause the fan to fall from the ceiling during operation.

DO NOT use the fan before ensuring it is properly secured and the motor assembly cannot rotate.

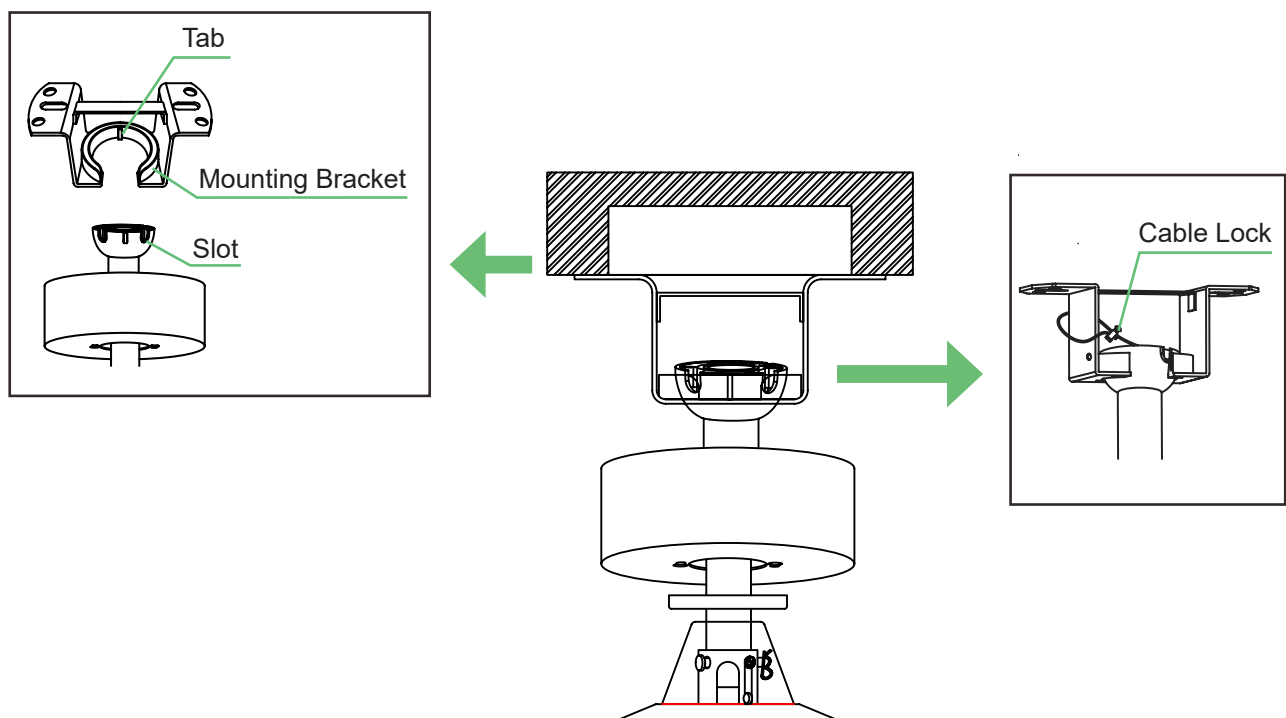



Installation

Wiring

Warning

- Again, ensure that the power has been cut before working with the wiring.
- Use the wire nuts provided with your fan.
- Secure each connection with electrical tape.
- Be sure that there are no loose wires or connections.


1. Connect the plugs of the receiver to those from the fan motor assembly as shown.
2. Connect the wires.
 - a. Connect the 2 colored wires of the receiver to the 2 identically colored wires from the junction box.
Secure each set with the provided wire nuts, ensuring they are securely fastened by gently tugging on each connection.
 - b. Connect the green or bare copper ground wire from the junction box to the fan's green ground wires.
 - c. Separate the white and green wire connections from the black wire connection, which should be kept on the opposite side of the junction box.
3. Fit the receiver into the tray inside the mounting bracket and at the top of the fan motor assembly.
Ensure that the black antenna remains extended and not tangled with any of the electrical wires.
4. Tuck all the connections neatly into the junction box.

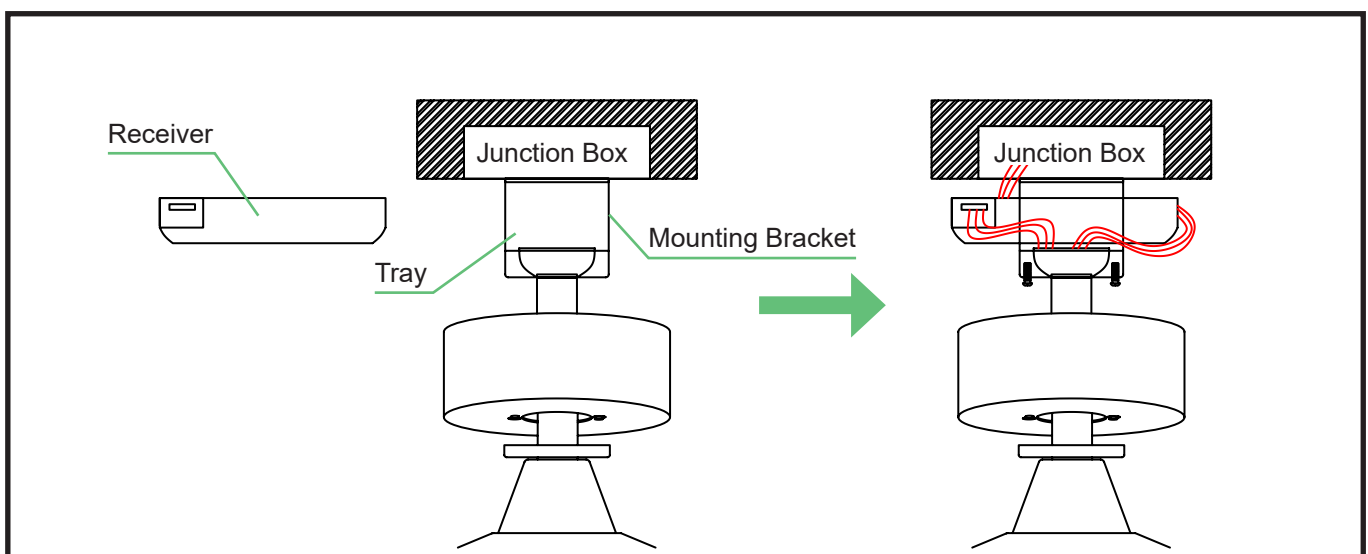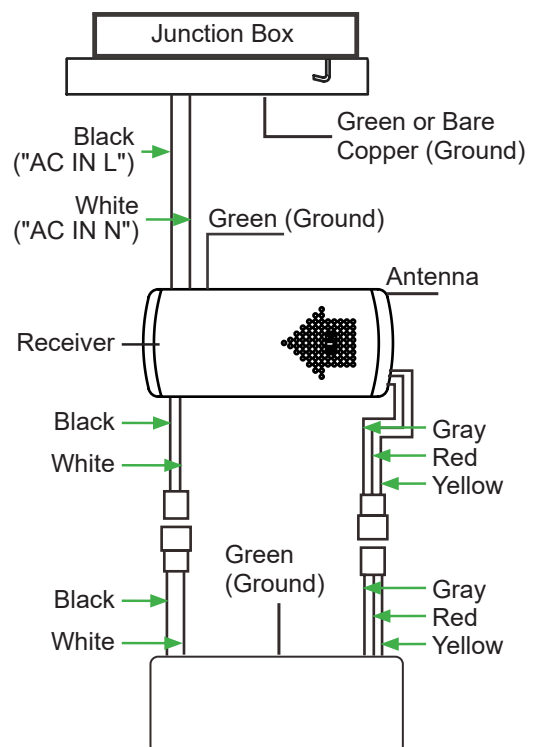


Installation

Canopy

1. Slide the canopy up to the mounting bracket.
2. Place the key holes over the bolts preinstalled on the bracket.
3. Rotate the canopy until the bolts' heads lock in place at the narrow sections of the key holes.
4. Tighten these bolts as needed.

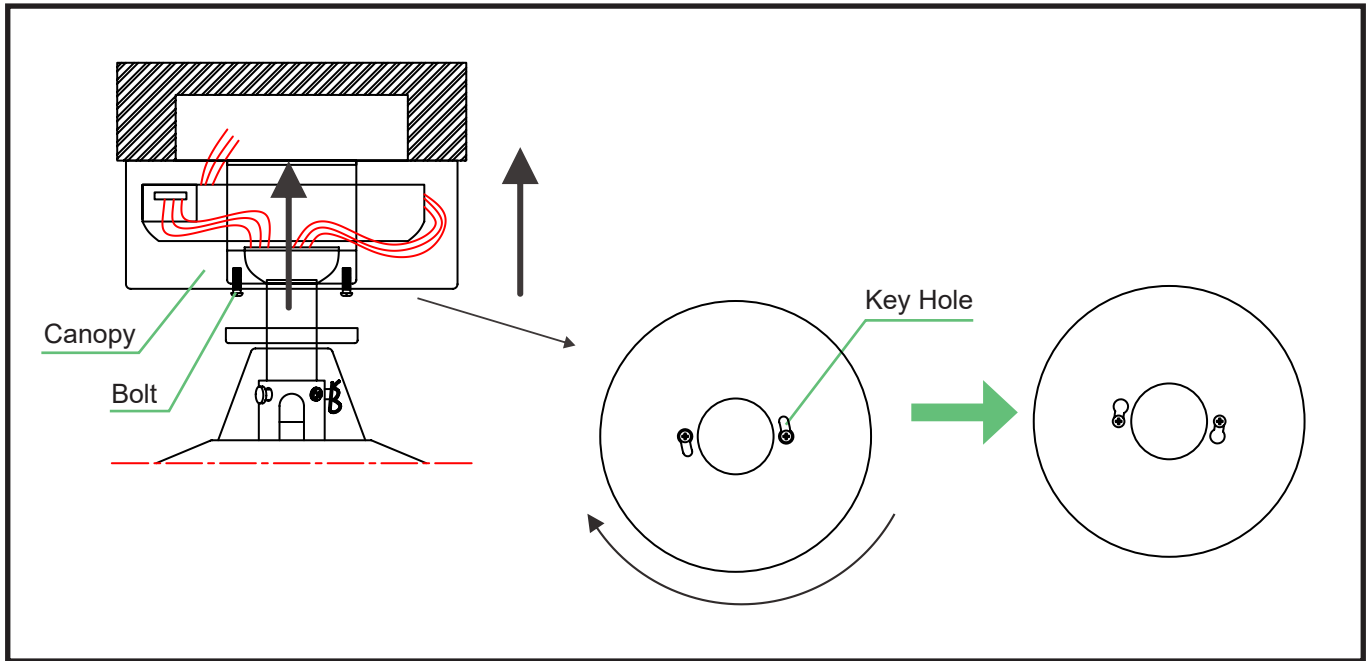


5. Attach the grommet to the bottom of the canopy using its magnets.

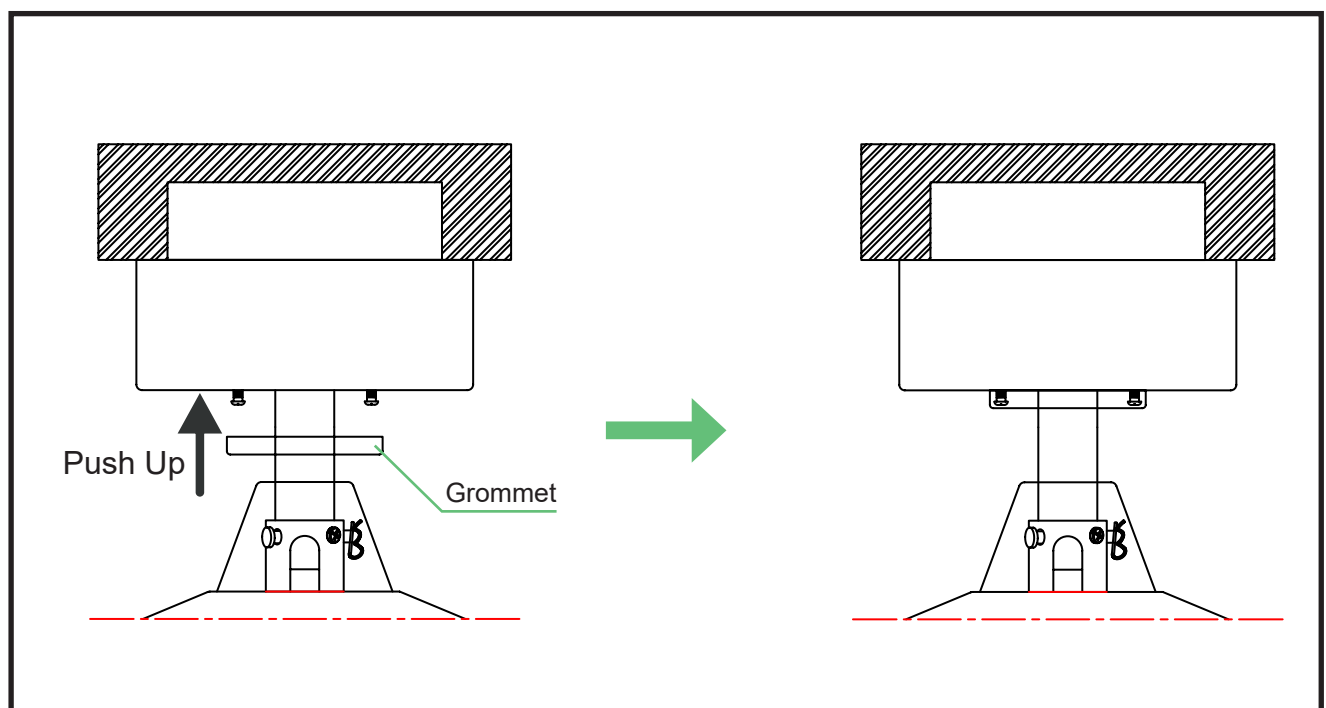

Installation

Light


1. Remove the bolts from the bottom of the fan motor assembly.
2. Feed the wire plug of the fan motor assembly through the middle of the LED light kit.
3. Connect the wire plug to the socket on the LED light kit.

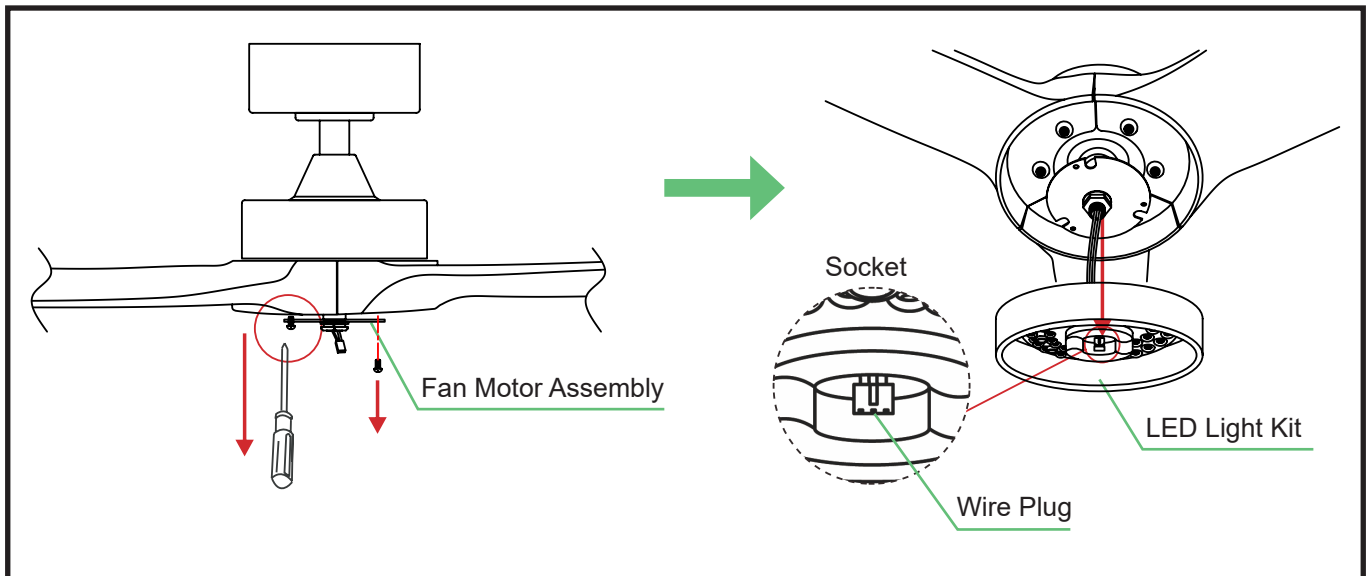

4. Position the light's mounting plate against the motor, aligning their holes.
5. Replace and tighten the removed bolts to secure the LED light kit into place.
6. Fit the shade onto the LED light kit, rotating until it sits well on the tabs of the light plate.

Caution

Ensure the shade is firmly connected to avoid loosening during use.

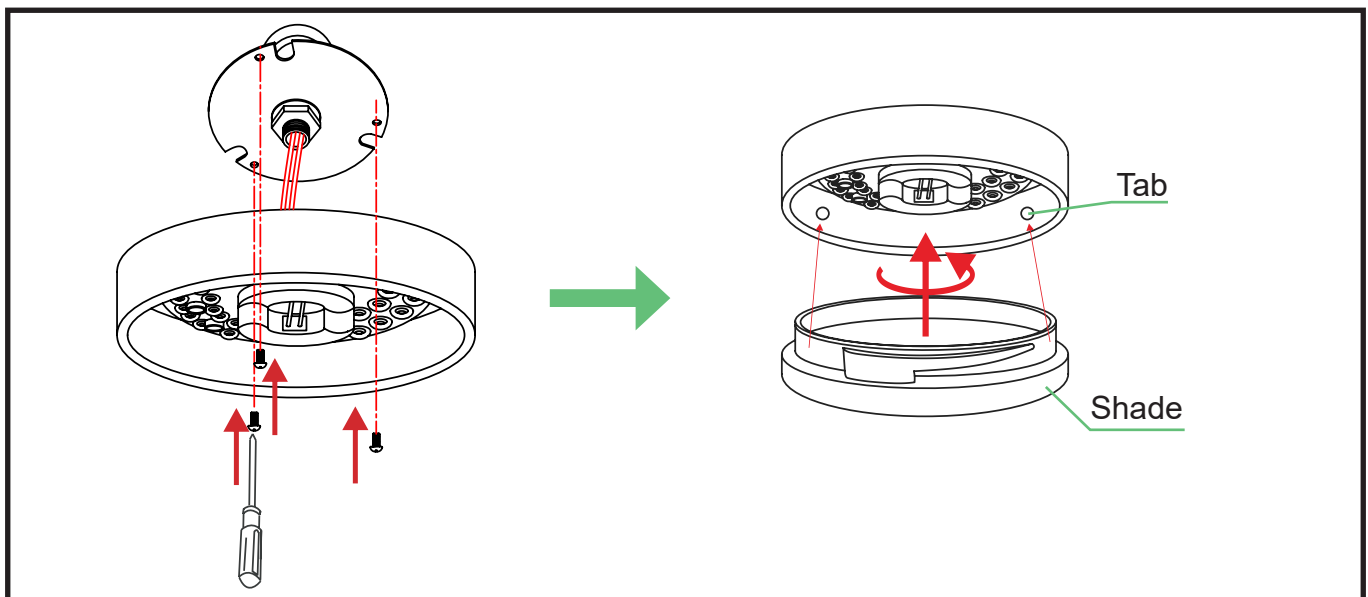

Remote Control


Introduction

This remote operates within a range of **30 feet (10 m)** using two **1.5 V AAA** batteries (**not included**).

If the remote is not to be used for a prolonged period, it is recommended to remove the batteries for better service life.

If needed, install the remote holder on a wall or any other suitable flat surface using appropriate fasteners.


- For wood or other thinner and weaker surfaces, use the provided steel screws and plastic anchors.
- For reinforced concrete or similar surfaces, use anchor bolts for best results.

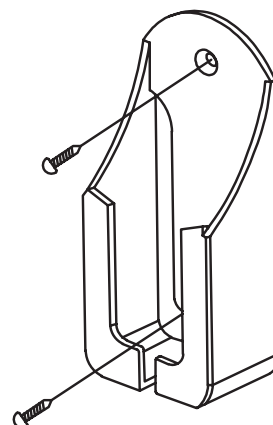

Note: If remote control fails, refer to **Non-Rotation of the Fan Blades in Troubleshooting** on **Page 21**.

Function Keys

Key	Function(s)
	Press to turn the fan and light off.
	Press to turn the LED light on or off and switch color temperatures.
	Press to run the fan in preset mode, automatically cycling through speed levels up and down.
	Hold for 5 seconds to connect the remote control to the fan.
	Press to turn the fan on or off.
1-6	Press to run the fan at the selected speed level, from 1 (low) to 6 (high).
1H	Press to set the fan to turn off automatically after 1 hour.
2H	Press to set the fan to turn off automatically after 2 hours.
4H	Press to set the fan to turn off automatically after 4 hours.
8H	Press to set the fan to turn off automatically after 8 hours.
	Switch to mute or unmute the fan.
F/R	Switch to reverse the fan's rotation direction.

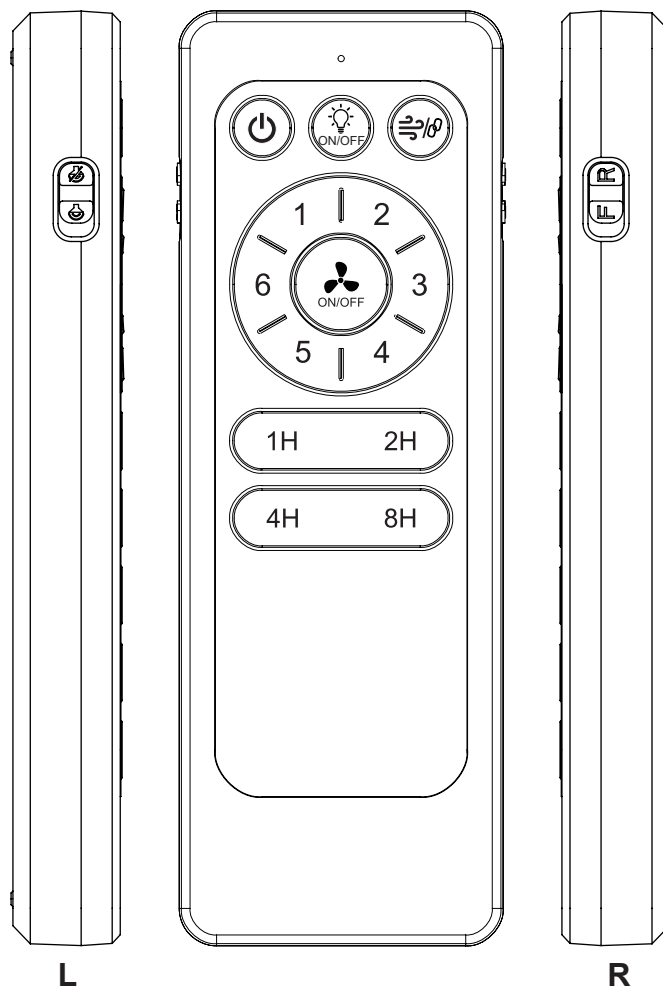


Remote Control

Color Temperature

The LED light has 3 color settings: warm white (3000 K), cool white (4500 K), and daylight (6000 K).

1. Press  to turn on the LED light.
2. Press  again within 10 seconds to switch to the next color temperature in sequence.
3. Press  to turn off the LED light more than 10 seconds.

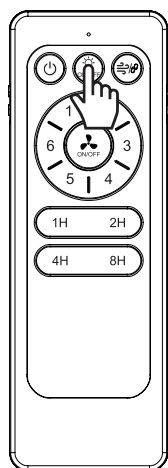

ON → 3000 K → 4500 K → 6000 K → OFF


Note: If the light remains off for more than 10 seconds, it will turn on with the last used color temperature (memory function).

Troubleshooting

Caution


DO NOT bend the blades when addressing any issues.

Problems	Solutions
Non-Rotation of the Fan Blades	Reconnect the fan to power. Within 10 seconds, hold  until you hear 3 consecutive beeps to successfully pair the remote control with your fan.
	Replace the remote control's batteries with new identical ones.
	Check that all parts are correctly installed and no fasteners interfere with the movement of the blades.
	Cut off power to the fan and correct the electrical connections.
	Contact customer service to replace the faulty remote control with a new identical one and pair it with your fan as described above.

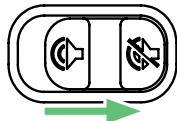Problems	Solutions
Excessive Noise	Upon initial installation, allow 24 hours of use for the fan to break itself in.
	Check that all fasteners are securely tightened.
	Ensure the canopy is not too close to your ceiling.
	Cut off power to the fan and check that the wire nut connections are not rubbing against one another or the inner housing.
	If you have installed a solid-state variable-speed control, cut off power to the fan and disconnect this control from the device. See if using the remote resolves the problem, which can be caused by erratic signals from such controls.
Excessive Wobble	Check that all fasteners are securely tightened.
	Use the provided balancing kit (a clip and two weights) to adjust the blades if their tips are found to have an unequal distance from the ceiling while well fastened.
	1. Turn off the fan. 2. Place the balancing clip on the trailing edge of a blade. 3. Restart the fan to see if the wobble has eased.
	If it has not, shut off the fan, move the clip to the next blade, and reactivate the fan. Repeat this until finding the blade that is unbalanced.
	4. Deactivate the fan again, relocate the clip on the unbalanced blade, and restart the fan. - Repeat this until the fan no longer wobbles. 5. Press a weight on the top of the blade, making it well aligned with the clip. 6. Restart the fan and confirm balance. 7. Stop the fan and remove the clip.
Beeping During Any Adjustments	Exchange the positions of the blades.
	This is normal and needs no repairs. To mute the beeps, toggle the mute switch. 

Disposal

Electrical products should not be disposed of with household products. In the EU and UK, according to the European Directive 2012/19/EU for the disposal of electrical and electronic equipment and its implementation in national laws, used electrical products must be collected separately and disposed of at the collection points provided for this purpose. Locations in Australia, Canada, and the United States may have similar regulations. Contact your local authorities or dealer for disposal and recycling advice.

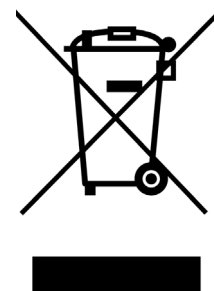

Customer Support and Policies

30-Day Return Policy

We offer a 30-Day Return Policy to ensure your satisfaction. If you're not happy with your purchase, contact our customer service within 30 days of purchase to initiate the return process. Please return the item in its original condition with all the packaging and accessories. Once we receive it, we'll promptly process your refund, making the return hassle-free and smooth. Your satisfaction is our priority.

1-Year Warranty

Enjoy peace of mind with our 1-Year Warranty. Your product is covered against material and workmanship defects for a full year from the purchase date. If any issues arise, contact our customer service, and we'll quickly address them. Again, your satisfaction is our priority.

Guaranteed Response Within 24 Hours

We are dedicated to ensuring your satisfaction. At Vonluce, no inquiries are left unanswered for more than 24 hours. We treat each inquiry with the utmost seriousness, going above and beyond to provide a satisfactory response.

