


Electric Bed

ORIGINAL INSTRUCTION MANUAL

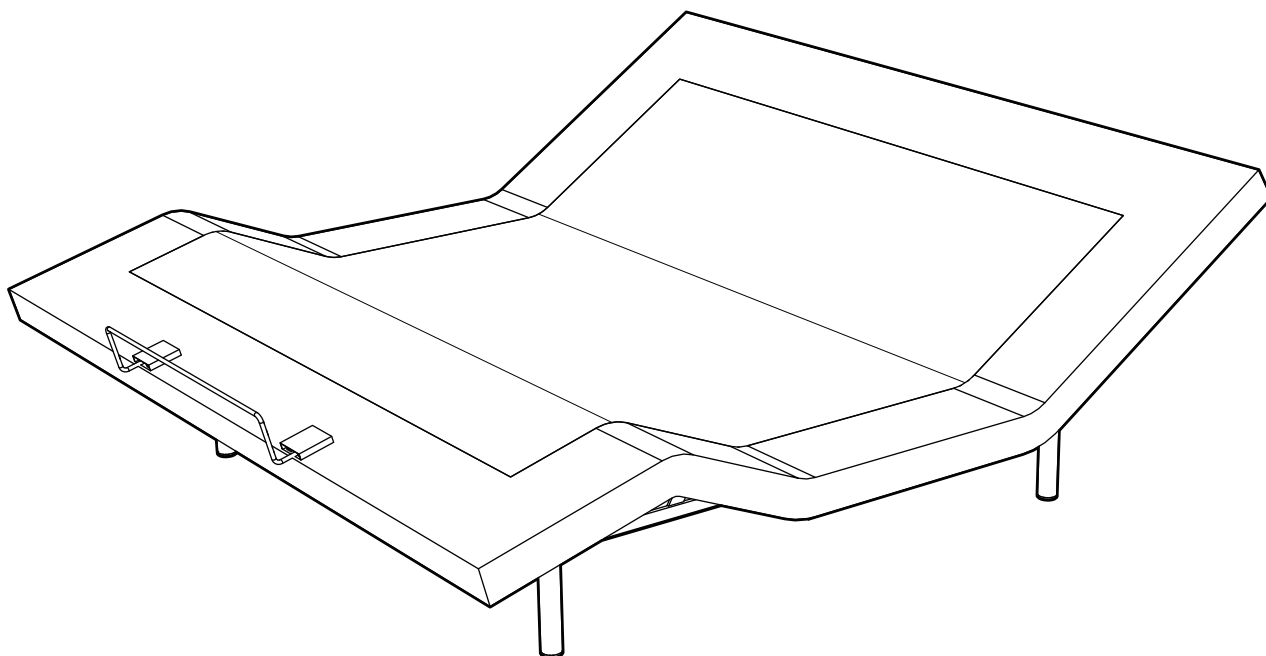

If you have problems with assembly, please contact us to get the installation video.

DEAR CUSTOMER,

Thank you for choosing our product. Please read this manual carefully before assembling or using the product, to avoid damage caused by improper use. If the product is passed on to third parties, this manual has to be passed on along with the product. For any question don't hesitate to contact us.

WARNING



Read these instructions carefully and retain them for future use.
If this product is passed to a third party, then these instructions must be included.

⚠ WARNING To reduce the risk of burns, fire, electric shock, or injury to persons:

- Read all instructions before using the furnishing.

⚠ DANGER To reduce the risk of electric shock; always unplug this-furnishing from the electrical outlet before cleaning or servicing.

⚠ WARNING Risk of injury! Keep children away from the foot support.

⚠ CAUTION Risk of injury and fire! Connect only to the furnishing specified in this instruction manual.

- Unplug from outlet before putting on or taking off parts.
- Close supervision is necessary when this furnishing is used by, or near children, invalids, or disabled persons.
- Use this furnishing only for its intended use as described in these instructions. Do not use attachments not recommended by the manufacturer.
- Never operate this furnishing if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return the furnishing to a service center for examination and repair.
- Keep the cord away from heated surfaces.
- Never drop or insert any object into any opening.
- Do not use outdoors.
- Do not operate where aerosol (spray) products are being used or where oxygen is being administered.
- To disconnect, turn all controls to the off position, then remove plug from outlet.
- To reduce the risk of electric shock, this furnishing has a polarized plug (one blade is wider than the other). This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install the proper outlet. Do not change the plug in any way.

Battery Warnings

- Exhausted batteries should be immediately removed from the remote control and properly disposed.

SAVE THESE INSTRUCTIONS

Intended Use

- This furnishing is a motorized bed base with a wireless remote intended to hold and adjust the position of a mattress.
- This furnishing is intended for household use only. It is not intended for medical or therapeutic use.
- This furnishing is intended to be used in dry indoor areas only.
- No liability will be accepted for damages resulting from improper use or non-compliance with these instructions.

Before First Use


- Check the furnishing for transport damages.
- Remove all the packing materials.
- Before connecting the furnishing to the power supply, check that the power supply voltage and current rating corresponds with the power supply details shown on the specifications.
















⚠ DANGER Risk of suffocation! Keep any packaging materials away from children - these materials are a potential source of danger, e.g. suffocation.


























PARTS LIST

Please check that you have all the parts listed before you start assembling, if you do find that something is missing, do not continue assembly, please contact us immediately.

NOTE: Please do not tighten all the hardware completely until the entire assembly is completed!

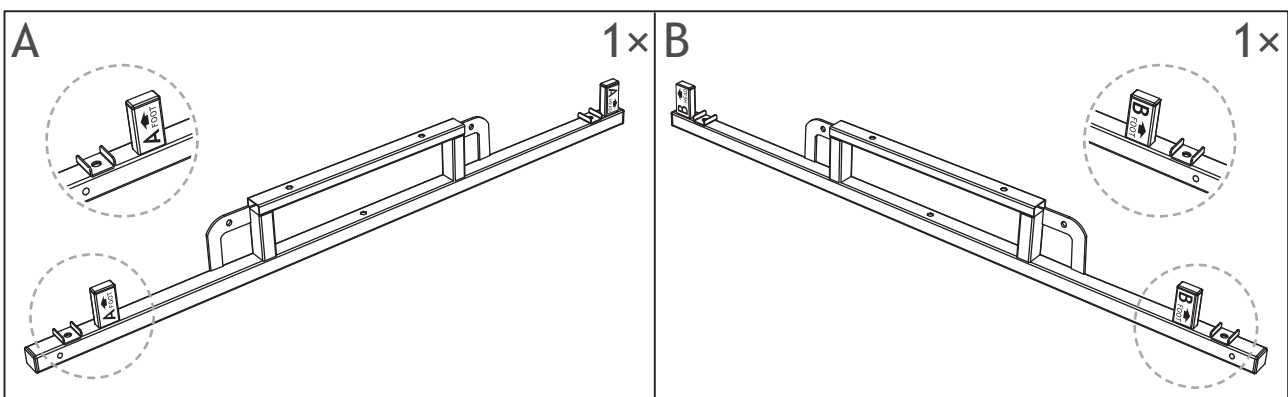

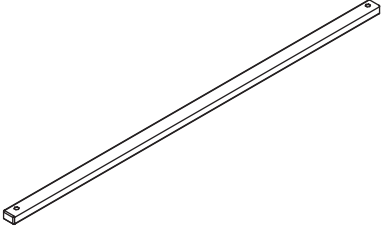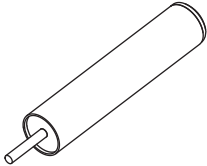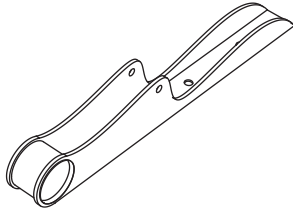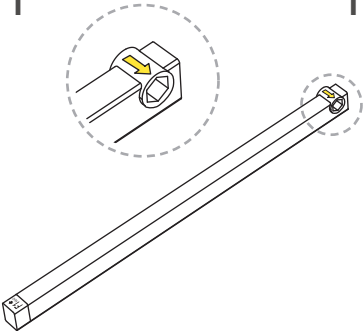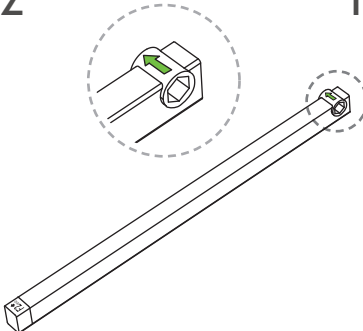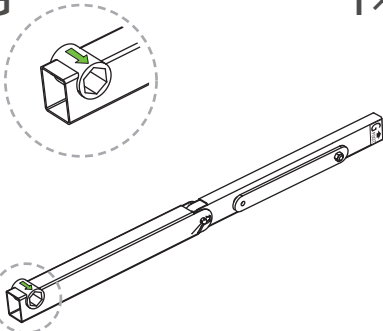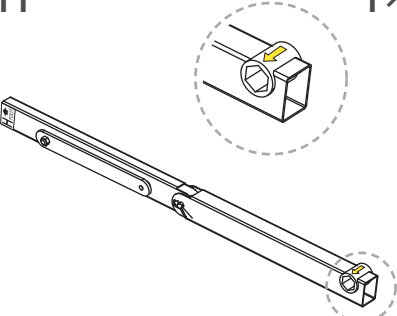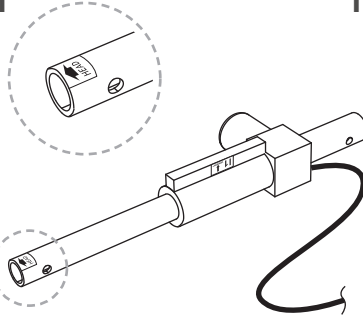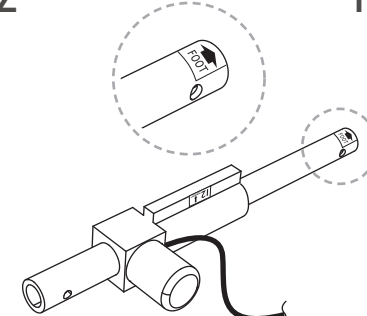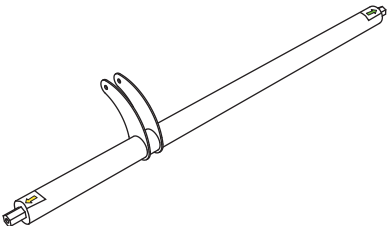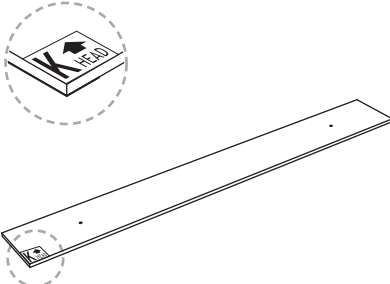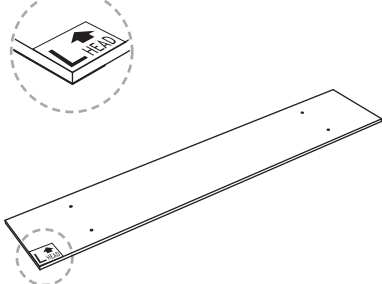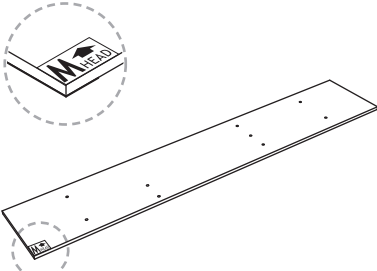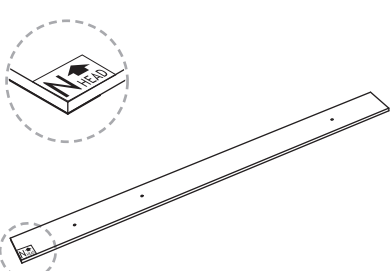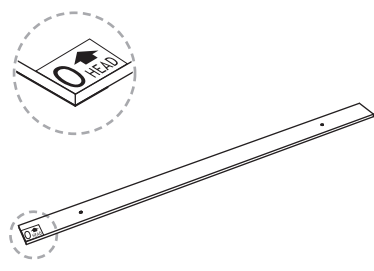C 2× 	D 4× 	E 2× 
F1 1× 	F2 1× 	G 1× 
H 1× 	I1 1× 	I2 1× 
J 2× 	K 1× 	L 1× 
M 1× 	N 1× 	O 2× 

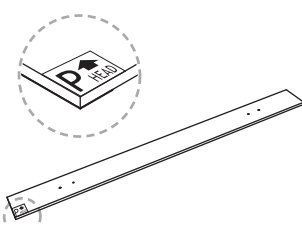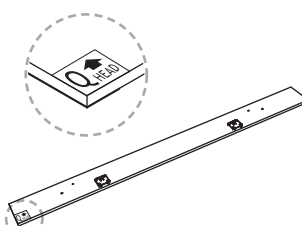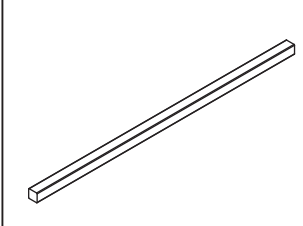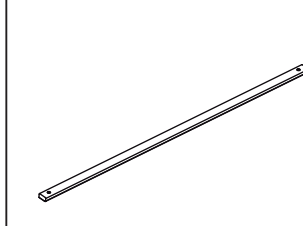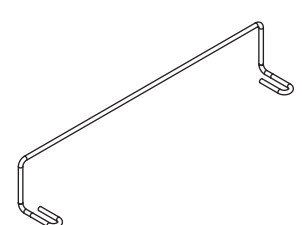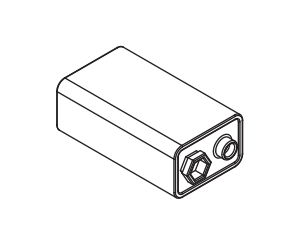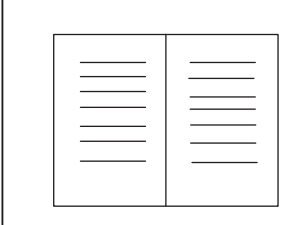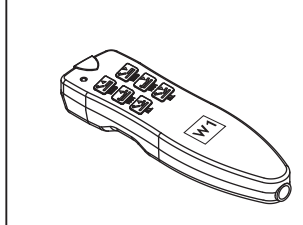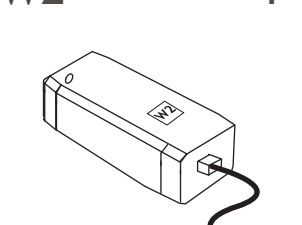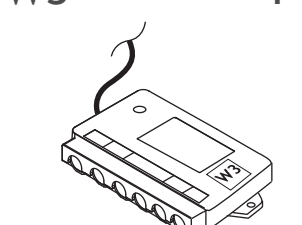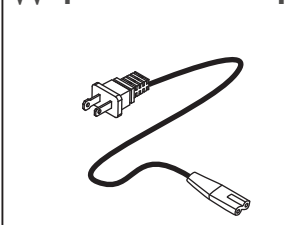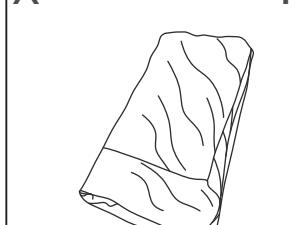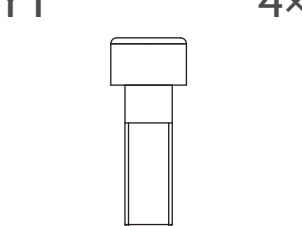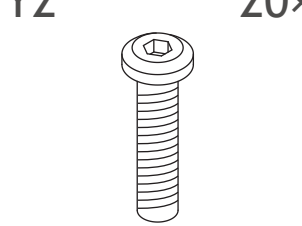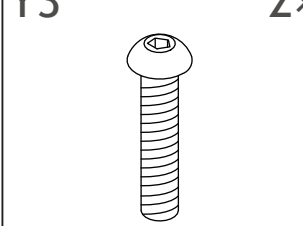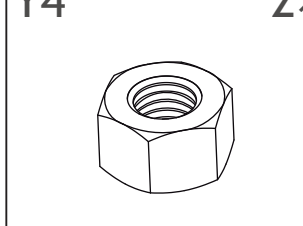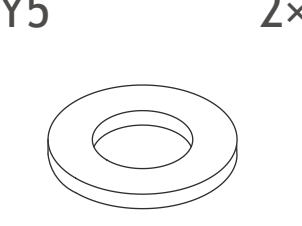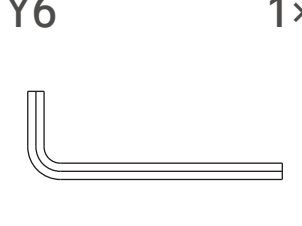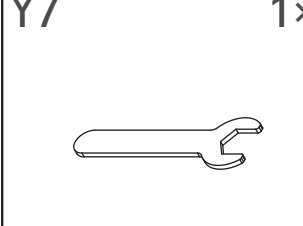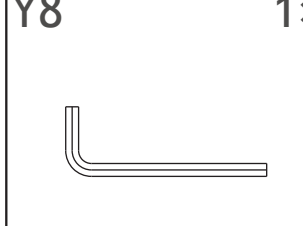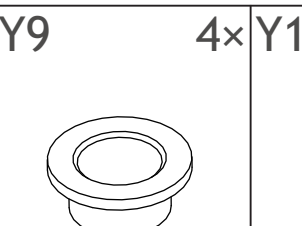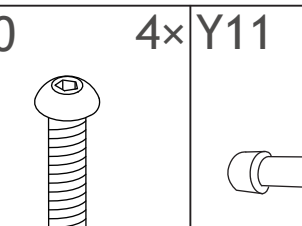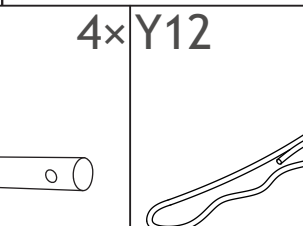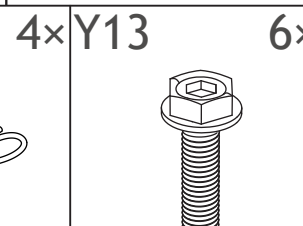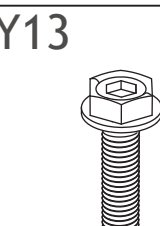
<div>P</div> <div></div> <div>1×</div>	<div>Q</div> <div></div> <div>1×</div>	<div>R</div> <div></div> <div>4×</div>	<div>S</div> <div></div> <div>2×</div>
<div>T</div> <div></div> <div>1×</div>	<div>U</div> <div></div> <div>3×</div>	<div>V</div> <div></div> <div>1×</div>	<div>W1</div> <div></div> <div>1×</div>
<div>W2</div> <div></div> <div>1×</div>	<div>W3</div> <div></div> <div>1×</div>	<div>W4</div> <div></div> <div>1×</div>	<div>X</div> <div></div> <div>1×</div>
<div>Y1</div> <div></div> <div>M10×30</div> <div>4×</div>	<div>Y2</div> <div></div> <div>M8×35</div> <div>20×</div>	<div>Y3</div> <div></div> <div>M8×55</div> <div>2×</div>	<div>Y4</div> <div></div> <div>M8</div> <div>2×</div>
<div>Y5</div> <div></div> <div>PLASTIC GASKET</div> <div>2×</div>	<div>Y6</div> <div></div> <div>8mm</div> <div>1×</div>	<div>Y7</div> <div></div> <div>13mm</div> <div>1×</div>	<div>Y8</div> <div></div> <div>6mm</div> <div>1×</div>
<div>Y9</div> <div></div> <div>FINGER COVERS</div> <div>4×</div>	<div>Y10</div> <div></div> <div>M8×30</div> <div>4×</div>	<div>Y11</div> <div></div> <div>4×</div>	<div>Y12</div> <div></div> <div>4×</div>
	<div>Y13</div> <div></div> <div>M8×18</div> <div>6×</div>		

FEATURES

Actuator rating:	24V, 3A (Max)
Max.weight limit:	900 Lbs
Dorsal angle:	0-65°
Leg angle:	0-35°




Please try not to sit on the 4 corners of the bed to avoid the bed frame tipping or turning over.

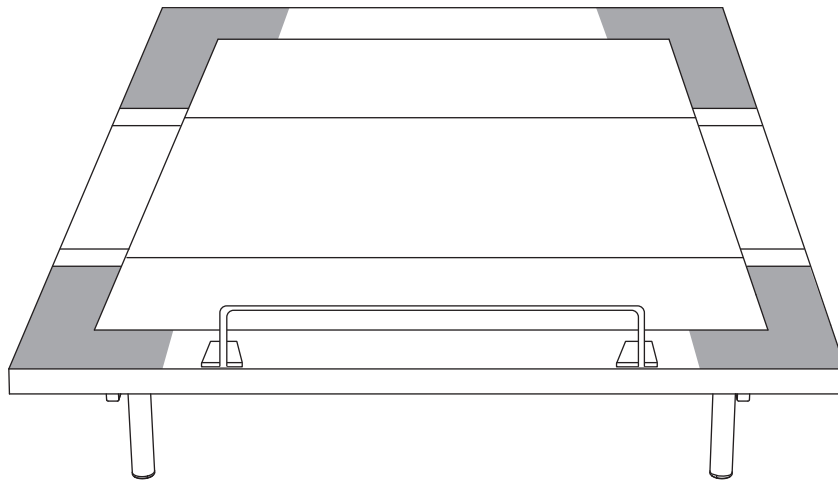


ASSEMBLY

Search "STBB022" on **YouTube**
for the installation video of this bed.





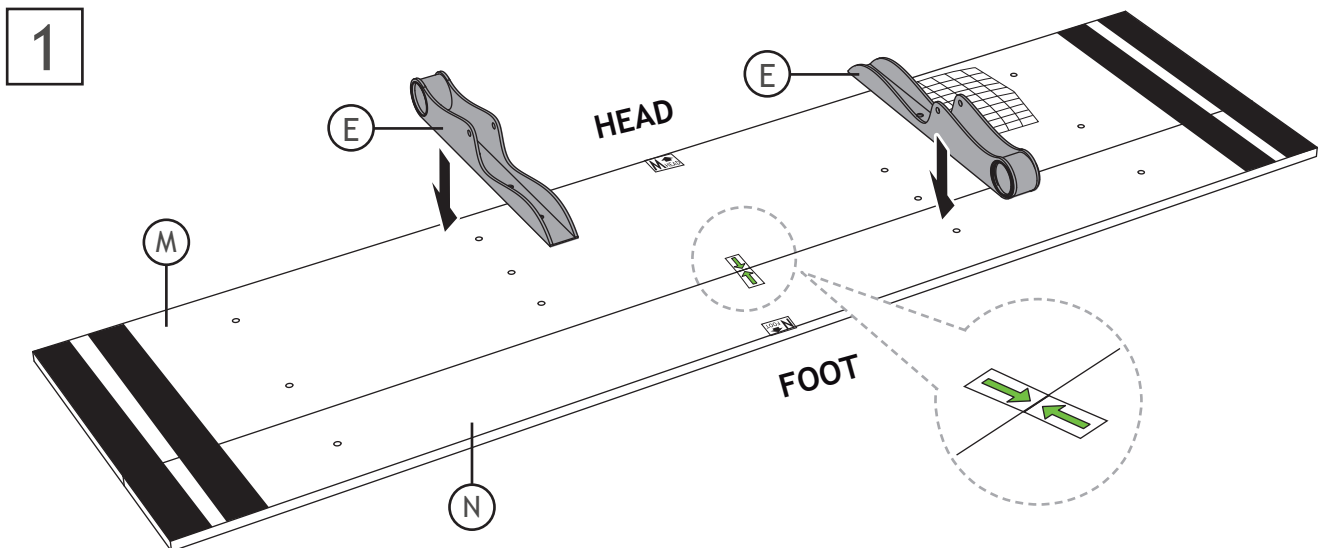


2

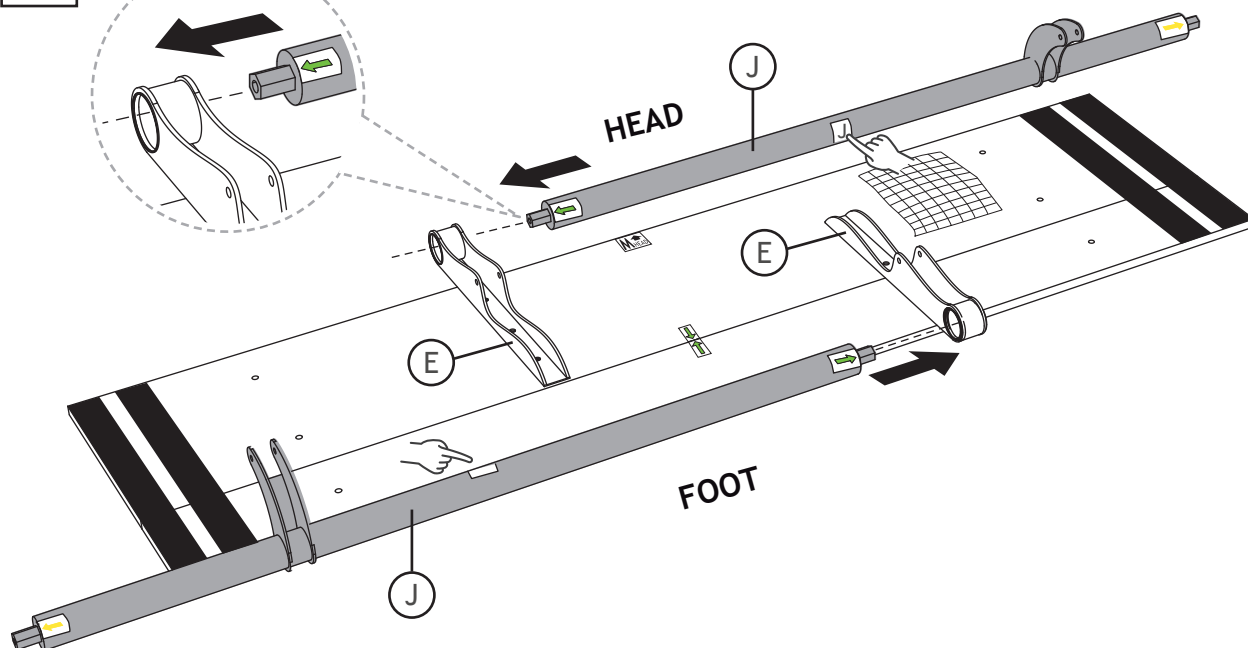



Note:

1. Insert the **part J** with the green arrow mark into the **part E**.
2. Make sure that the label of **part J** is placed inward.

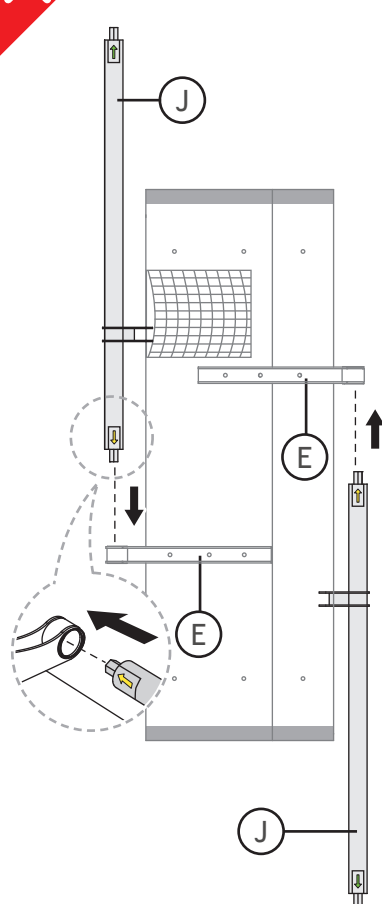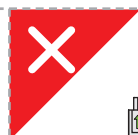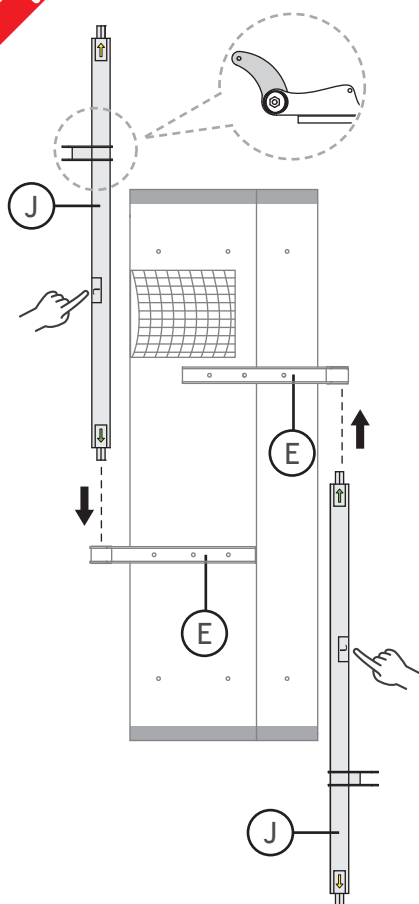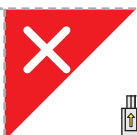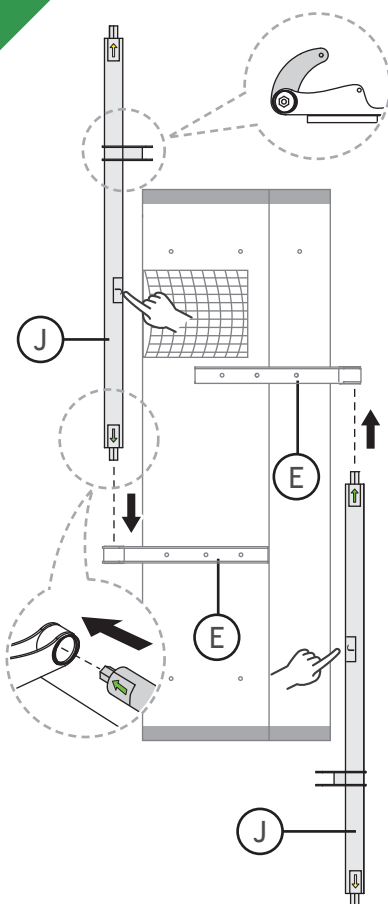

3

Make sure the direction and color of the arrows on **part J** are same.

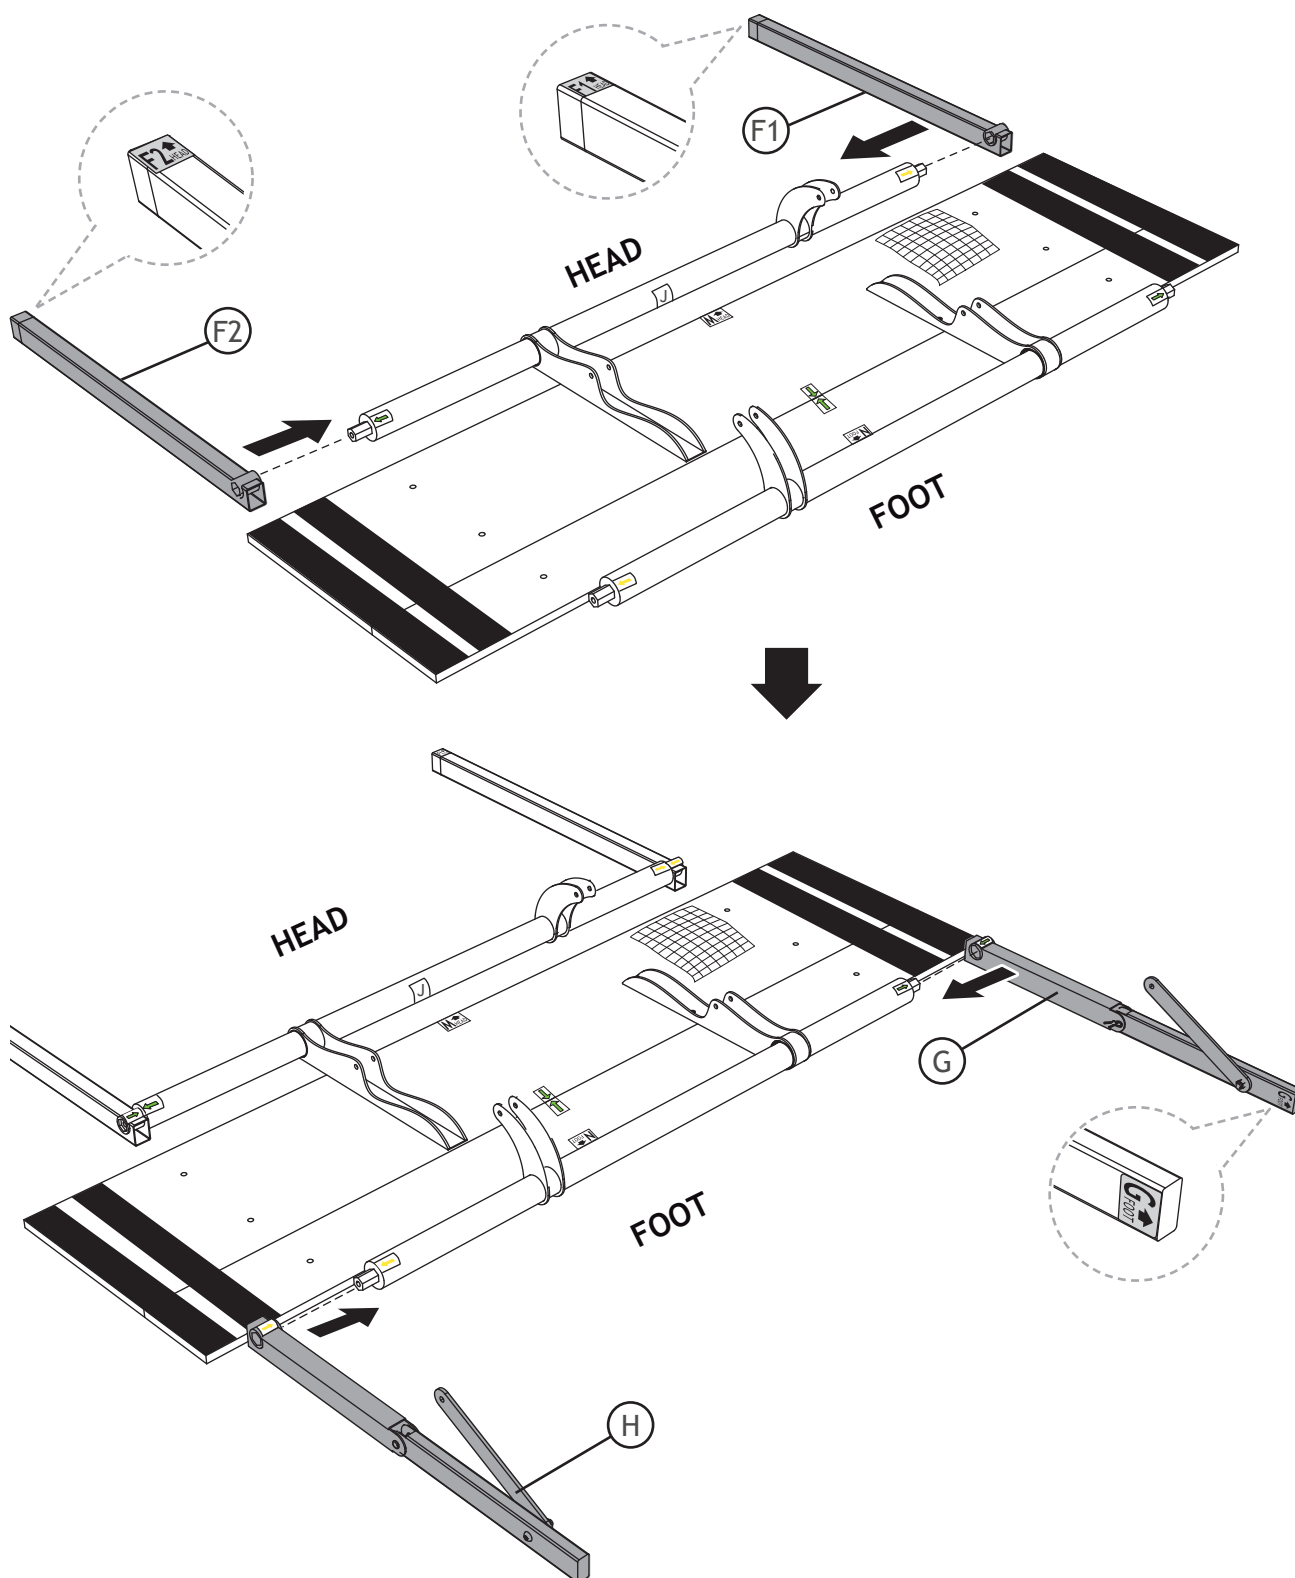
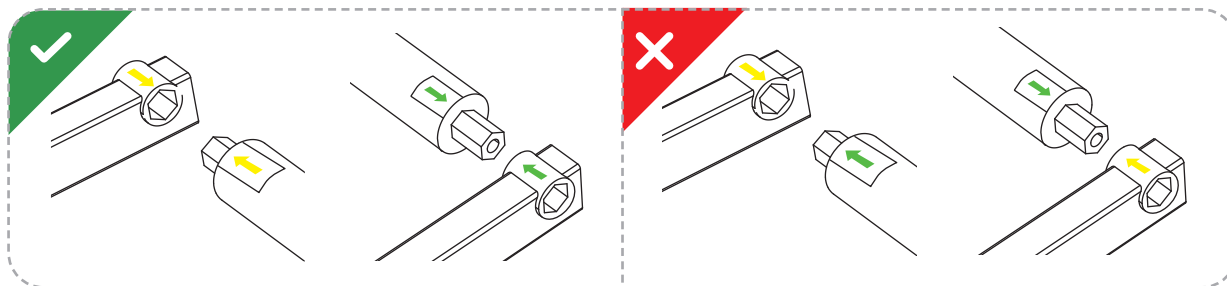


4





Note:

Please keep this piece of iron facing outwards before installation.

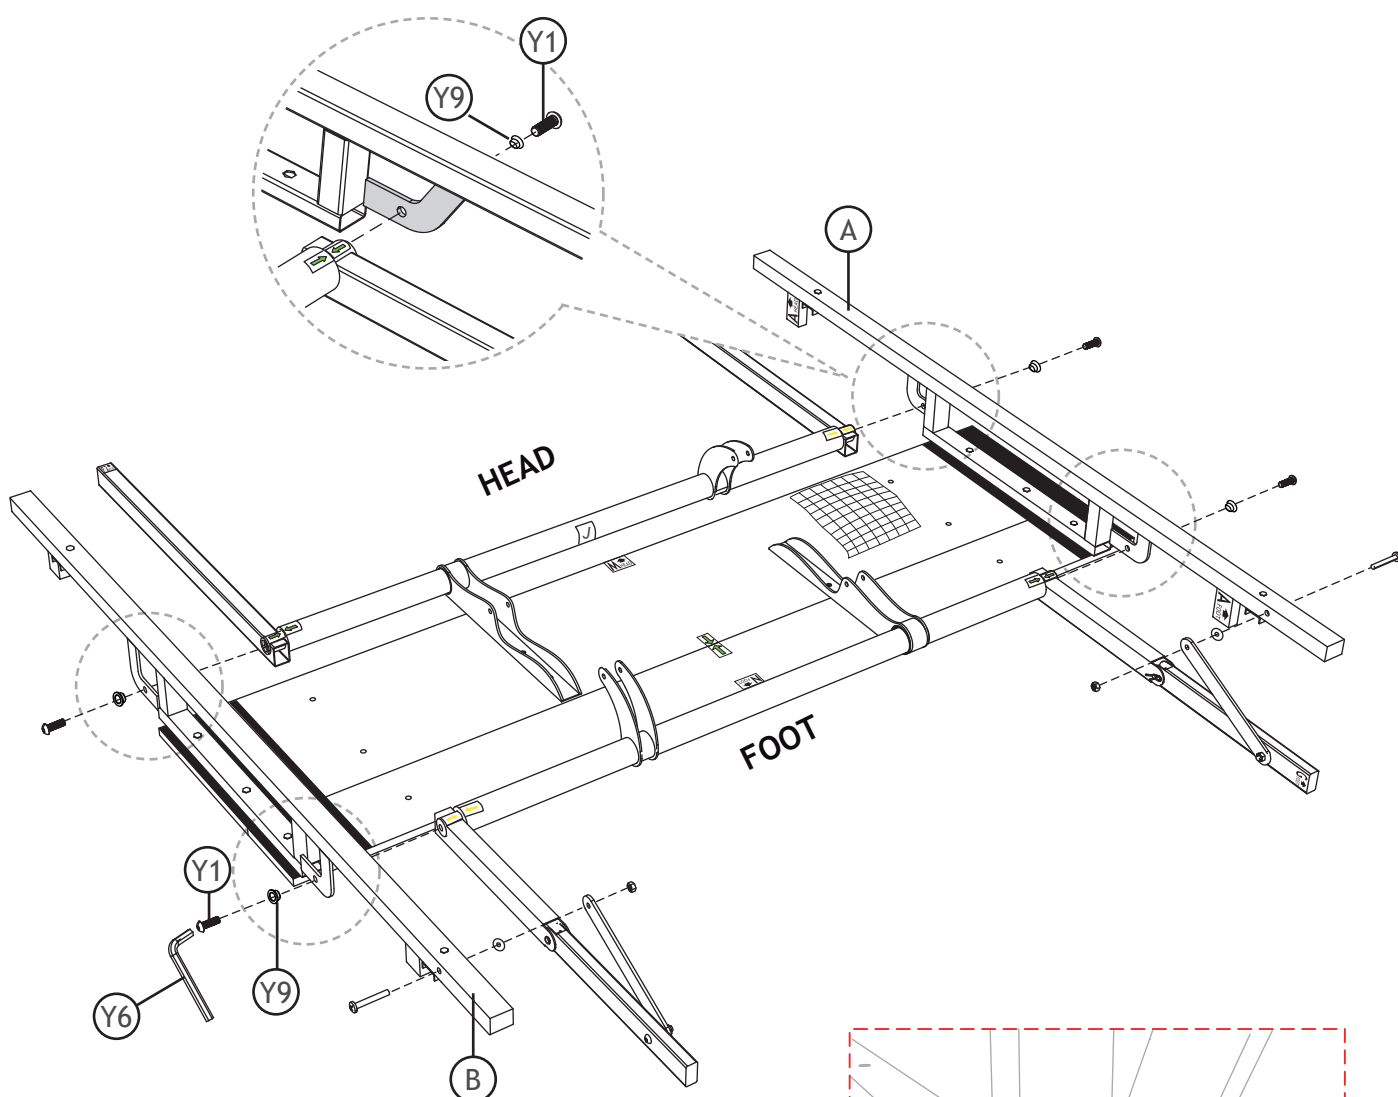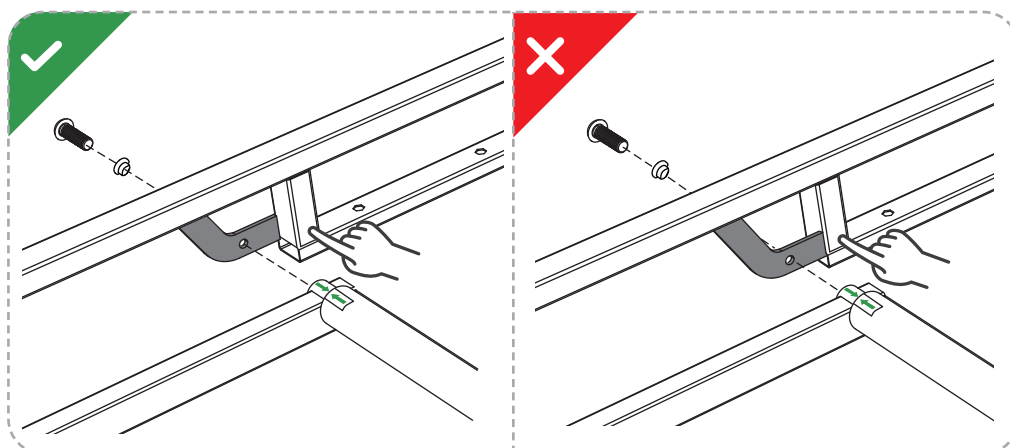


DO NOT TIGHTEN THE SCREWS(Y1).

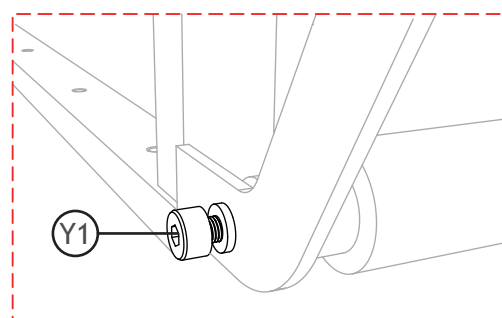

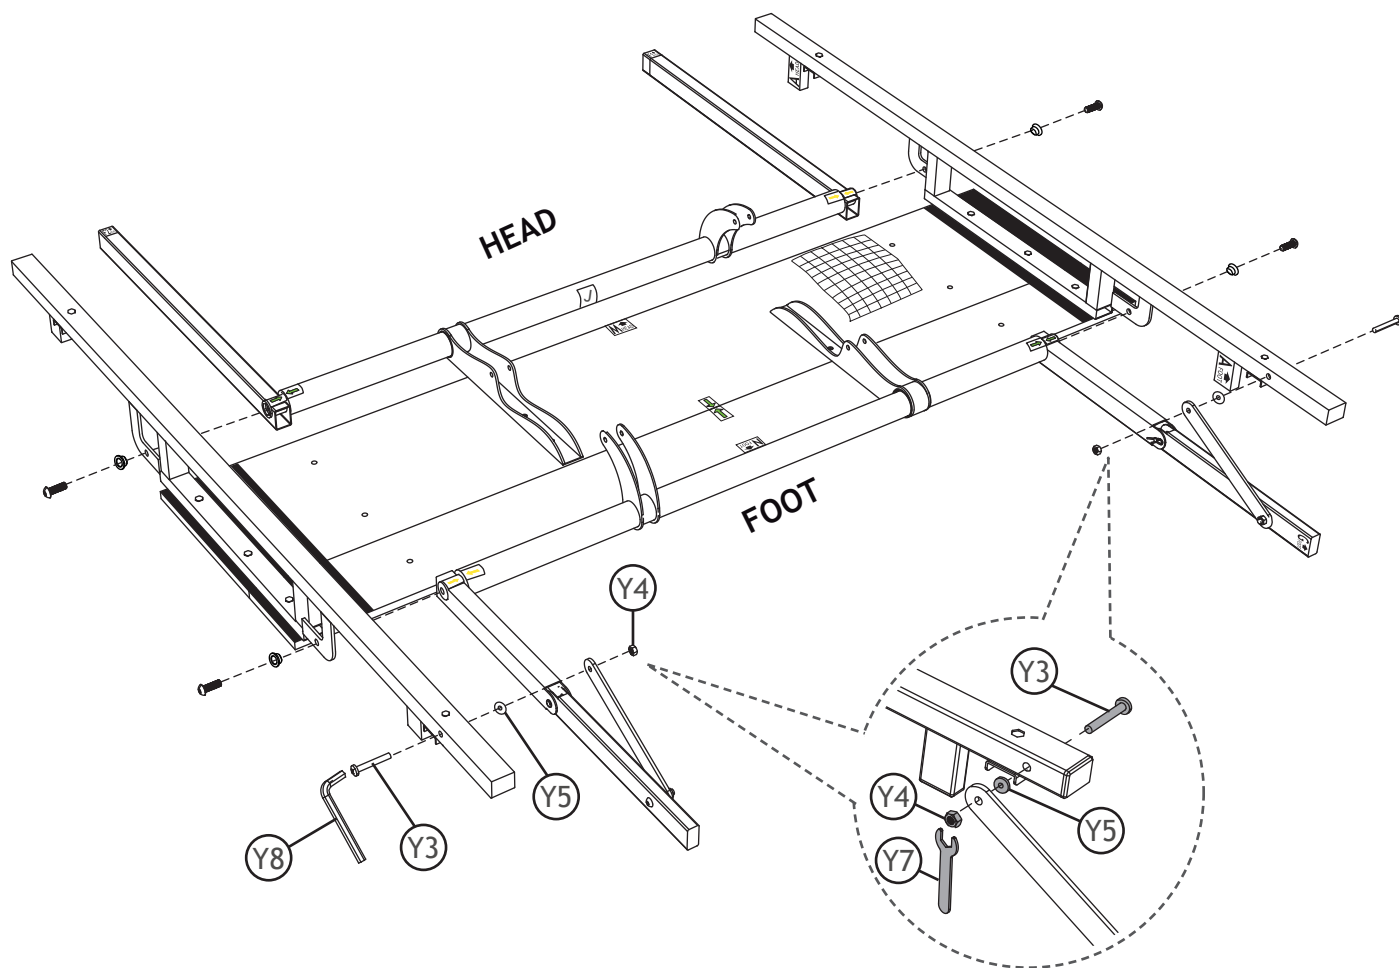


5

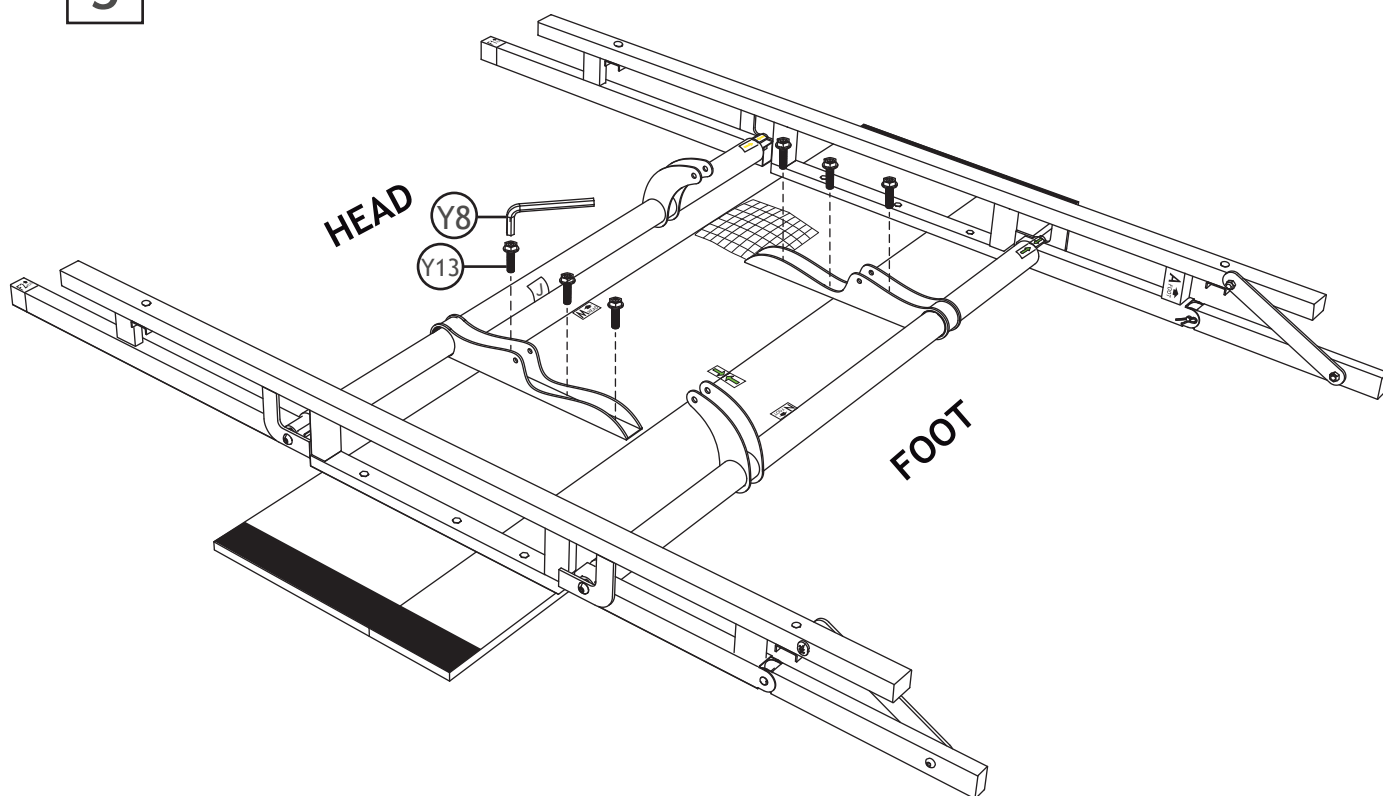

6


Be sure to tighten the 4 legs.

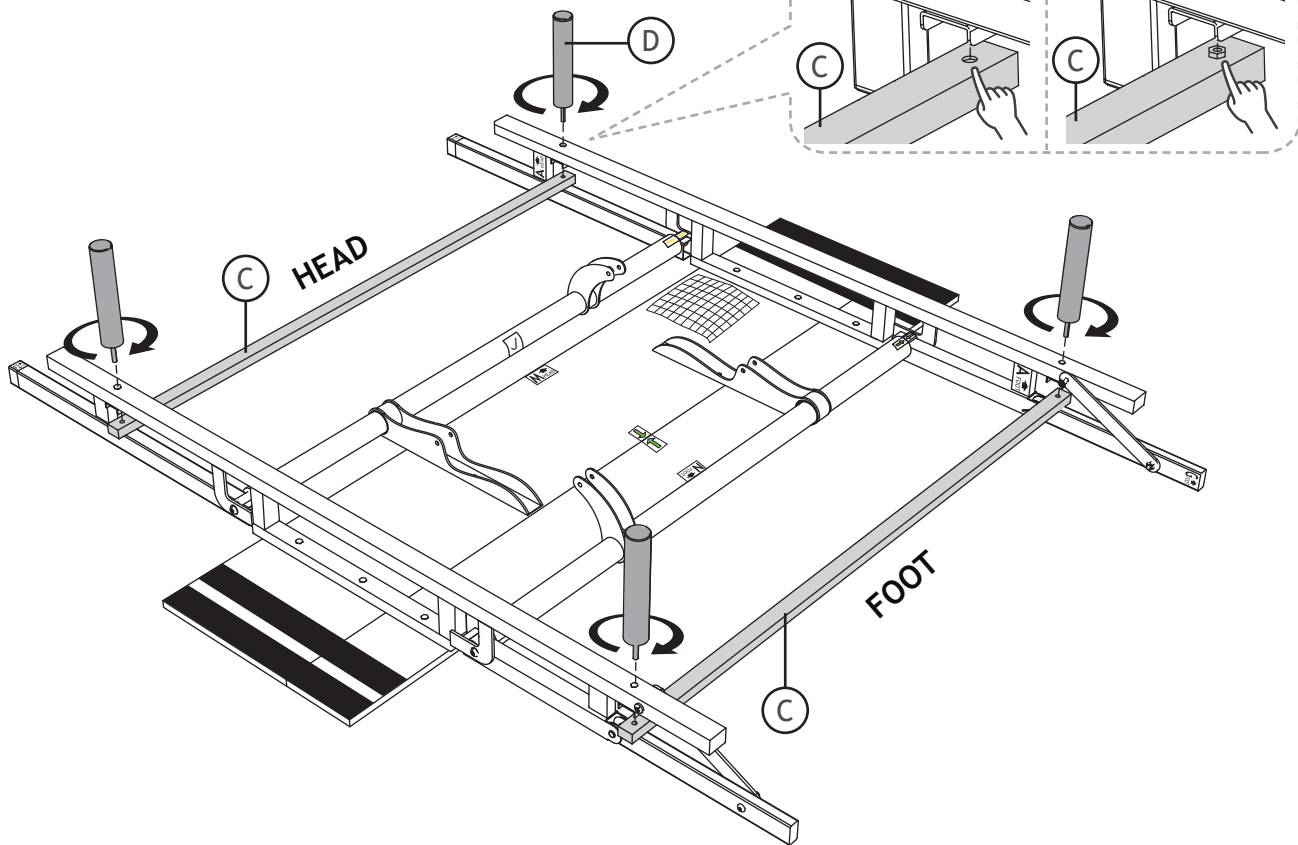

7




Pay attention to the direction of the label on part I2.

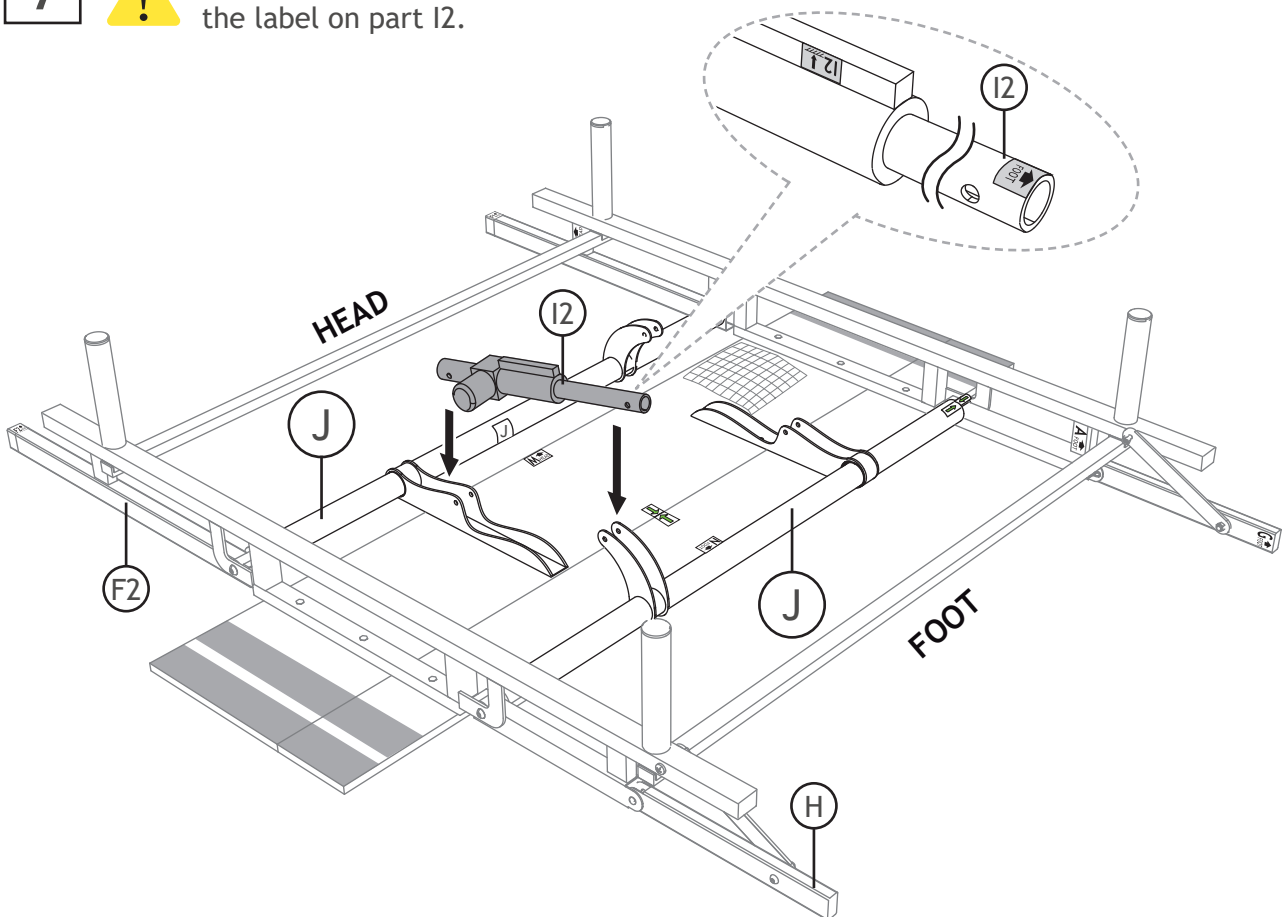


8



Pay attention to the direction of the label on part I1.


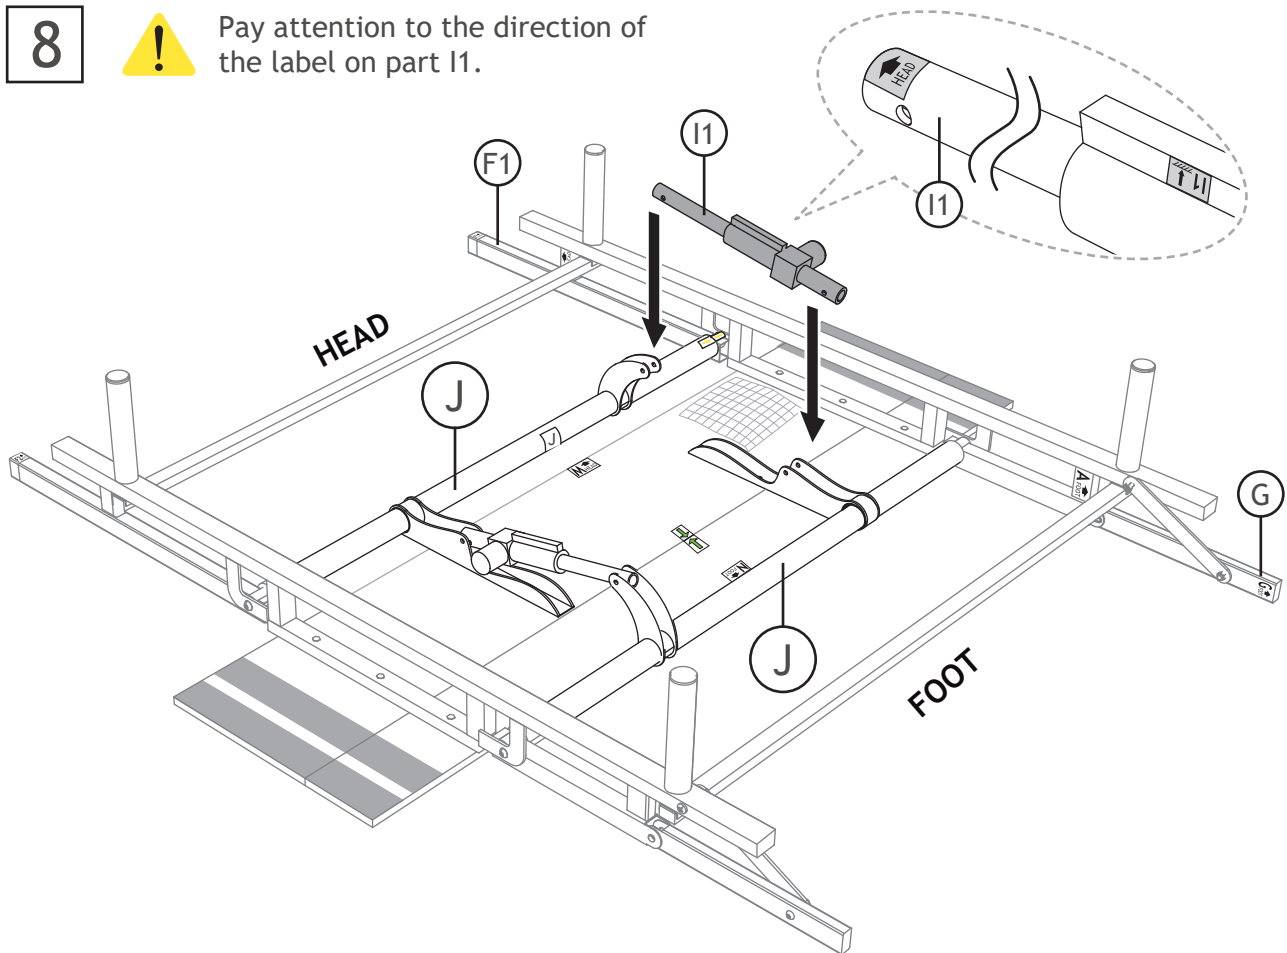


9

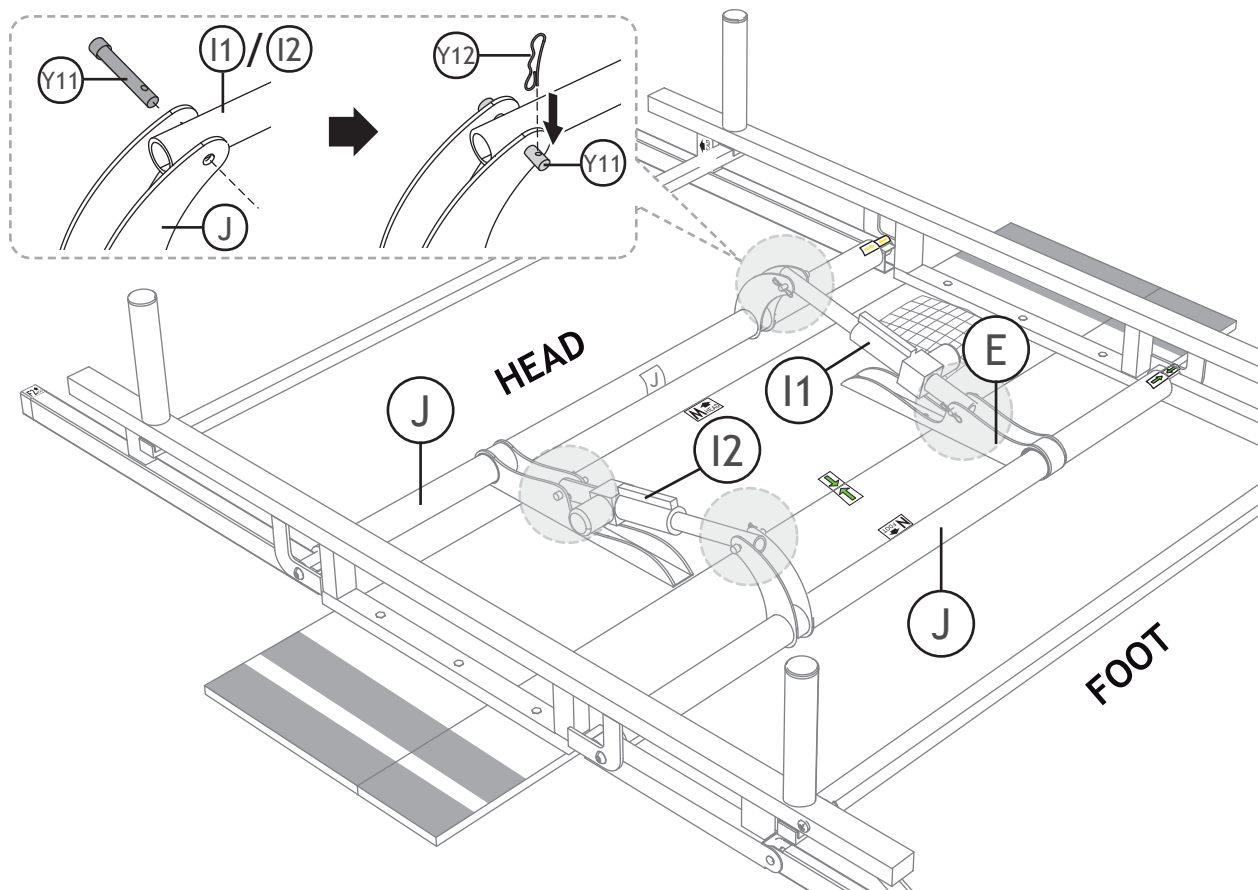




Make sure that the pin in the plug is aligned with the hole of the motor.

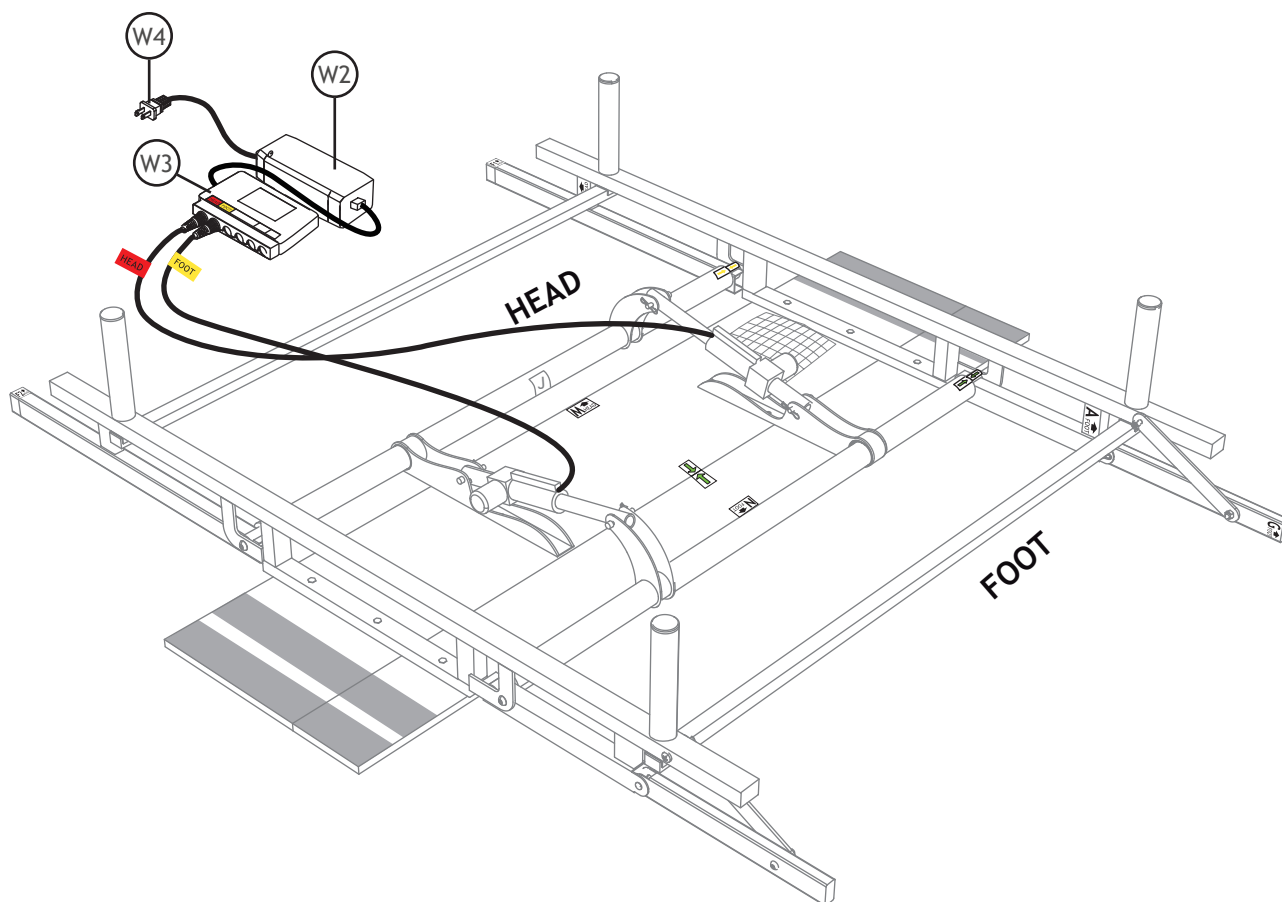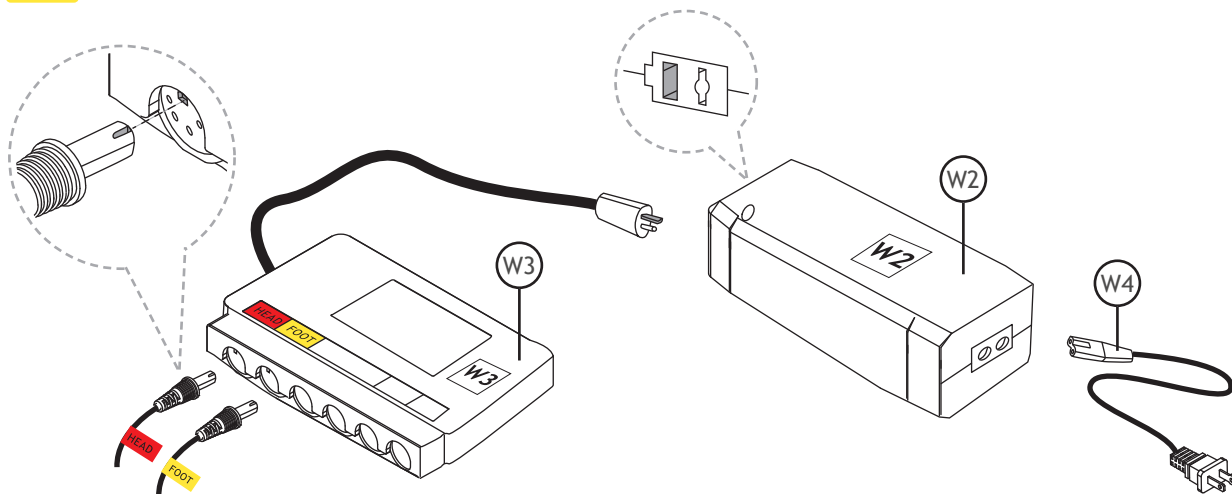


11


1. Put the controller in a mesh bag.
2. At least two people are required to turn the adjustable bed base over.

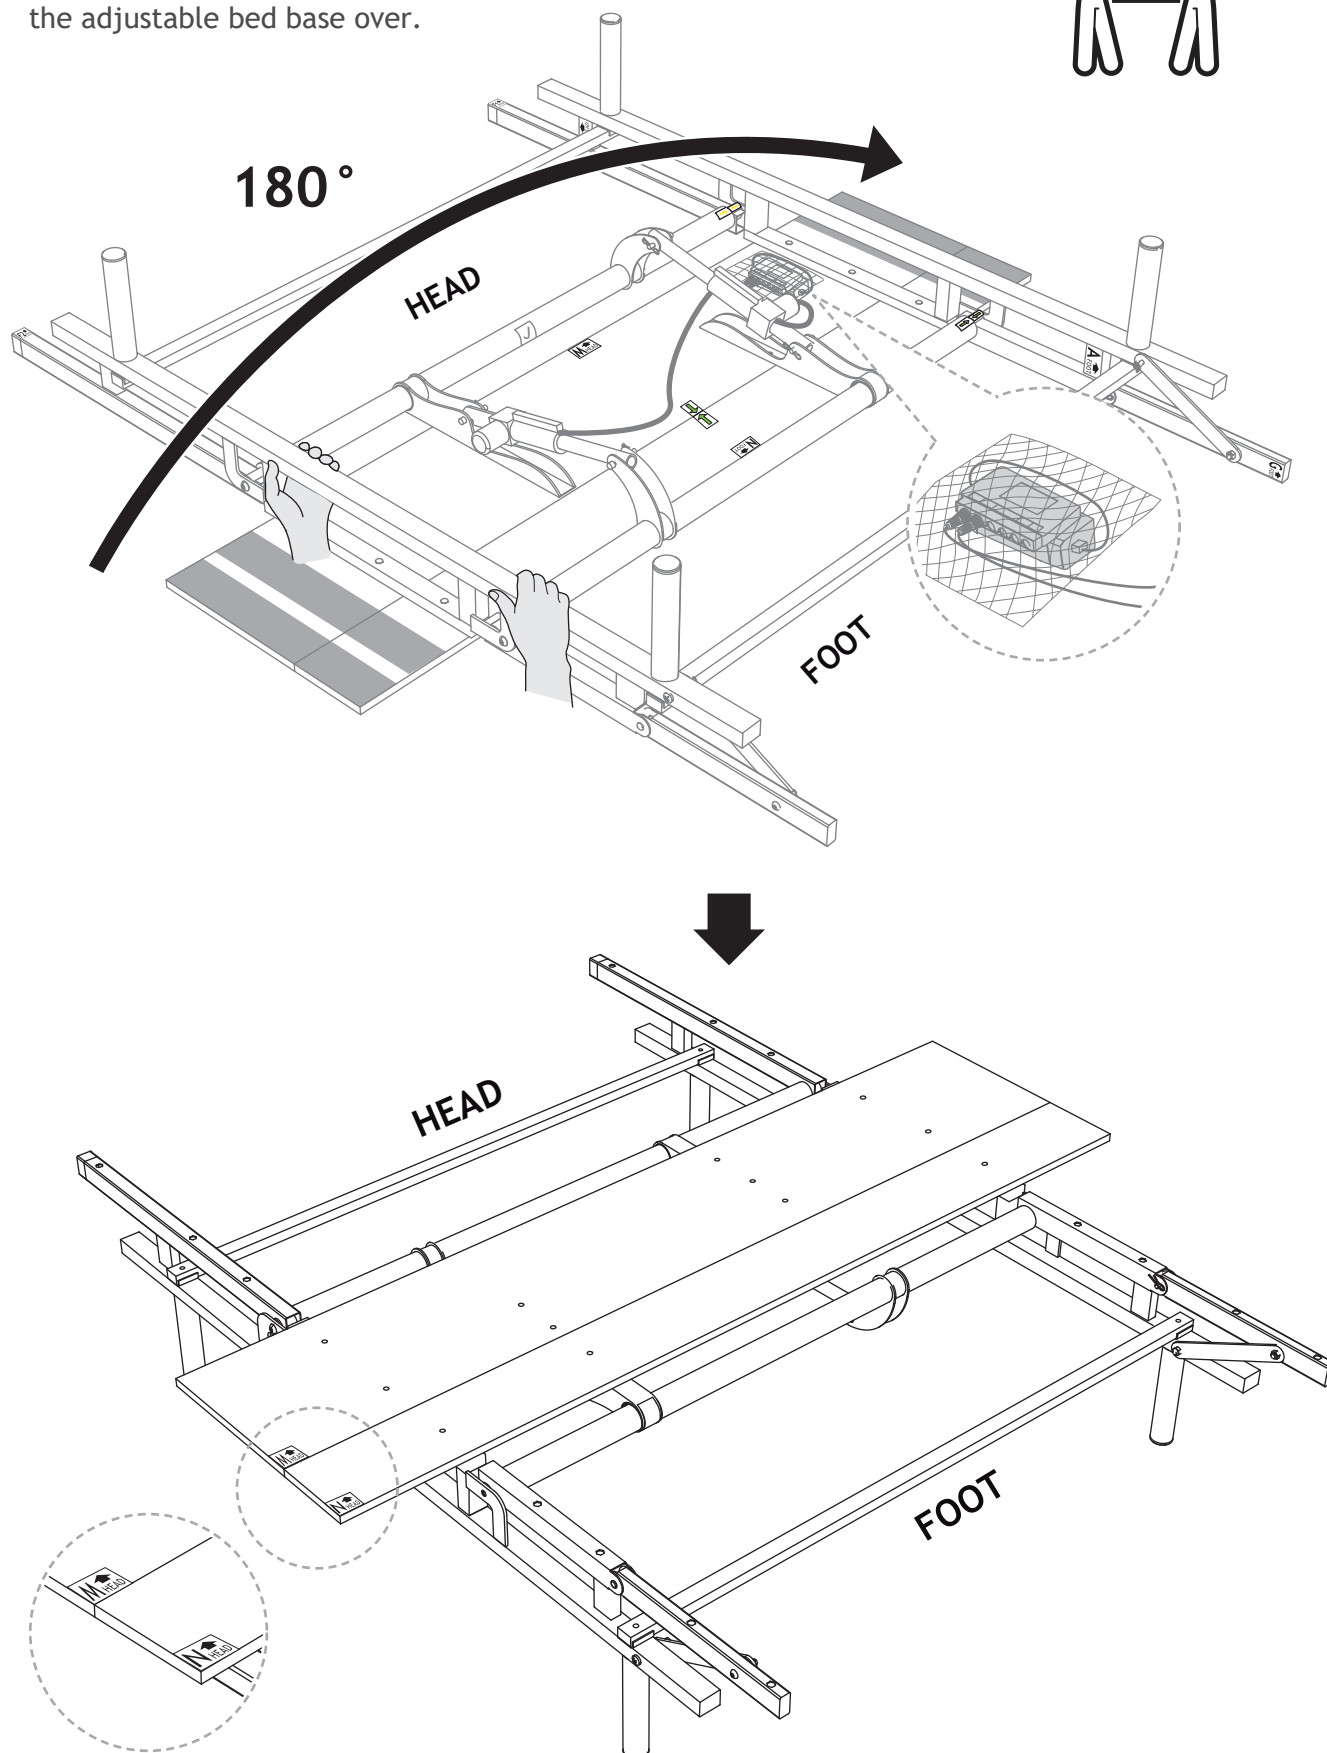


12

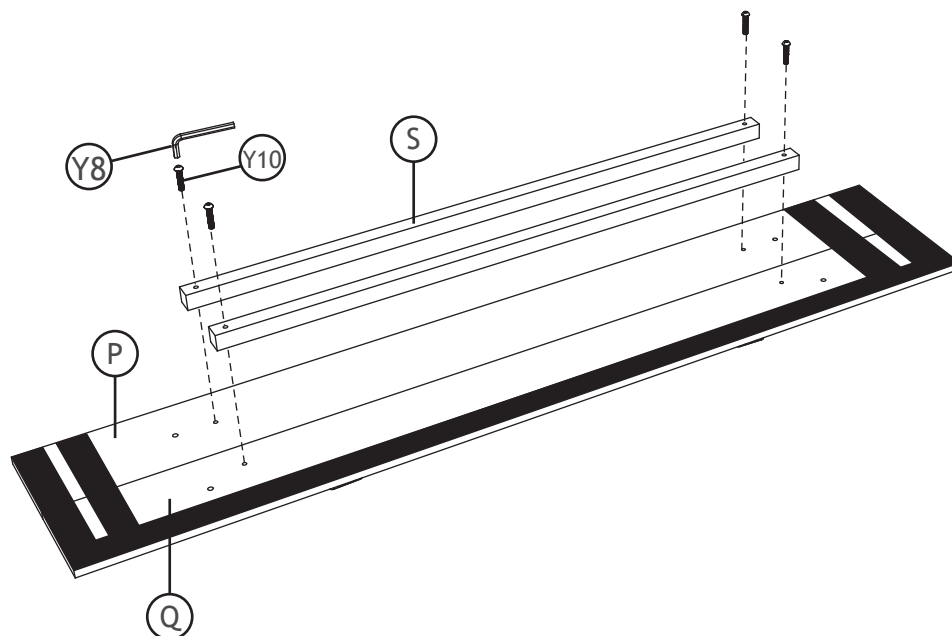

13

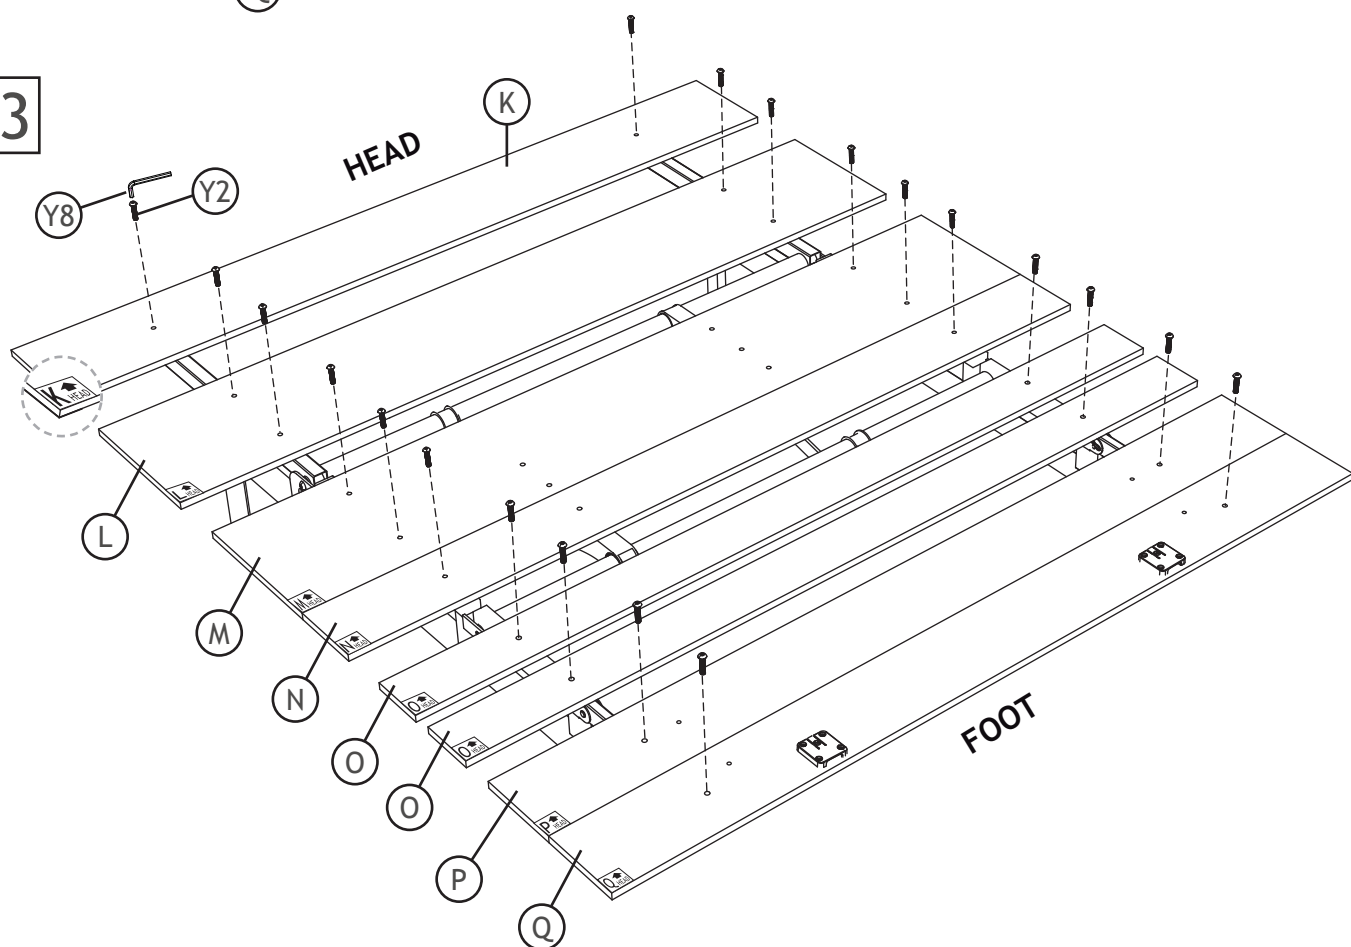


TIGHTEN ALL THE SCREWS(Y1) MENTIONED IN STEP 4.

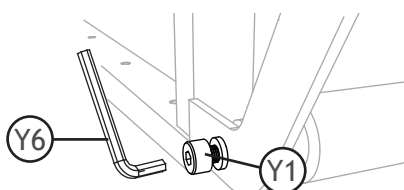


≤30 inches

≤30 inches

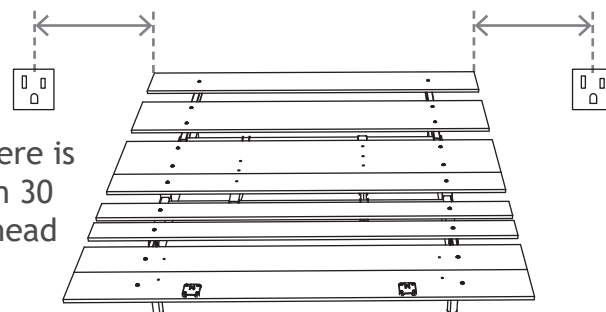

Ensure that there is a socket within 30 inches of the head of the bed.

Attach Girth Edge

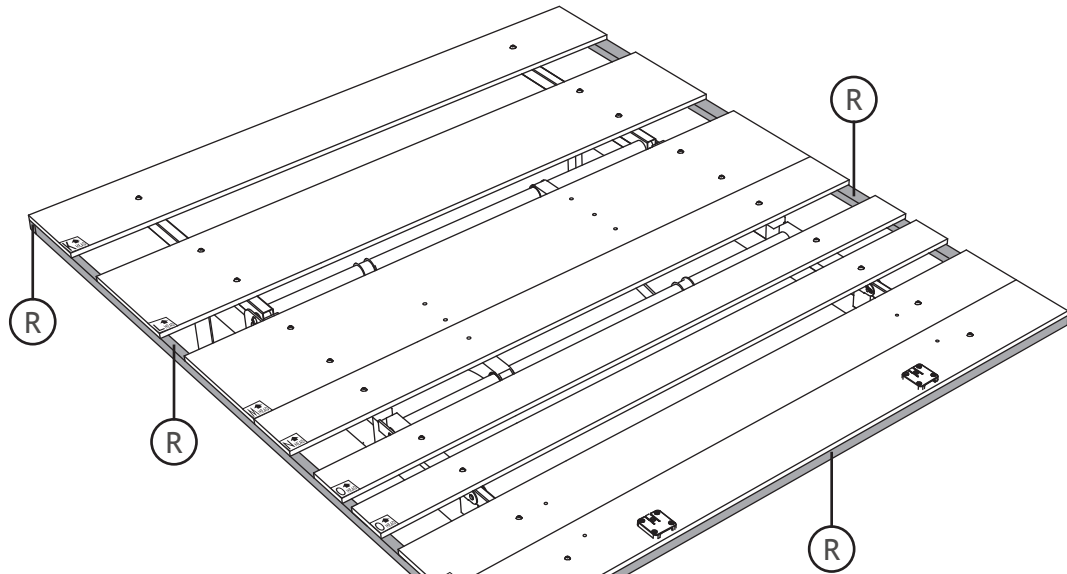


Note: Attach 4 girth edges under the board edges.

Wireless Remote Instruction



Brief introduction of XYH11RF remote control(W1) panel function and install the battery.

NOTE: Energize motor: keep bee-beep for 3 seconds at the loudest voice.

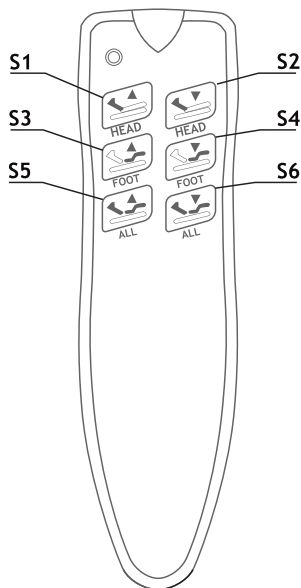

S1 : head up
S2 : head down
S3 : leg up
S4 : leg down
S5 : head & foot up
S6 : head & foot down

The S1-S6 are inching type, release to stop.

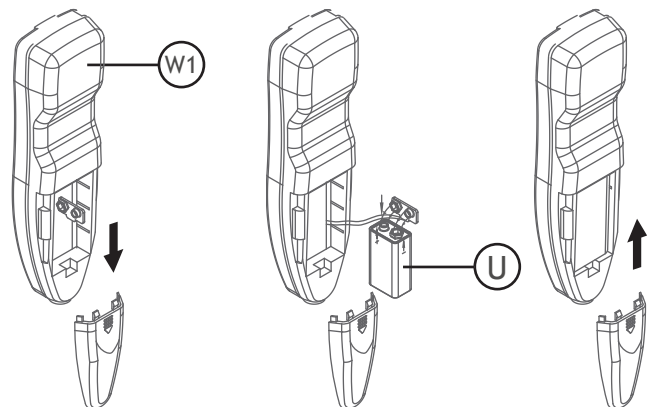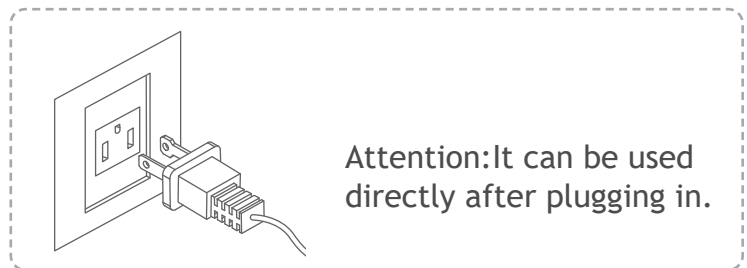


Please install the battery(U) as shown, pay attention to the battery polarity.

Put On The Cloth


Before put on cloth cover, push S5 button till the bed elevate to the highest degree.

1

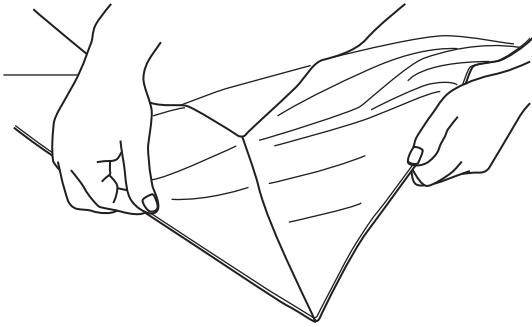


Starting at the end of the bed, cover the left corner first.

2

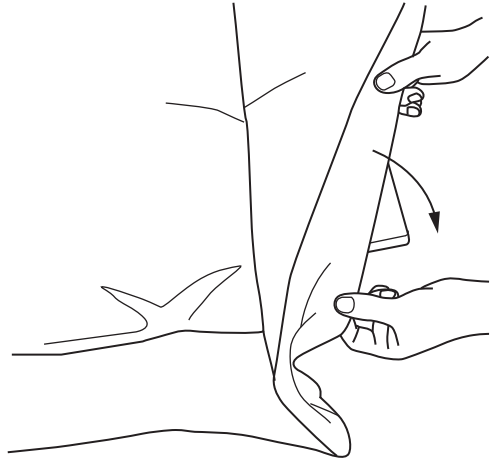


Spread out the cover and insert the board into the edge of the right side cover.

3

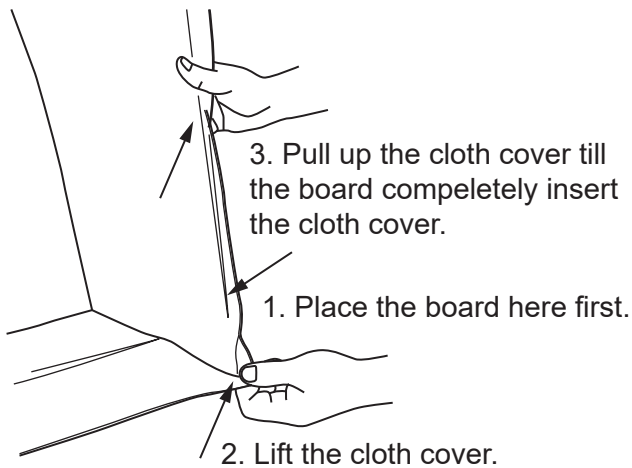



Lift the cloth cover and pull up the cloth cover till the board insert the cloth cover completely as 2 and 3 in picture. Cover the head of the bed as Step 1-3.

4

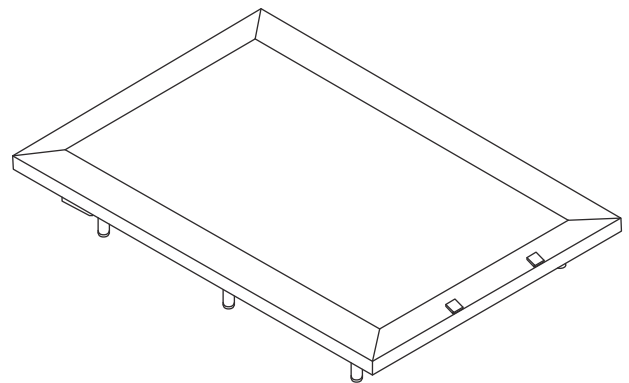


Push S6 button to flat the bed. Attach the velcro tape of the cloth cover to the board.
Attention: Do not pull the face cover horizontally.


Put on cloth cover

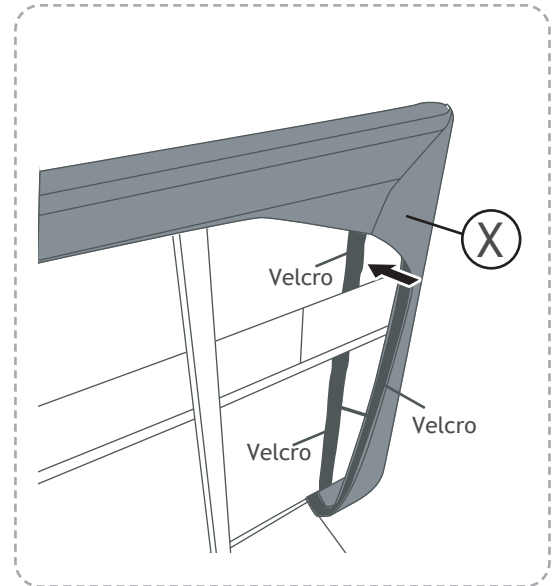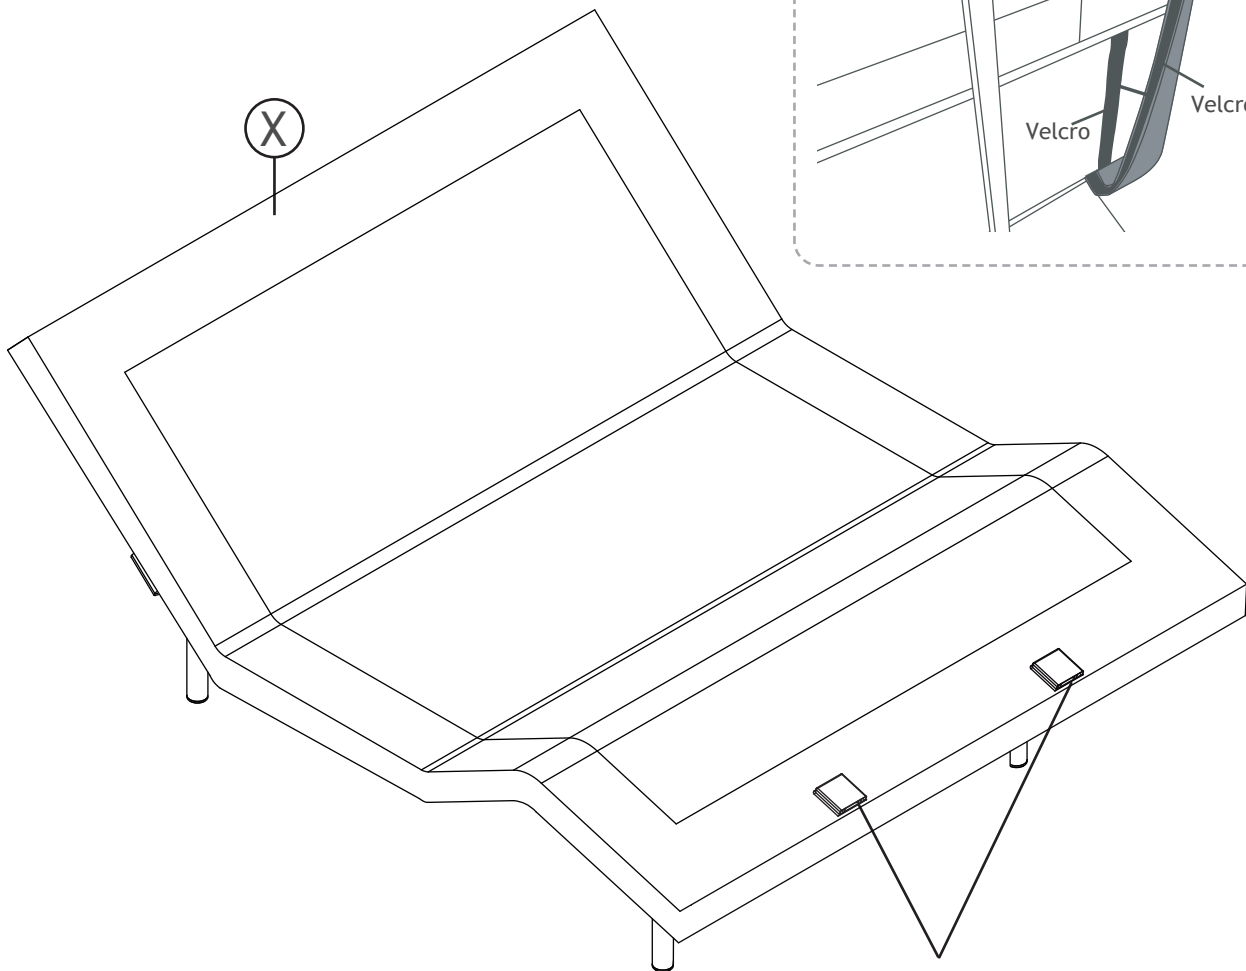



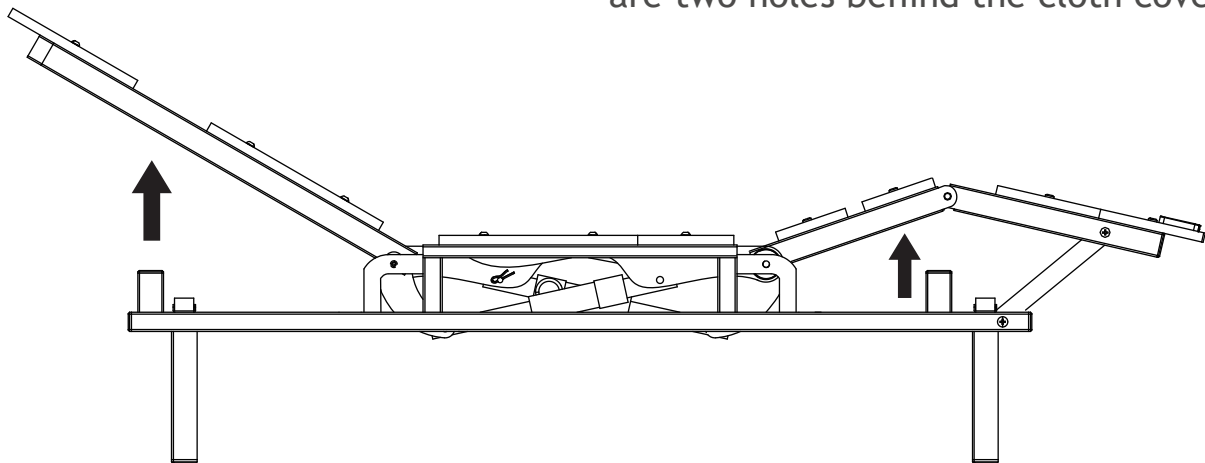

Pay attention to the front and back direction of the cloth cover; There are two holes behind the cloth cover.

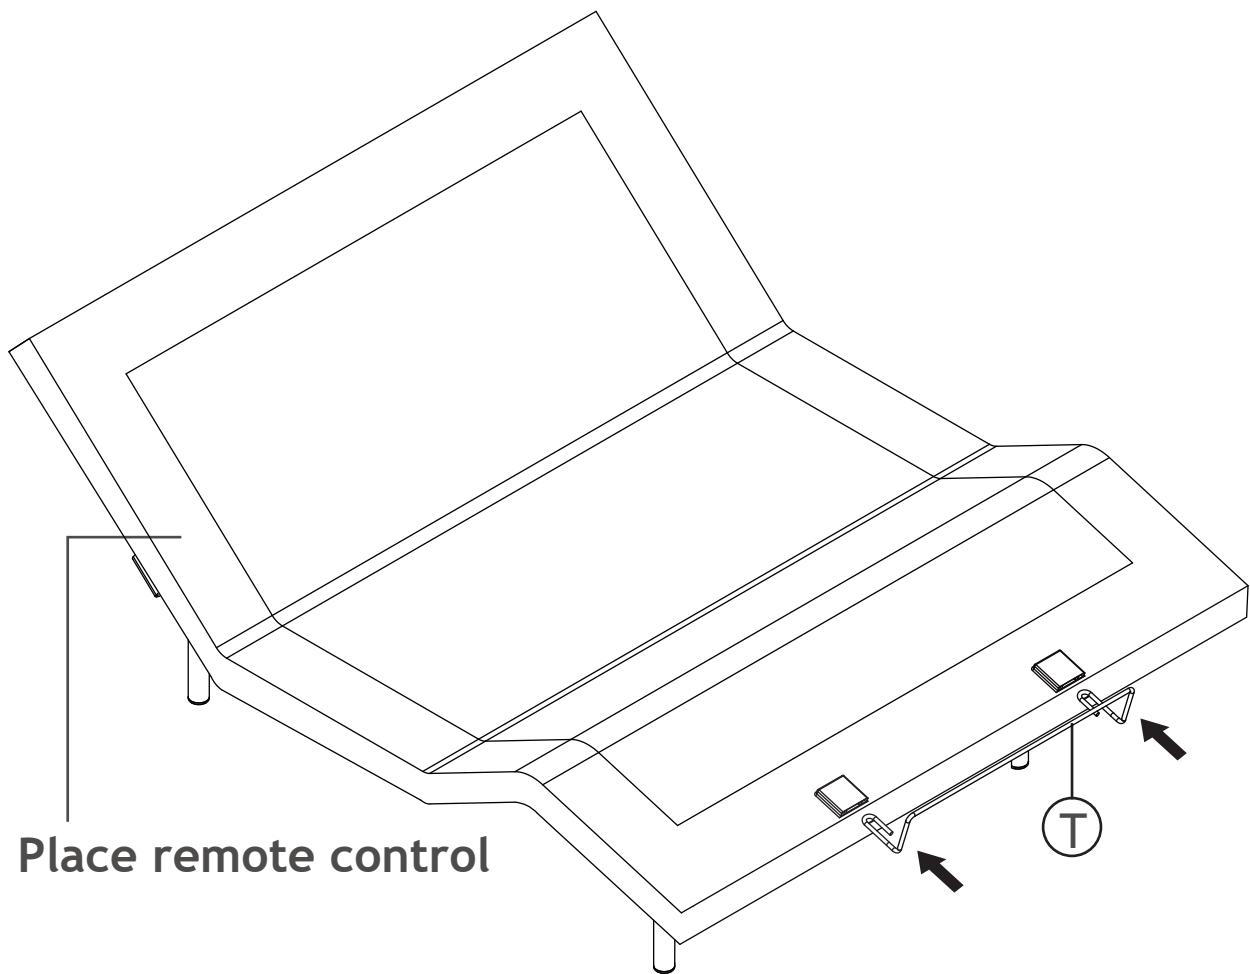

Push the retainerbar



At the end of the bed, push the retainerbar into the plastic slider

	Dry clean only		
	Steam ironing		
	Do not twist dry		Do not wash

Emergency reset instructions

In case of power failure, the emergency battery box on the adapter can be reset to achieve the reset and leveling of the bed board.
(Only descending is allowed, ascending is not allowed)

First open the adapter battery cover and tear off the diaphragm in the battery, then install 2 batteries.

