




INSTALLATION & USER MANUAL

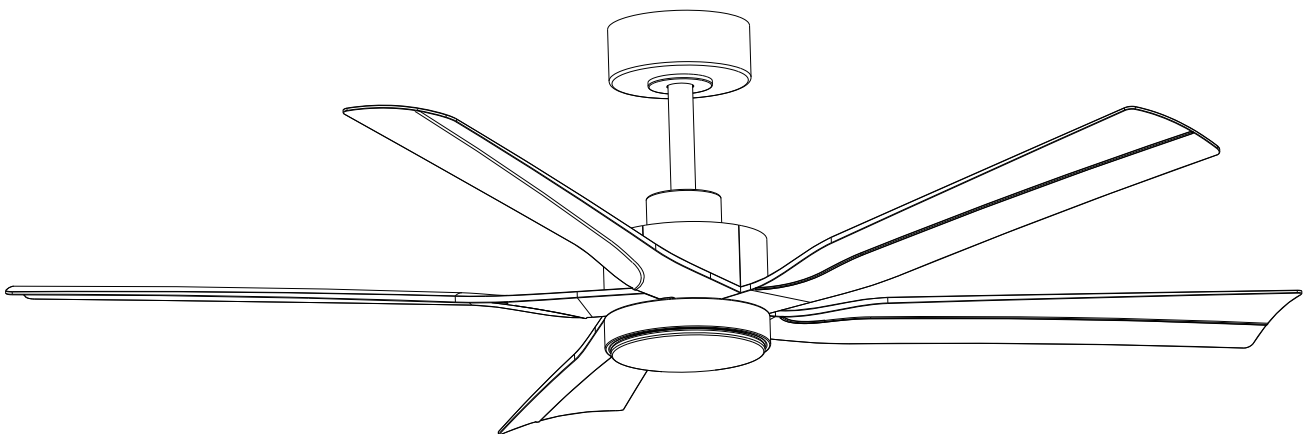

ITEM #FA21-56

CEILING FAN WITH LIGHT

Customer Service: fanora_service@outlook.com

Table of Contents

Table of Contents.....	2	Exploded View.....	4
Safety Information.....	2	Installation Instructions	5-10
Hardware Included.....	3	Operation	11
Fan Parts Included.....	3	Troubleshooting Guide	12

Safety Information

READ AND SAVE THESE INSTRUCTIONS.

1. To reduce the risk of electric shock, ensure electricity has been turned off at the circuit breaker or fuse box before you begin.
2. All wiring must be in accordance with the National Electrical Code “ANSI/NFPA 70” and local electrical codes. Electrical installation should be performed by a qualified licensed electrician.
3. The outlet box and support structure must be securely mounted and capable of reliably supporting a minimum of 35 lbs (15.9 kg). Use only UL Listed outlet boxes marked “Acceptable for Fan Support of 35 lbs. (15.9 kg) or less.”
4. Do not place objects in the path of the blades.
5. To clean the fixture ,turn off the power, wait for it to cool, and wipe the fixture with a clean dry, soft cloth.
6. After making electrical connections, spliced conductors should be turned upward and pushed carefully up into the outlet box. The wires should be spread apart with the grounded conductor and the equipment-grounding conductor on one side of the outlet box and ungrounded conductor on the other side of the outlet box.
7. All screws must be checked and retightened where necessary before installation.



WARNING: To reduce the risk of electrical shock or fire, not use this fan with any solid-state fan speed control device. It will permanently damage the electronic circuitry.



WARNING: To reduce the risk of fire or injury do not use this product in conjunction with any variable (rheostat) wall control.



WARNING: To reduce the risk of personal injury, do not bend the blade brackets when installing the rackets balancing the blades, or cleaning the fan. Do not insert objects.



WARNING: To avoid possible electrical shock, turn the electricity off at the main fuse box before wiring.



WARNING: To reduce the risk of electrical shock, this must be installed with an isolating wall control / switch.



CAUTION: To reduce the risk of personal injury, use only the screws provided with the outlet box.



CAUTION: Please use carefully when working around or cleaning the fan to avoid injury or damage of fan.



CAUTION: The fan must be mounted with a minimum of 7 ft (2.1 m) clearance from the trailing edge of the blades to the floor.



CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Hardware Included



S1



S2



S3




S4



S5



S6



S7

Hardware Package

Quantity

S1.Machine Screw

2

S2.Washer

4

S3.Wood Screw

4

S4.Wire Nut

3

S5.Blade Screw

11


S6.Blade Self-Tapping Screw

6


S7.Balance Kit

1


Fan Parts Included

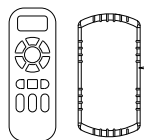


1

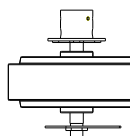


8



2



3

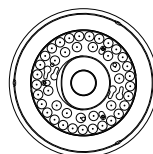

9



4




10



5



10



6



7



11

Item name

Quantity

1.Remote Control

1

2.Hanger

1

3.Canopy

1

4.Canopy Cover

1

5.Yoke Cover

1

6.Downrod

1

7.Long Downrod

1

8.Motor Housing

1

9.Lamp Housing
(LED Inside)

1


10.Lamp Shade

1

11.Blade

5

Exploded View

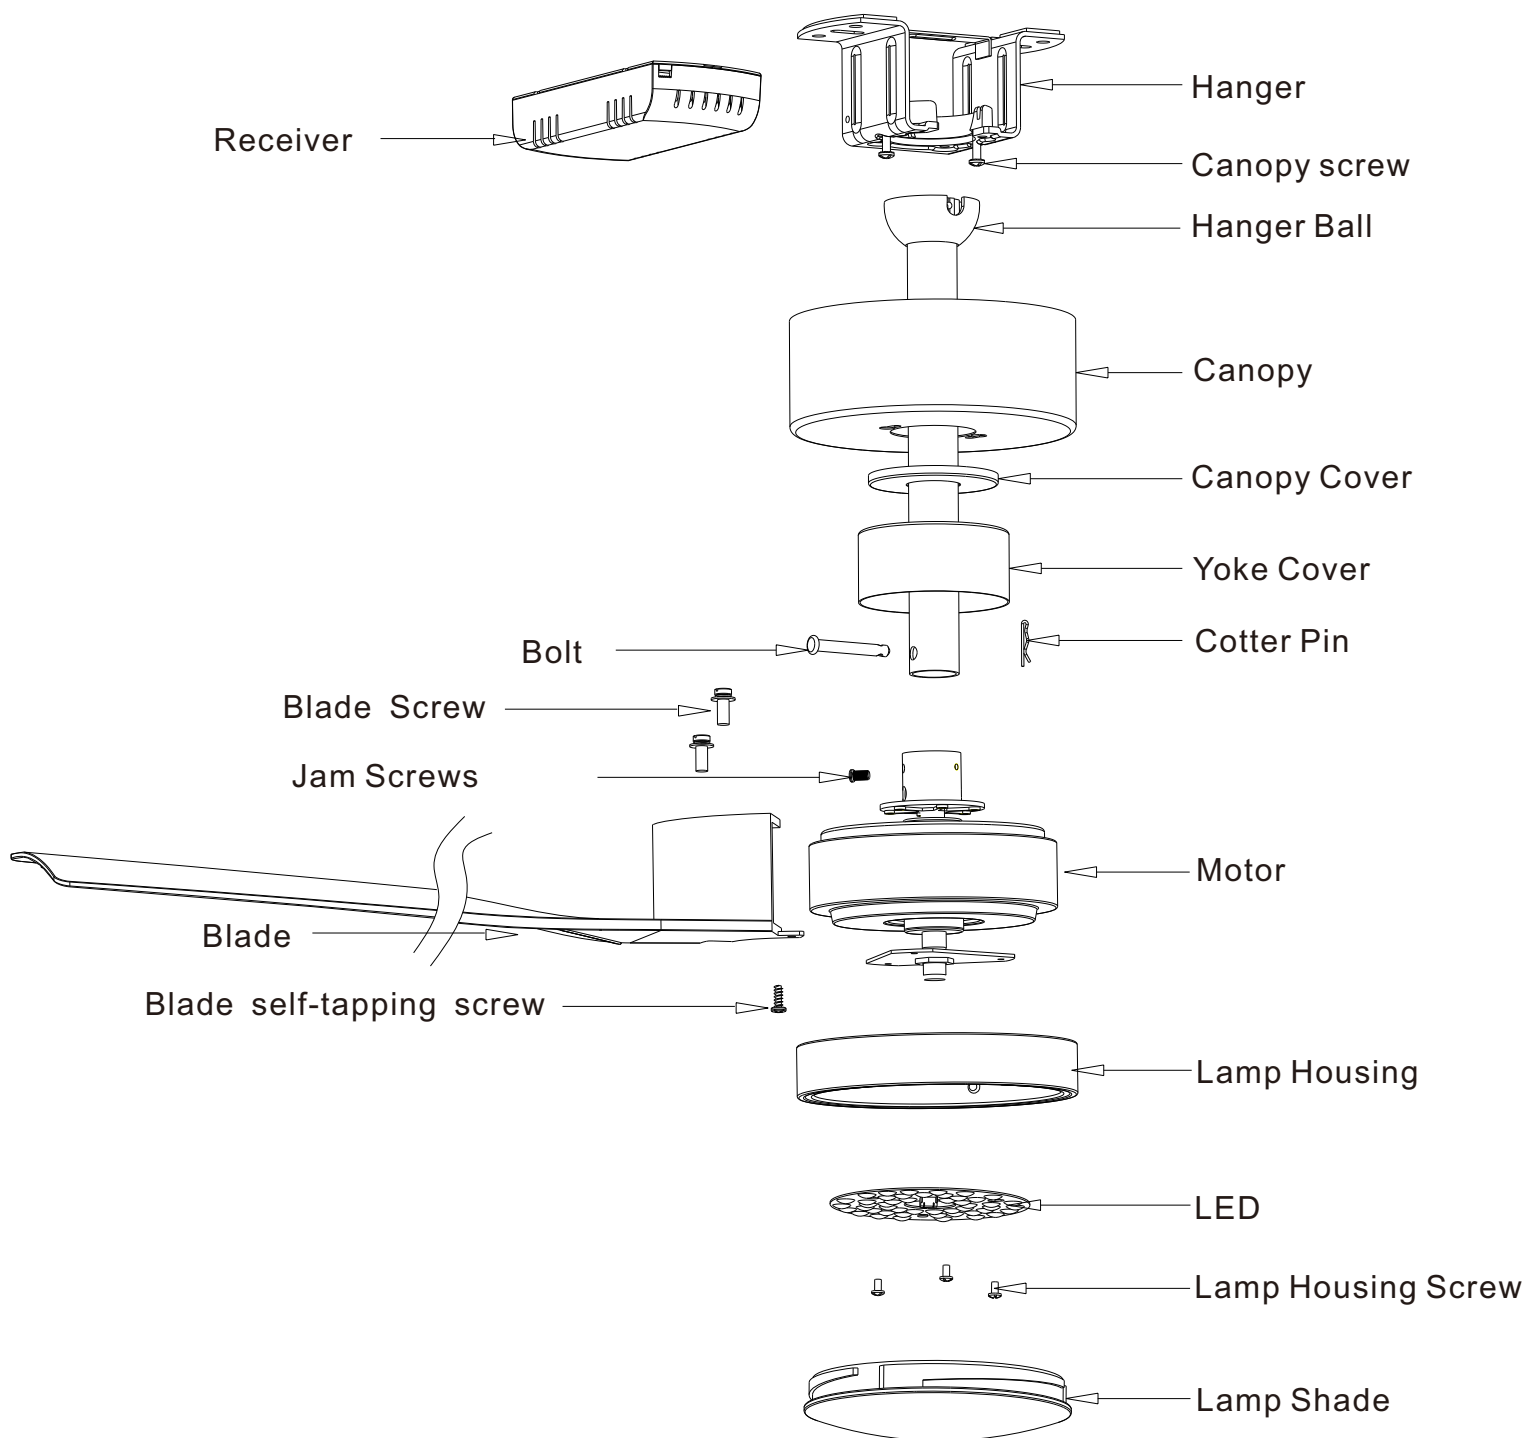


Installation Instructions

Step1 Install Hanger

WARNING: To Reduce The Risk Of Fire, Electric Shock, Or Personal Injury, Mount To UL/CSA Listed Outlet Box Marked Acceptable for Fan Support And Use Mounting Screws Provided With The Outlet Box

- Secure hanger to metal outlet box.

Fig.1

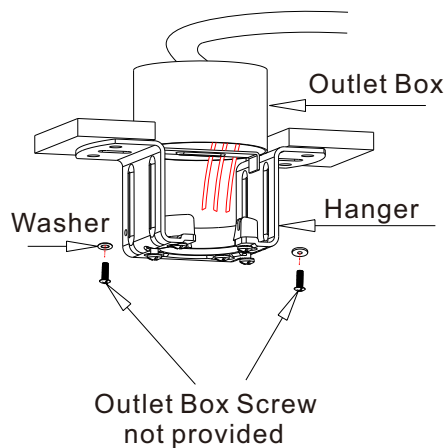

Step2 Attaching the Fan Blades.

- Attach the blade to the motor with blade screws.
- Repeat this step for each blade assembly.


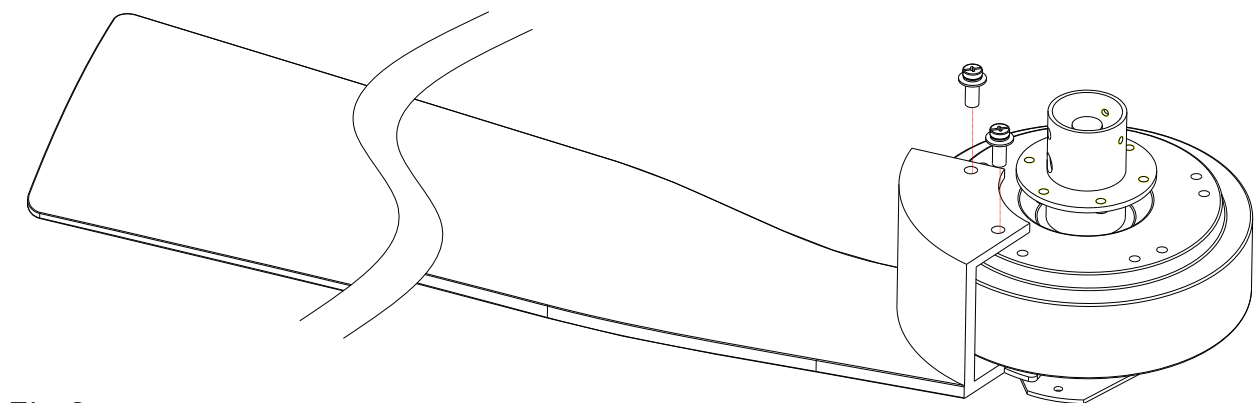


Fig.2a

Installation Instructions


Step2 Attaching the fan blades.(Continued)

- Lock the blade with a self tapping screw.
- Repeat this step for each blade assembly.

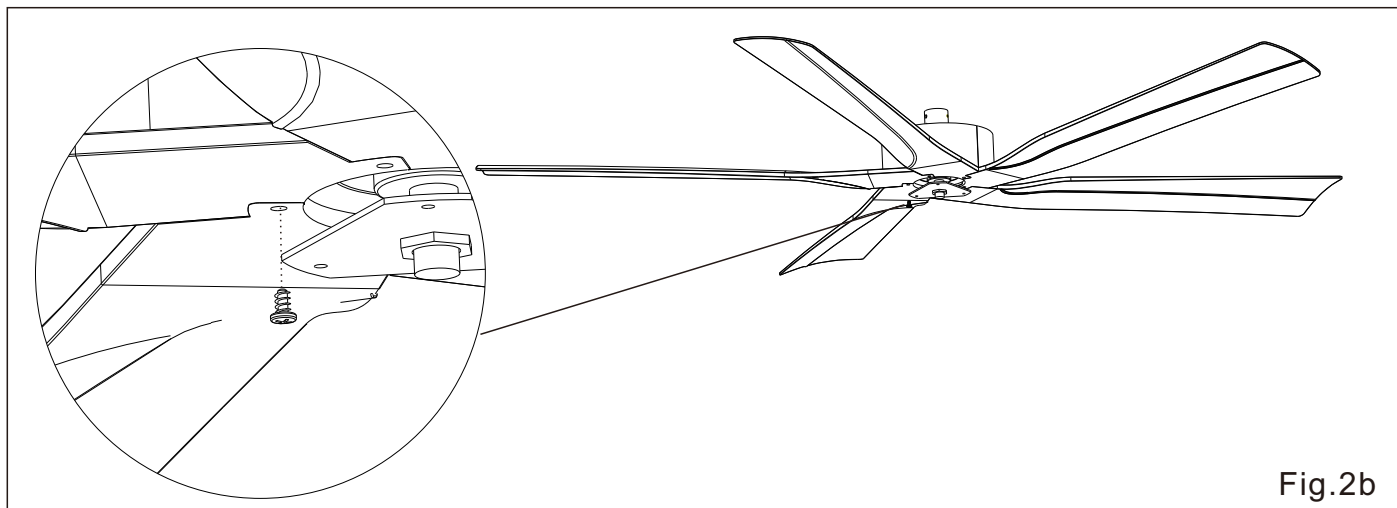

Step3 Mounting

- Take out fan downrod.
- Remove cotter pin and bolt from downrod.
- Take out fan motor housng.
- Loosen jam screw in yoke until it is flush with the inside surface.
- Place the downrod inside the canopy, canopy cover, and yoke cover.
- Route wires exiting motor through yoke cover, canopy and downrod.

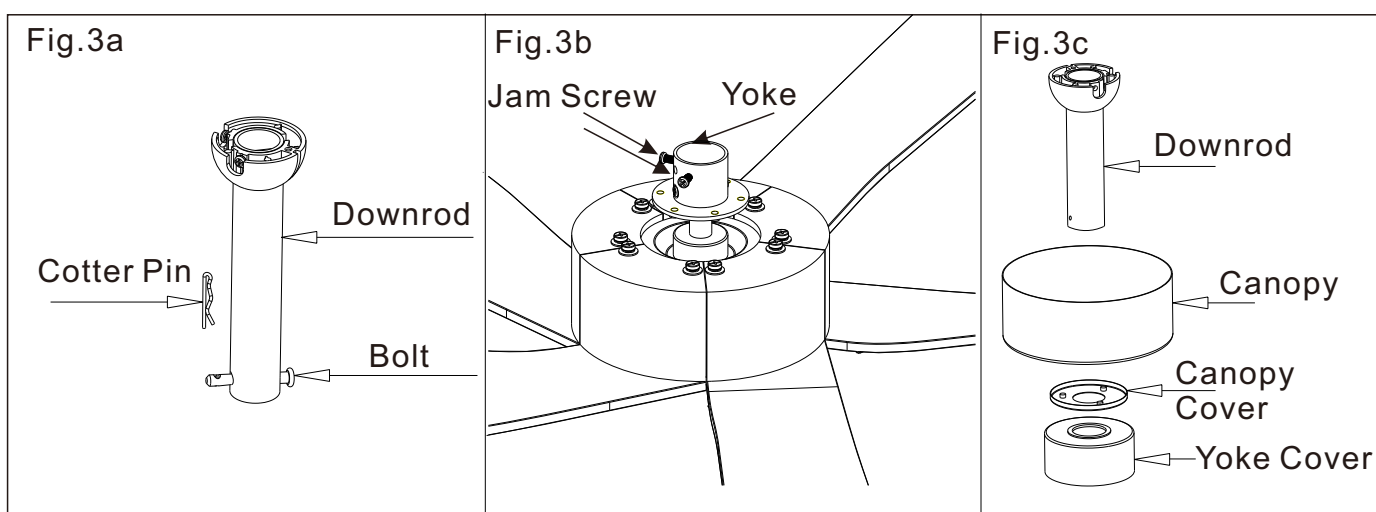


Installation Instructions

Step3 Mounting(Continued)

- Insert bolt through hole in and downrod. Be careful not to damage or cut the fan wires.
- Tighten bolt. Secure with cotter pin through hole in the end of the bolt.
- Secure downrod in position by tightening jam screws.
- Slide yoke cover down and it will flush with the motor housing.


CAUTION: To ensure wobble-free operation and to avoid damage to the fan, the downrod and the set crew must be completely tightened.

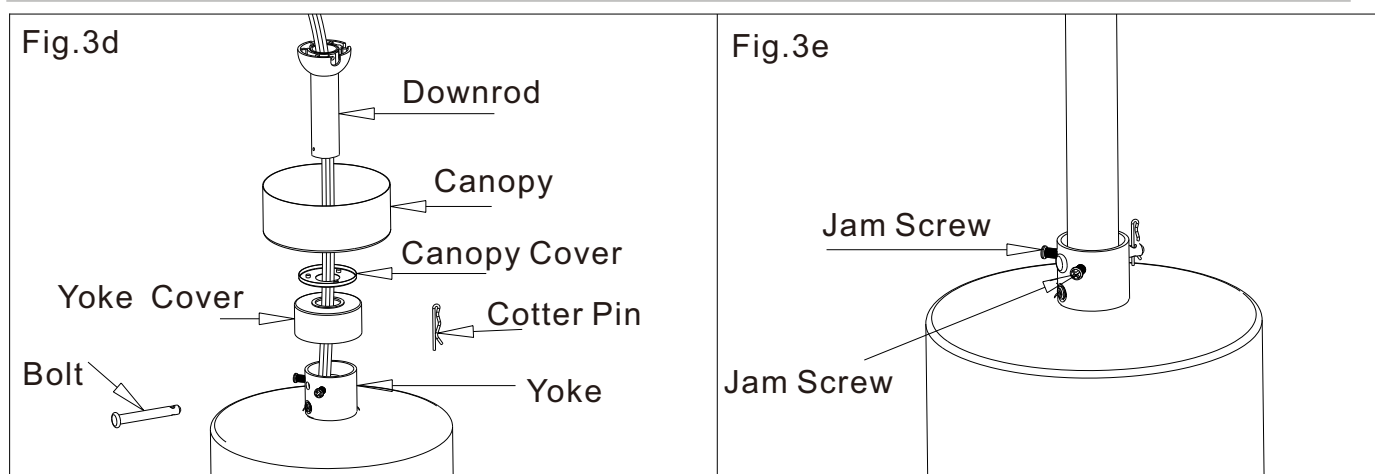

Step4 Hanging ceiling fan

WARNING: To Reduce The Risk Of Fire, Electric Shock, Or Personal Injury, Mount To UL/CSA Listed Outlet Box Marked Acceptable for Fan Support And Use Mounting Screws Provided With The Outlet Box


- The ceiling fan is hung on the hanger, with the hanger ball groove aligned with the hanger boss.

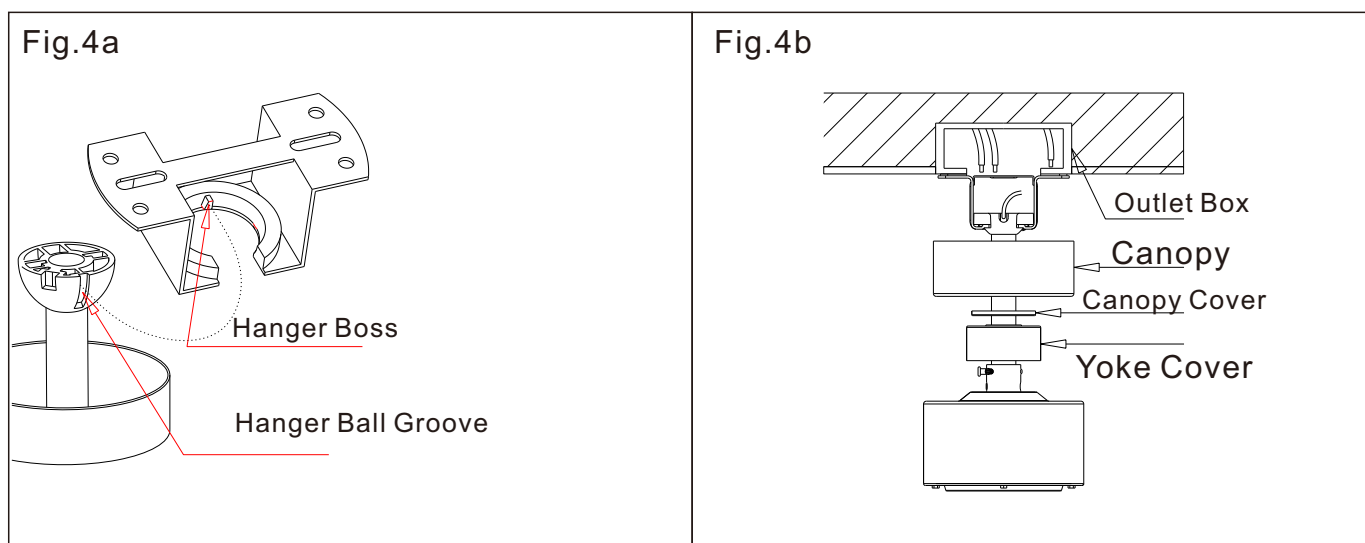

Installation Instructions

Step5 Assembling the lamp housing


- Feed the wire through the center hole of the lamp housing.
- Fix the lamp housing with screws.
- Connect the motor end plug to the LED socket.

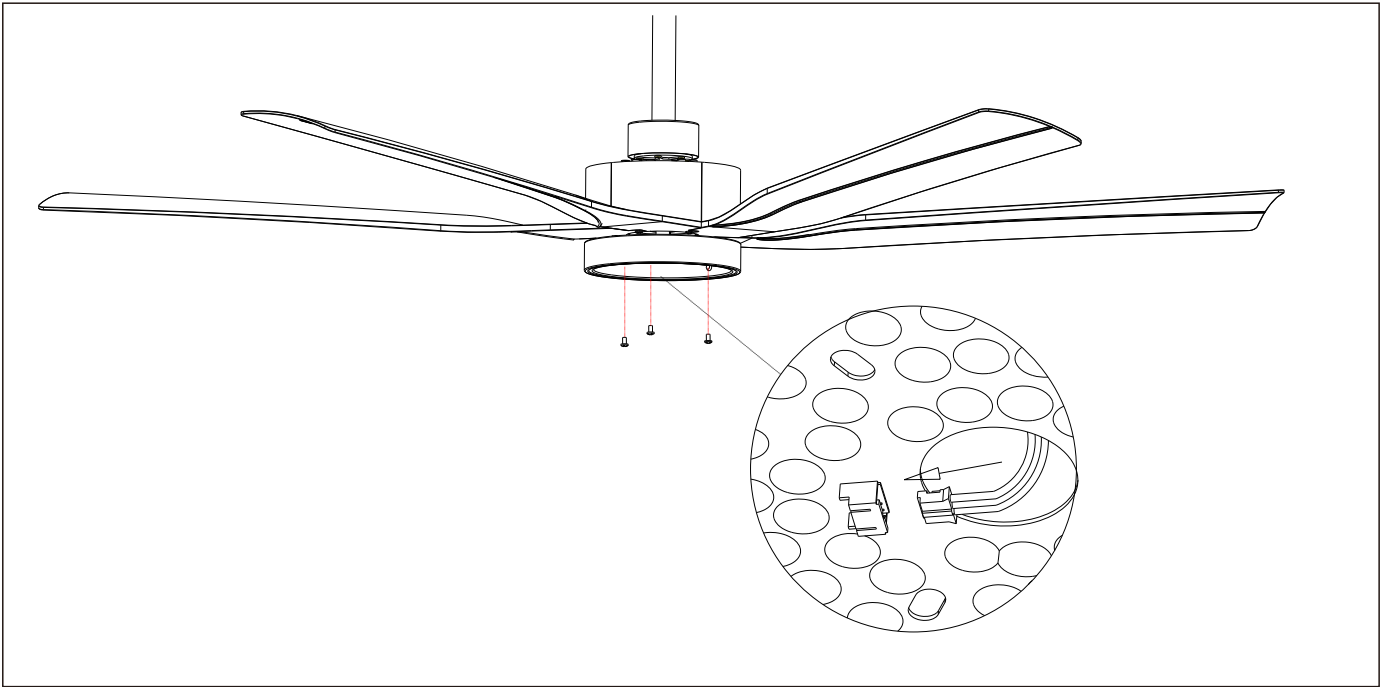

Step6 The lampshade installation

- Install the lampshade to the lamp housing by turning clockwise to lock it into place.

Fig.6

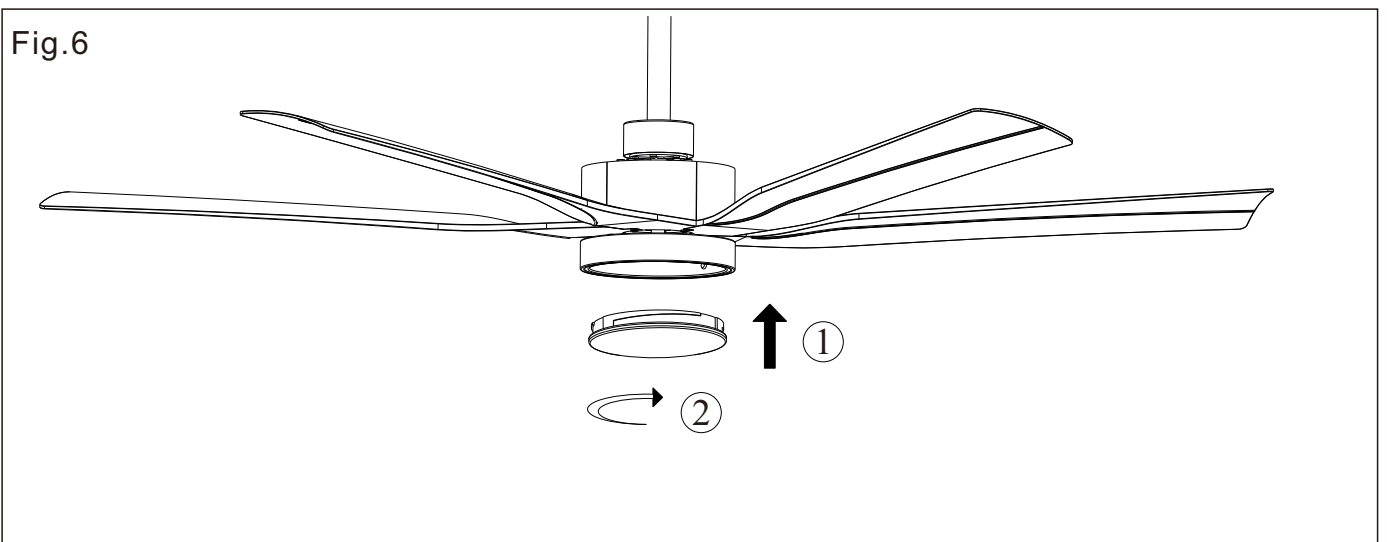

Installation Instructions

Step7 The receiver installation

- Put the receiver in the hanger.

Fig.7a


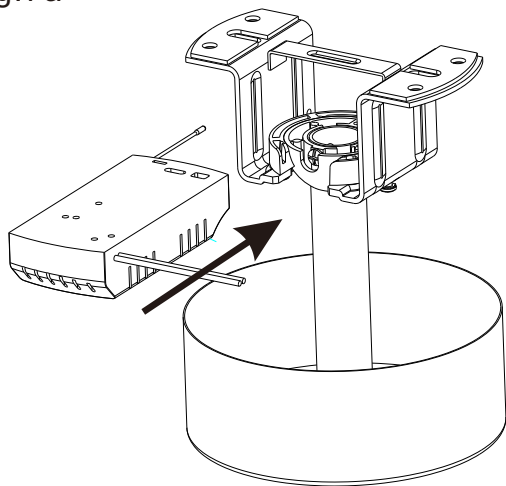


Fig.7b

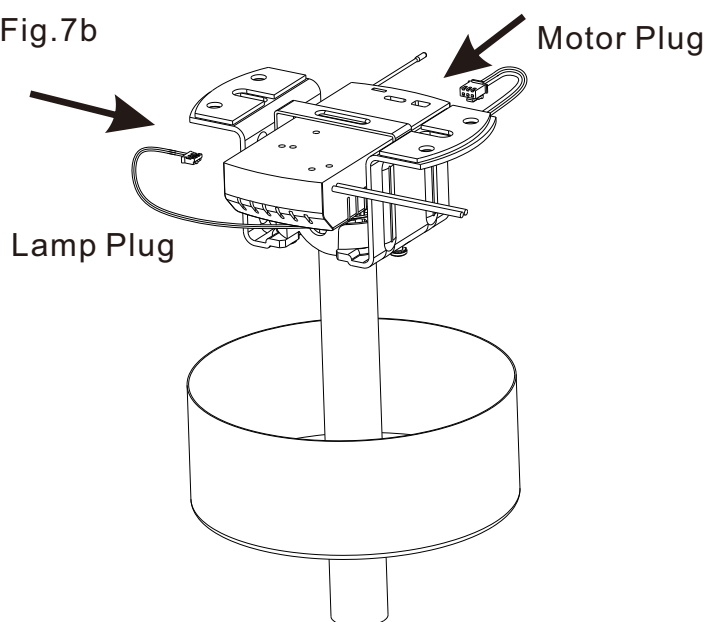

Step8 Wiring The Fan

- Wiring according to the wiring diagram.

(From Ceiling)

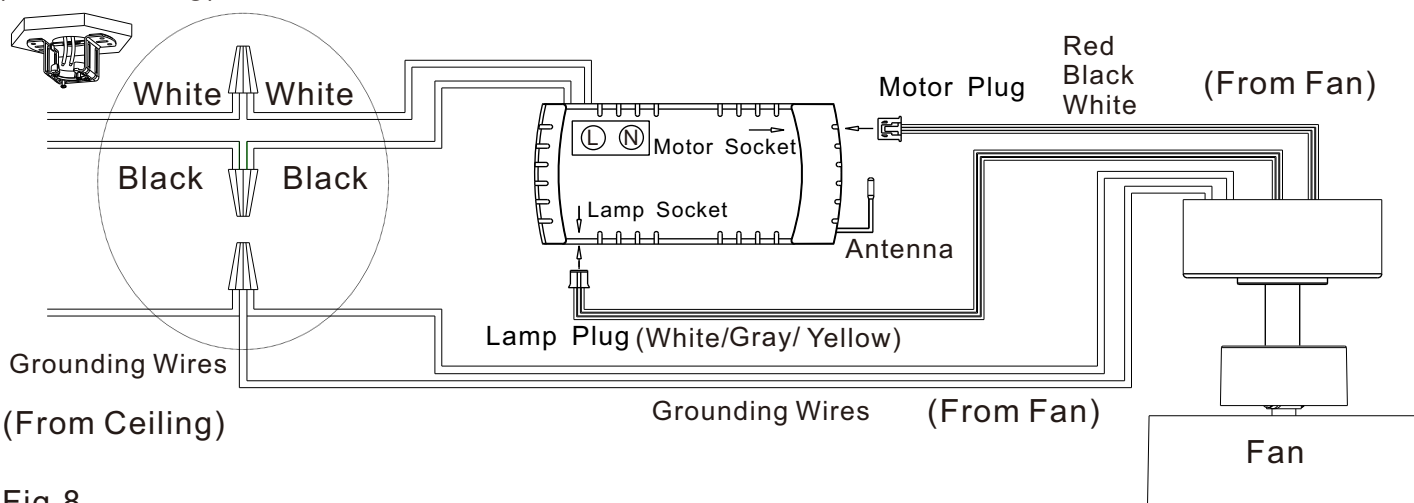



Fig.8

NOTE: Once ground wires are connected, carefully tuck all wires and marrettes into the metal box making sure that the wires are clear of the hemisphere and downrod when positioned in hemisphere and downrod when positioned in mounting bracket.

Installation Instructions

Step9 Attaching the Canopy and Canopy Cover


- Slide the canopy up to the ceiling and attach it to the hanger with the screws provided. Tighten all screws securely.
- Move the Canopy cover onto the canopy.
(the decorative cover comes with magnetism)

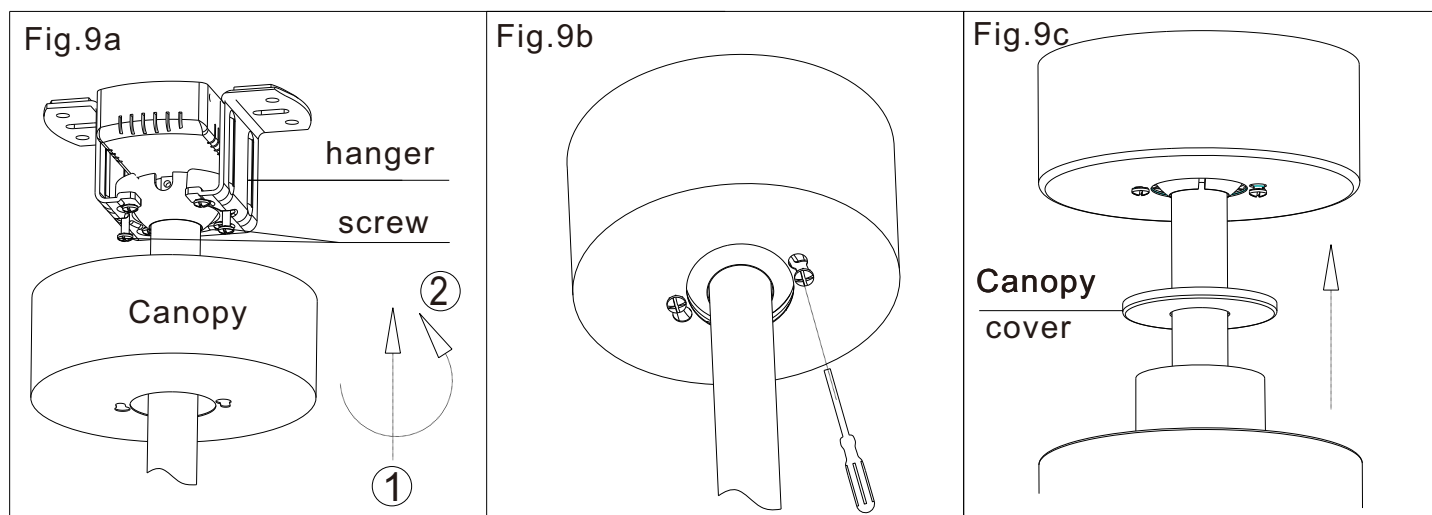

Operation

Function Instruction Of Emitter

- Open battery cover on the hand-held remote and install battery, pair of AAA of emitter(1.5V) that are not included.
- If the emitter can not control the fan, learning code matching mode is used between emitter and receiver.
- Turn on the power switch, press the "  " within 3 seconds, the receiver issued a "tick" two sounds, the pair code is successful. If not successful, turn off the power for a minute and repeat the above.
- When the emitter cannot control the receiver, please check the battery switch touching normally or not, correction of the positive and negative, full or empty of the power.
- When the emitter cannot control the receiver, please check if there is any existence of similar remote controlled products nearby, then check whether they work, because remote controlled products with the same frequency will disturb each other.
- Please take out the battery from the emitter when leaving unused for a long time.
- When installing the fan, the fan ceiling cover don't press the antenna (or other wire), it is easy to breakdown the wire and short-circuited.

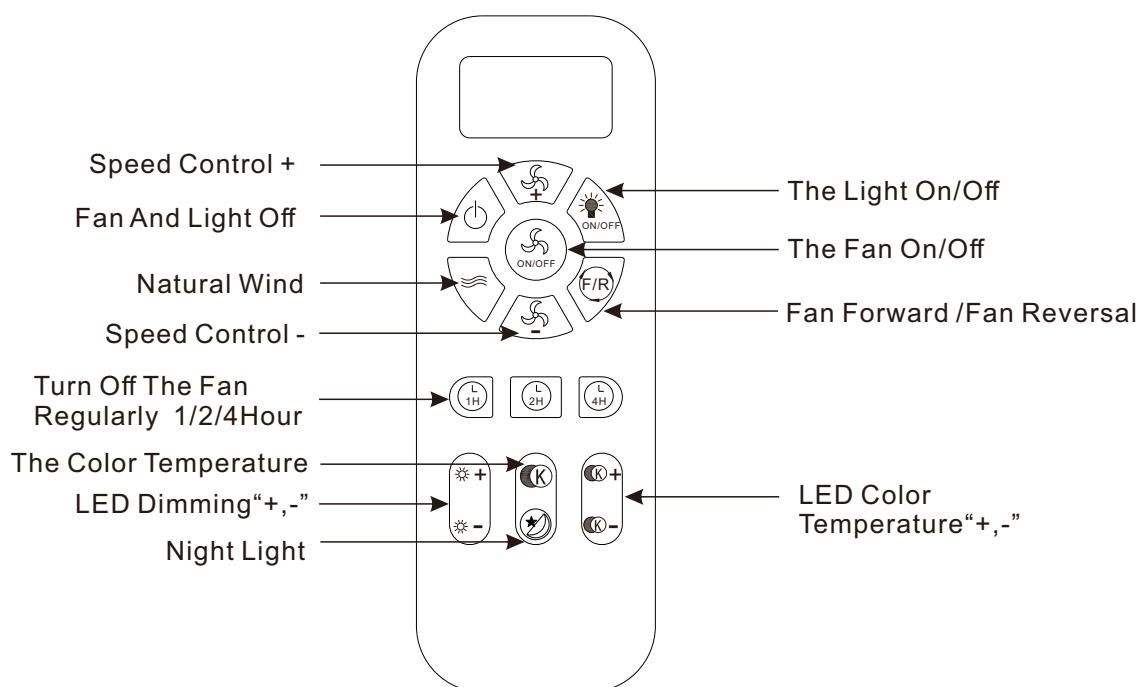

AAA 1.5V*2

(not included)

Light Memory Function:

1. The default light color when the ceiling fan is turned on.
2. The light will lock in a specific color temperature after turning on the light for 10 seconds.
3. The color temperature will be the same as the last time when turning on the light next time.

Troubleshooting Guide

If you have difficulty operating your new ceiling fan it may be the result of incorrect assembly, installation, or wiring. In some cases these installation errors may be mistaken for defects. If you experience any faults please check this troubleshooting guide.

	Problem	Suggested Remedy
1	If fan does not start.	☐ Check the main and branch circuit fuses or breakers. ☐ Check the line wire connections to the fan and switch wire connections in the switch housing. ☐ Check the battery in the remote control. ☐ Ensure you are in the normal range of 10-20 feet.
2	If fan sounds noisy.	☐ Ensure all motor housing screws are snug. ☐ Ensure the screws that attach the fan blade bracket to the motor hub are tight. ☐ Ensure the wire nut connections are not rattling against each other or the interior wall of the switch housing. ☐ Observe the fan for 24 hours after installation. Most noises associated with a new fan disappear during this time. ☐ Ensure the canopy is a short distance from the ceiling. It should not touch the ceiling.
3	If fan wobbles.	☐ Check that all blades are screwed firmly into blade holders. ☐ Check that all blade holders are tightened securely to motor. ☐ Make sure that canopy and mounting bracket are tightened securely to ceiling junction box and junction box is mounted firmly to ceiling joist. ☐ If blade wobble is still noticeable interchanging two adjacent (side by side) blades can redistribute the weight and possibly result in smoother operation.
4	If light does not work	☐ Check blue wire from fan to make sure it is connected to hot wire from the house. ☐ Check for loose or disconnected wires in fan switch housing. ☐ Check for loose or disconnected wires in light kit.