



BARN LIGHT ELECTRIC COMPANY®

INSTALLATION INSTRUCTIONS GLASS BALL CORD HUNG PENDANT

Thank you for purchasing from Barn Light Electric, America's leading manufacturer of hand-crafted shades and exclusive source for porcelain enamel lighting! For questions or concerns about your purchase, please contact us!

INS-0099 REV A (HWK-0141)

IMPORTANT

Read all instructions before assembly. Installation is to be done by a qualified professional.


This fixture must NOT be electronically connected to an energized source, commonly known as hot plugging. Irreparable damage may occur and will void the product warranty.

CAUTION: Risk of fire, this product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.


INSTRUCTIONS

1. Disconnect power at the electrical panel before installation.
2. Trim cord (A) to desired length, leaving 6" extra for canopy (B) and cord knot (C).
3. Feed the cord (A) from the socket assembly (D) through the globe cap (E), strain relief (F), bushing (G), canopy (B), nipple (H) (with nut [I] threaded on), and crossbar (J).
4. Tie a knot (C) in the cord (A) above the crossbar (J) for strain relief.
5. Crimp metal strain-relief (K) to cord (A) just below the knot (C) with pliers.
6. Mount crossbar (J) to junction box (L) with two screws (M*). **NOTE: Mounting screws not included.**
7. Mount crossbar (M) to junction box (O) with two screws (P). **NOTE: Mounting screws not included.**
8. **A. 3-WIRE CORD:** Use wire nuts (N*) to connect power supply wire to the black wire and neutral wire to the white wire.
B. 2-WIRE CORD: Use wire nuts (N*) to connect power supply to the solid-colored wire and neutral wire to the striped colored wire.
9. Connect the ground wire (O) that is connected to the crossbar (J) to the fixture's ground wire (if applicable) and the supply's ground.
10. Screw nipple (H) into crossbar (J), making sure it doesn't cut into the wires.
NOTE: Adjust the nipple (H) to the correct length by temporarily fitting the canopy (B) over the nipple (H), flush against the ceiling. Adjust nipple (H) length until the nipple (H) extends 3/8" out of the canopy (B).
11. Remove canopy (B) and tighten the nut (I) on the nipple (H) up to the crossbar (J).
12. Secure canopy (B) flush to the ceiling with bushing (G).
13. To install a bulb (P*), screw the bulb (P*) into the socket assembly (D). Insert bulb (P*) into the globe (Q), then the socket assembly (D) by tilting it into the globe (Q).
14. Place the globe cap (E) onto the socket assembly. Secure in place by tightening the set screw of the strain relief (F) onto the cord (A).


ALTERNATE FIXTURE DRAWING

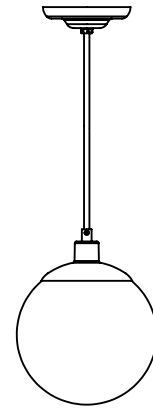

WIRING DIAGRAM

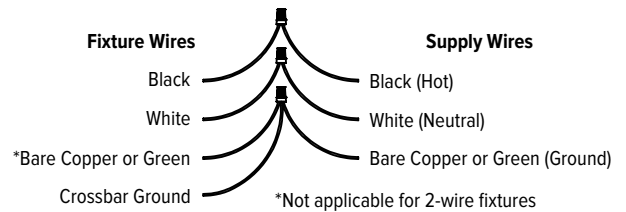

GLASS BALL CORD HUNG PENDANT

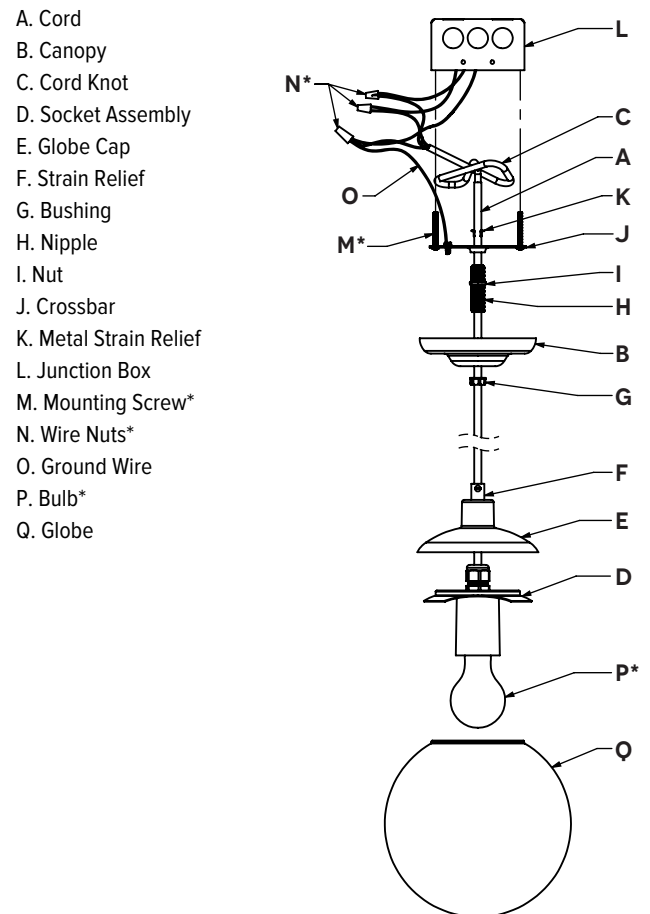

***IMPORTANT:** Mounting screws and wire nuts not included in hardware kit. Standard screw sizes include: 6-32, 8-32, 10-24 and 10-32. Bulb not included.